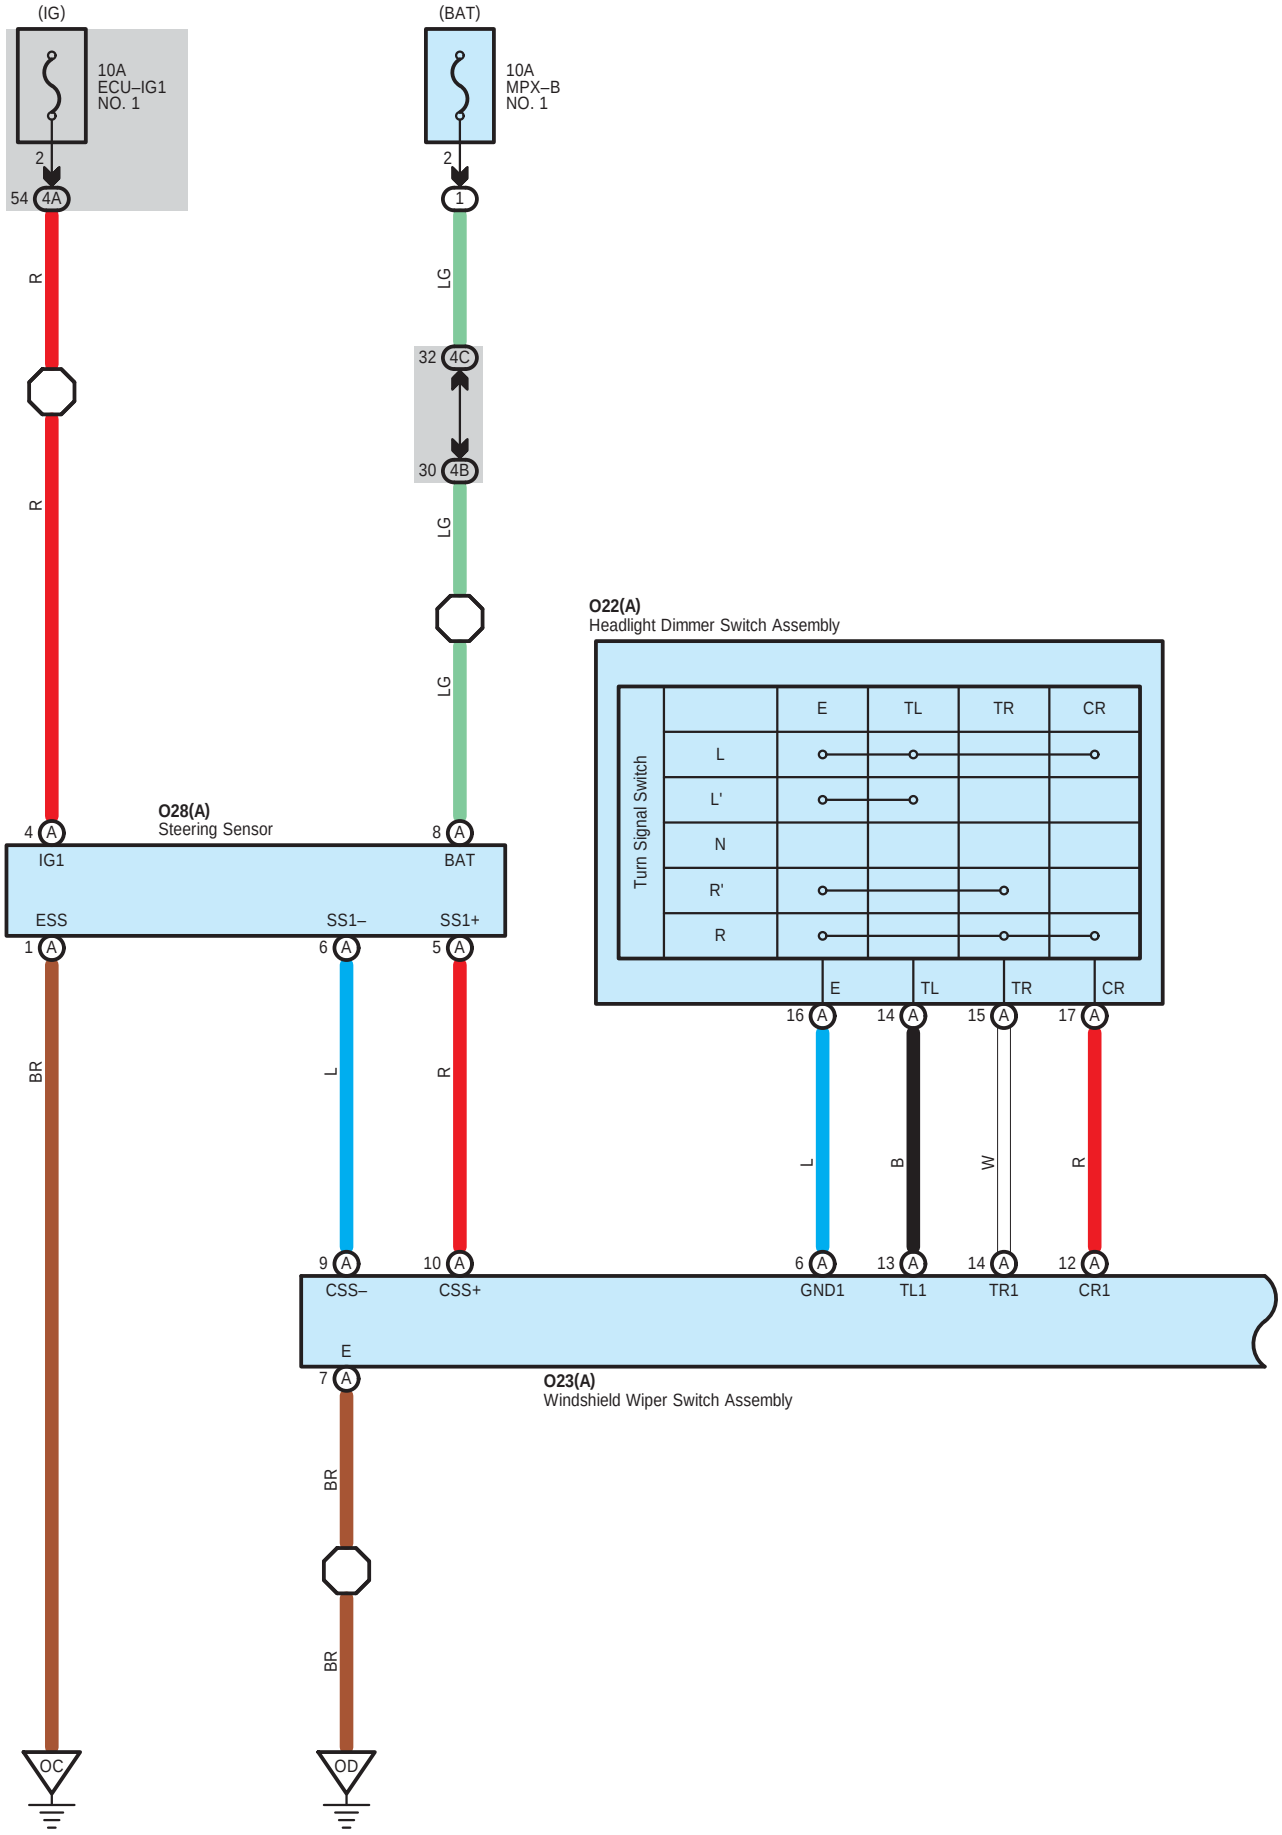
(IG)
10A
ECU–IG1
NO. 1
2
54 4A
R
R
(BAT)
10A
MPX–B
NO. 1
2
1
LG
32 4C
30 4B
LG
LG
O22(A)
Headlight Dimmer Switch Assembly
Turn Signal Switch
E
TL
TR
CR
L
L'
N
R'
R
O28(A)
Steering Sensor
4 A
IG1
8 A
BAT
ESS
SS1–
SS1+
1 A
6 A
5 A
BR
L
R
16 A
14 A
15 A
17 A
L
B
W
R
9 A
10 A
6 A
13 A
14 A
12 A
CSS–
CSS+
GND1
TL1
TR1
CR1
E
7 A
O23(A)
Windshield Wiper Switch Assembly
BR
BR
OC
OD

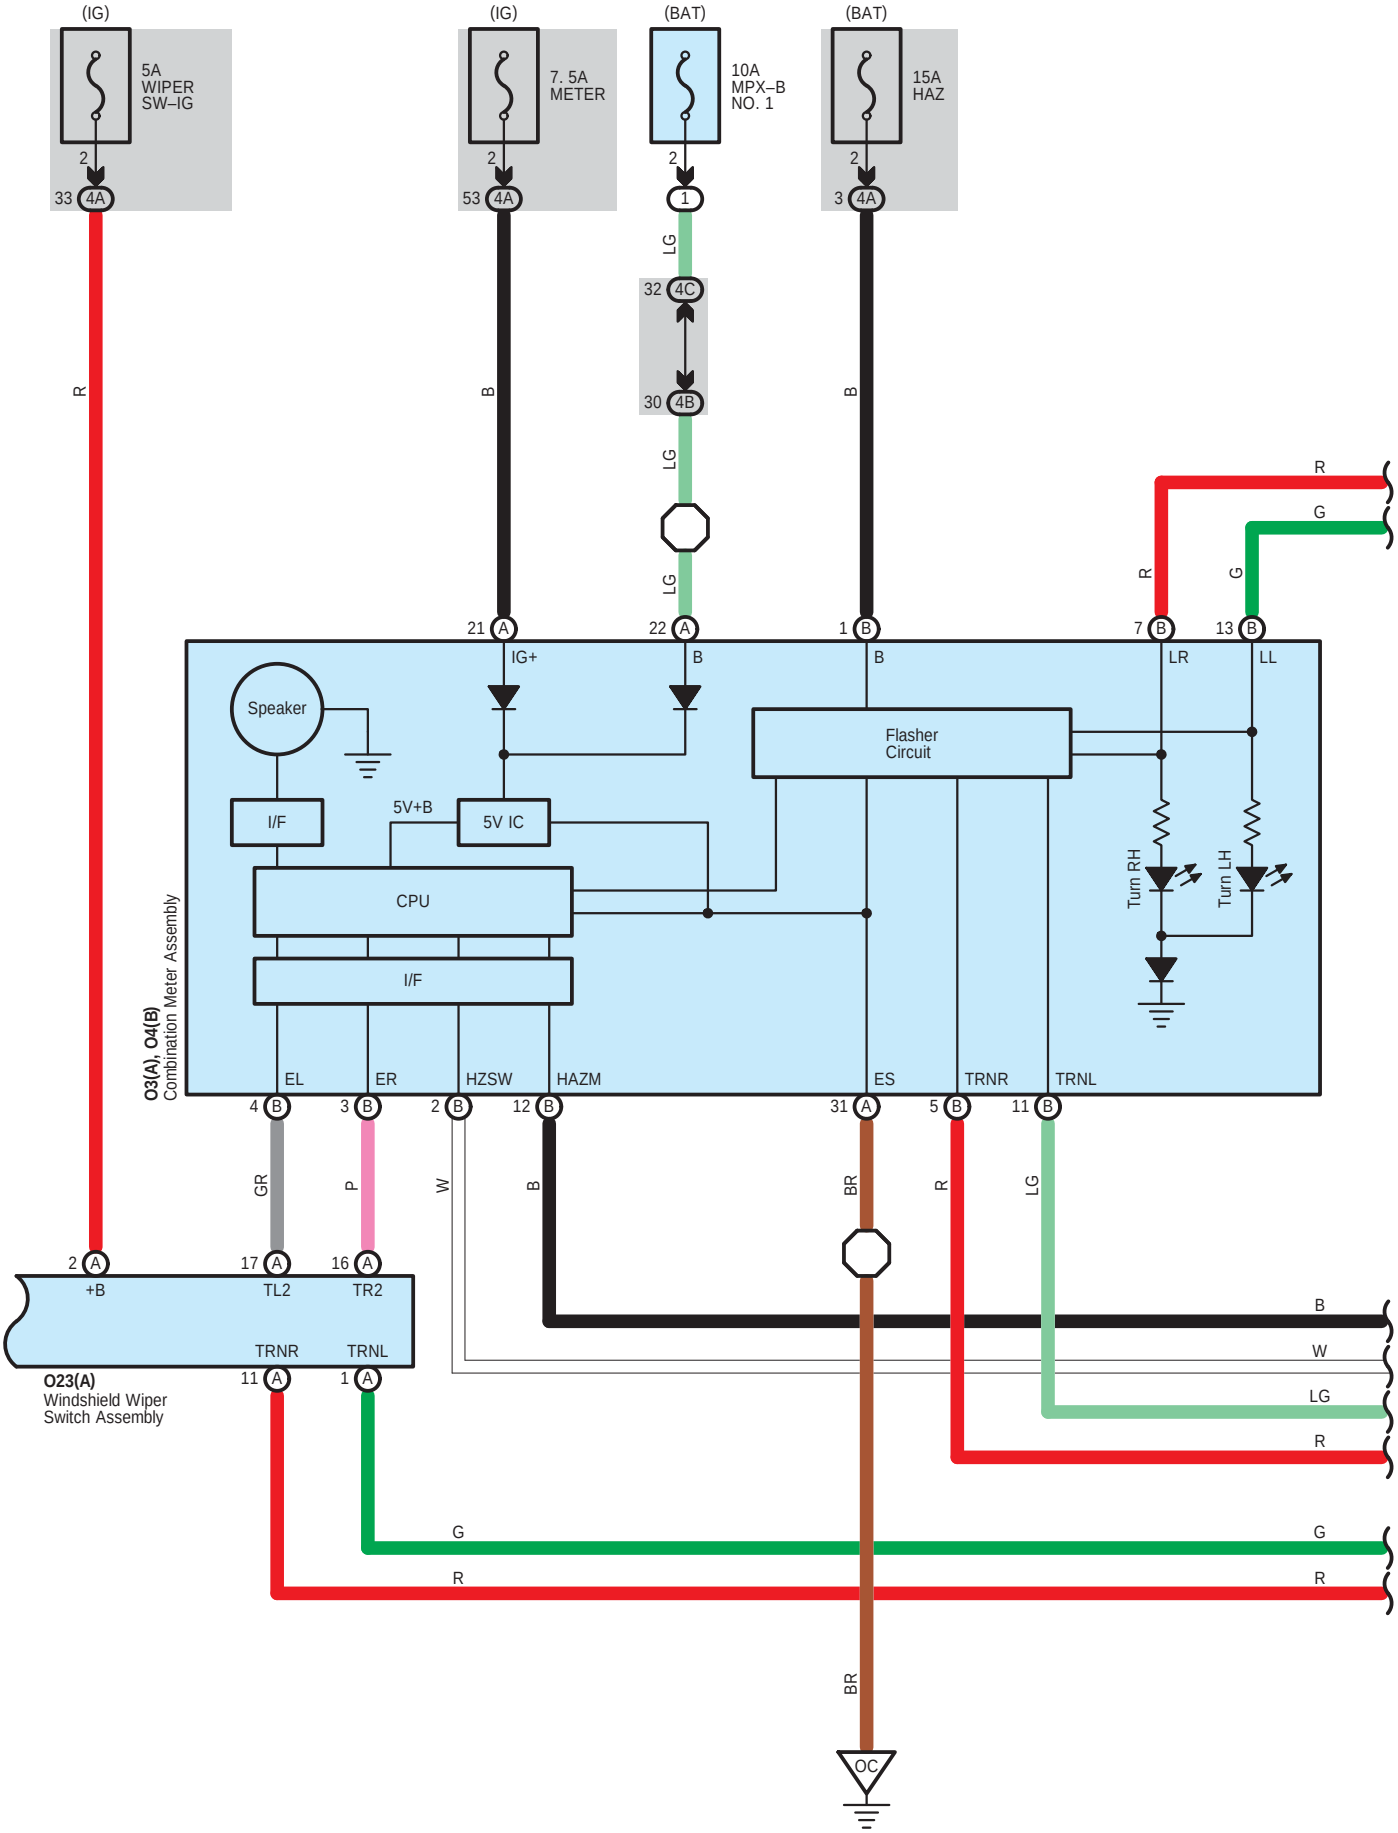
(IG)
5A
WIPER
SW–IG
(IG)
7. 5A
METER
(BAT)
10A
MPX–B
NO. 1
(BAT)
15A
HAZ
33 4A
53 4A
1
3 4A
32 4C
30 4B
21 A
22 A
1 B
7 B
13 B
IG+
B
B
LR
LL
Speaker
Flasher
Circuit
I/F
5V+B
5V IC
CPU
I/F
Turn RH
Turn LH
O3(A), O4(B)
Combination Meter Assembly
EL
ER
HZSW
HAZM
ES
TRNR
TRNL
4 B
3 B
2 B
12 B
31 A
5 B
11 B
2 A
17 A
16 A
+B
TL2
TR2
TRNR
TRNL
11 A
1 A
O23(A)
Windshield Wiper
Switch Assembly
OC

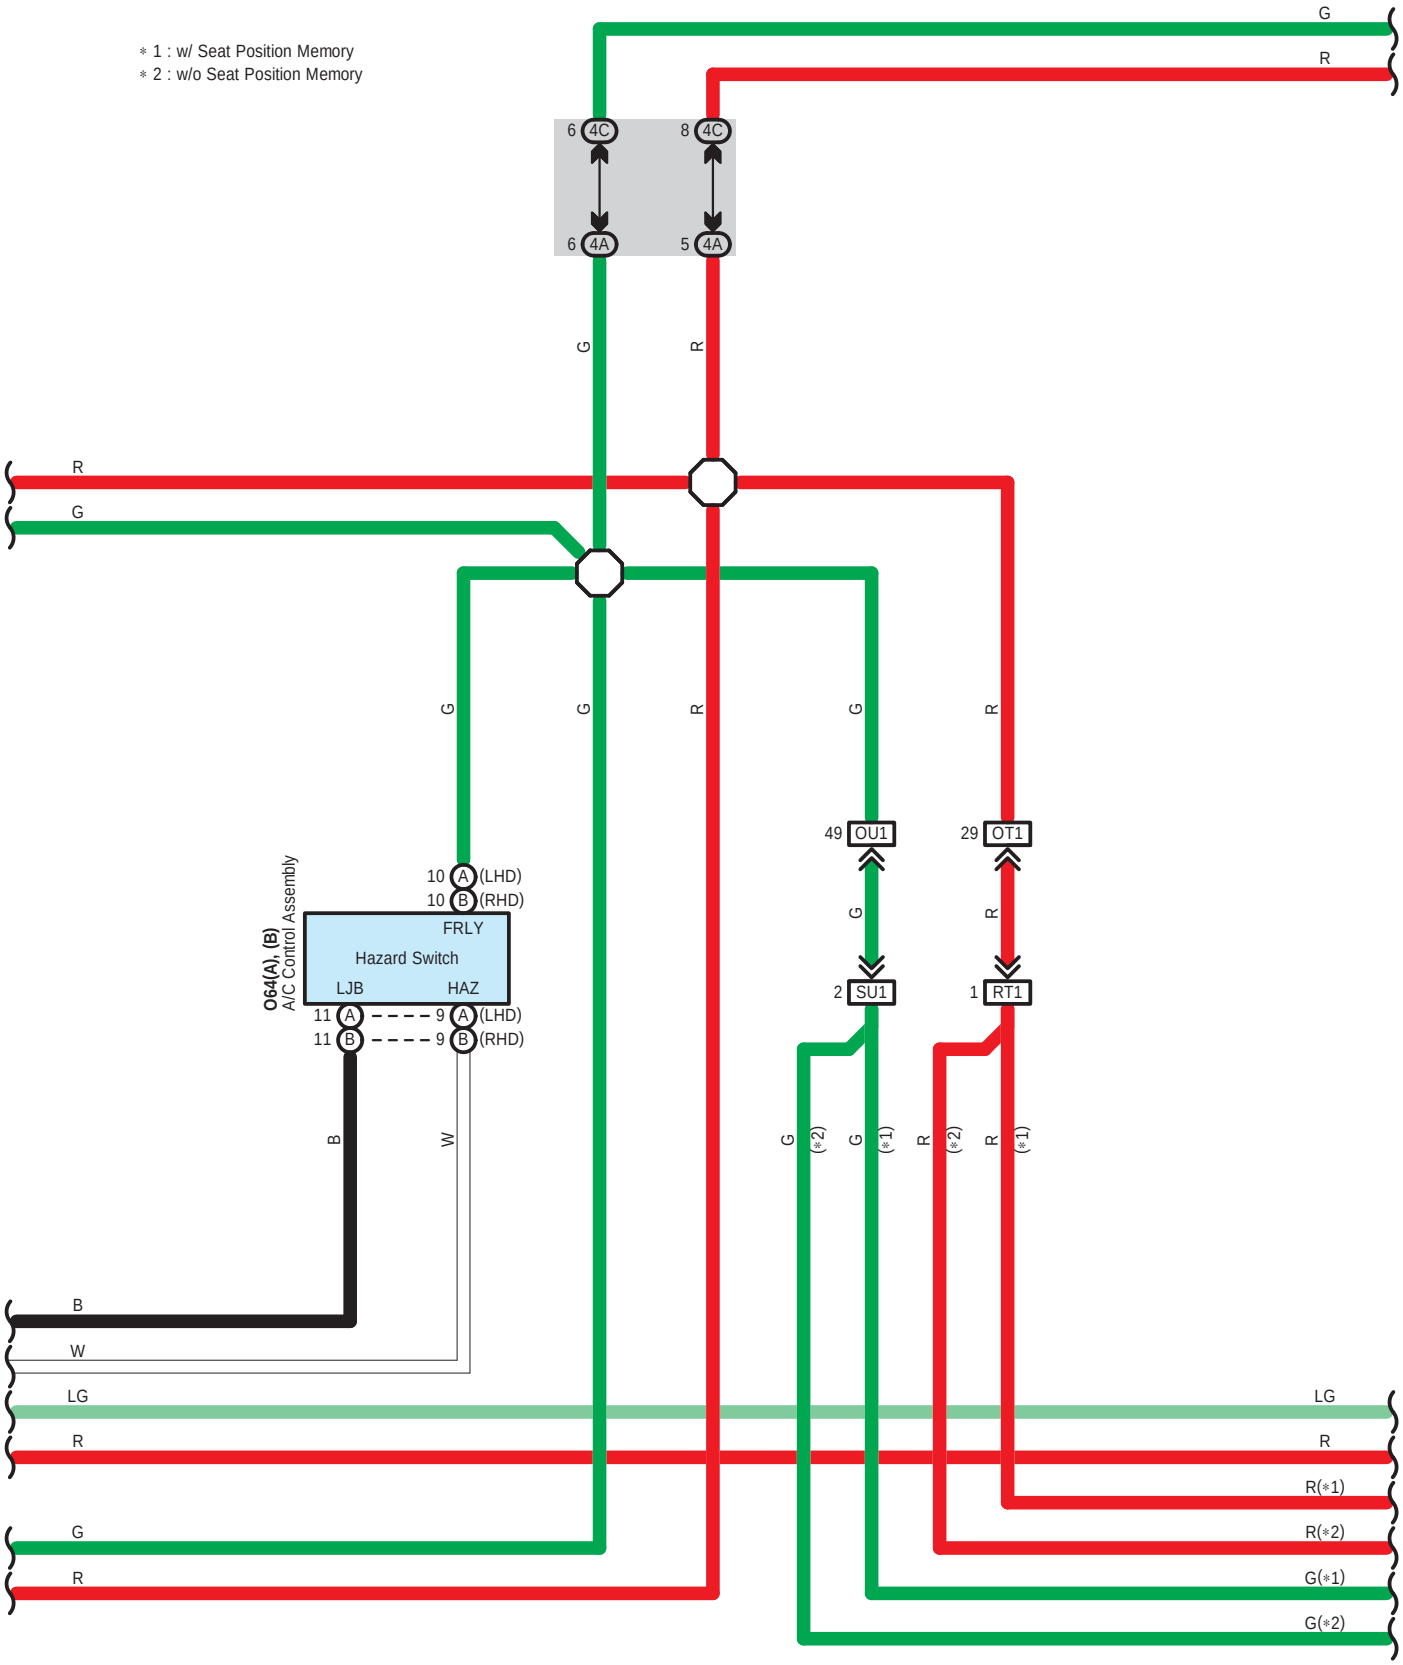
∗ 1 : w/ Seat Position Memory
∗ 2 : w/o Seat Position Memory
6 4C
8 4C
6 4A
5 4A
G
R
O64(A), (B)
A/C Control Assembly
10 A (LHD)
10 B (RHD)
FRLY
Hazard Switch
LJB
HAZ
11 A
11 B
9 A (LHD)
9 B (RHD)
49 OU1
29 OT1
2 SU1
1 RT1
(∗2)
(∗1)
B
W
LG
R(∗1)
R(∗2)
G(∗1)
G(∗2)

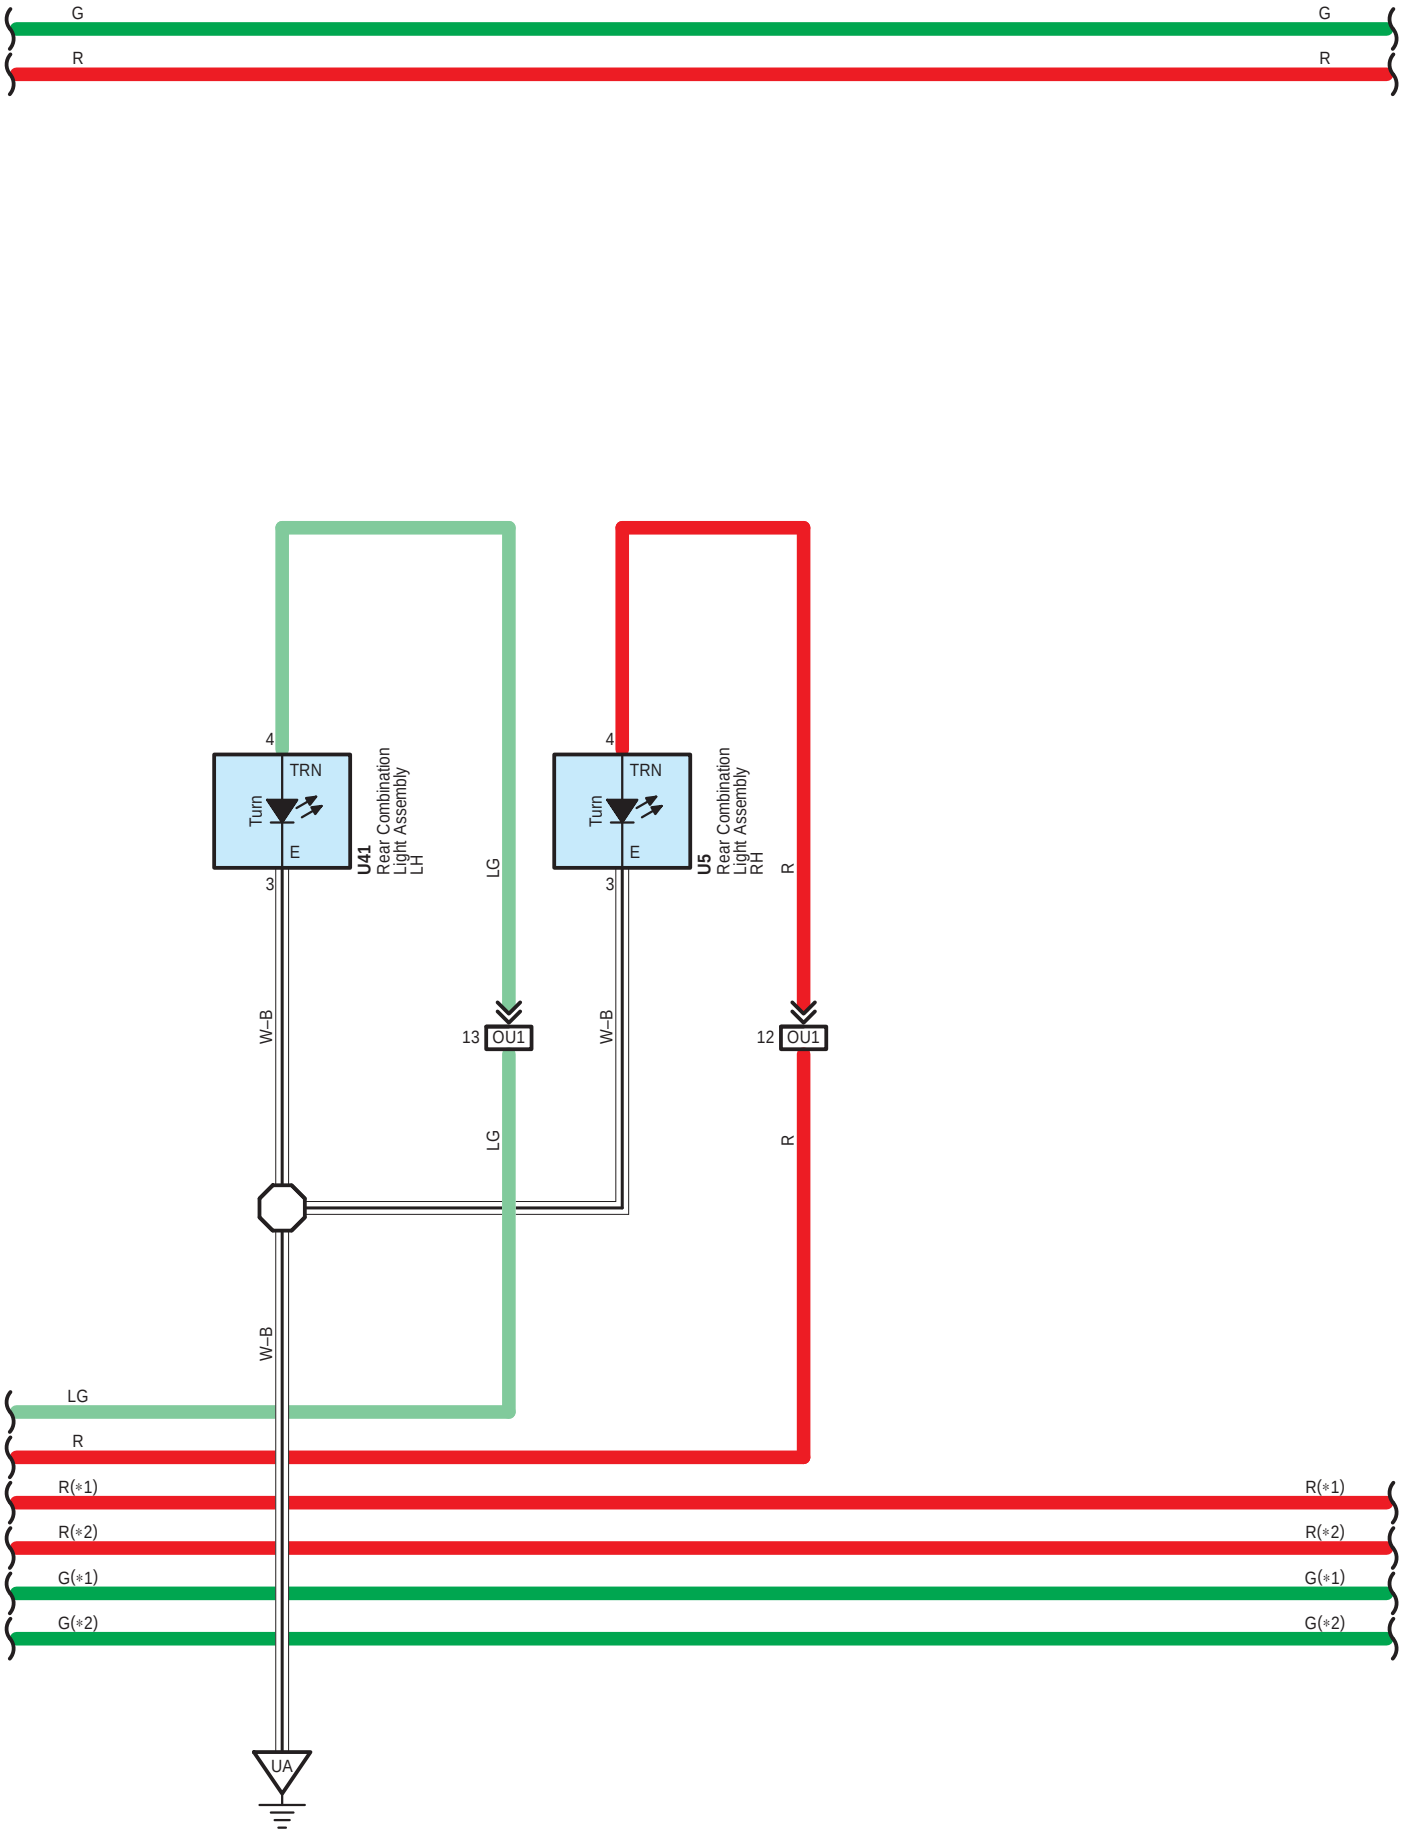
G
G
R
R
4
TRN
Turn
E
3
U41
Rear Combination Light Assembly LH
LG
4
TRN
Turn
E
3
U5
Rear Combination Light Assembly RH
R
W–B
13
OU1
W–B
12
OU1
LG
R
W–B
LG
R
R(∗1)
R(∗1)
R(∗2)
R(∗2)
G(∗1)
G(∗1)
G(∗2)
G(∗2)
UA

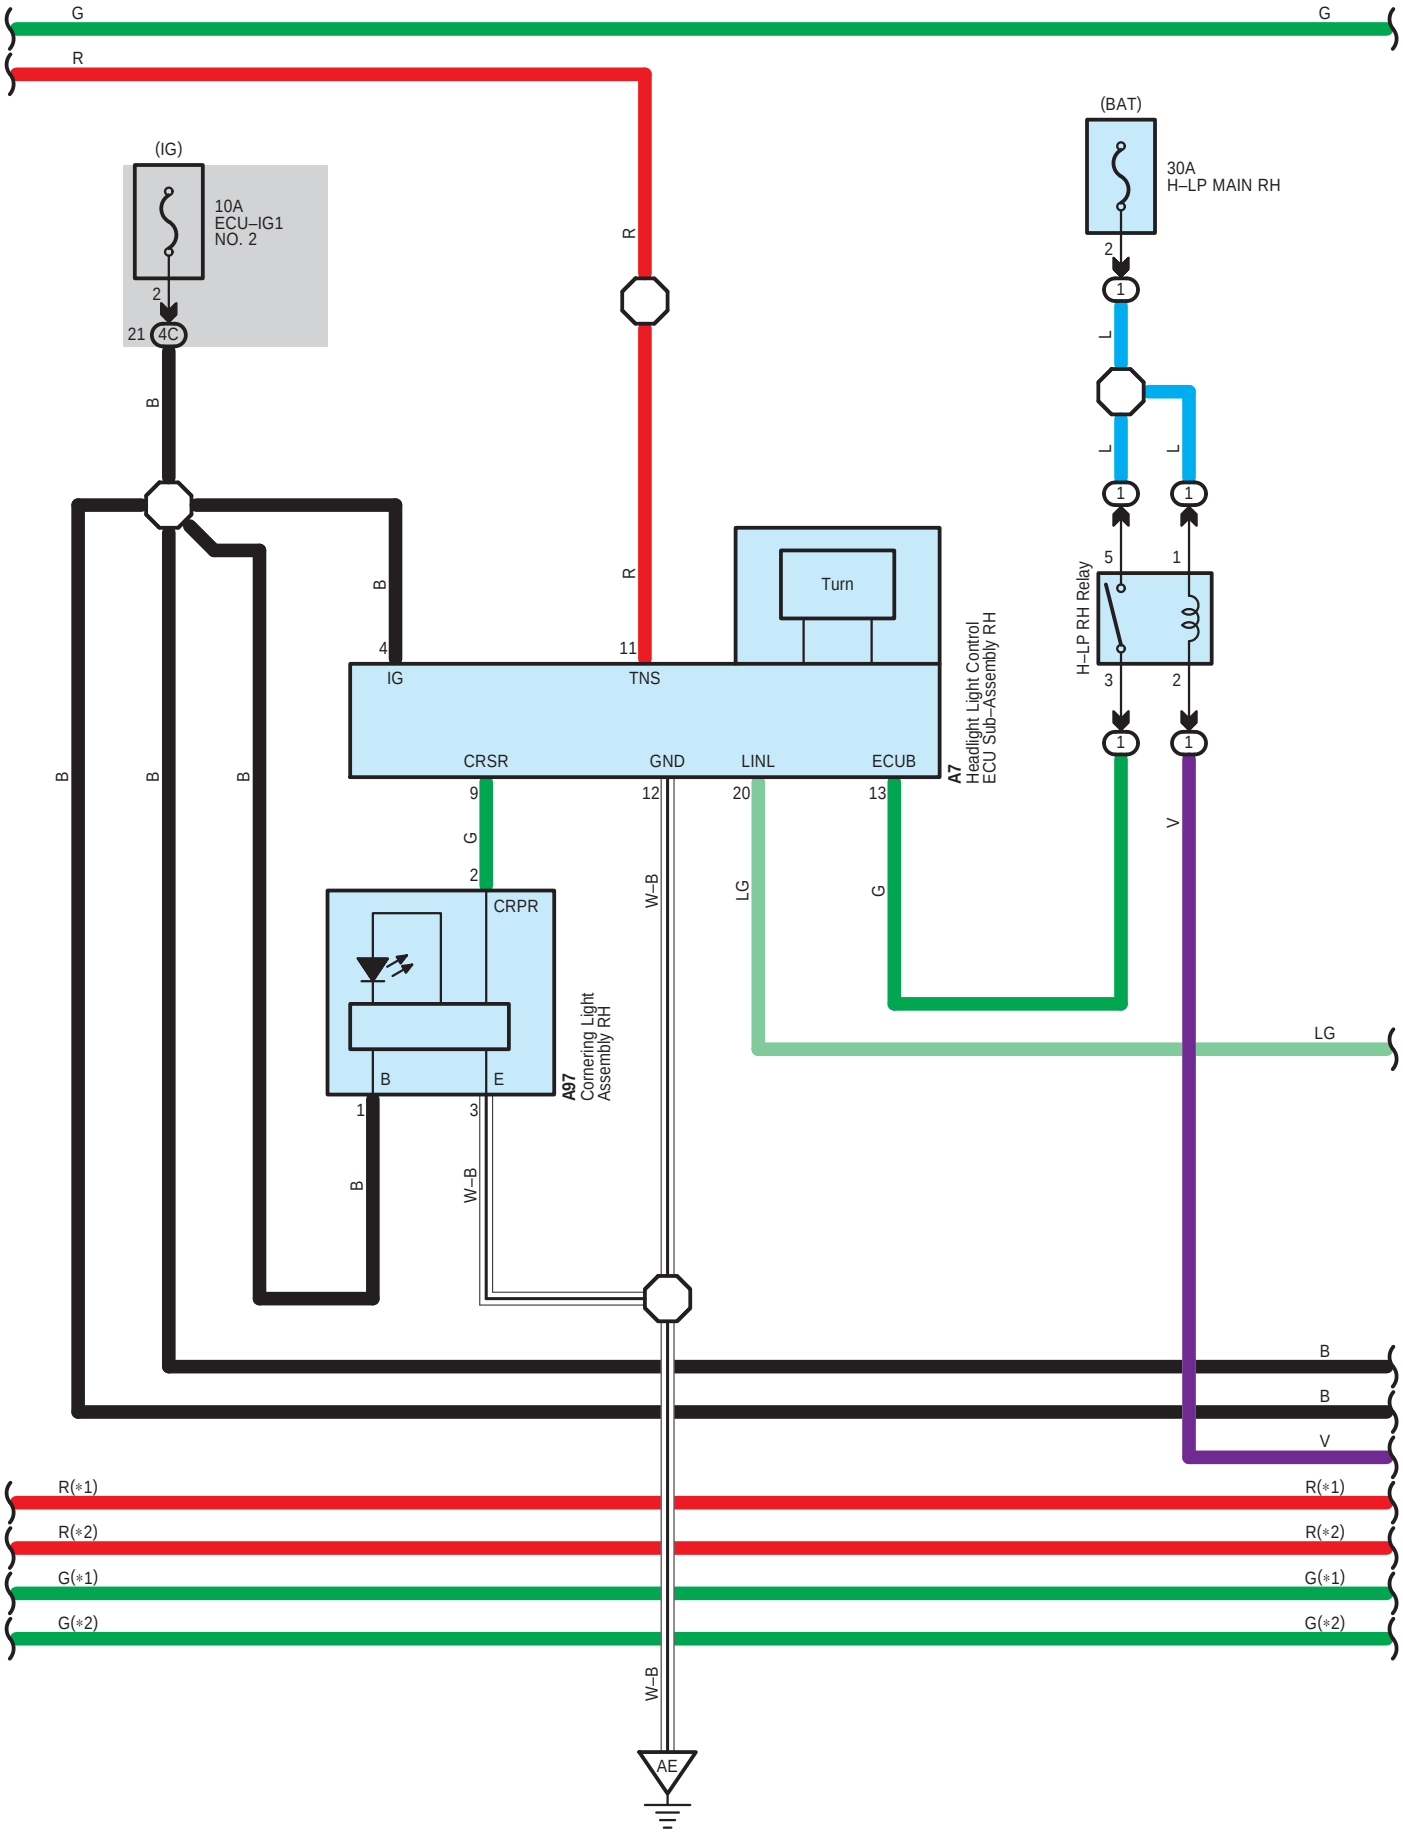
G
G
R
(IG)
10A
ECU–IG1
NO. 2
2
21
4C
B
R
R
(BAT)
30A
H–LP MAIN RH
2
1
L
L
L
1
1
5
1
H–LP RH Relay
3
2
1
1
B
B
B
B
4
IG
11
TNS
Turn
CRSR
GND
LINL
ECUB
A7
Headlight Light Control
ECU Sub–Assembly RH
9
12
20
13
G
2
CRPR
W–B
LG
G
V
A97
Cornering Light
Assembly RH
B
E
1
3
LG
B
W–B
B
B
V
R(∗1)
R(∗2)
G(∗1)
G(∗2)
R(∗1)
R(∗2)
G(∗1)
G(∗2)
W–B
AE

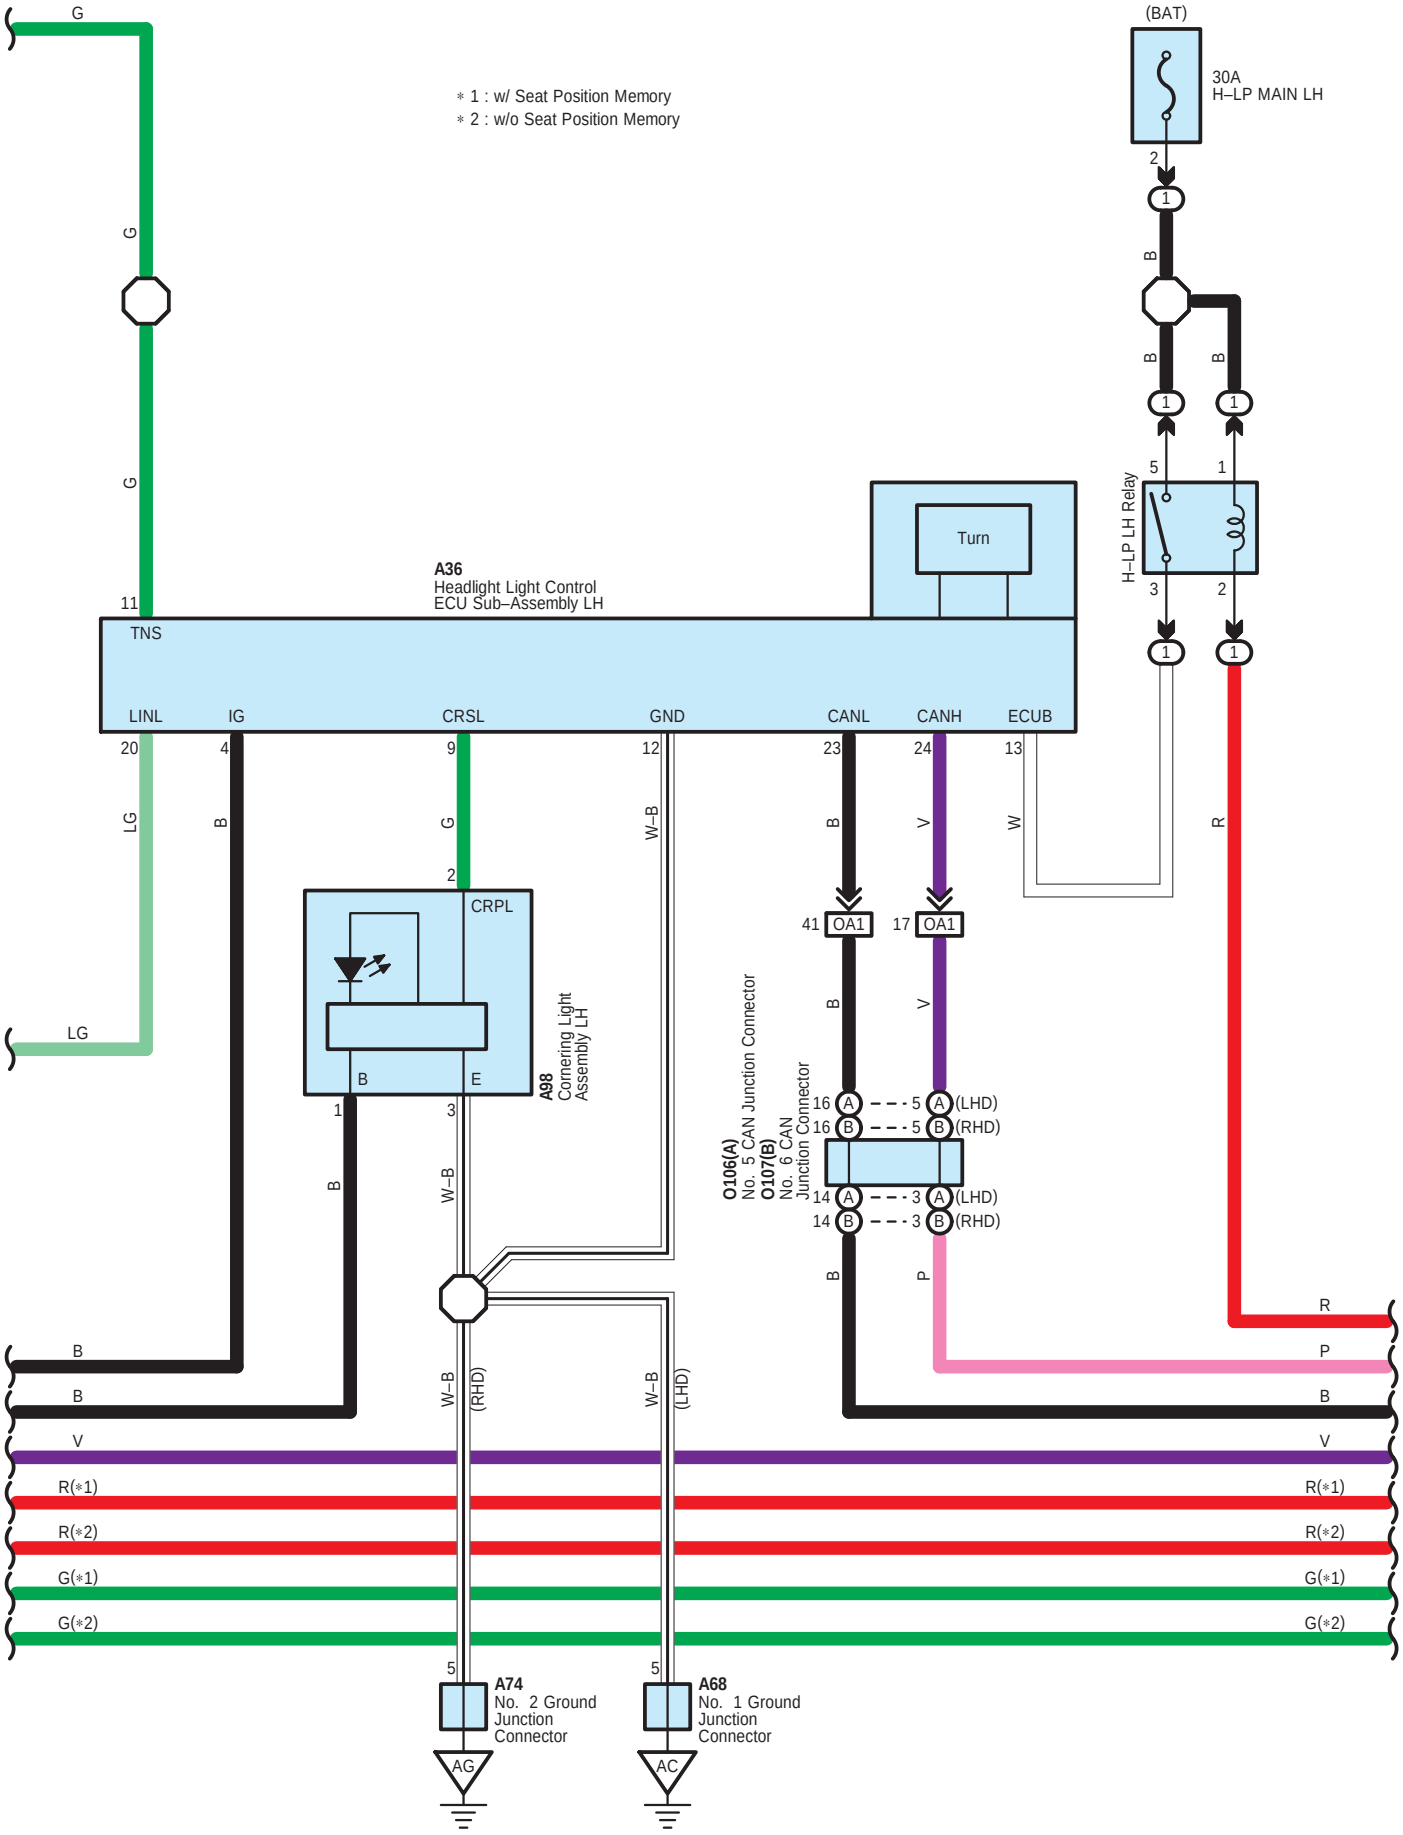
∗ 1 : w/ Seat Position Memory
∗ 2 : w/o Seat Position Memory
(BAT)
30A
H–LP MAIN LH
H–LP LH Relay
Turn
A36
Headlight Light Control
ECU Sub–Assembly LH
TNS
LINL
IG
CRSL
GND
CANL
CANH
ECUB
CRPL
A98
Cornering Light
Assembly LH
O106(A)
No. 5 CAN Junction Connector
O107(B)
No. 6 CAN
Junction Connector
OA1
(LHD)
(RHD)
A74
No. 2 Ground
Junction
Connector
A68
No. 1 Ground
Junction
Connector
AG
AC
R(∗1)
R(∗2)
G(∗1)
G(∗2)

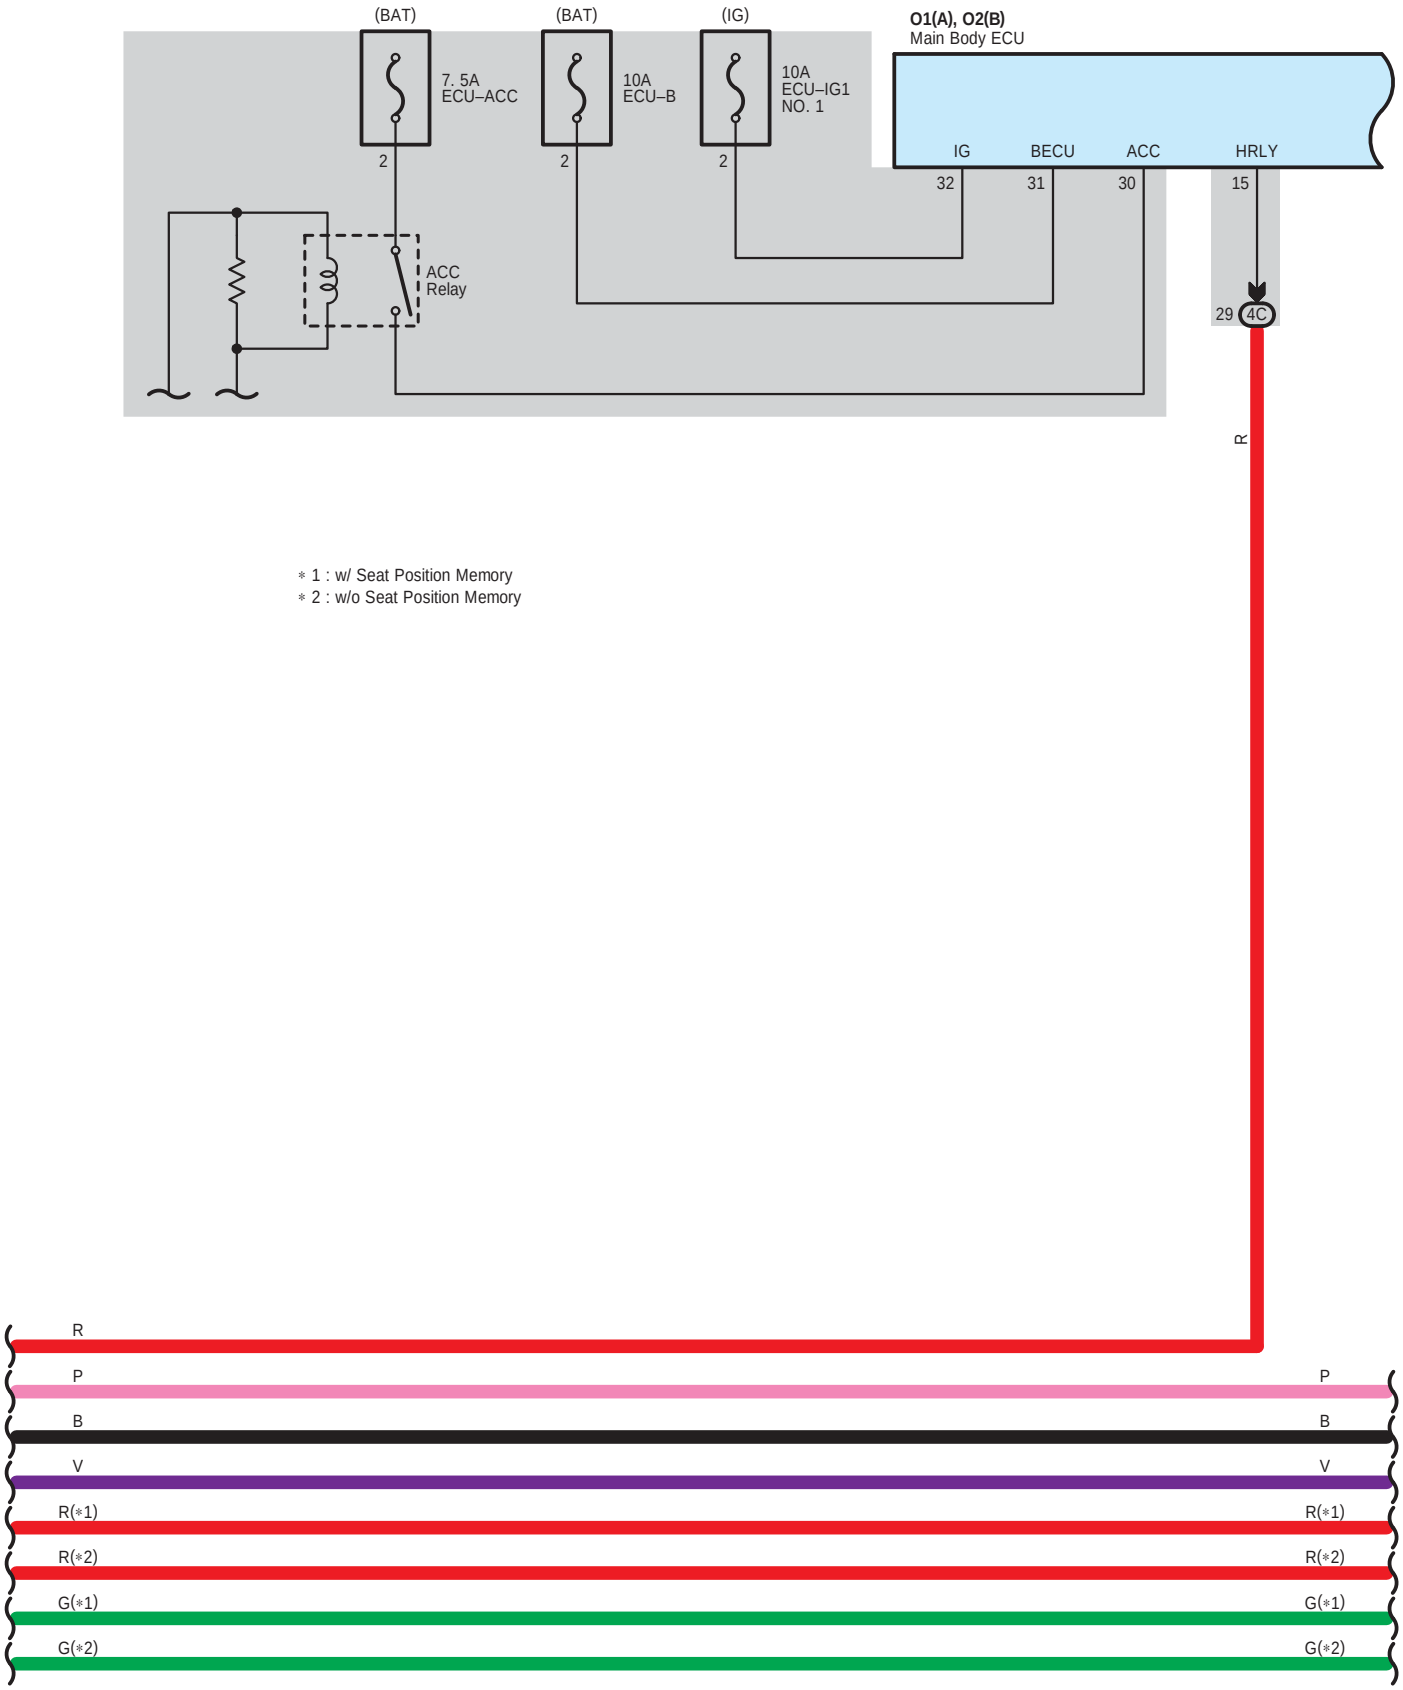
(BAT)
(BAT)
(IG)
7. 5A
ECU–ACC
10A
ECU–B
10A
ECU–IG1
NO. 1
2
2
2
O1(A), O2(B)
Main Body ECU
IG
BECU
ACC
HRLY
32
31
30
15
ACC
Relay
29
4C
R
∗ 1 : w/ Seat Position Memory
∗ 2 : w/o Seat Position Memory
R
P
P
B
B
V
V
R(∗1)
R(∗1)
R(∗2)
R(∗2)
G(∗1)
G(∗1)
G(∗2)
G(∗2)

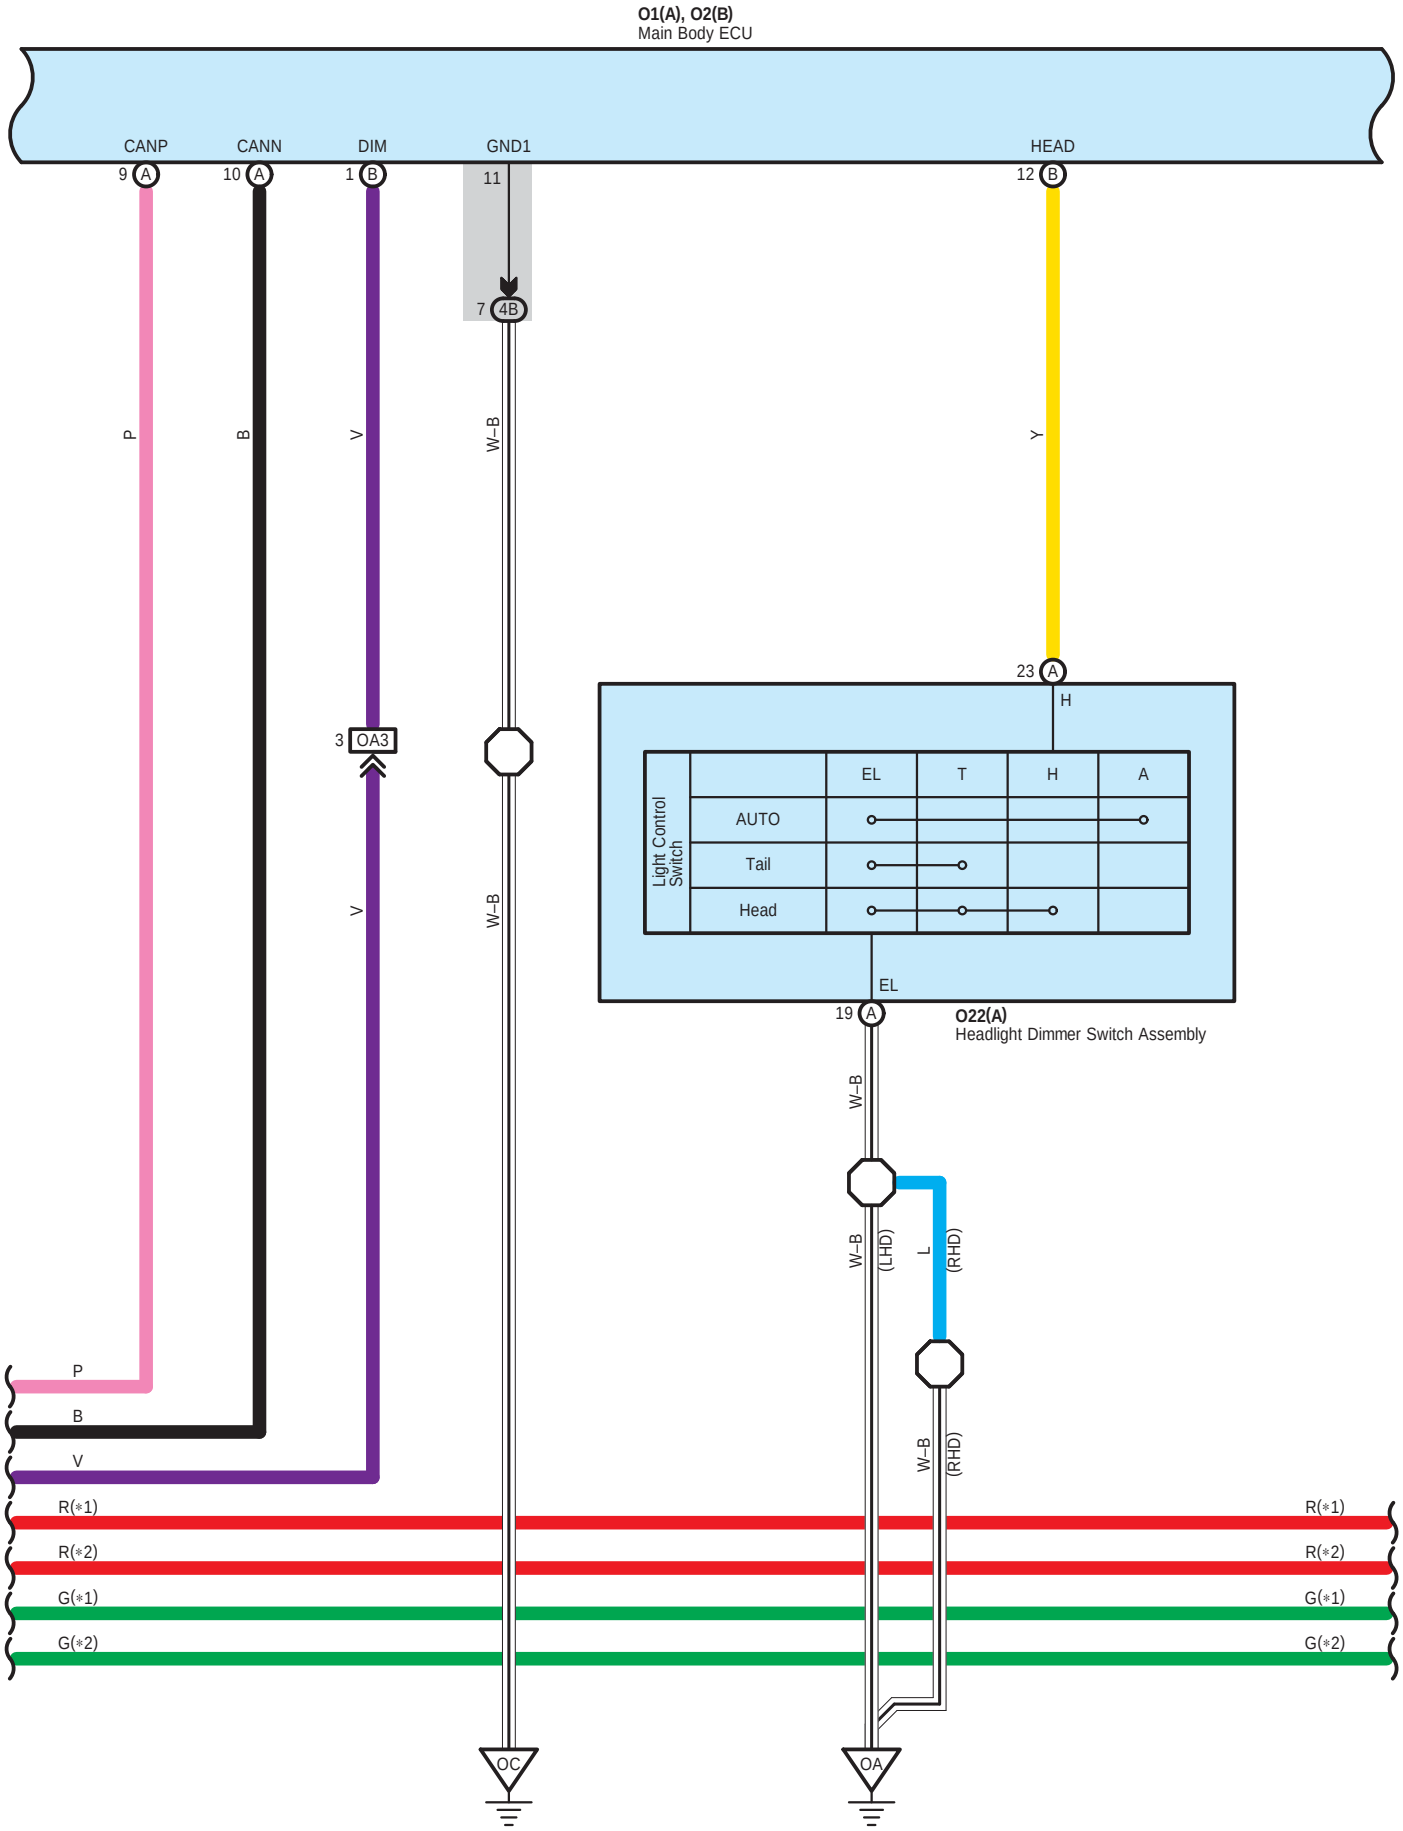
O1(A), O2(B)
Main Body ECU
CANP
CANN
DIM
GND1
HEAD
9 A
10 A
1 B
11
12 B
7 4B
P
B
V
W–B
Y
23 A
H
3 OA3
Light Control Switch
EL
T
H
A
AUTO
Tail
Head
EL
19 A
O22(A)
Headlight Dimmer Switch Assembly
W–B
W–B
(LHD)
L
(RHD)
W–B
(RHD)
P
B
V
R(*1)
R(*2)
G(*1)
G(*2)
OC
OA

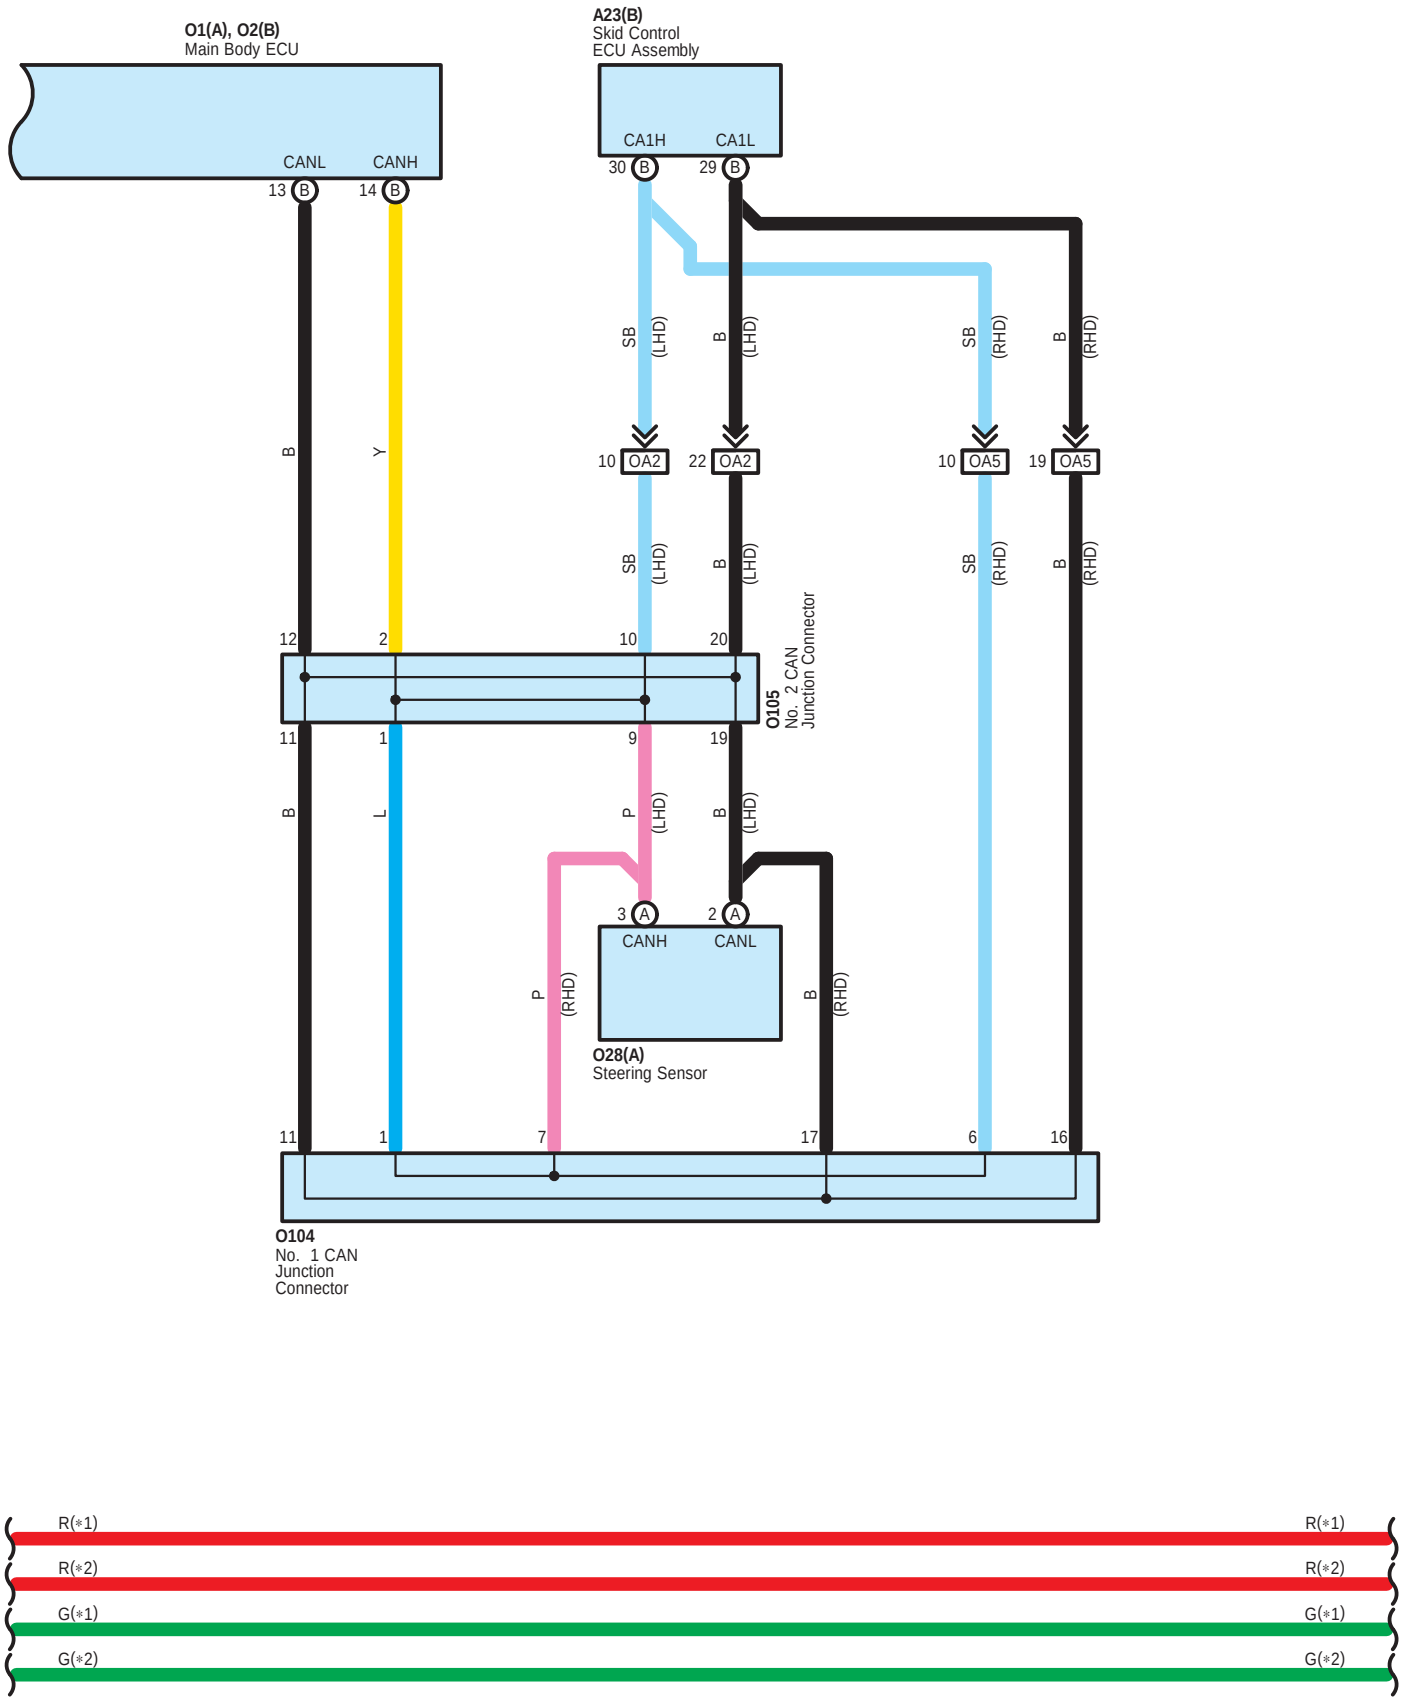
O1(A), O2(B)
Main Body ECU
CANL
CANH
13 B
14 B
A23(B)
Skid Control
ECU Assembly
CA1H
CA1L
30 B
29 B
SB (LHD)
B (LHD)
SB (RHD)
B (RHD)
10 OA2
22 OA2
10 OA5
19 OA5
B
Y
12
2
10
20
11
1
9
19
O105
No. 2 CAN
Junction Connector
B
L
P (LHD)
B (LHD)
3 A
2 A
CANH
CANL
P (RHD)
B (RHD)
O28(A)
Steering Sensor
11
1
7
17
6
16
O104
No. 1 CAN
Junction
Connector
R(*1)
R(*2)
G(*1)
G(*2)

∗ 1 : w/ Seat Position Memory
∗ 2 : w/o Seat Position Memory

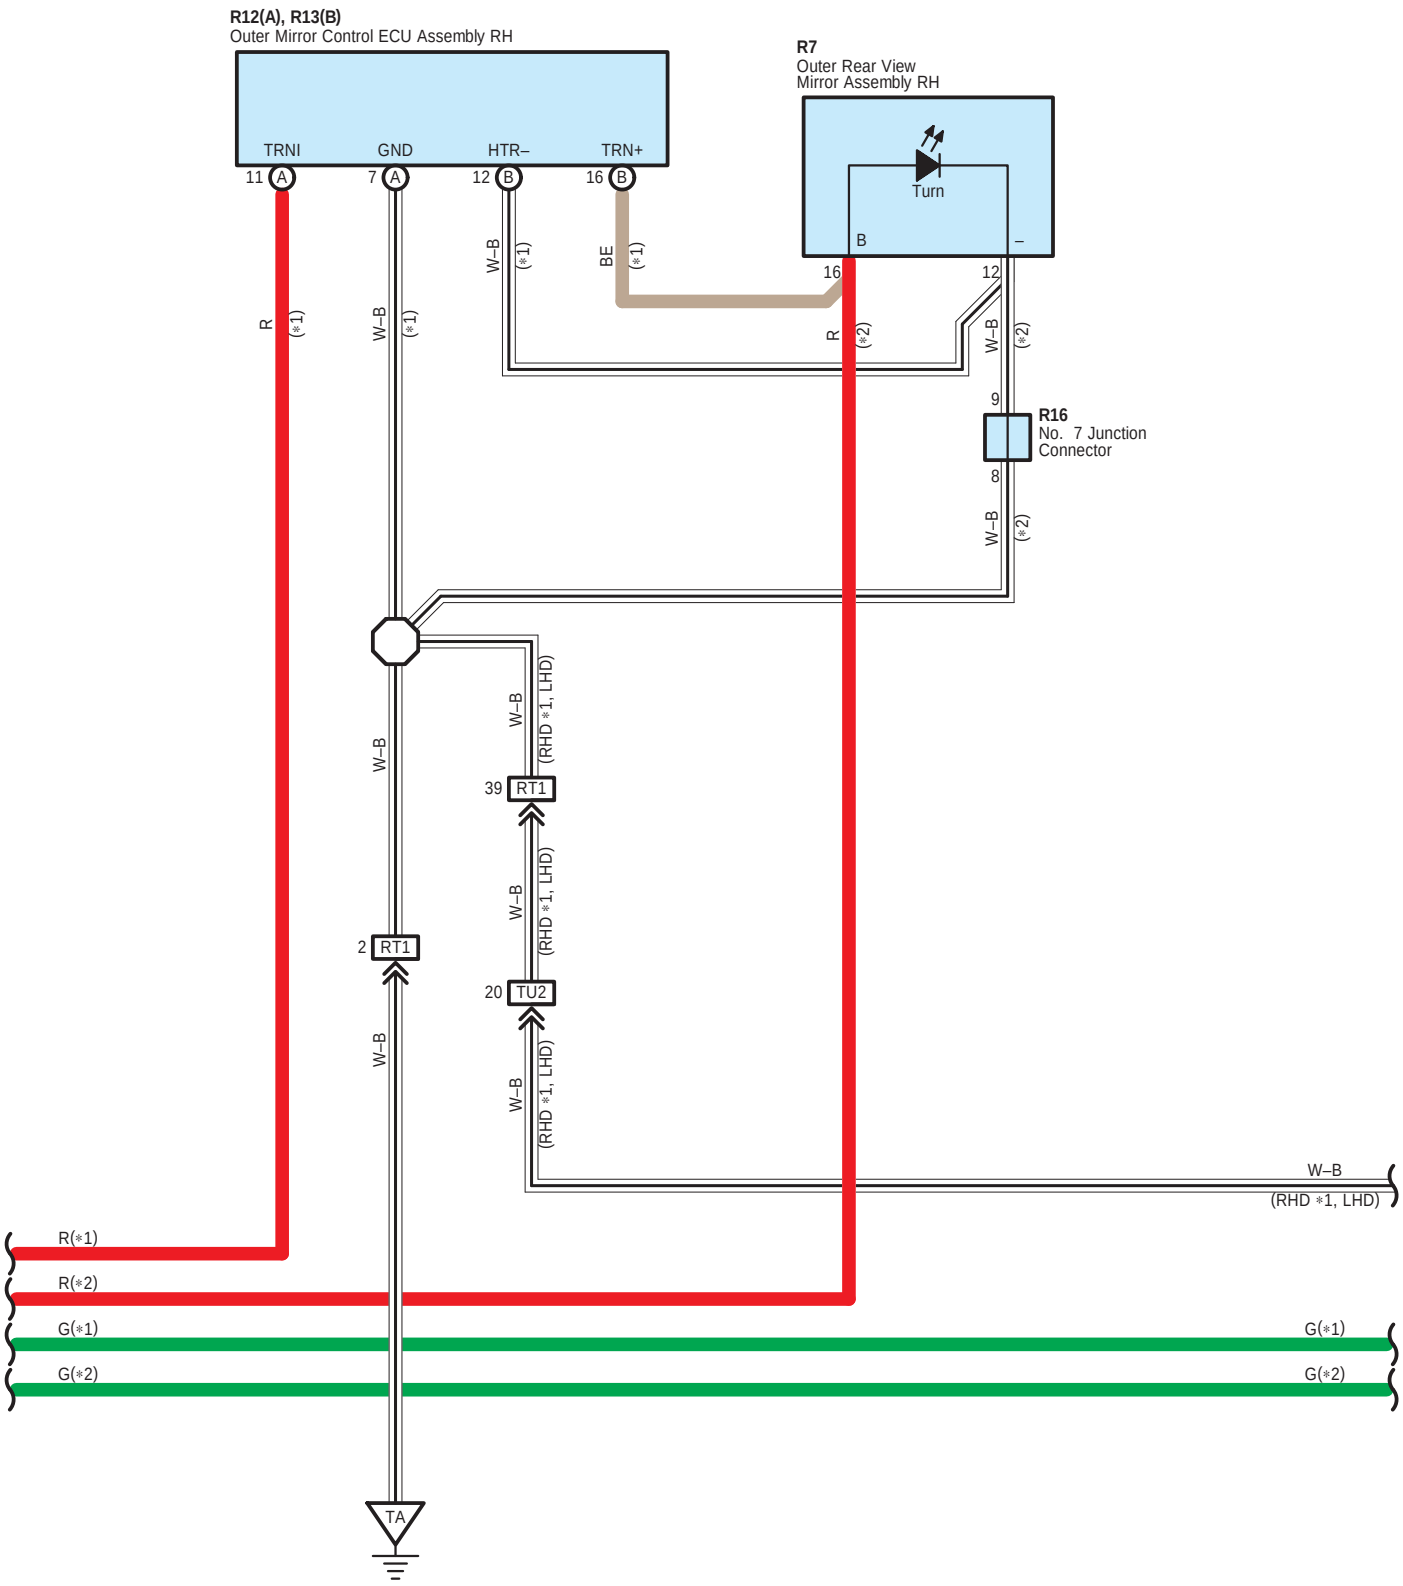

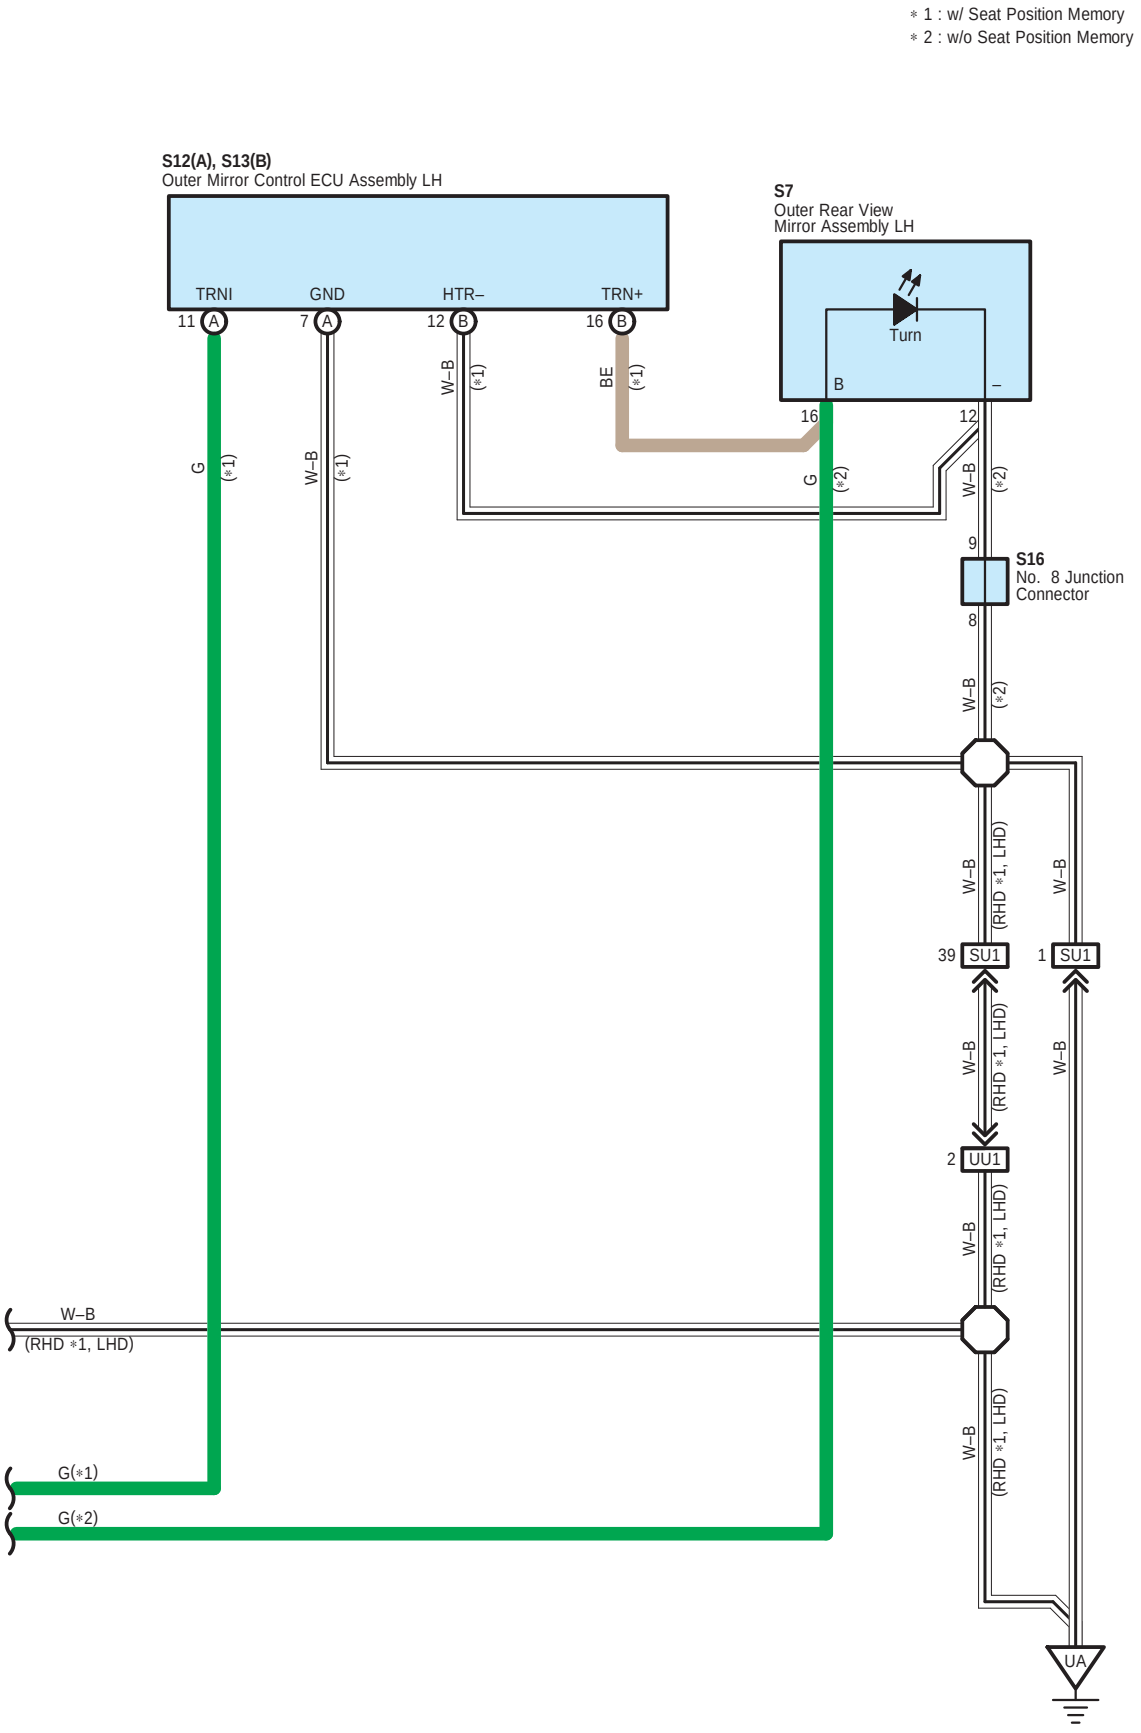
∗ 1 : w/ Seat Position Memory
∗ 2 : w/o Seat Position Memory
S12(A), S13(B)
Outer Mirror Control ECU Assembly LH
TRNI
GND
HTR–
TRN+
11 A
7 A
12 B
16 B
S7
Outer Rear View
Mirror Assembly LH
Turn
B
–
16
12
9
8
S16
No. 8 Junction
Connector
G
(∗1)
W–B
(∗1)
W–B
(∗1)
BE
(∗1)
G
(∗2)
W–B
(∗2)
W–B
(∗2)
W–B
(RHD ∗1, LHD)
W–B
39 SU1
1 SU1
W–B
(RHD ∗1, LHD)
W–B
2 UU1
W–B
(RHD ∗1, LHD)
W–B
(RHD ∗1, LHD)
W–B
(RHD ∗1, LHD)
G(∗1)
G(∗2)
UA

A7
Gray

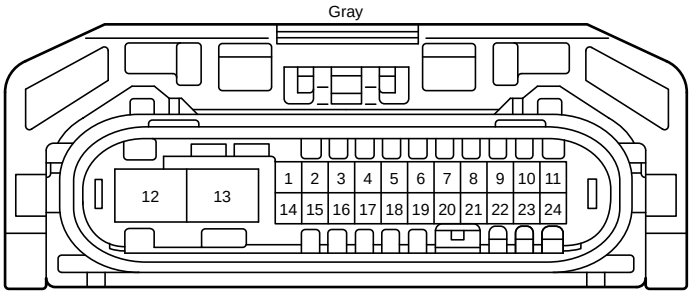

90980-12A92

A23
Gray

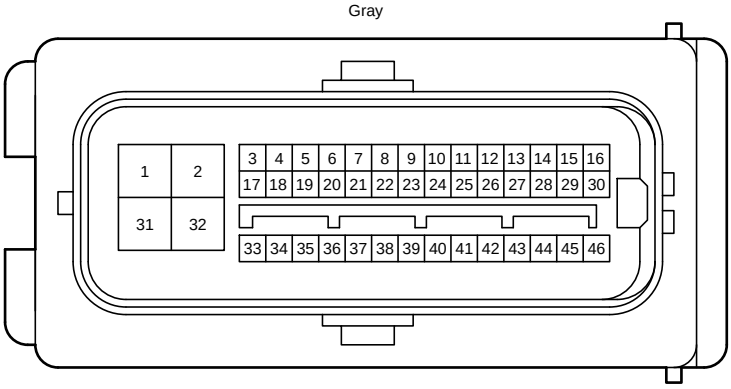

90980-12426

A36
Gray

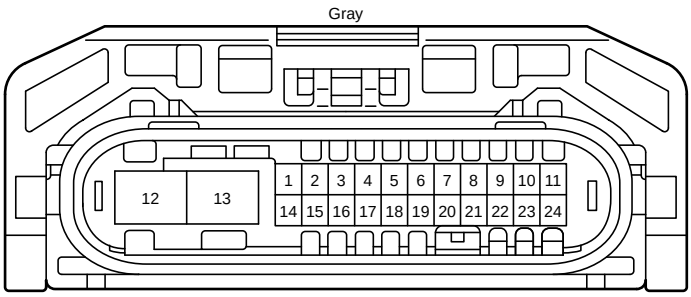

90980-12A92

A68
White

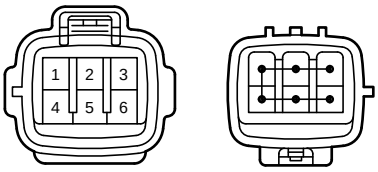

90980-11194

A74
White

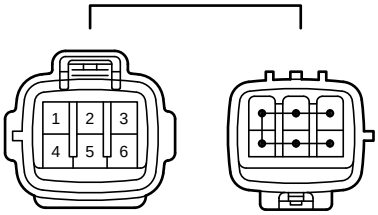

90980-11194

A97
Gray

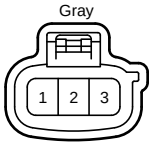

90980-10981

A98
Gray

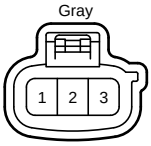

90980-10981

O1
White

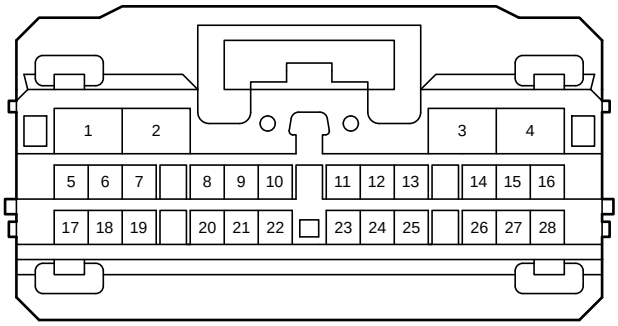

90980-12908

O2
White

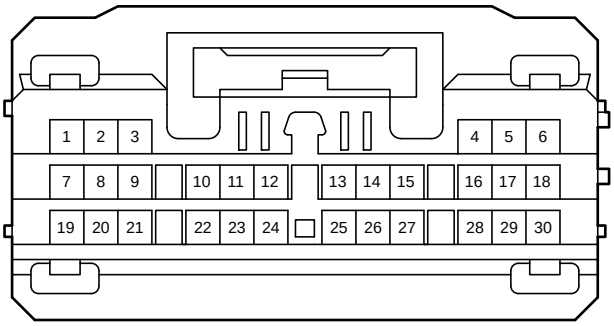

90980-12909

O3
Black

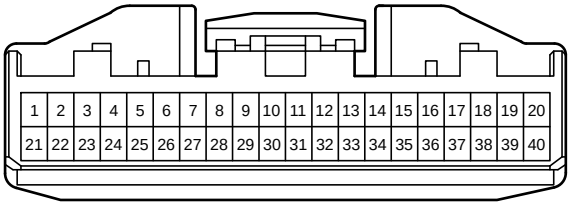

90980-12557

O4
Black

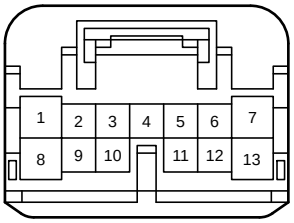

90980-12767

O22
Black

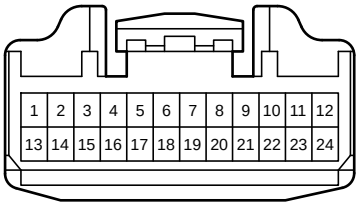

90980-12554

O23
White

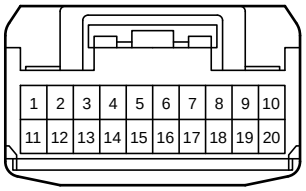

90980-12460

O28
Black

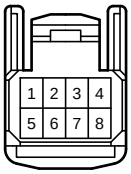

90980-12551

O64
Black

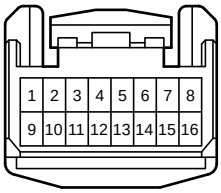

90980-12553

O104
White

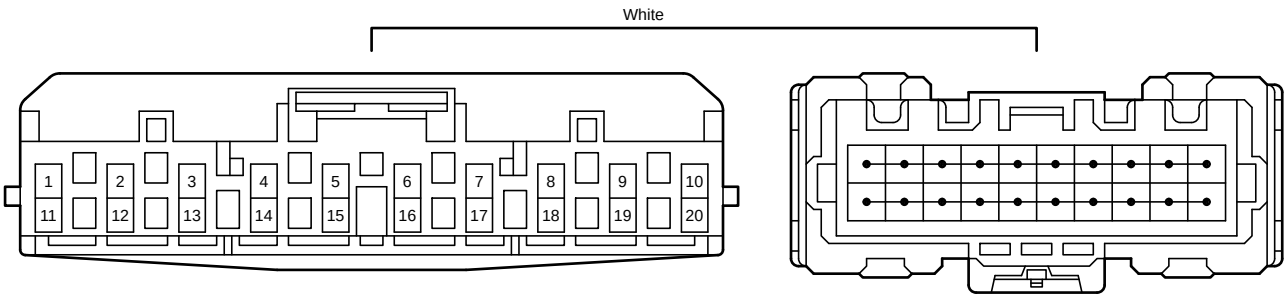

90980-12A58

O105
White

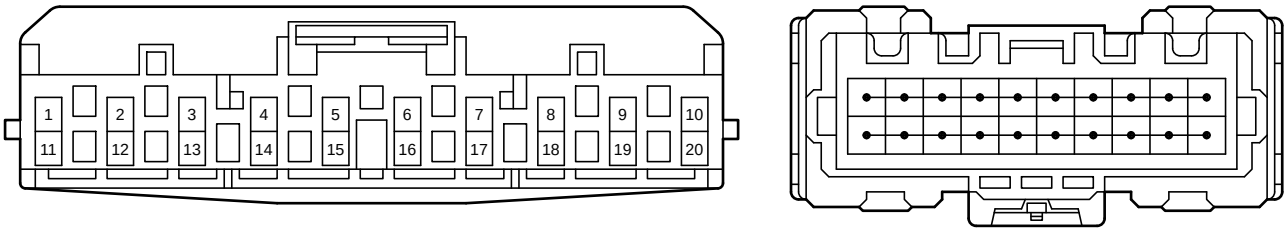

90980-12A58

O106
Black

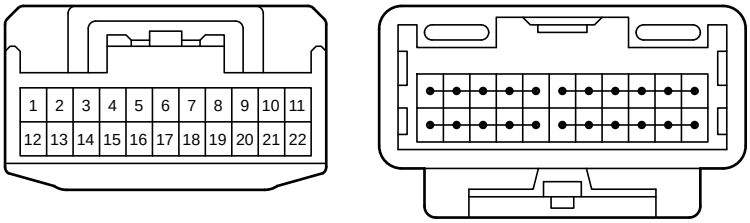

90980-12372

O107
Black

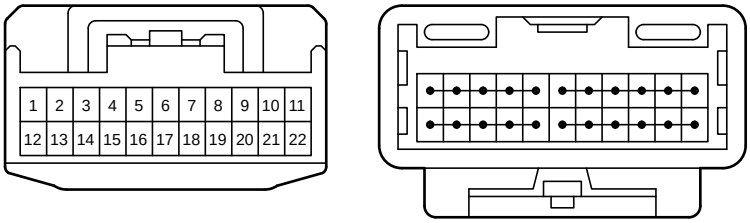

90980-12372

R7
White

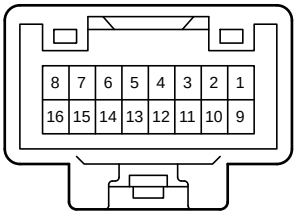

90980-12192

R12
White

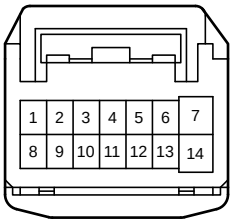

90980-12804

R13
White

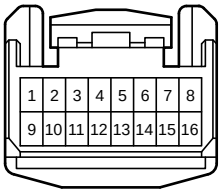

90980-12553

R16
White

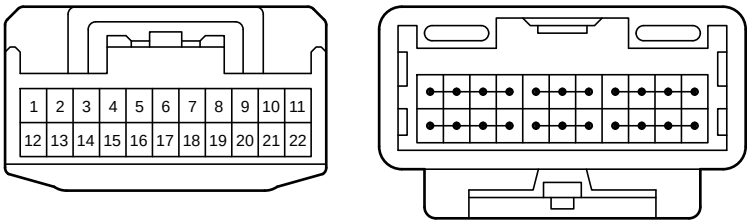

90980-12372

S7
White

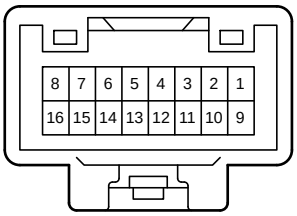

90980-12192

S12
White

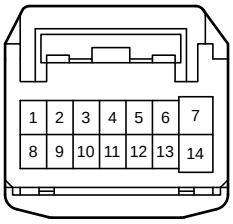

90980-12804

S13
White

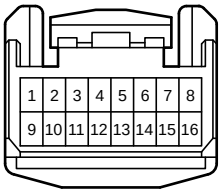

90980-12553

S16
White

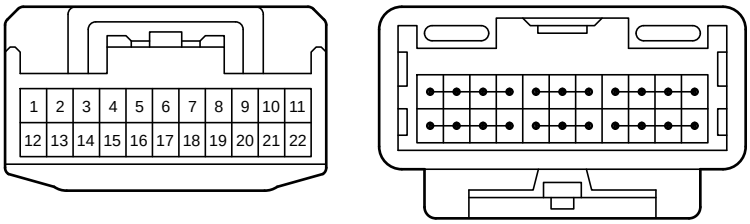

90980-12372

U5
White

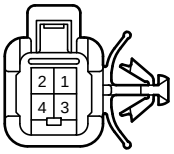

90980-11399

U41
White

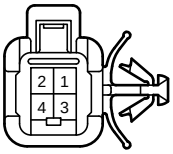

90980-11399

4A
White

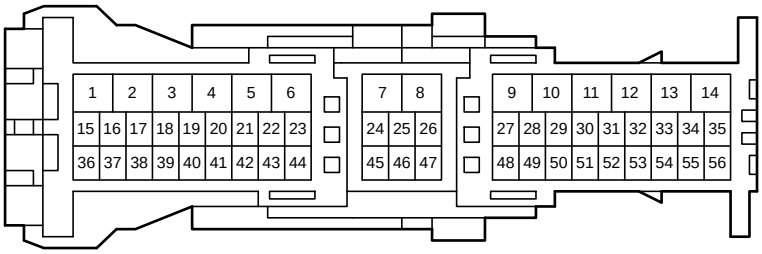

90980-12943

4B
White

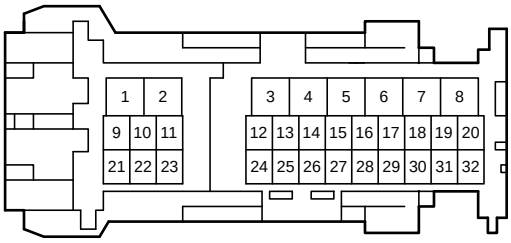

90980-12A48

4C
White

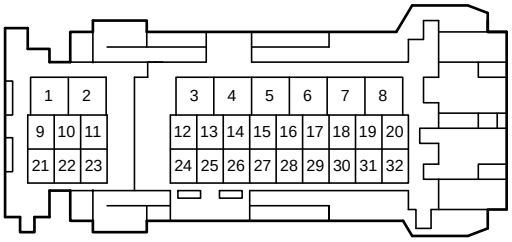

90980-12A47

OA1
White

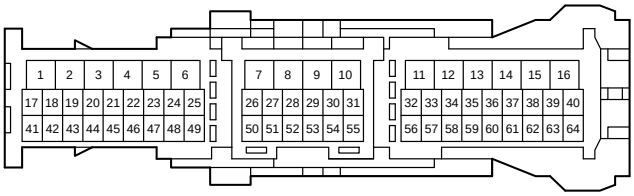

90980-12774

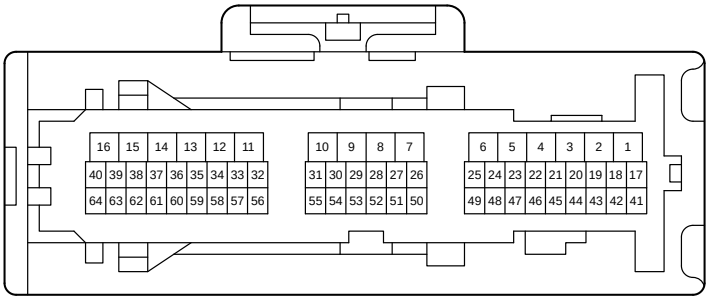

90980-12798

OA2
White

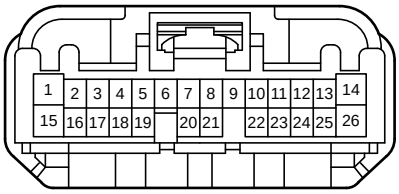

82824-24090

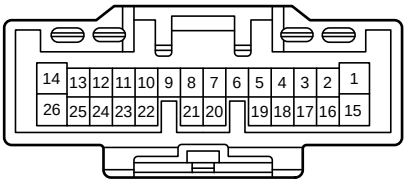

82824-24080

OA3
White

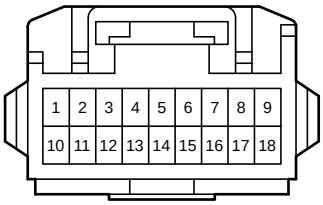

82824-53070

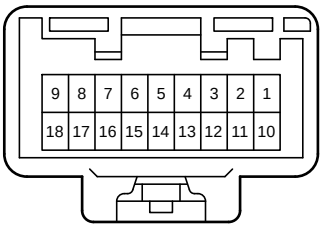

82824-53060

OA5
White

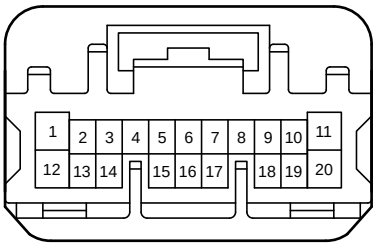

90980-12741

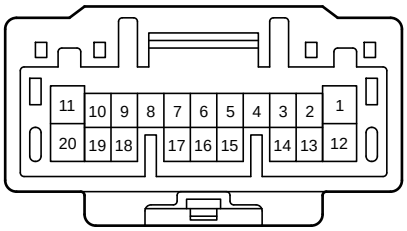

90980-12740

OT1
White

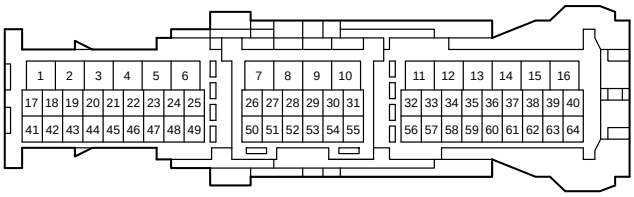

90980-12774

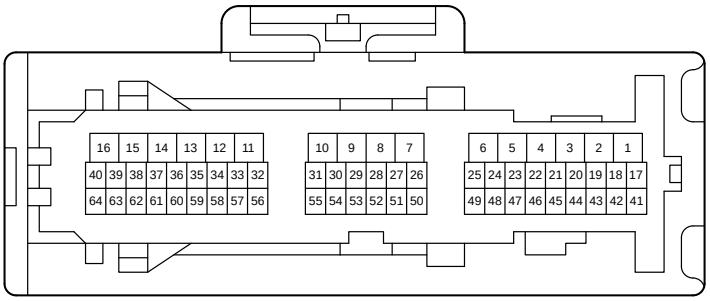

90980-12798

OU1
White

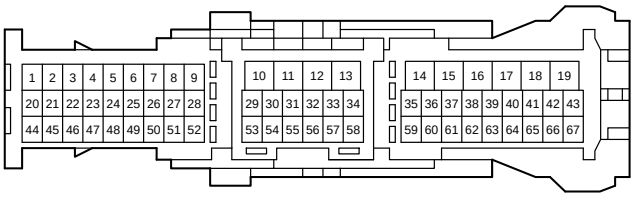

90980-12783

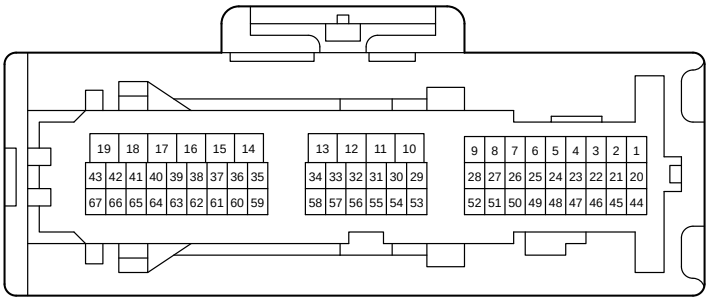

90980-12800

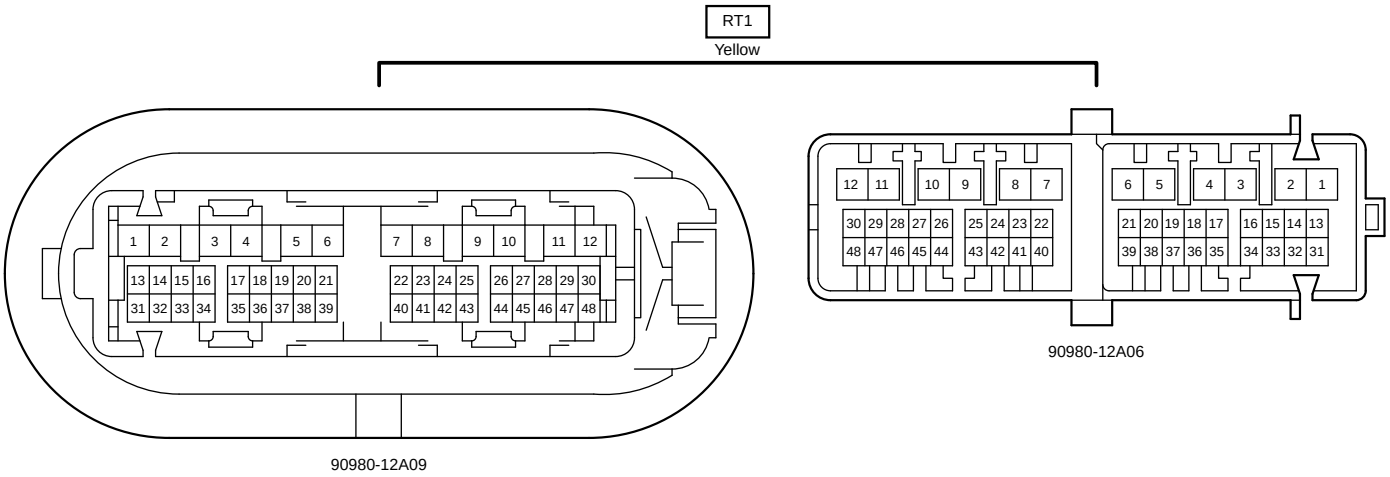
RT1
Yellow
90980-12A09
90980-12A06

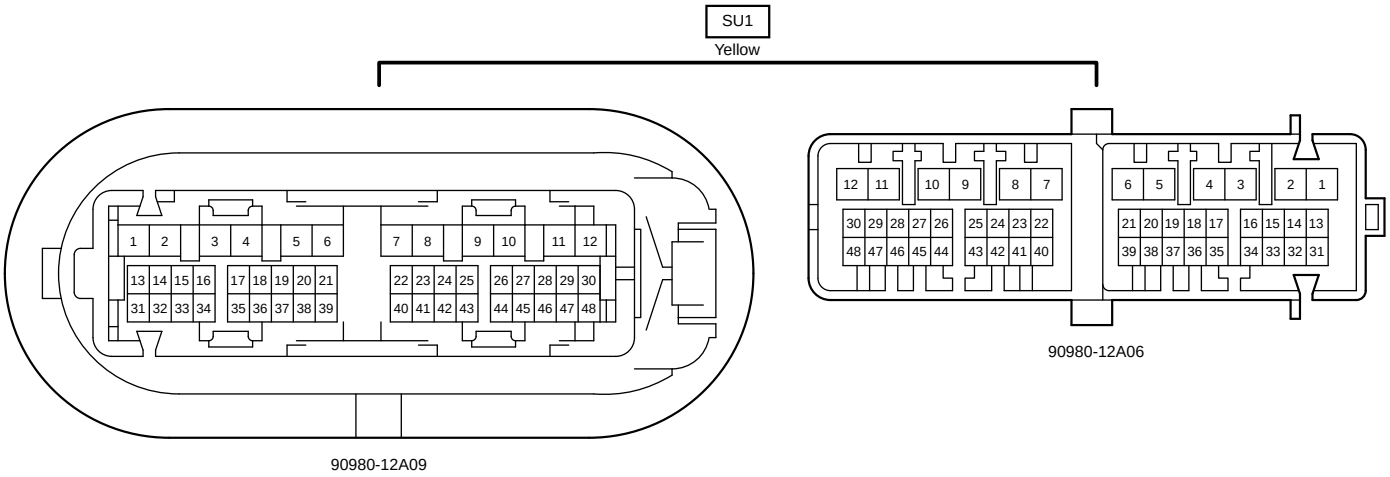
SU1
Yellow
90980-12A09
90980-12A06

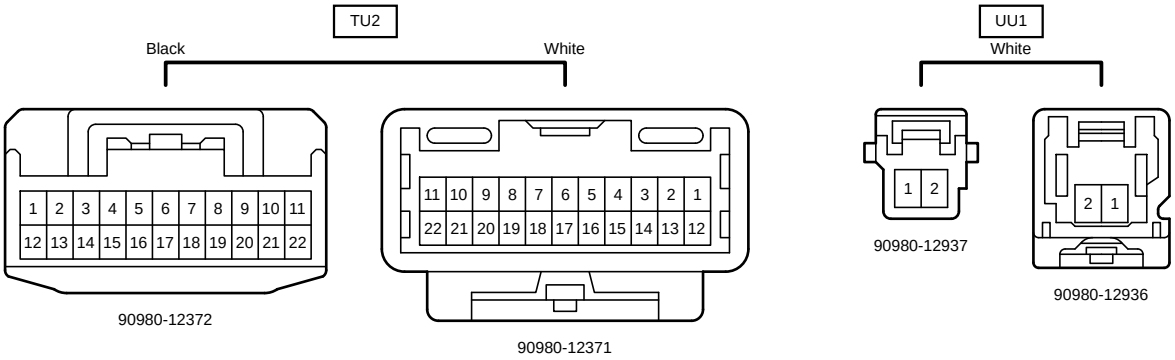
TU2
Black
White
90980-12372
90980-12371
UU1
White
90980-12937
90980-12936