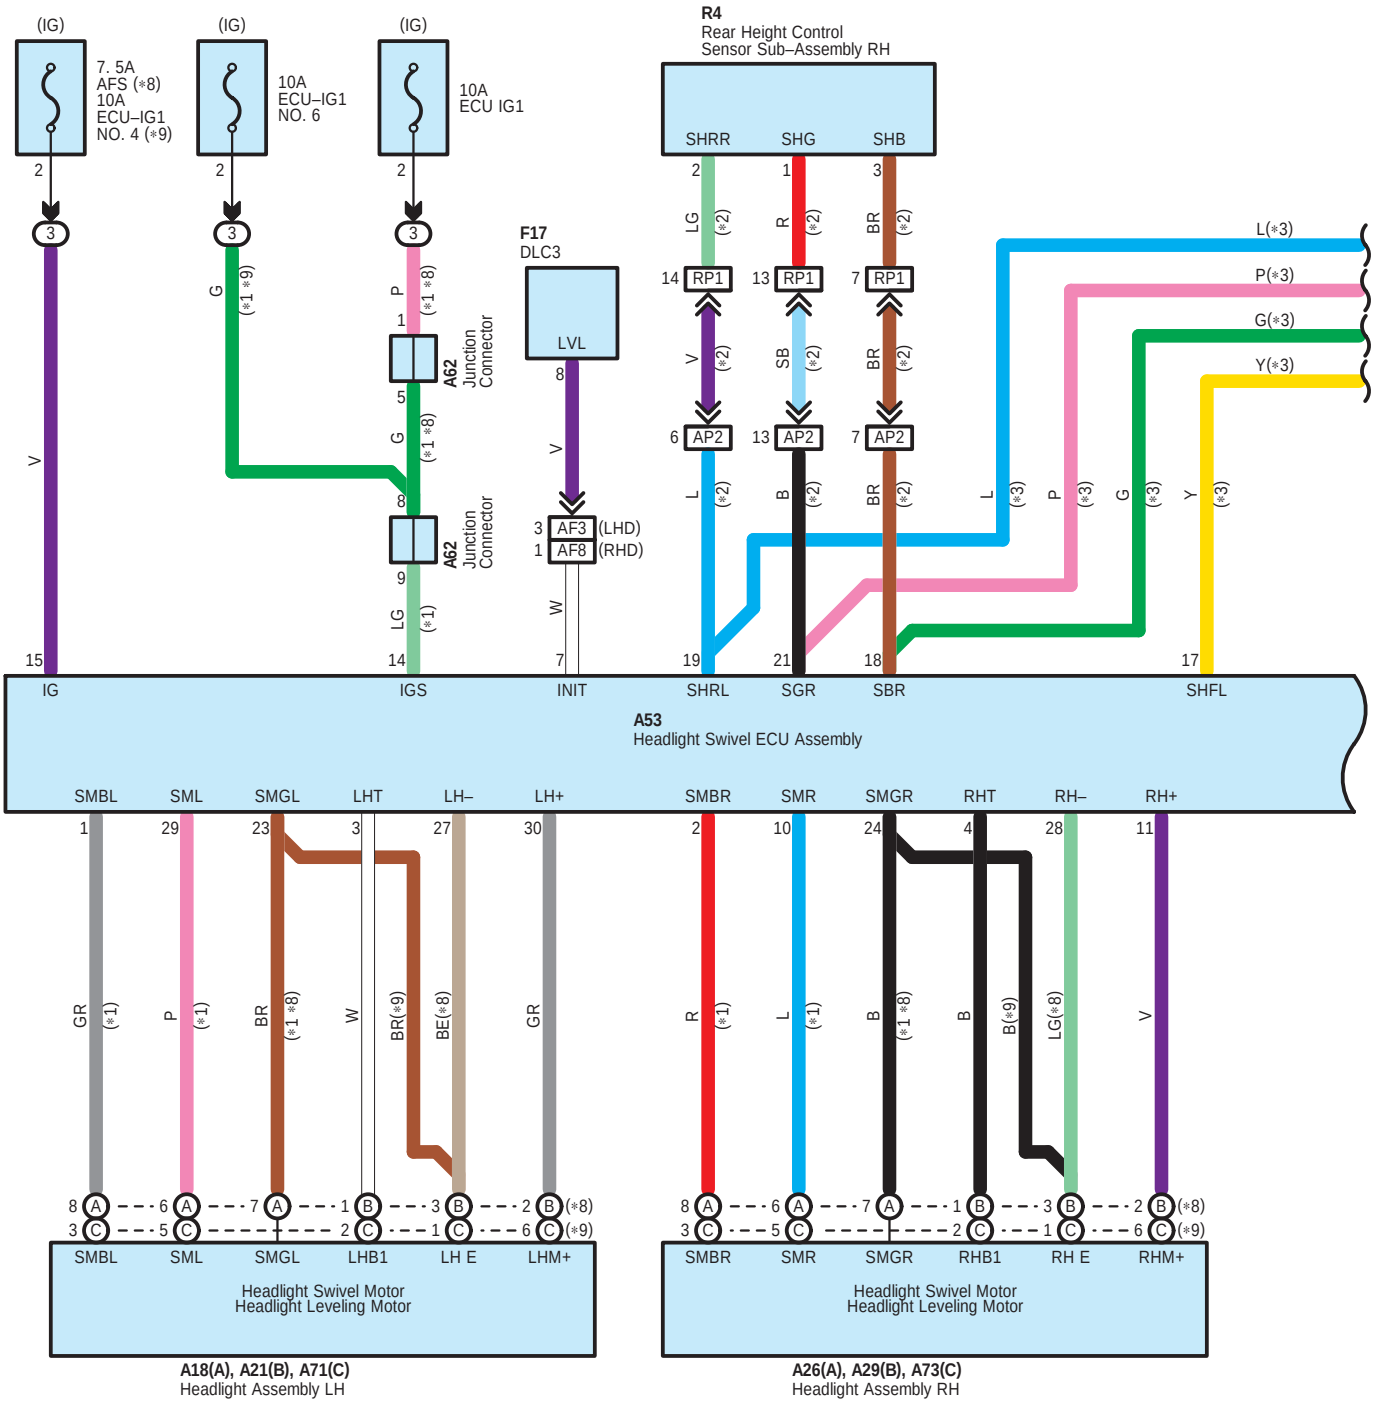
(IG)
7. 5A
AFS (*8)
10A
ECU–IG1
NO. 4 (*9)
10A
ECU–IG1
NO. 6
10A
ECU IG1
R4
Rear Height Control
Sensor Sub–Assembly RH
SHRR
SHG
SHB
F17
DLC3
LVL
A62
Junction
Connector
RP1
AP2
AF3 (LHD)
AF8 (RHD)
L(*3)
P(*3)
G(*3)
Y(*3)
IG
IGS
INIT
SHRL
SGR
SBR
SHFL
A53
Headlight Swivel ECU Assembly
SMBL
SML
SMGL
LHT
LH–
LH+
SMBR
SMR
SMGR
RHT
RH–
RH+
SMBL
SML
SMGL
LHB1
LH E
LHM+
Headlight Swivel Motor
Headlight Leveling Motor
A18(A), A21(B), A71(C)
Headlight Assembly LH
SMBR
SMR
SMGR
RHB1
RH E
RHM+
Headlight Swivel Motor
Headlight Leveling Motor
A26(A), A29(B), A73(C)
Headlight Assembly RH

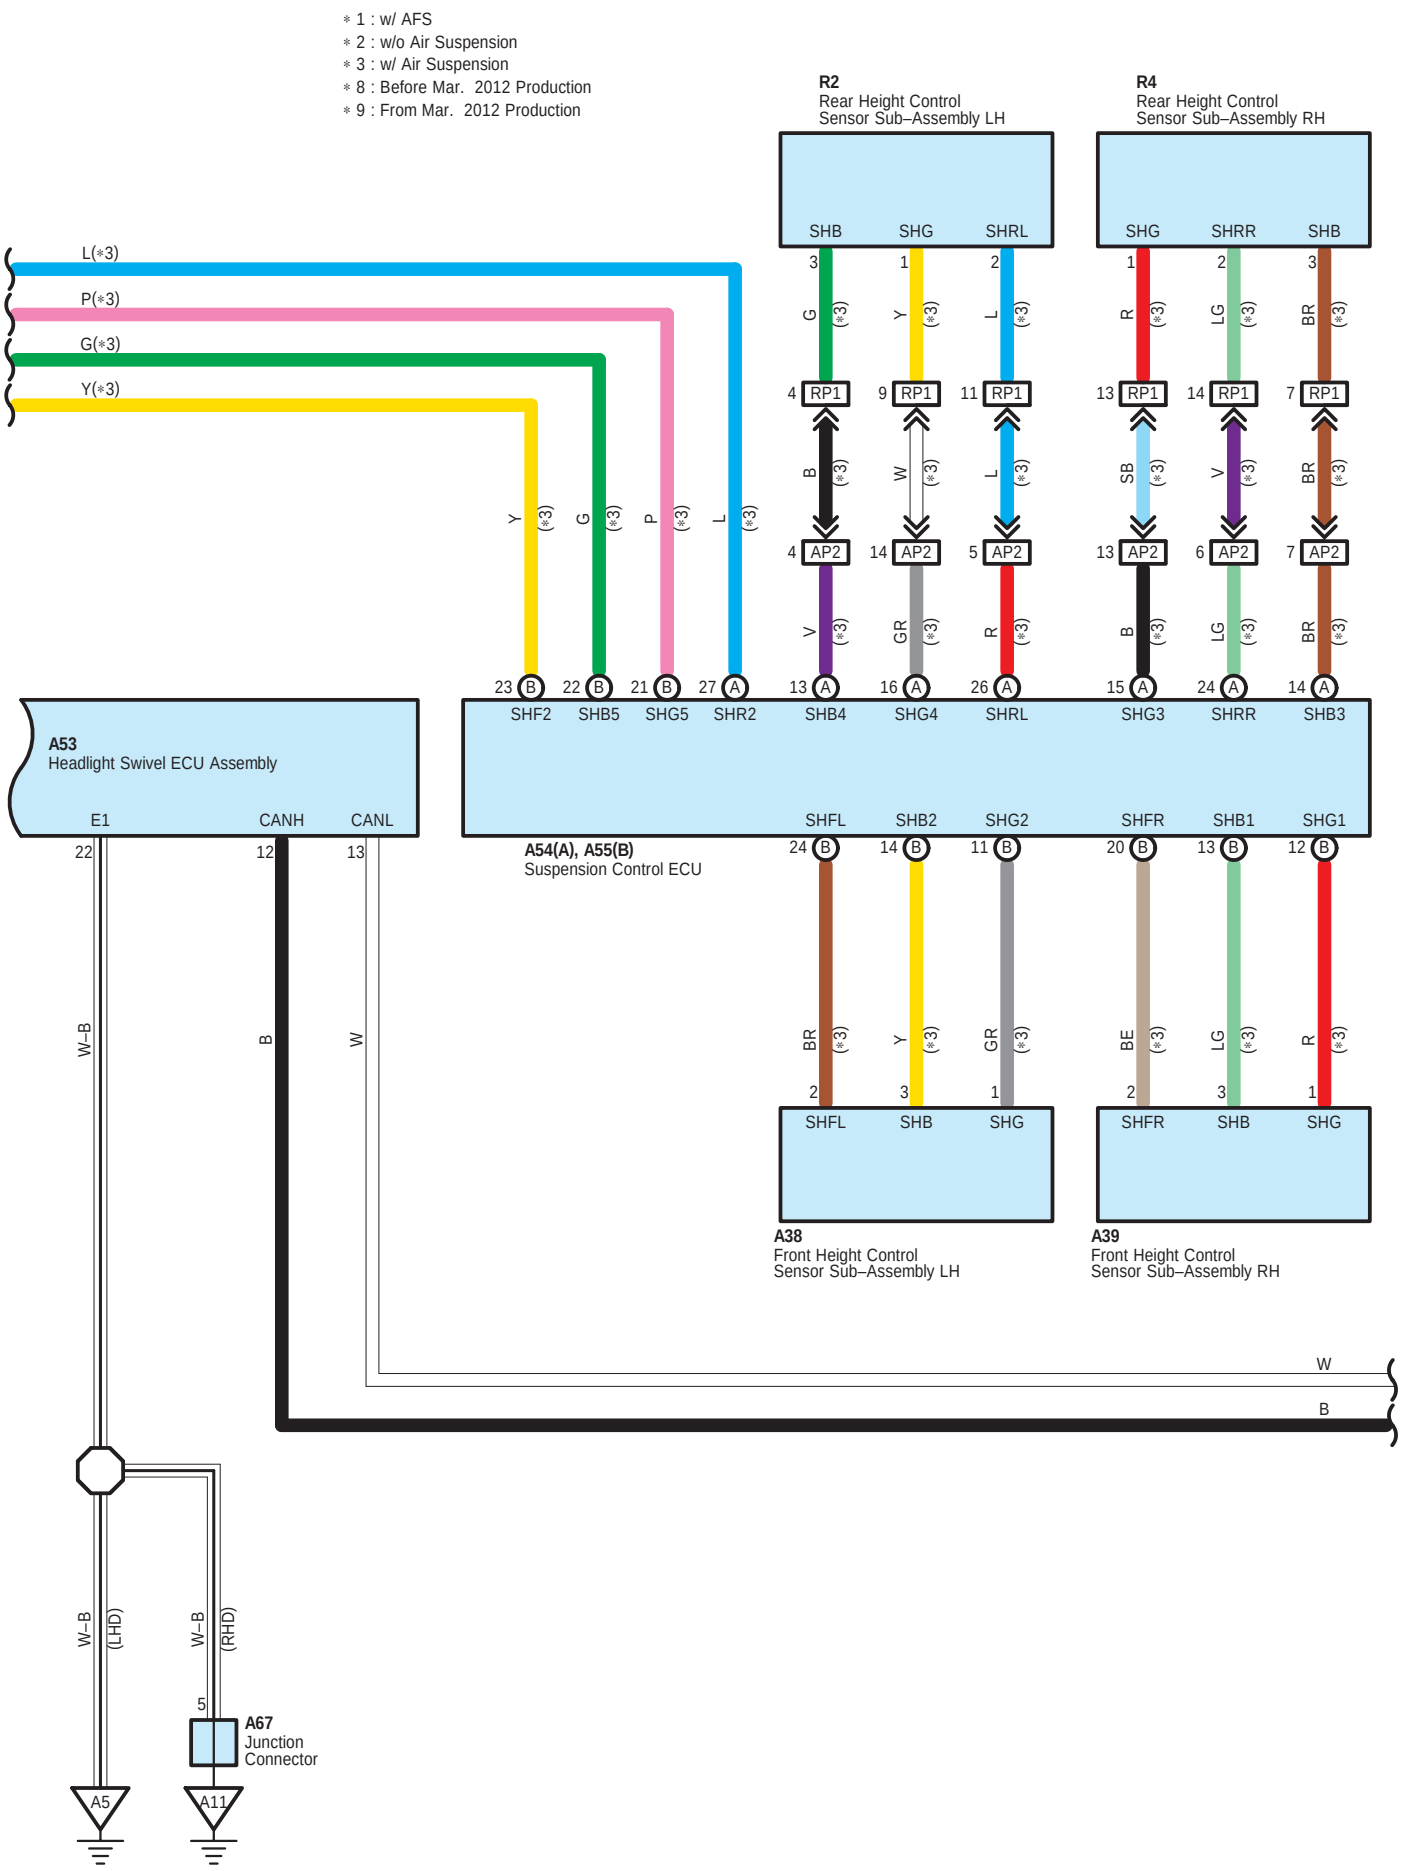
∗ 1 : w/ AFS
∗ 2 : w/o Air Suspension
∗ 3 : w/ Air Suspension
∗ 8 : Before Mar. 2012 Production
∗ 9 : From Mar. 2012 Production
R2
Rear Height Control
Sensor Sub–Assembly LH
R4
Rear Height Control
Sensor Sub–Assembly RH
SHB
SHG
SHRL
SHRR
L(∗3)
P(∗3)
G(∗3)
Y(∗3)
RP1
AP2
A53
Headlight Swivel ECU Assembly
E1
CANH
CANL
SHF2
SHB5
SHG5
SHR2
SHB4
SHG4
SHG3
SHB3
SHFL
SHB2
SHG2
SHFR
SHB1
SHG1
A54(A), A55(B)
Suspension Control ECU
A38
Front Height Control
Sensor Sub–Assembly LH
A39
Front Height Control
Sensor Sub–Assembly RH
W–B
(LHD)
(RHD)
A67
Junction
Connector
A5
A11

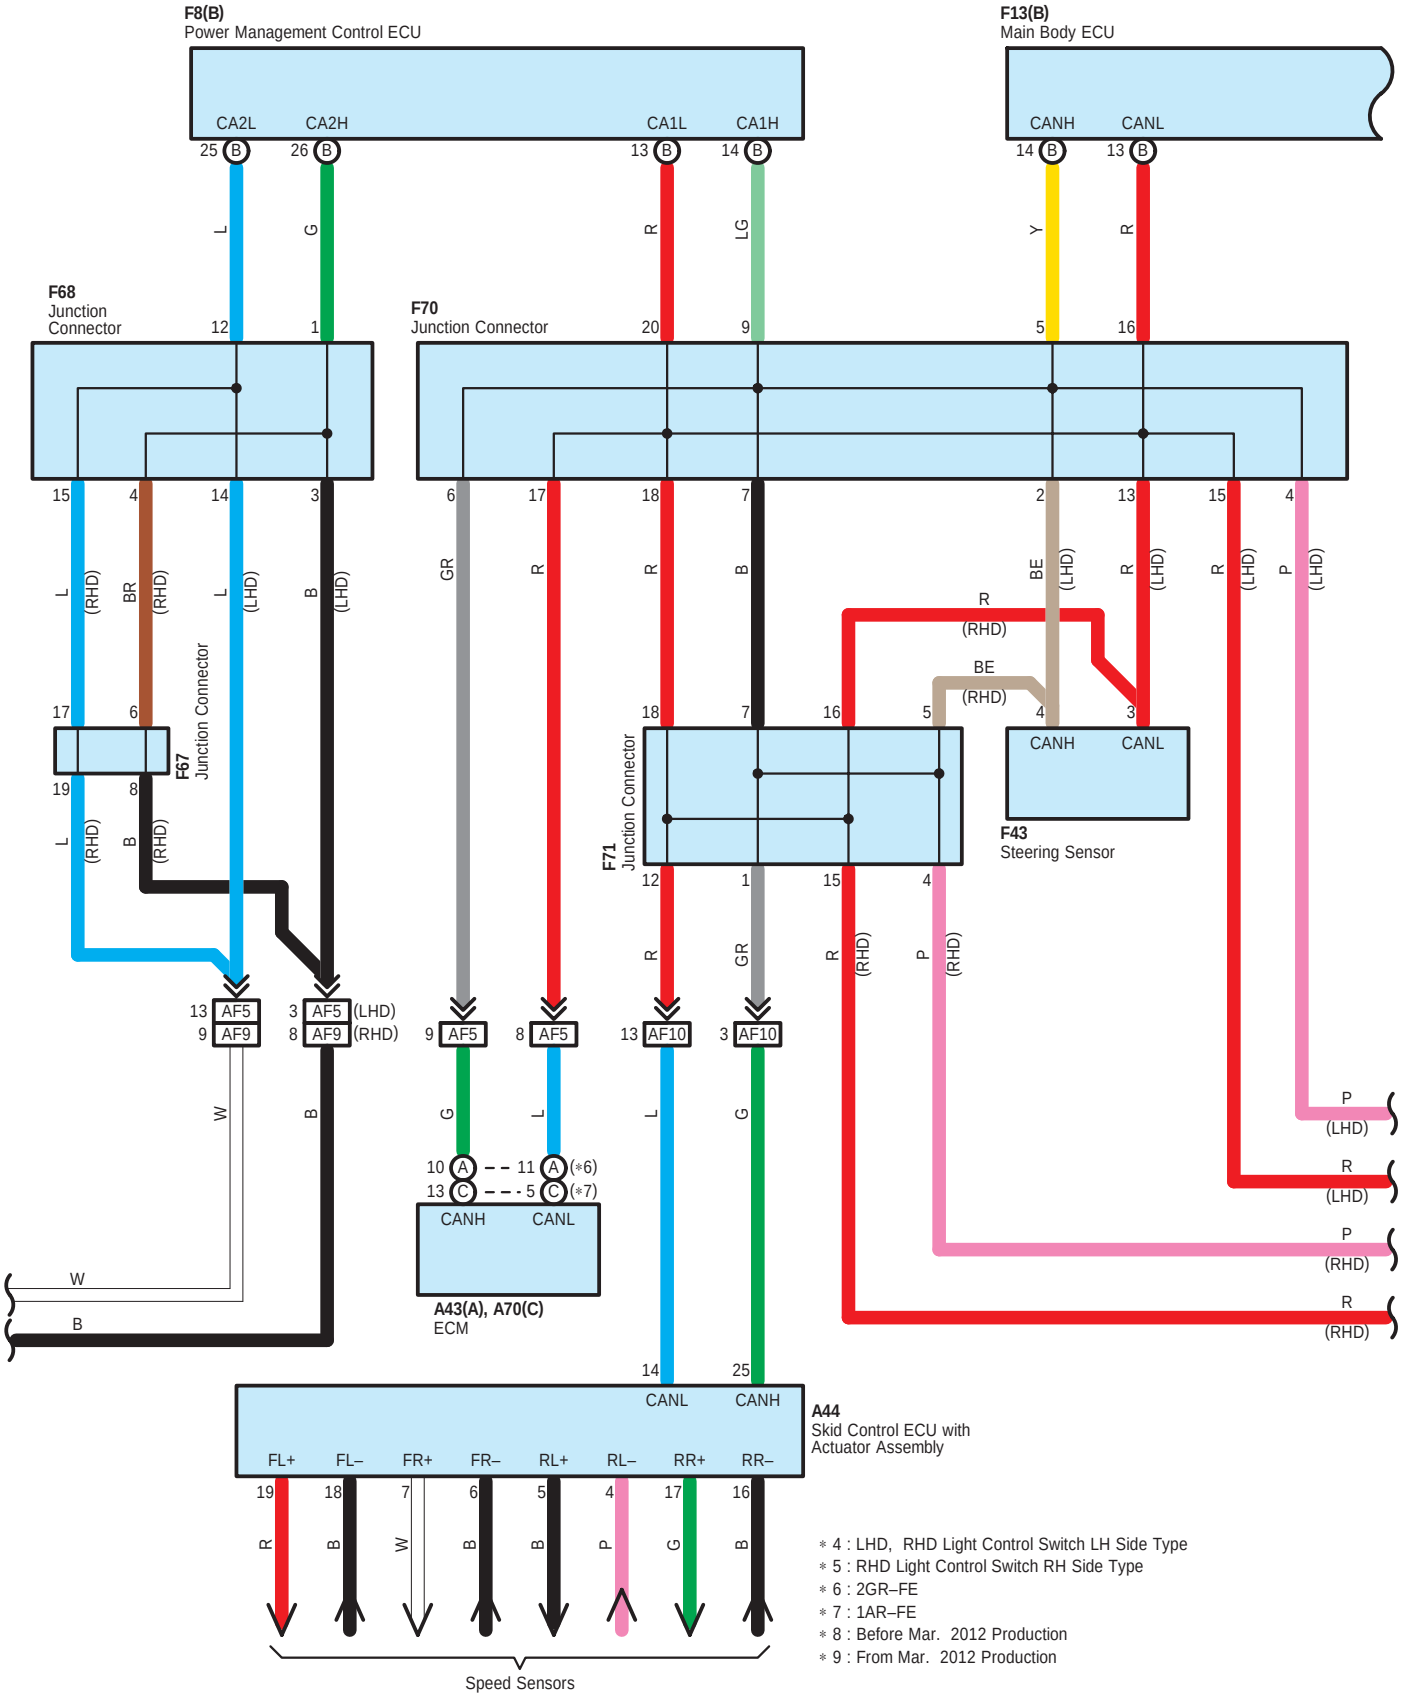

* 4 : LHD, RHD Light Control Switch LH Side Type
* 5 : RHD Light Control Switch RH Side Type
* 6 : 2GR–FE
* 7 : 1AR–FE
* 8 : Before Mar. 2012 Production
* 9 : From Mar. 2012 Production

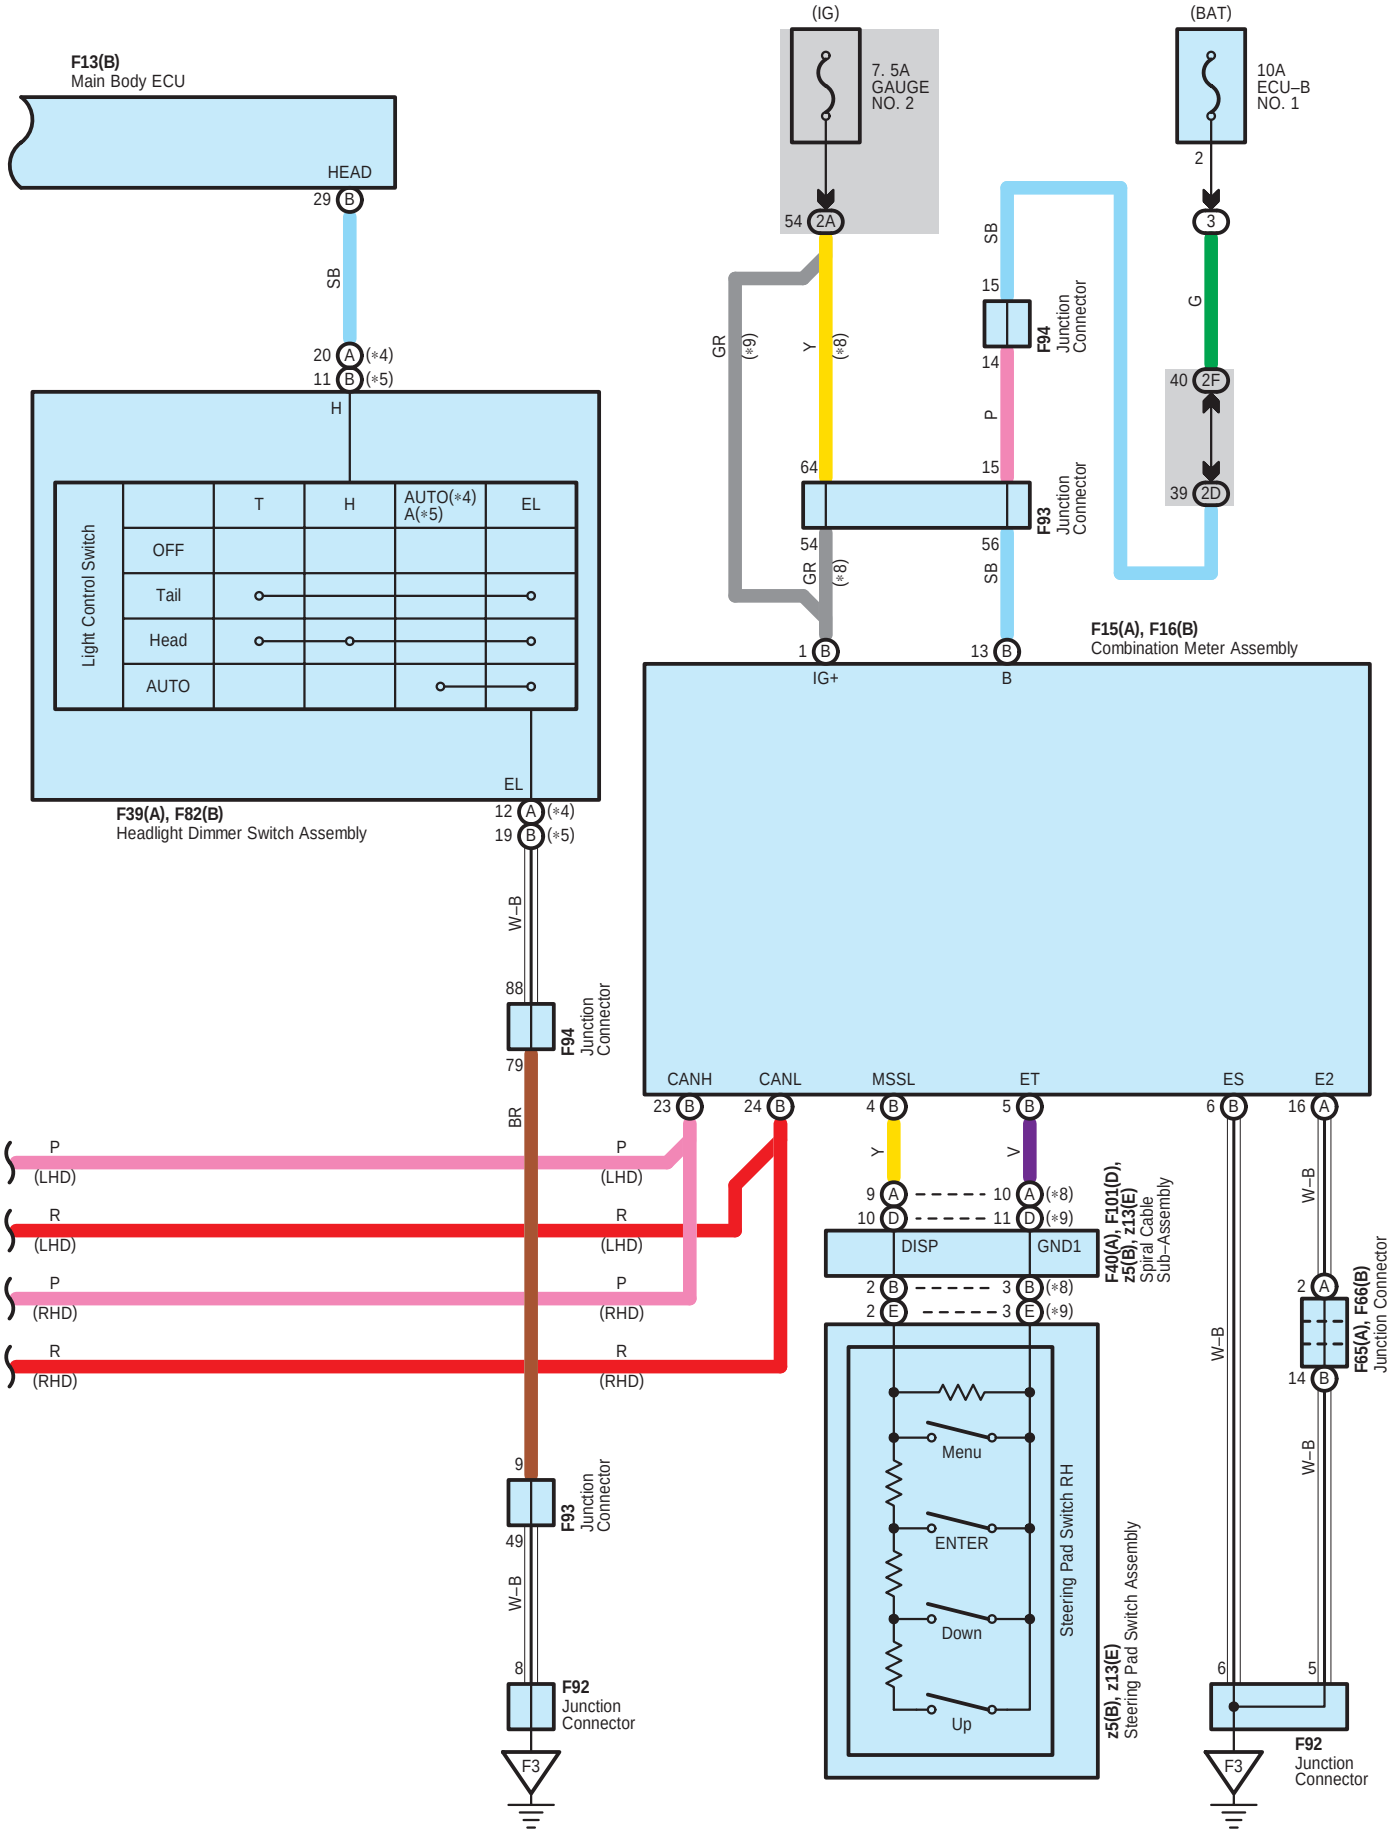
F13(B)
Main Body ECU
HEAD
29 B
SB
20 A (*4)
11 B (*5)
H
Light Control Switch
T
H
AUTO(*4)
A(*5)
EL
OFF
Tail
Head
AUTO
EL
F39(A), F82(B)
Headlight Dimmer Switch Assembly
12 A (*4)
19 B (*5)
W–B
88
F94
Junction
Connector
79
BR
(IG)
7. 5A
GAUGE
NO. 2
54 2A
GR
(*9)
Y
(*8)
64
54
GR
(*8)
1 B
IG+
SB
15
F94
Junction
Connector
14
P
15
F93
Junction
Connector
56
SB
13 B
B
(BAT)
10A
ECU–B
NO. 1
2
3
G
40 2F
39 2D
F15(A), F16(B)
Combination Meter Assembly
CANH
CANL
MSSL
ET
ES
E2
23 B
24 B
4 B
5 B
6 B
16 A
P
(LHD)
R
(LHD)
P
(RHD)
R
(RHD)
Y
V
9 A
10 D
10 A (*8)
11 D (*9)
DISP
GND1
F40(A), F101(D),
z5(B), z13(E)
Spiral Cable
Sub–Assembly
2 B
2 E
3 B (*8)
3 E (*9)
Menu
ENTER
Down
Up
Steering Pad Switch RH
z5(B), z13(E)
Steering Pad Switch Assembly
W–B
2 A
14 B
F65(A), F66(B)
Junction Connector
9
F93
Junction
Connector
49
W–B
8
F92
Junction
Connector
F3
6
5
F92
Junction
Connector
F3

A 18
Black

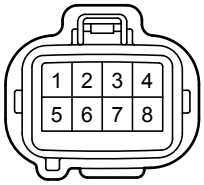

A 21
Black

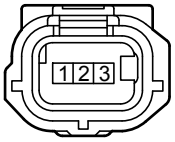

A 26
Gray

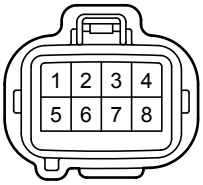

A 29
Black

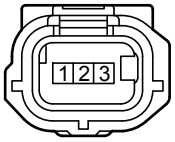

A 38
Black

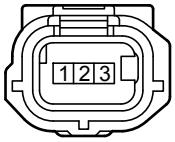

A 39
Black

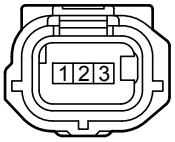

A 43
Black

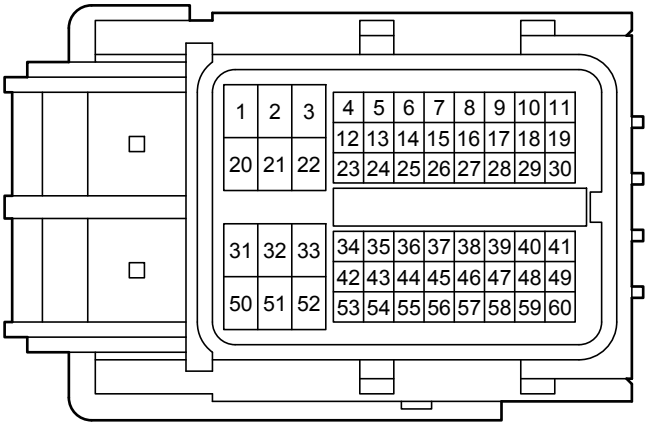

A 44
Black

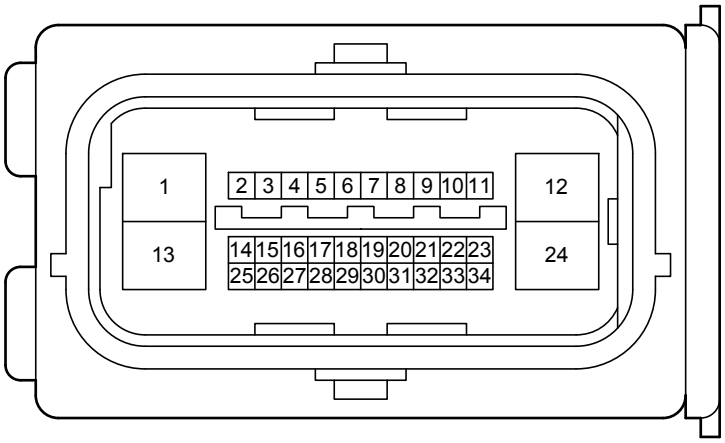

A 53
White

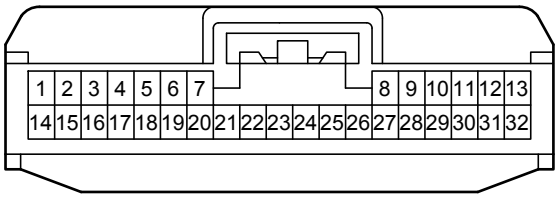

A 54
Black

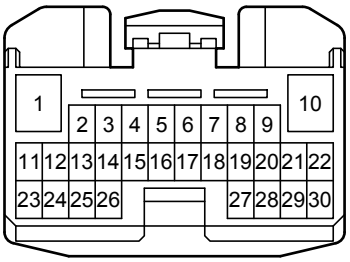

A 55
Black

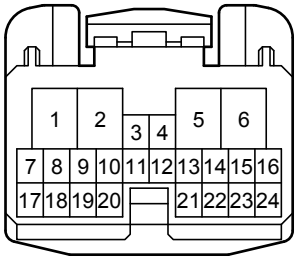

A 62
Black

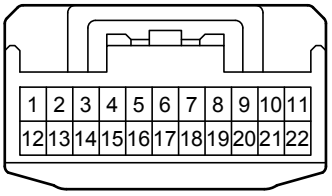

A 67
Gray

A 70
Black

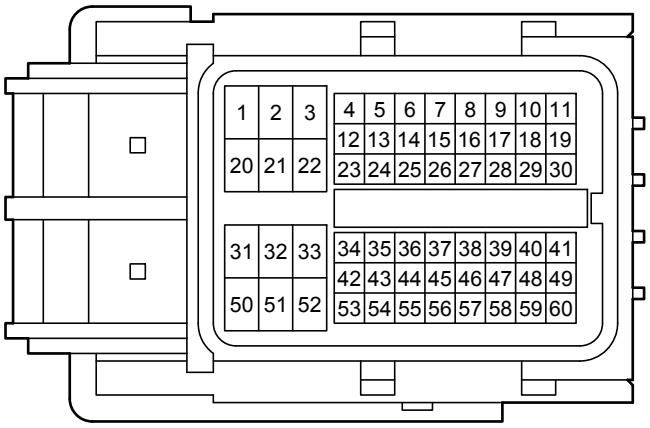

A 71
White

A 73
White

F 8
Black

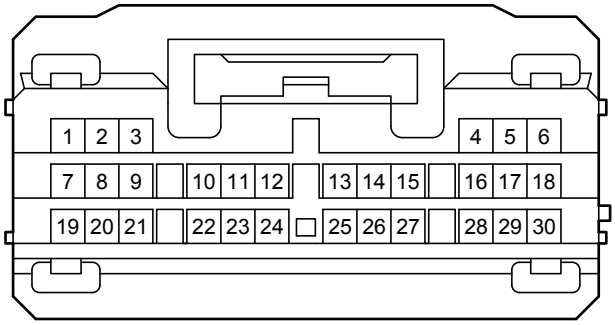

F 13
Black

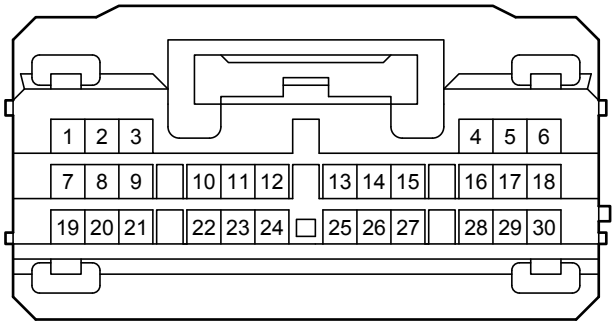

F 15
Black

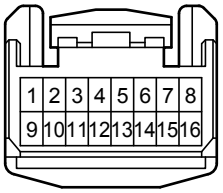

F 16
Black

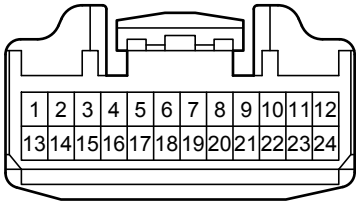

F 17
White

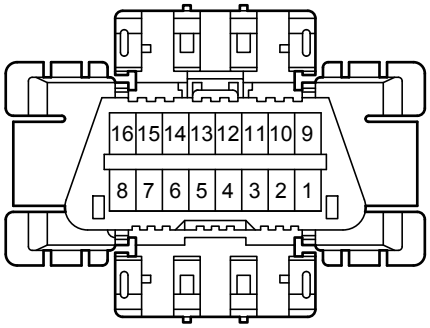

F 39
White

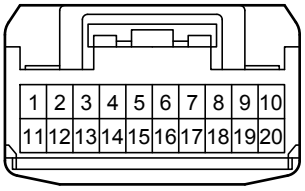

F 40
Black

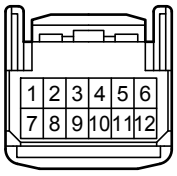

F 43
Blue

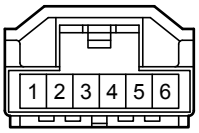

F 65
White

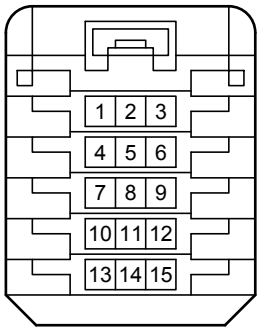

F 66
White

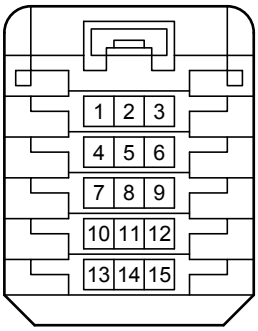

F 67
Black

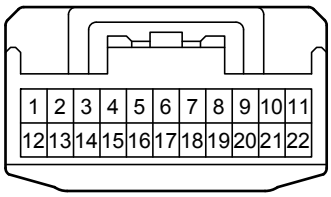

F 68
Black

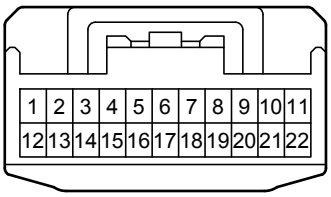

F 70
Blue

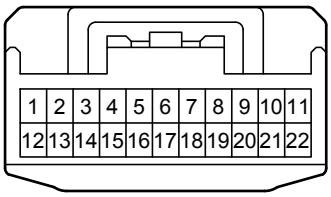

F 71
Blue

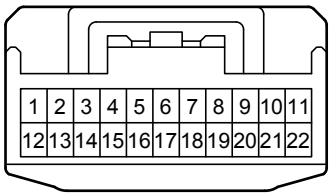

F 82
White

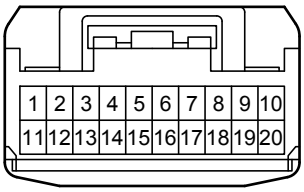

F 92
White

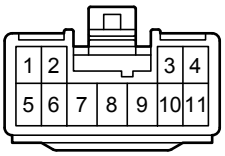

F 93
White

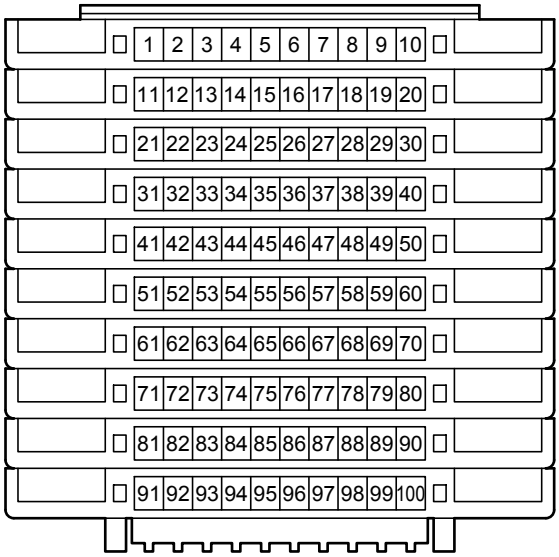

F 94
White

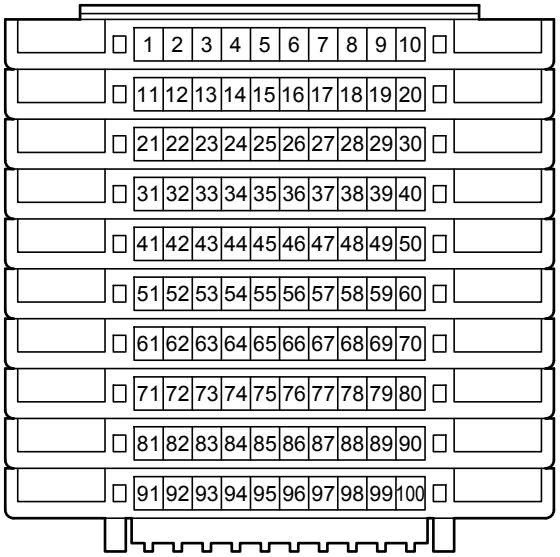

F101
Black

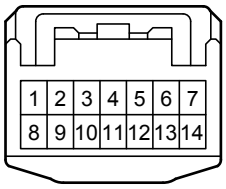

R 2
Black

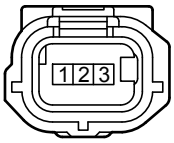

R 4
Black

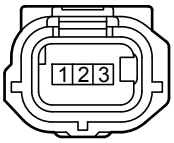

z 5
White

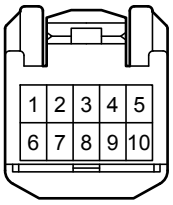

z 13
White

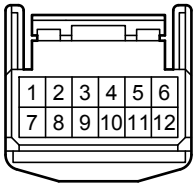

2A
White

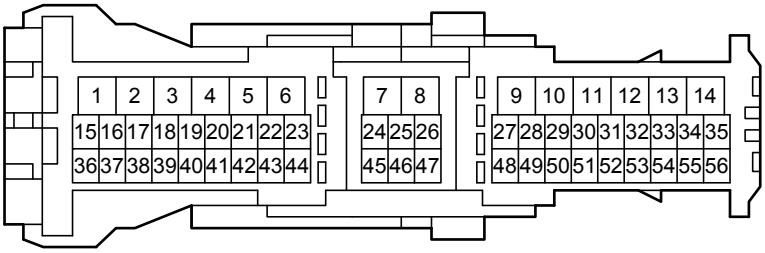

2D
White

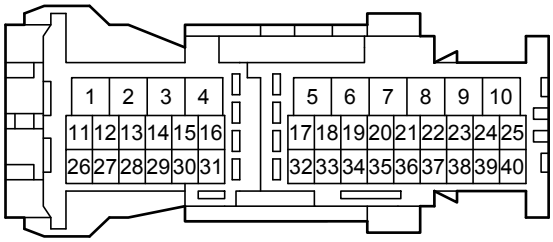

2F
White

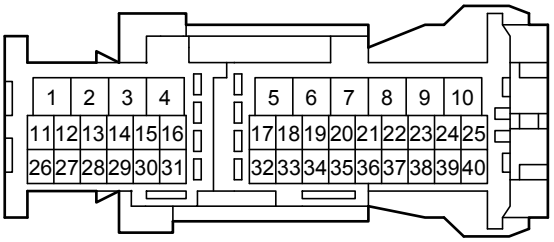

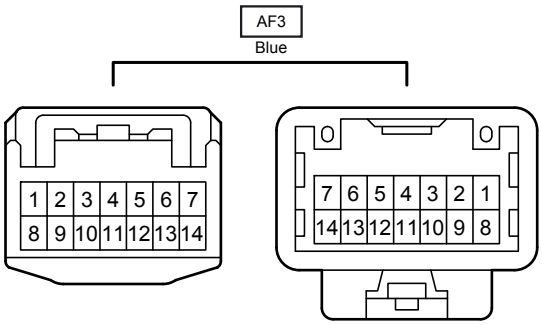
AF3
Blue
1 2 3 4 5 6 7
8 9 10 11 12 13 14
7 6 5 4 3 2 1
14 13 12 11 10 9 8

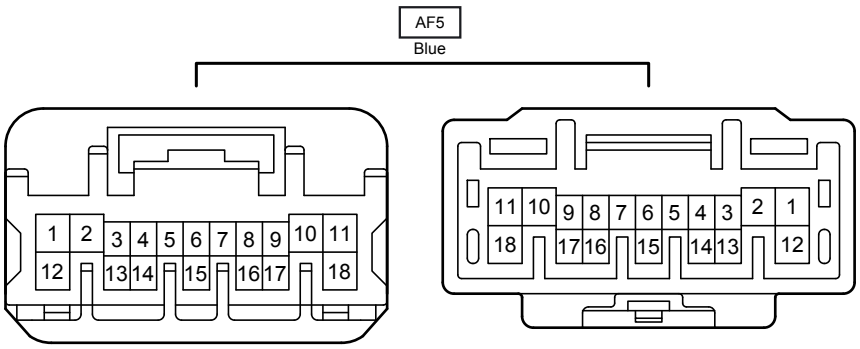
AF5
Blue
1 2 3 4 5 6 7 8 9 10 11
12 13 14 15 16 17 18
11 10 9 8 7 6 5 4 3 2 1
18 17 16 15 14 13 12

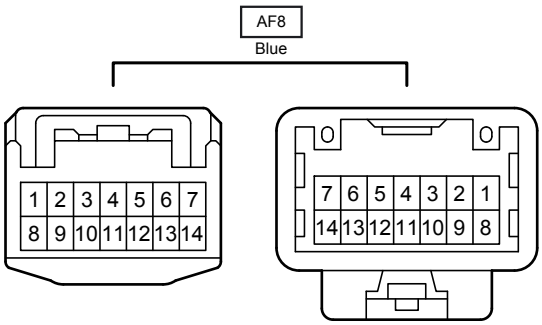
AF8
Blue
1 2 3 4 5 6 7
8 9 10 11 12 13 14
7 6 5 4 3 2 1
14 13 12 11 10 9 8

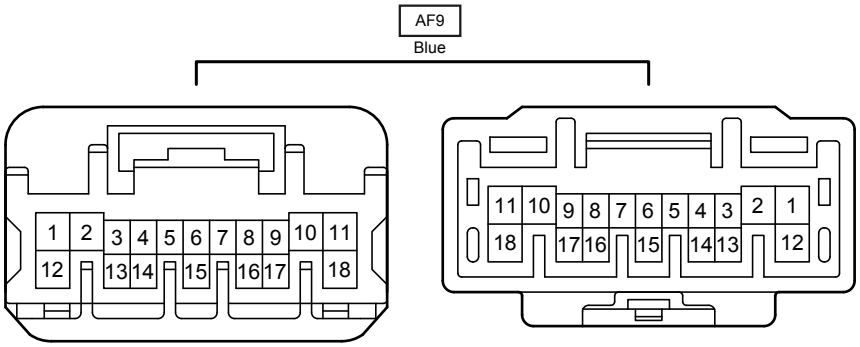
AF9
Blue
1 2 3 4 5 6 7 8 9 10 11
12 13 14 15 16 17 18
11 10 9 8 7 6 5 4 3 2 1
18 17 16 15 14 13 12

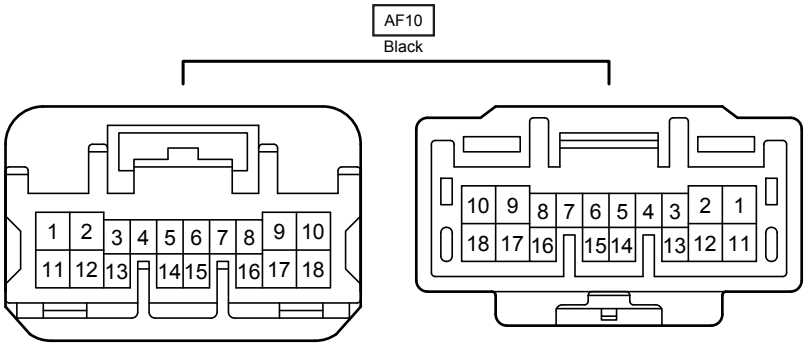
AF10
Black
1 2 3 4 5 6 7 8 9 10
11 12 13 14 15 16 17 18
10 9 8 7 6 5 4 3 2 1
18 17 16 15 14 13 12 11

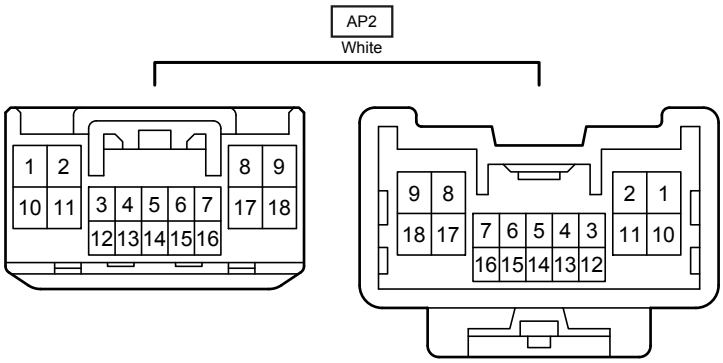
AP2
White
1 2
10 11
3 4 5 6 7
12 13 14 15 16
8 9
17 18
9 8
18 17
7 6 5 4 3
16 15 14 13 12
2 1
11 10

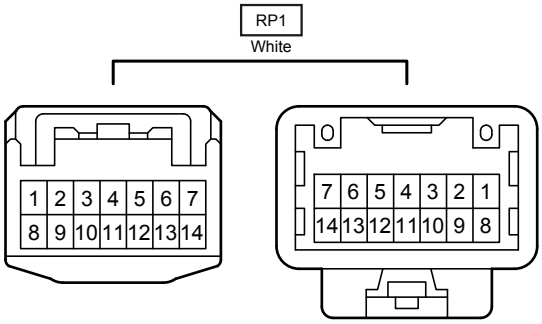
RP1
White
1 2 3 4 5 6 7
8 9 10 11 12 13 14
7 6 5 4 3 2 1
14 13 12 11 10 9 8