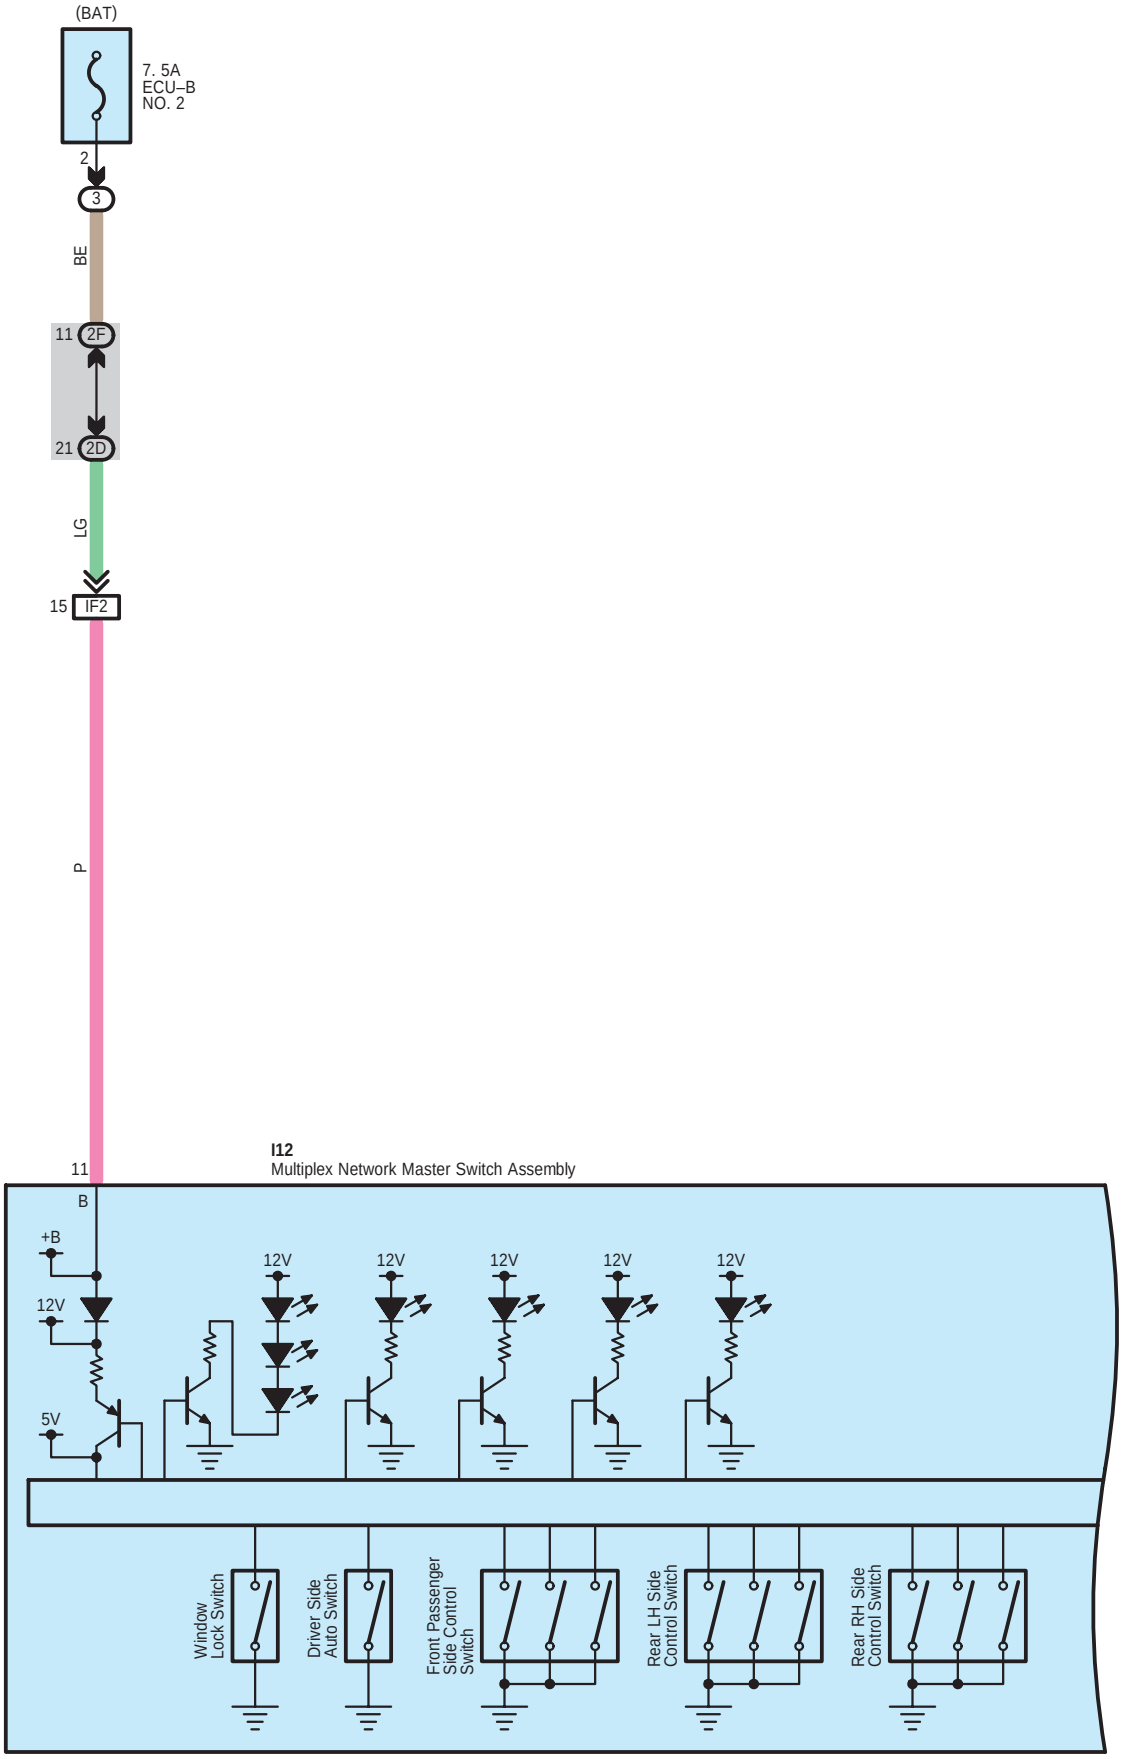
(BAT)
7. 5A
ECU–B
NO. 2
2
3
BE
11
2F
21
2D
LG
15
IF2
P
11
I12
Multiplex Network Master Switch Assembly
B
+B
12V
5V
12V
12V
12V
12V
12V
Window Lock Switch
Driver Side Auto Switch
Front Passenger Side Control Switch
Rear LH Side Control Switch
Rear RH Side Control Switch

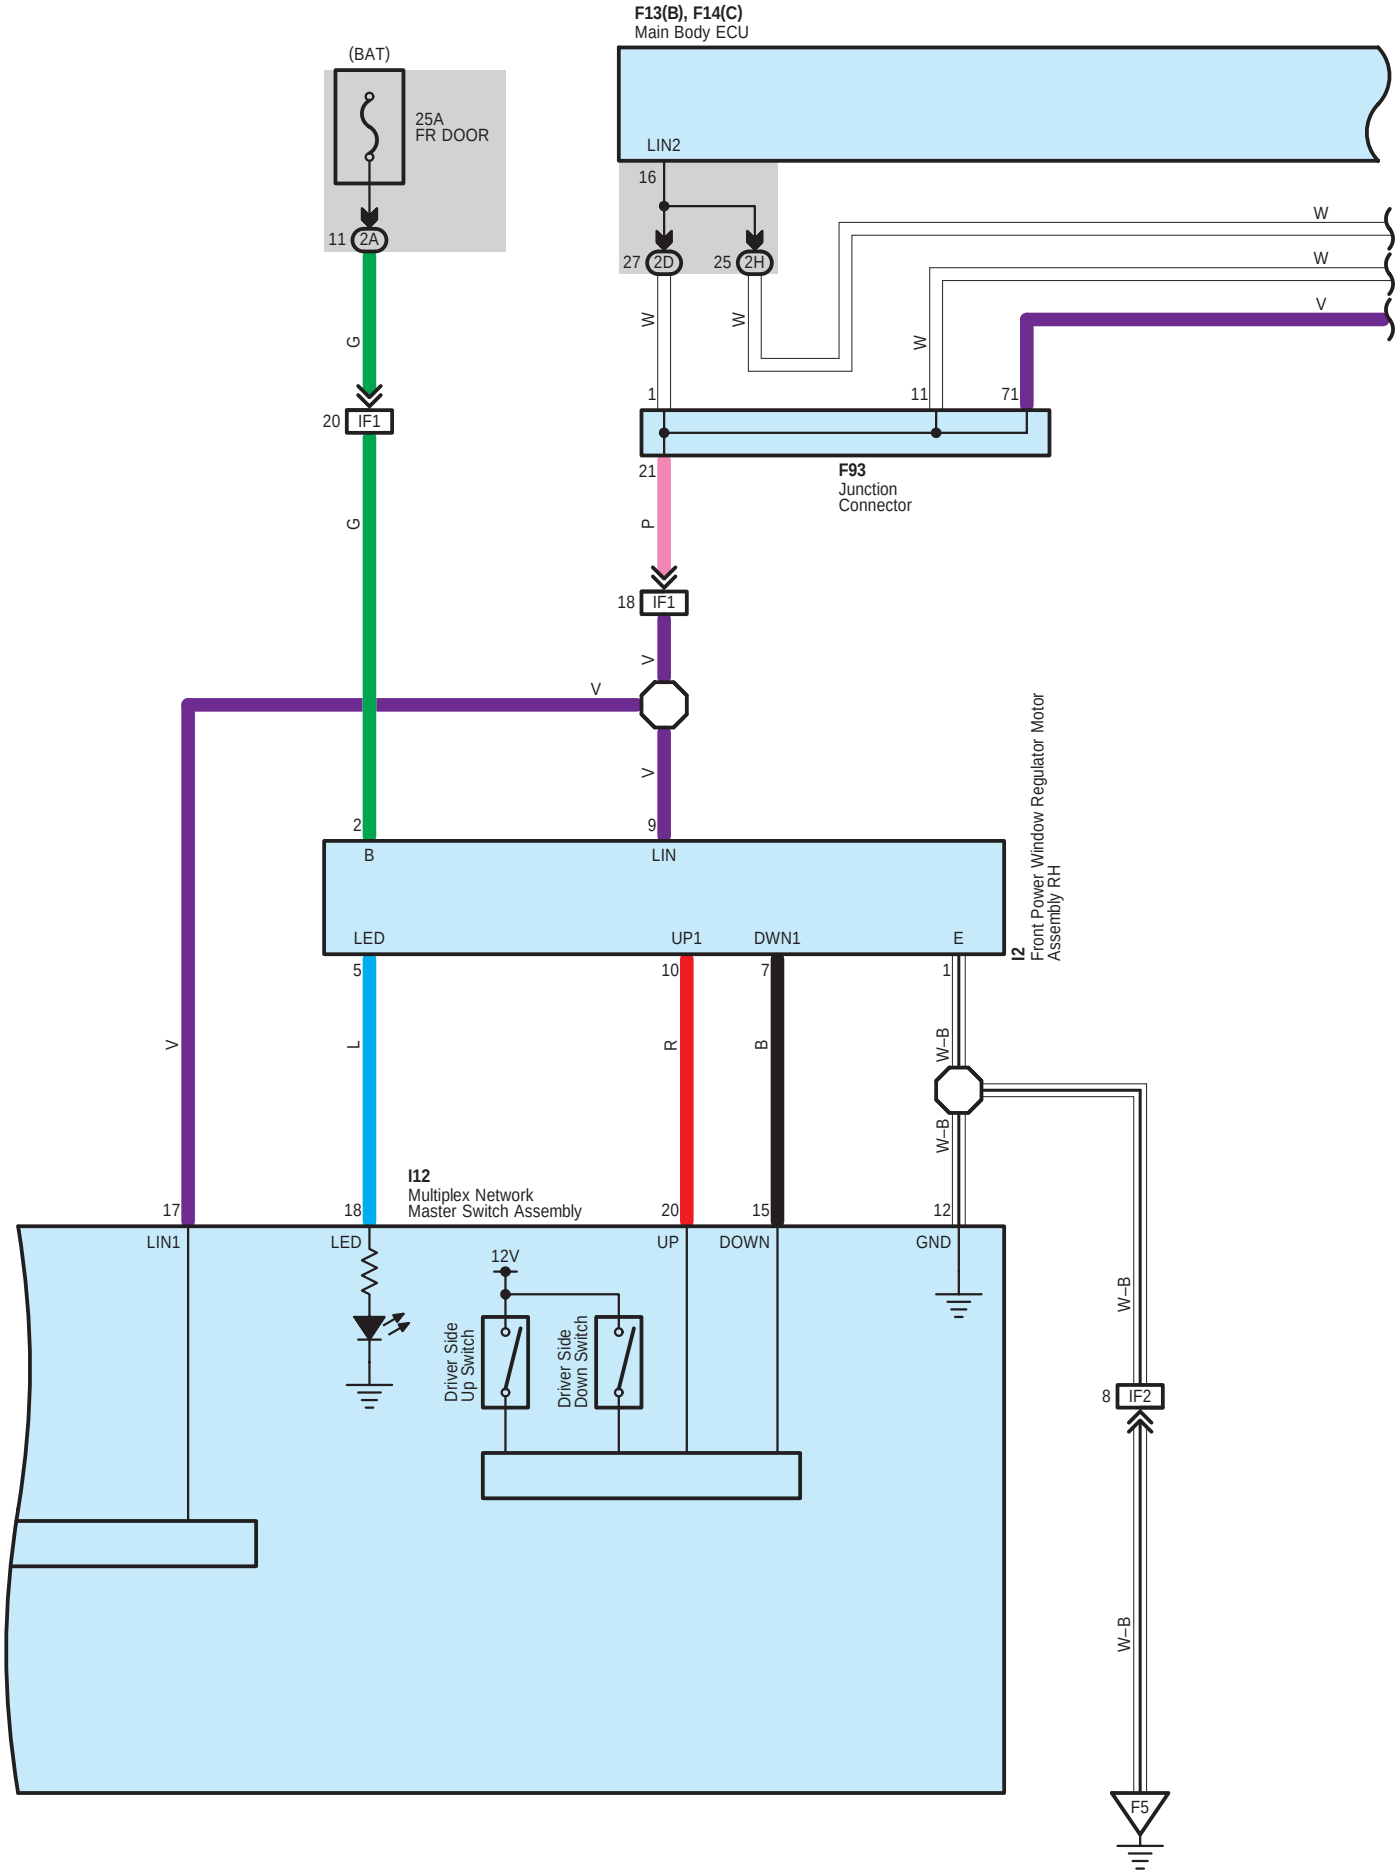
F13(B), F14(C)
Main Body ECU
(BAT)
25A
FR DOOR
11 2A
LIN2
16
27 2D
25 2H
W
W
V
G
W
W
1
11
71
20 IF1
21
F93
Junction
Connector
G
P
18 IF1
V
V
V
2
9
B
LIN
LED
UP1
DWN1
E
I2
Front Power Window Regulator Motor
Assembly RH
5
10
7
1
V
L
R
B
W–B
W–B
I12
Multiplex Network
Master Switch Assembly
17
18
20
15
12
LIN1
LED
UP
DOWN
GND
12V
Driver Side
Up Switch
Driver Side
Down Switch
W–B
8 IF2
W–B
F5

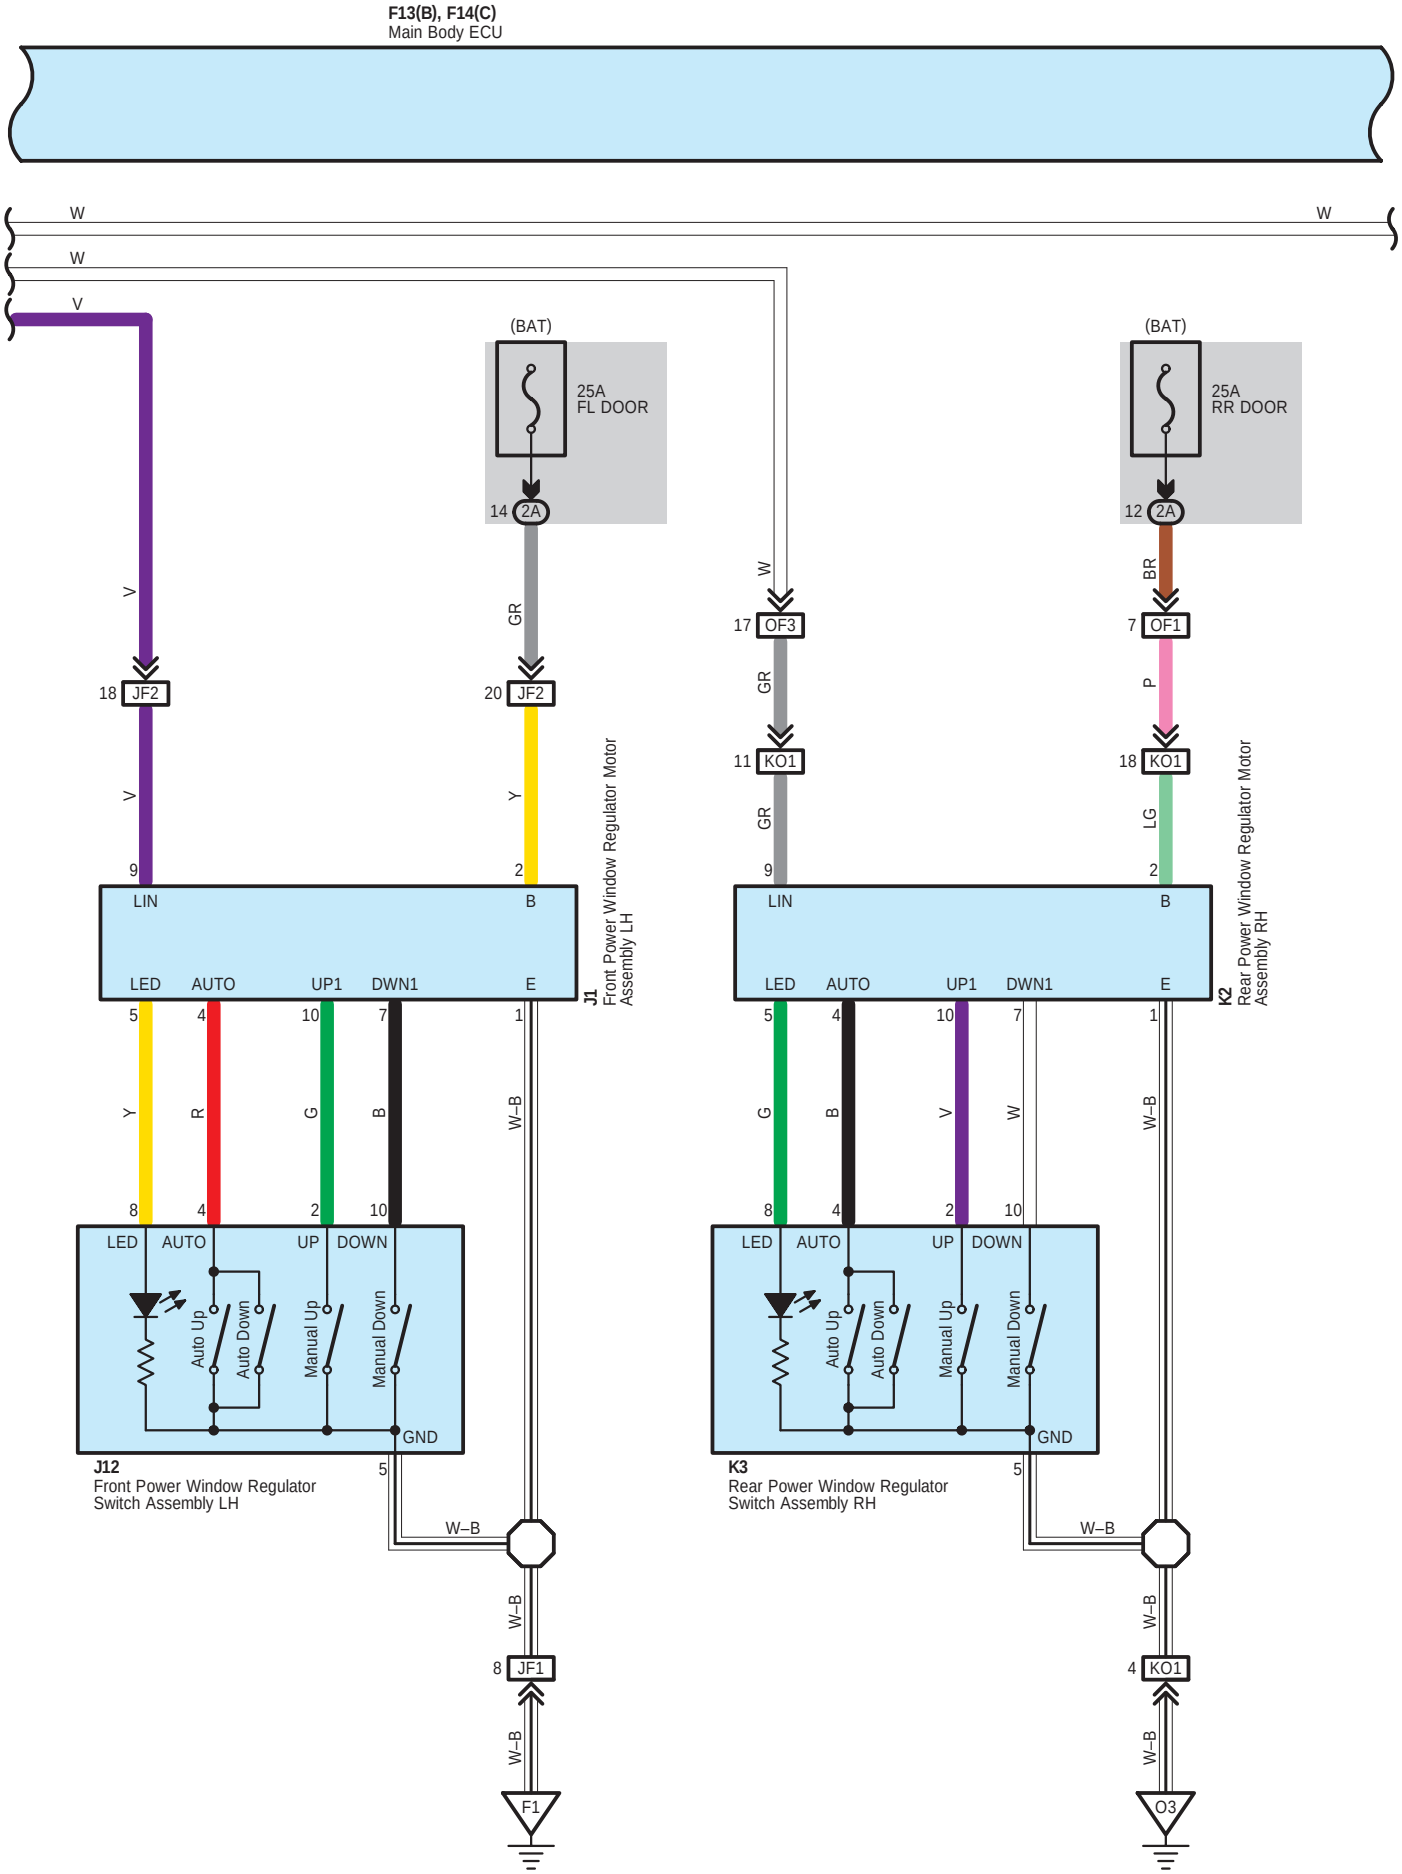
F13(B), F14(C)
Main Body ECU
W
W
W
V
(BAT)
25A
FL DOOR
14 2A
(BAT)
25A
RR DOOR
12 2A
V
GR
W
BR
17 OF3
7 OF1
18 JF2
20 JF2
GR
P
11 KO1
18 KO1
V
Y
GR
LG
9
2
9
2
LIN
B
LED
AUTO
UP1
DWN1
E
J1
Front Power Window Regulator Motor
Assembly LH
K2
Rear Power Window Regulator Motor
Assembly RH
5
4
10
7
1
Y
R
G
B
W–B
G
B
V
W
W–B
8
4
2
10
LED
AUTO
UP
DOWN
Auto Up
Auto Down
Manual Up
Manual Down
GND
J12
Front Power Window Regulator
Switch Assembly LH
K3
Rear Power Window Regulator
Switch Assembly RH
5
W–B
W–B
8 JF1
4 KO1
W–B
F1
O3

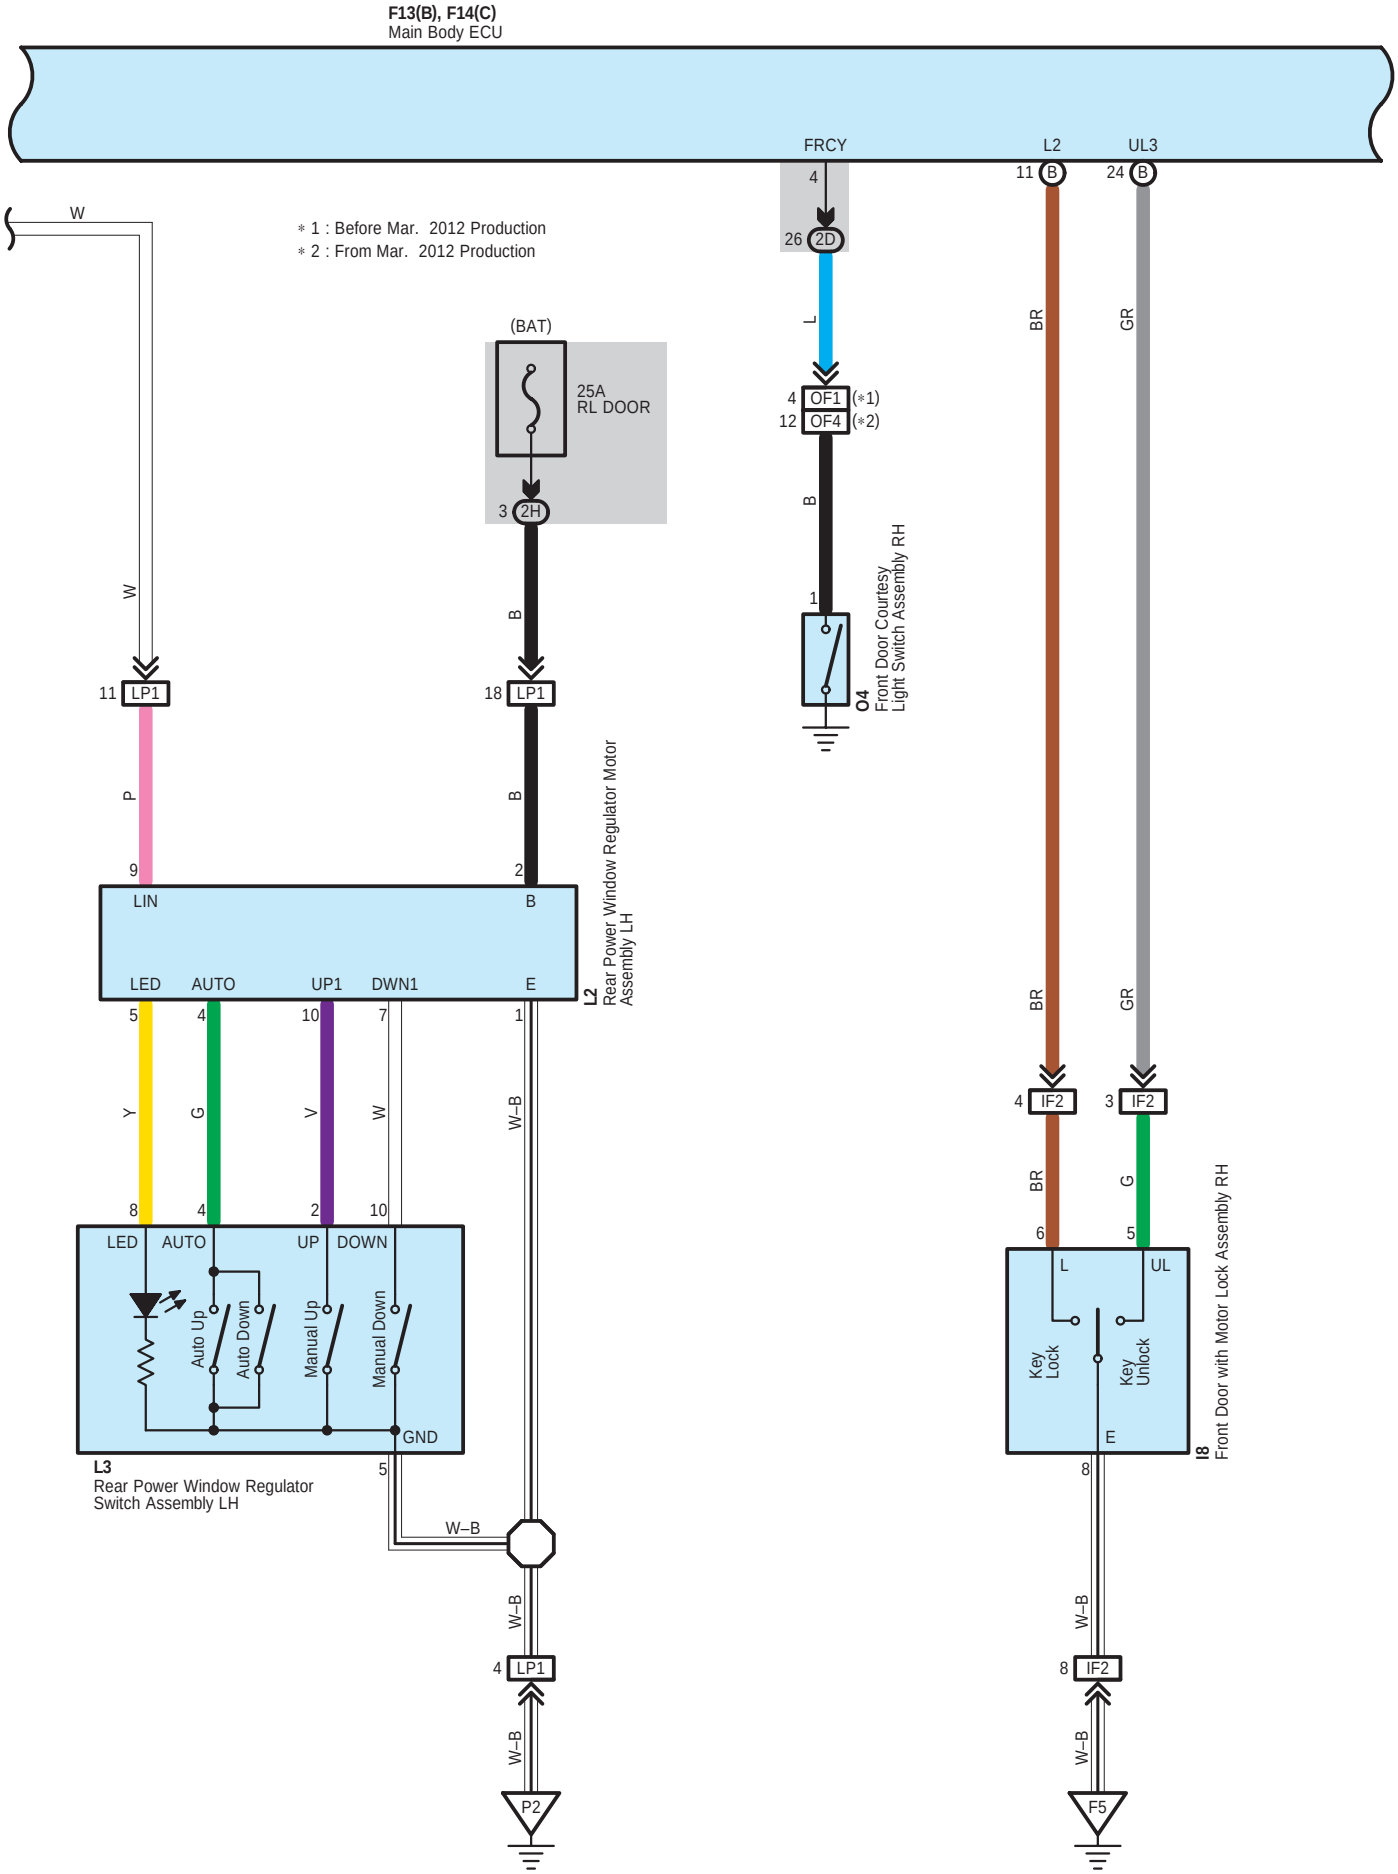
F13(B), F14(C)
Main Body ECU
FRCY
L2
UL3
4
26 2D
11 B
24 B
W
∗1 : Before Mar. 2012 Production
∗2 : From Mar. 2012 Production
(BAT)
25A
RL DOOR
3 2H
L
4 OF1 (∗1)
12 OF4 (∗2)
B
1
O4
Front Door Courtesy
Light Switch Assembly RH
BR
GR
W
11 LP1
18 LP1
P
B
9
2
LIN
B
LED
AUTO
UP1
DWN1
E
L2
Rear Power Window Regulator Motor
Assembly LH
5
4
10
7
1
Y
G
V
W
W–B
8
4
2
10
LED
AUTO
UP
DOWN
Auto Up
Auto Down
Manual Up
Manual Down
GND
L3
Rear Power Window Regulator
Switch Assembly LH
5
W–B
W–B
4 LP1
W–B
P2
4 IF2
3 IF2
BR
G
6
5
L
UL
Key
Lock
Key
Unlock
E
I8
Front Door with Motor Lock Assembly RH
8
W–B
8 IF2
W–B
F5

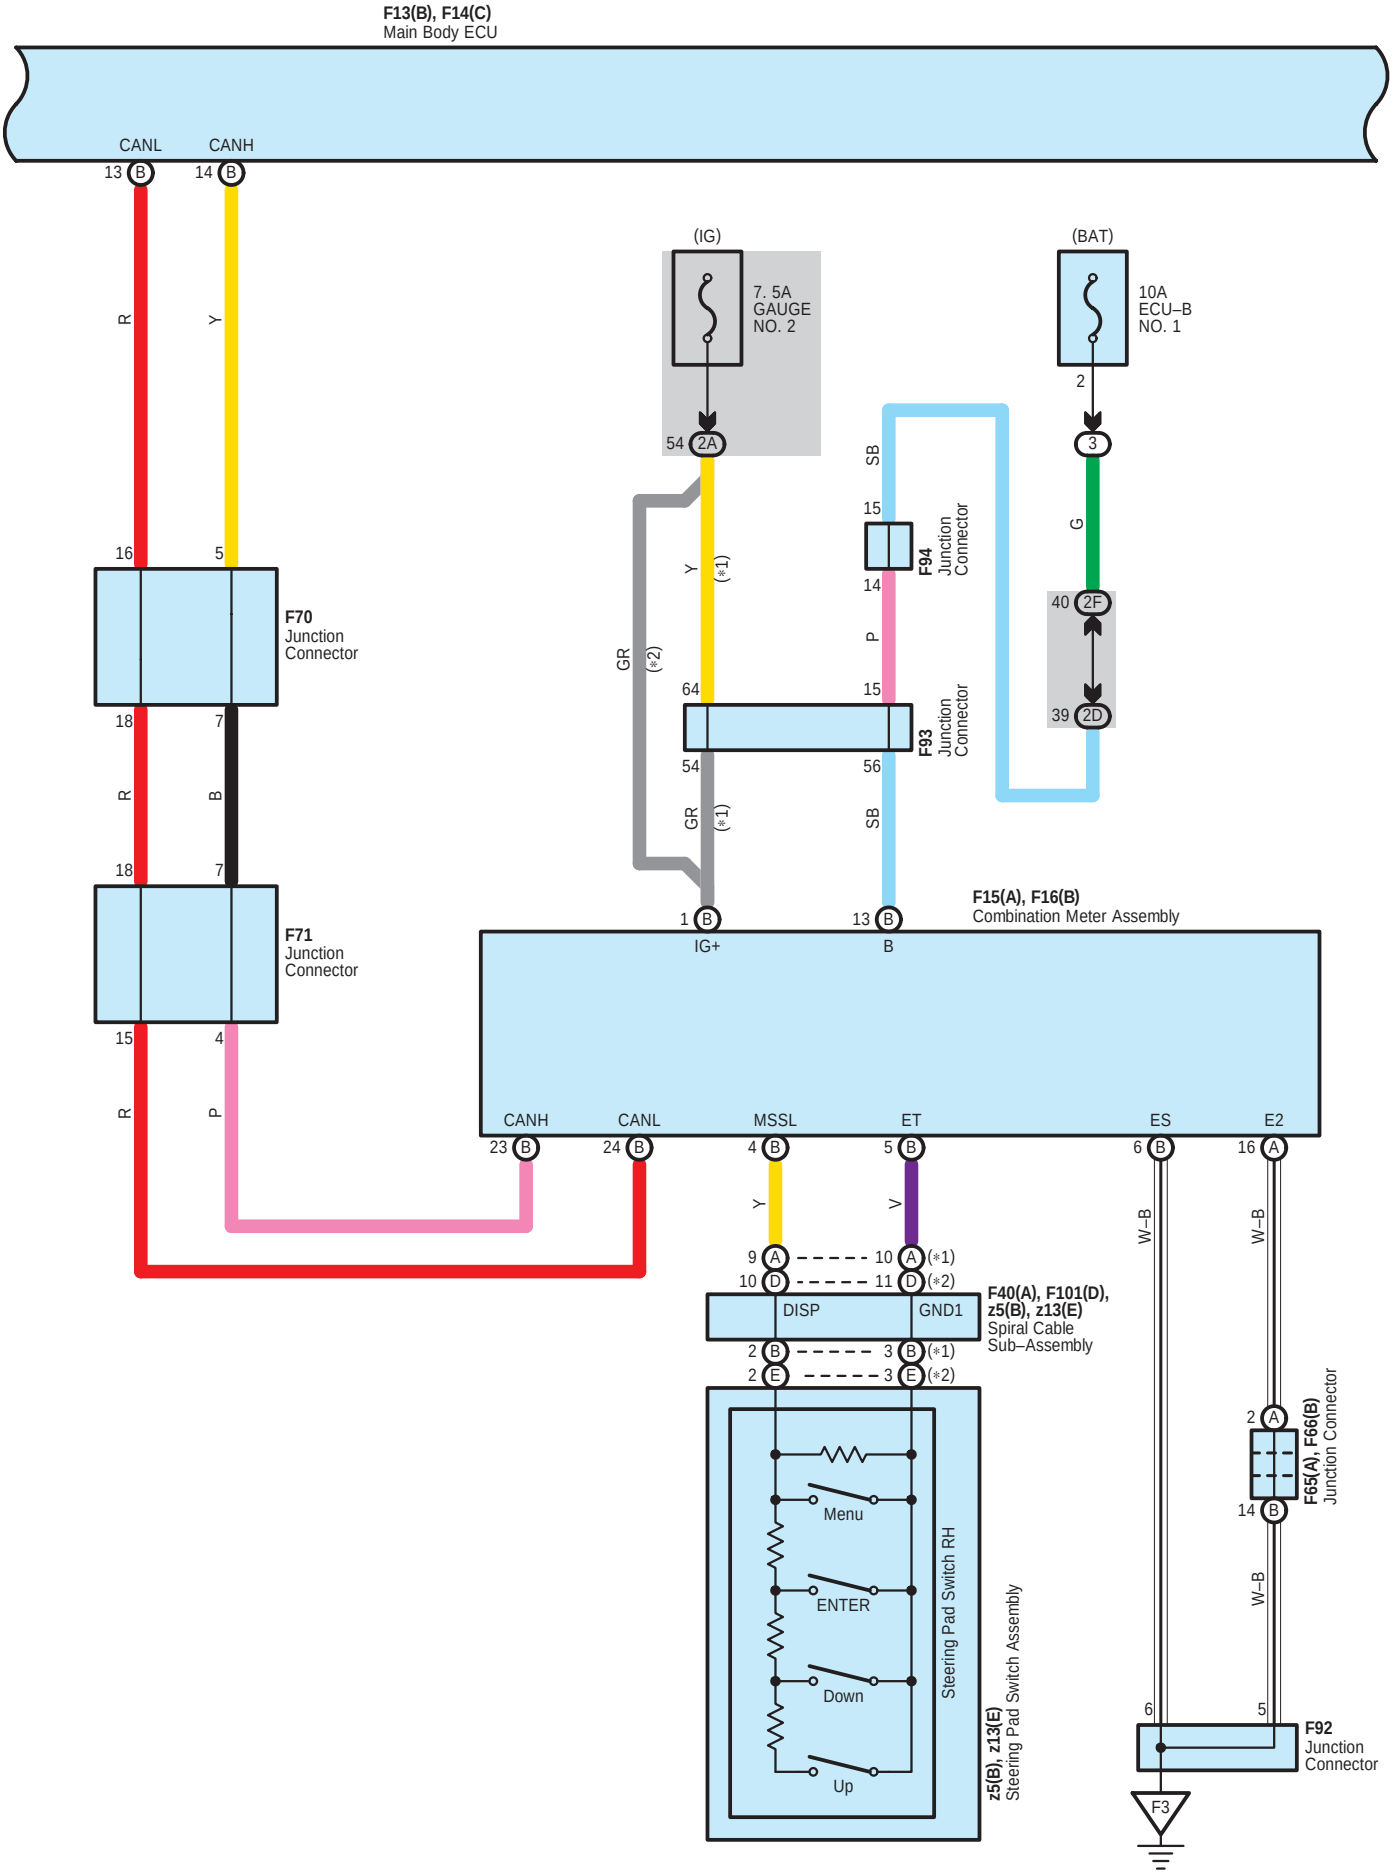
F13(B), F14(C)
Main Body ECU
CANL
CANH
13 B
14 B
R
Y
16
5
F70
Junction
Connector
18
7
R
B
18
7
F71
Junction
Connector
15
4
R
P
(IG)
7. 5A
GAUGE
NO. 2
54 2A
Y
(*1)
GR
(*2)
64
54
GR
(*1)
1 B
IG+
SB
15
F94
Junction
Connector
14
P
15
F93
Junction
Connector
56
SB
13 B
B
(BAT)
10A
ECU–B
NO. 1
2
3
G
40 2F
39 2D
F15(A), F16(B)
Combination Meter Assembly
CANH
CANL
MSSL
ET
ES
E2
23 B
24 B
4 B
5 B
6 B
16 A
Y
V
W–B
W–B
9 A
10 A (*1)
10 D
11 D (*2)
DISP
GND1
F40(A), F101(D),
z5(B), z13(E)
Spiral Cable
Sub–Assembly
2 B
3 B (*1)
2 E
3 E (*2)
Menu
ENTER
Down
Up
Steering Pad Switch RH
z5(B), z13(E)
Steering Pad Switch Assembly
2 A
14 B
F65(A), F66(B)
Junction Connector
W–B
6
5
F92
Junction
Connector
F3

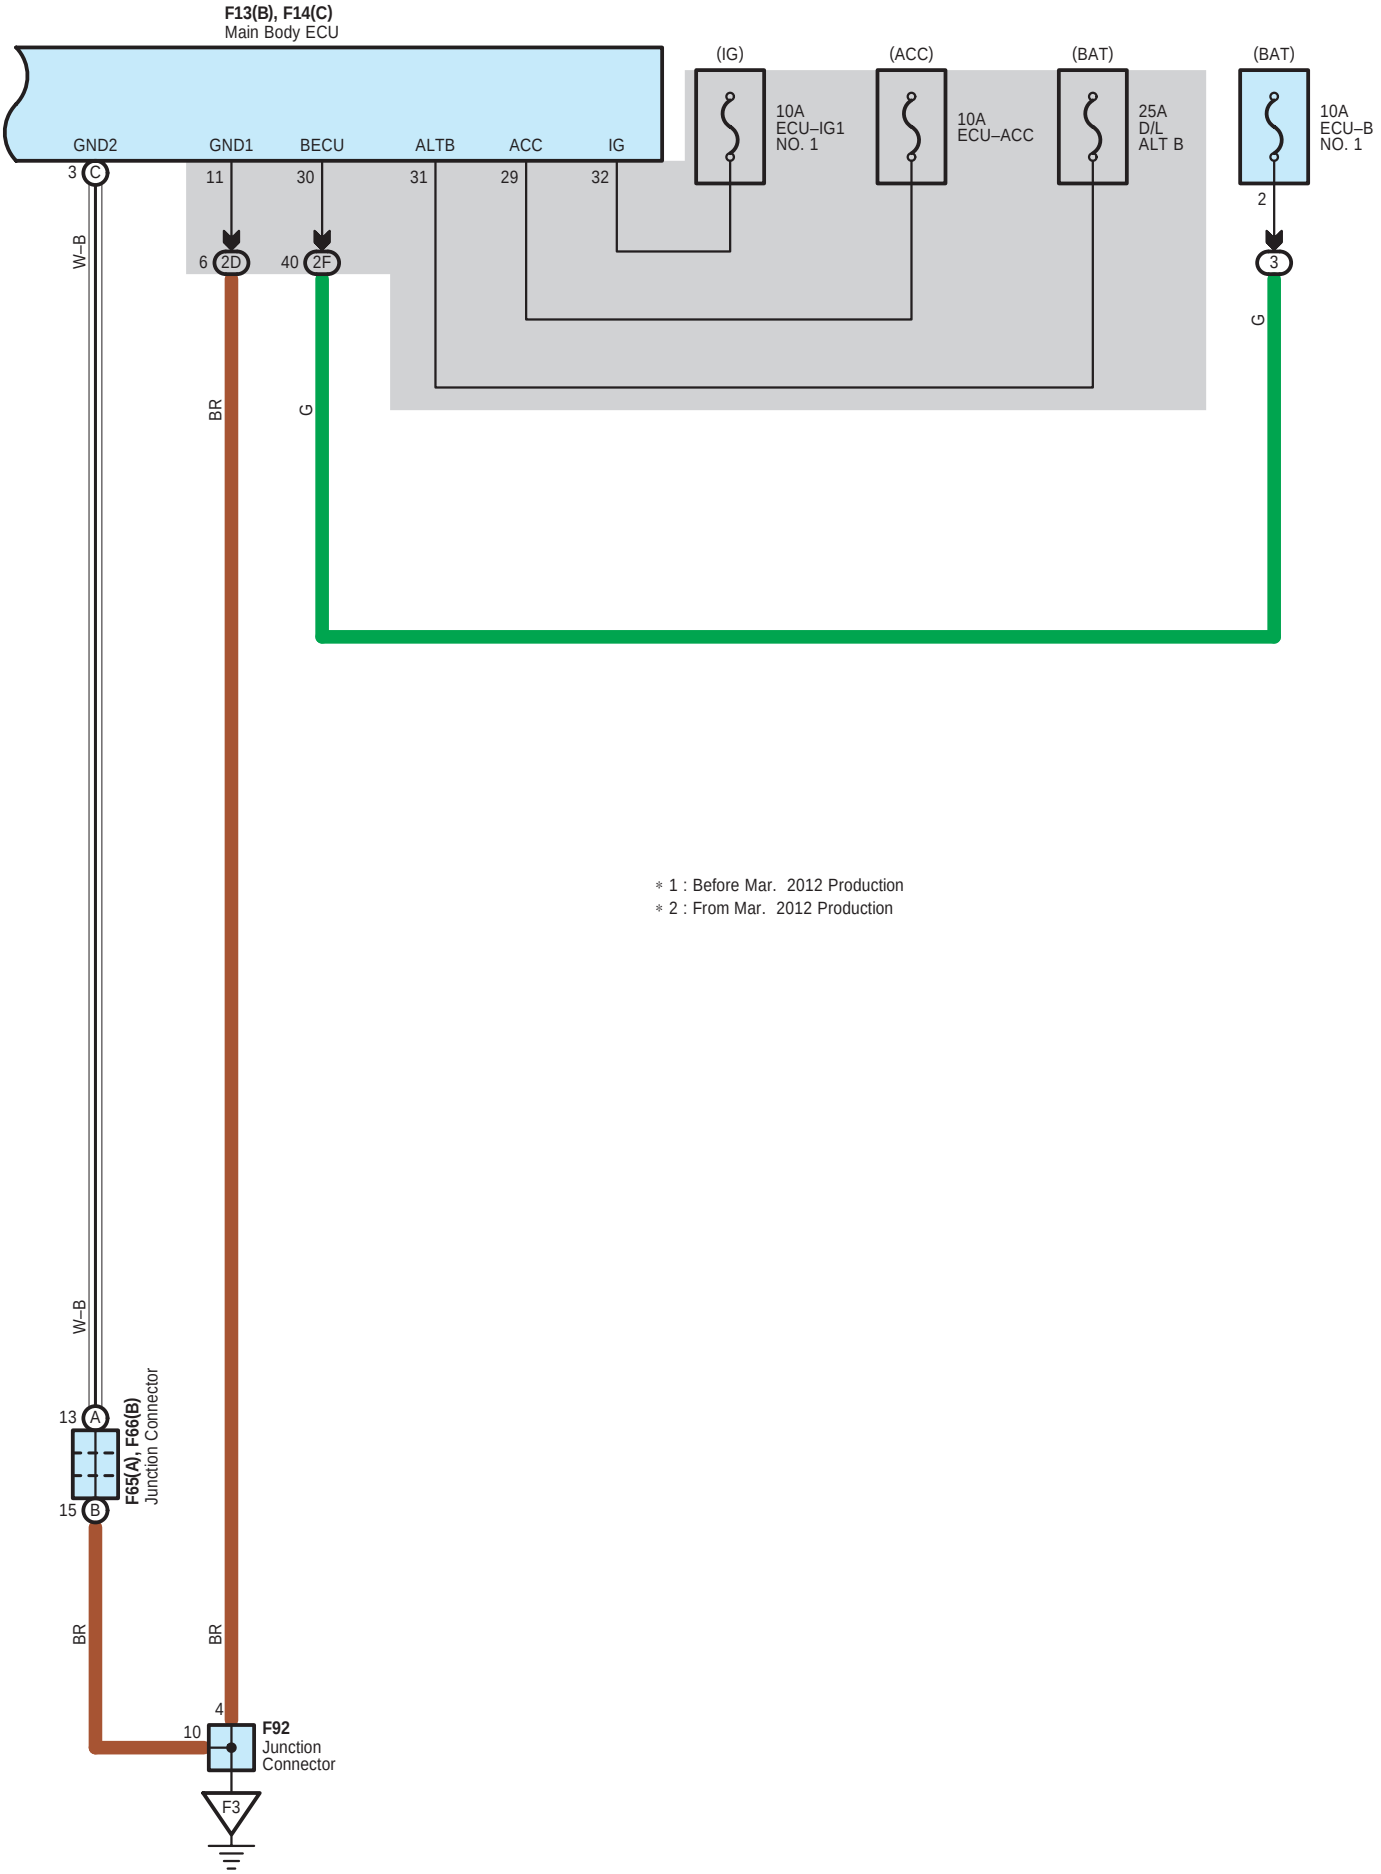

＊1 : Before Mar. 2012 Production
＊2 : From Mar. 2012 Production

F 13
Black

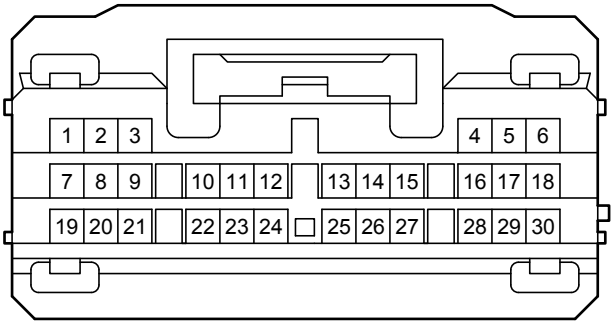

F 14
White

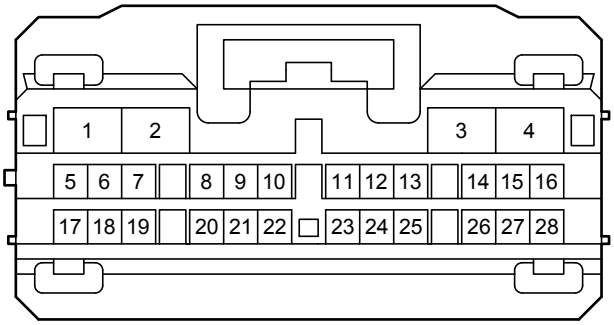

F 15
Black

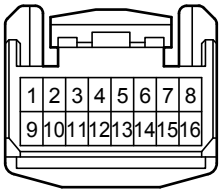

F 16
Black

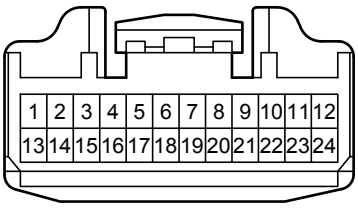

F 40
Black

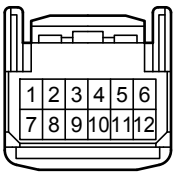

F 65
White

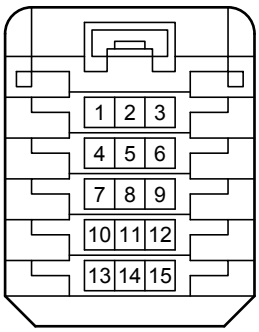

F 66
White

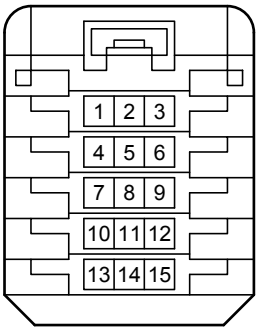

F 70
Blue

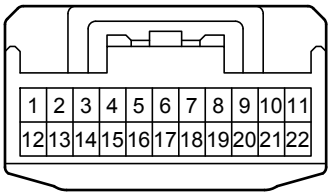

F 71
Blue

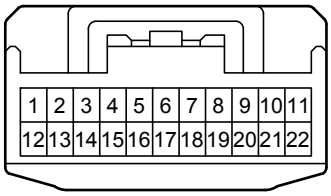

F 92
White

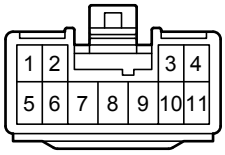

F 93
White

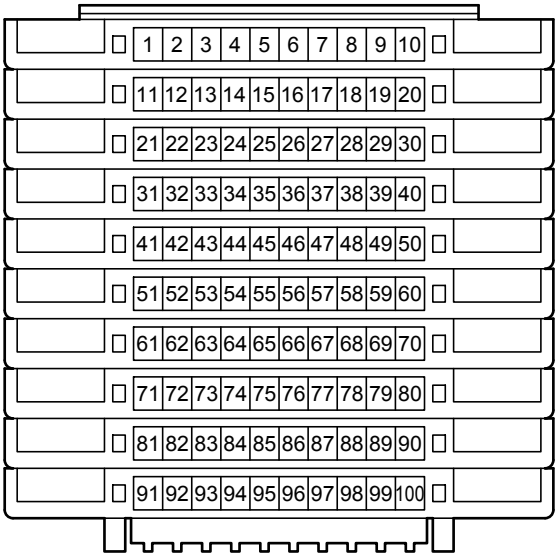

F 94
White

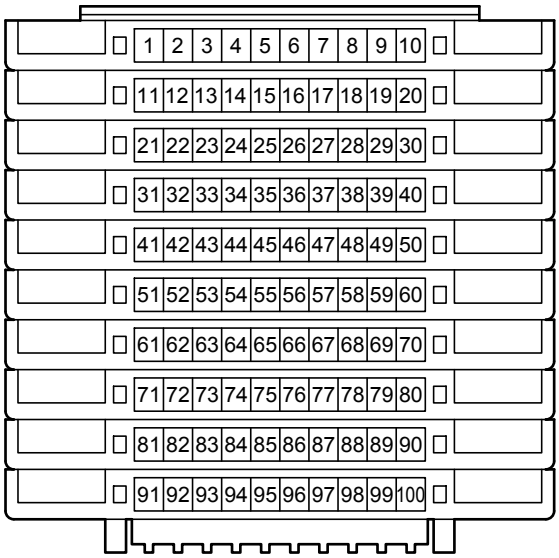

F101
Black

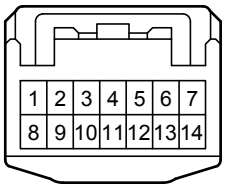

I 2
White

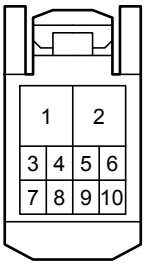

I 8
White

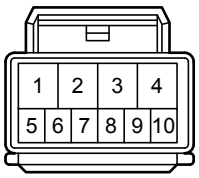

I 12
White

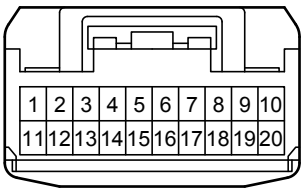

J 1
White

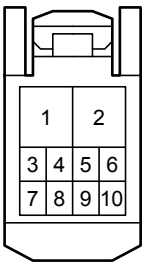

J 12
White

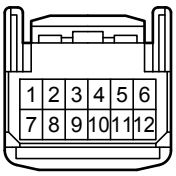

K 2
White

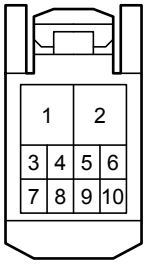

K 3
White

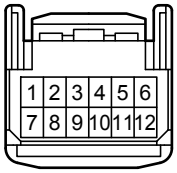

L 2
White

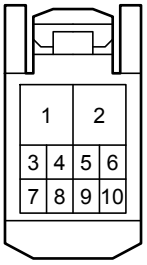

L 3
White

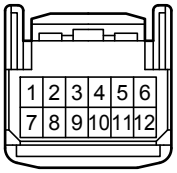

O 4
White

z 5
White

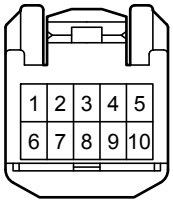

z 13
White

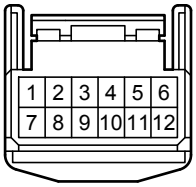

2A
White

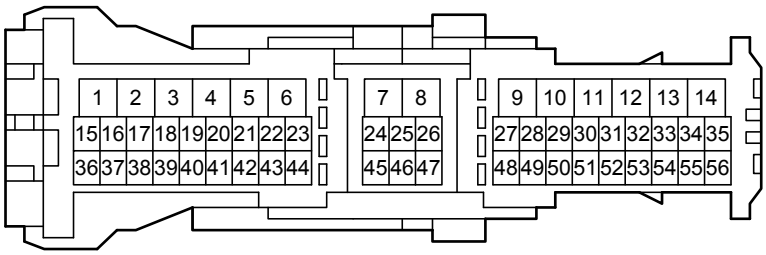

2D
White

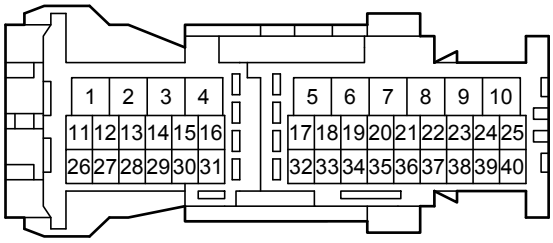

2F
White

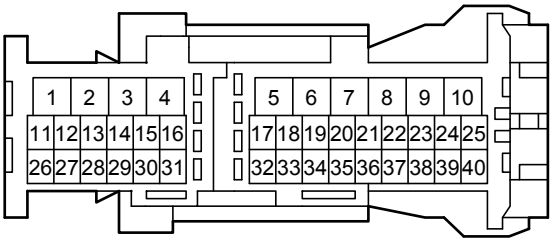

2H
White

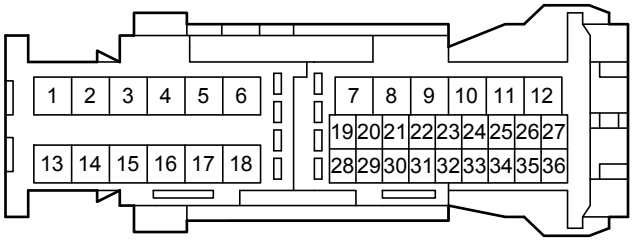

IF1
White

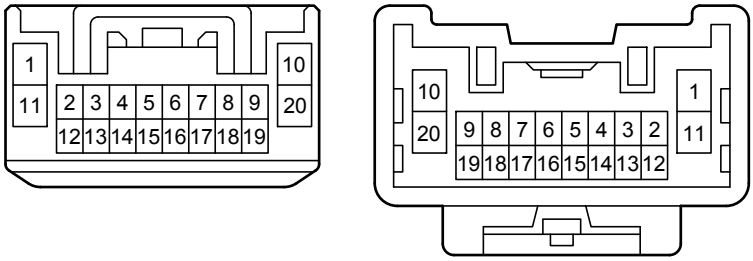

IF2
White

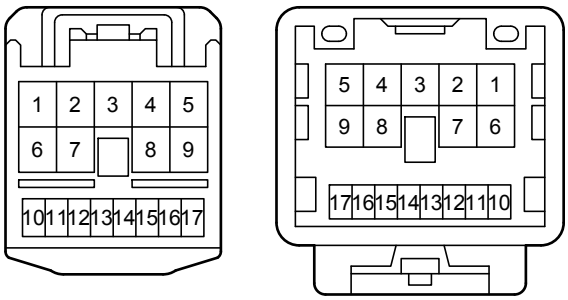

JF1
White

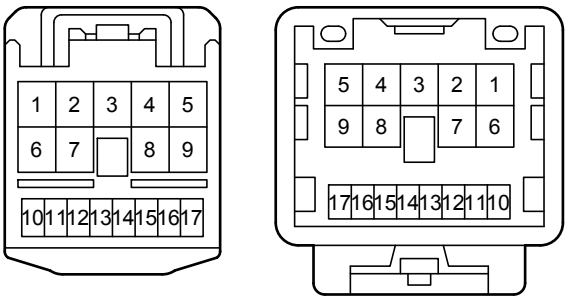

JF2
White

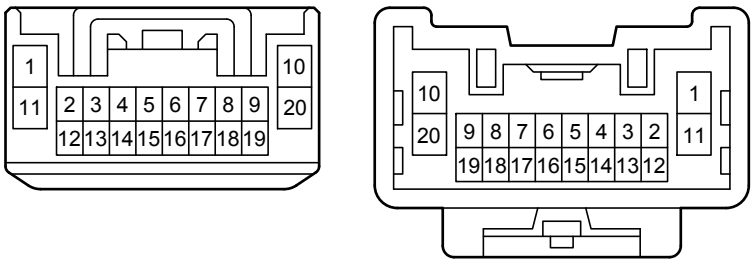

KO1
White

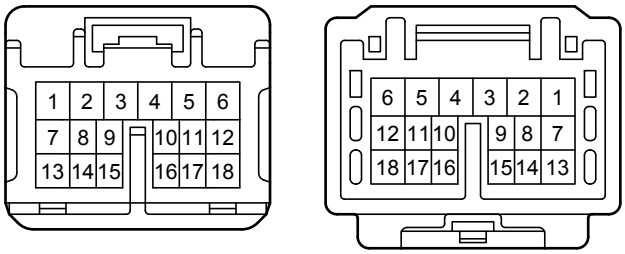

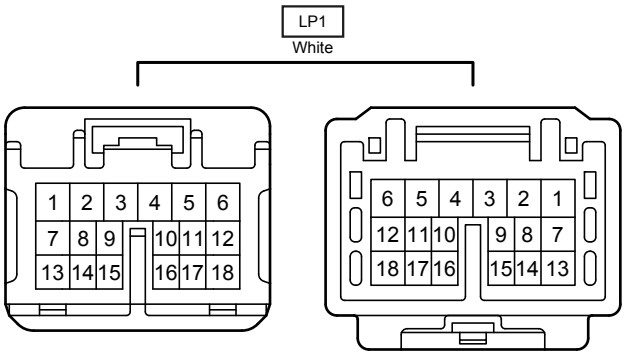
LP1
White
1 2 3 4 5 6
7 8 9 10 11 12
13 14 15 16 17 18
6 5 4 3 2 1
12 11 10 9 8 7
18 17 16 15 14 13

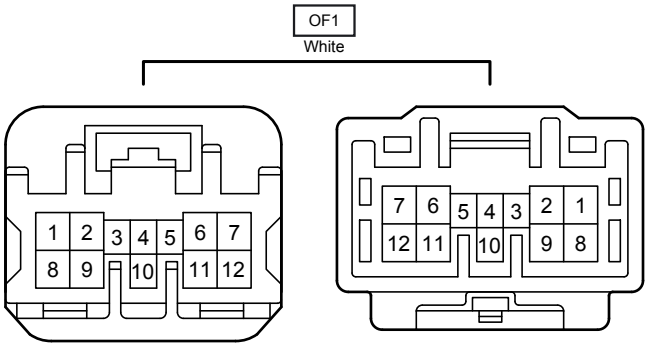
OF1
White
1 2 3 4 5 6 7
8 9 10 11 12
7 6 5 4 3 2 1
12 11 10 9 8

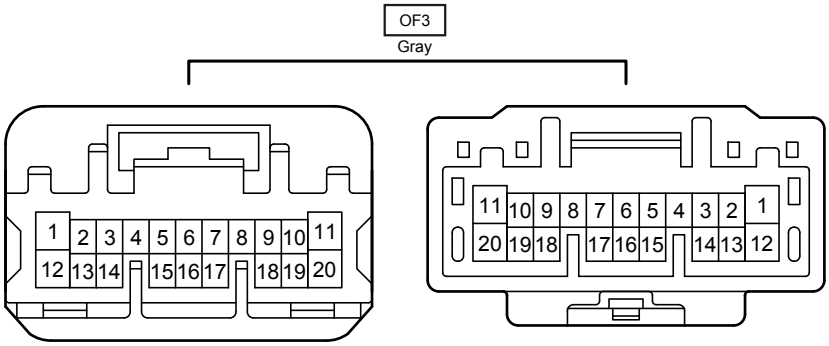
OF3
Gray
1 2 3 4 5 6 7 8 9 10 11
12 13 14 15 16 17 18 19 20
11 10 9 8 7 6 5 4 3 2 1
20 19 18 17 16 15 14 13 12

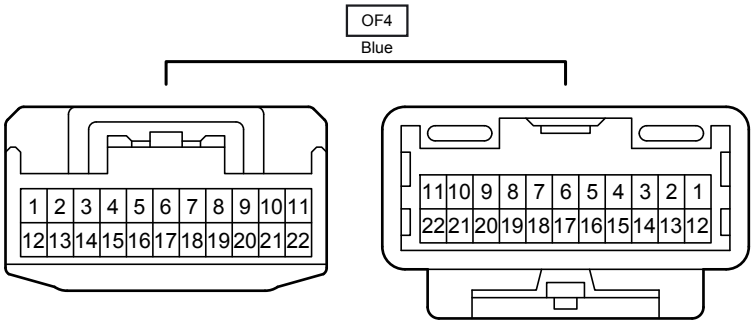
OF4
Blue
1 2 3 4 5 6 7 8 9 10 11
12 13 14 15 16 17 18 19 20 21 22
11 10 9 8 7 6 5 4 3 2 1
22 21 20 19 18 17 16 15 14 13 12