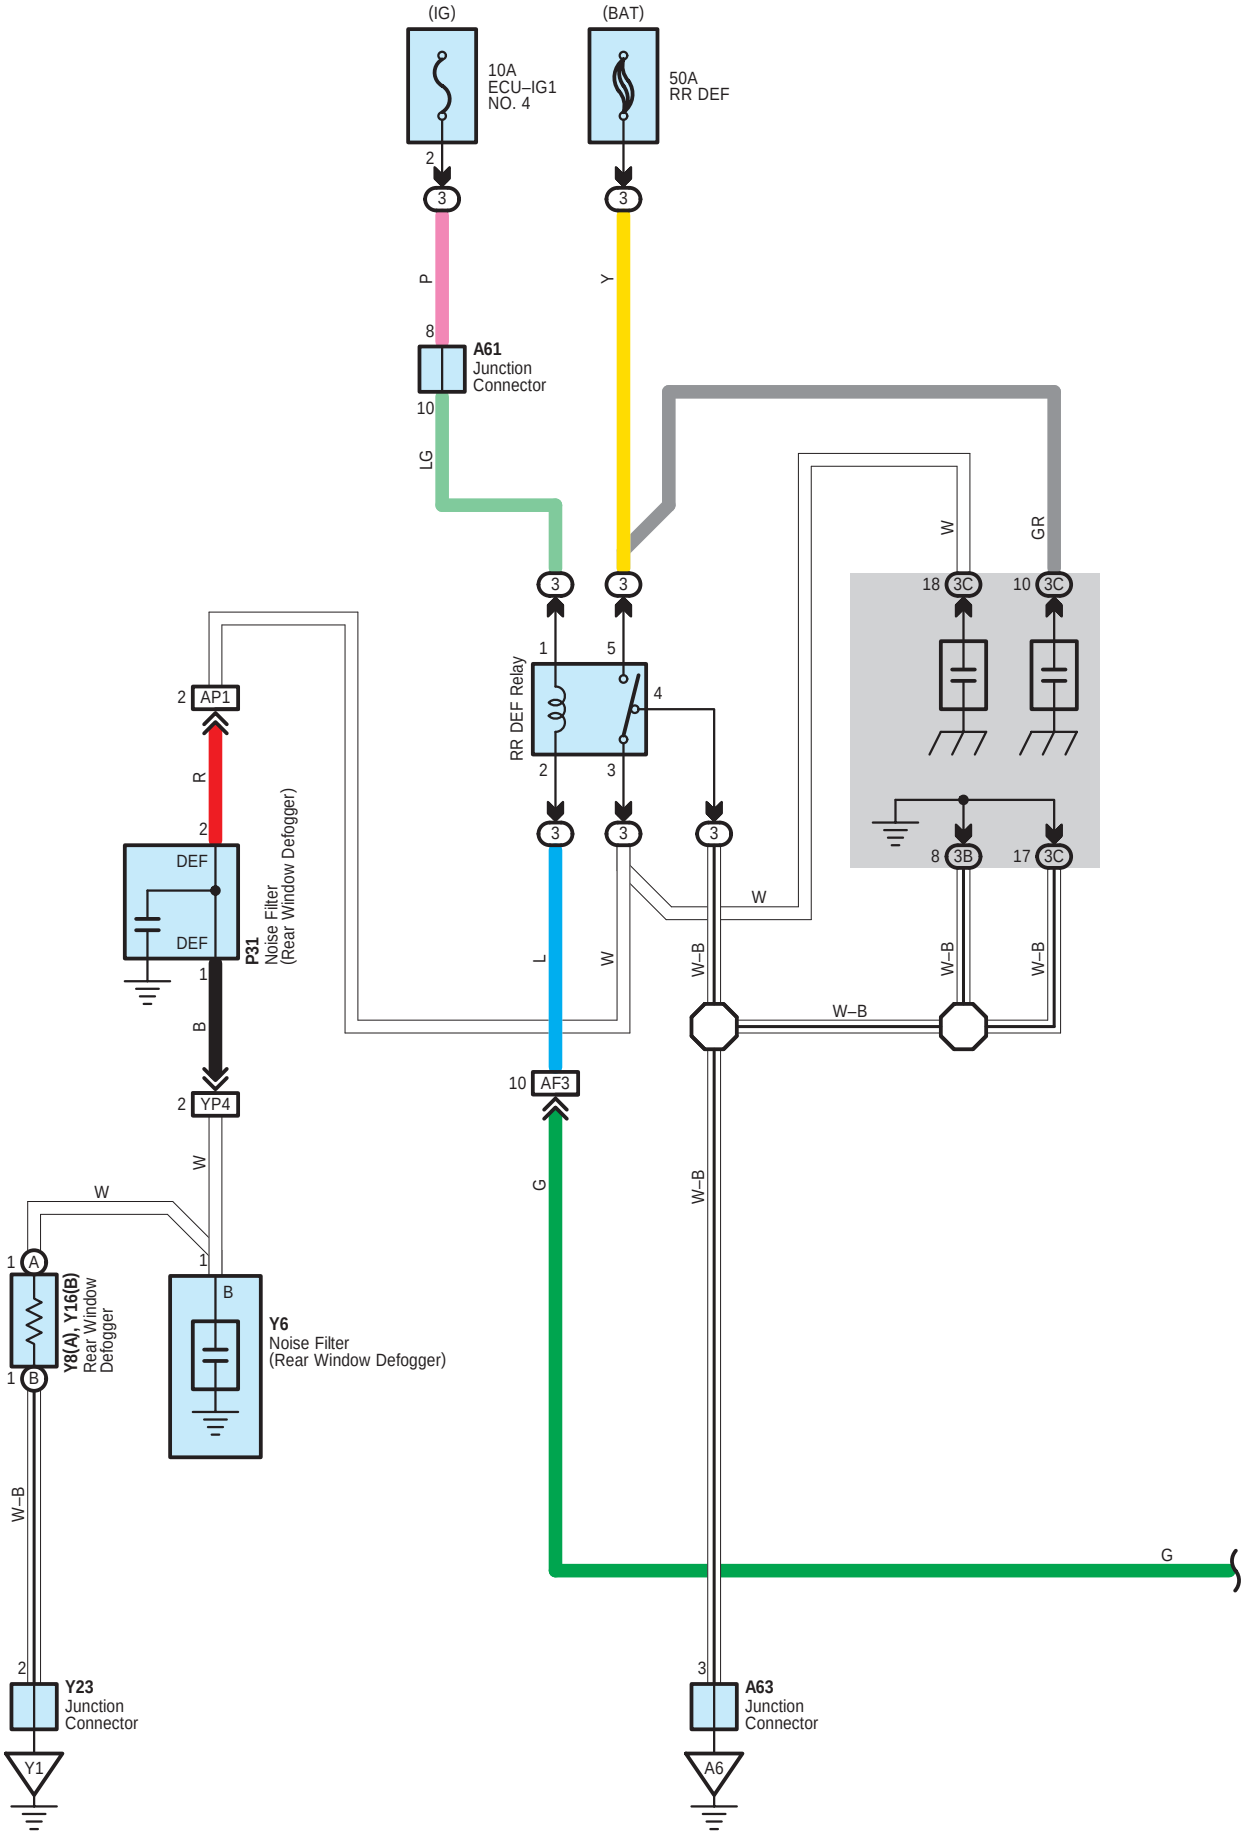
(IG)
(BAT)
10A
ECU–IG1
NO. 4
50A
RR DEF
A61
Junction
Connector
RR DEF Relay
AP1
YP4
AF3
P31
Noise Filter
(Rear Window Defogger)
DEF
Y8(A), Y16(B)
Rear Window
Defogger
Y6
Noise Filter
(Rear Window Defogger)
Y23
Junction
Connector
Y1
A63
Junction
Connector
A6
3C
3B
W–B

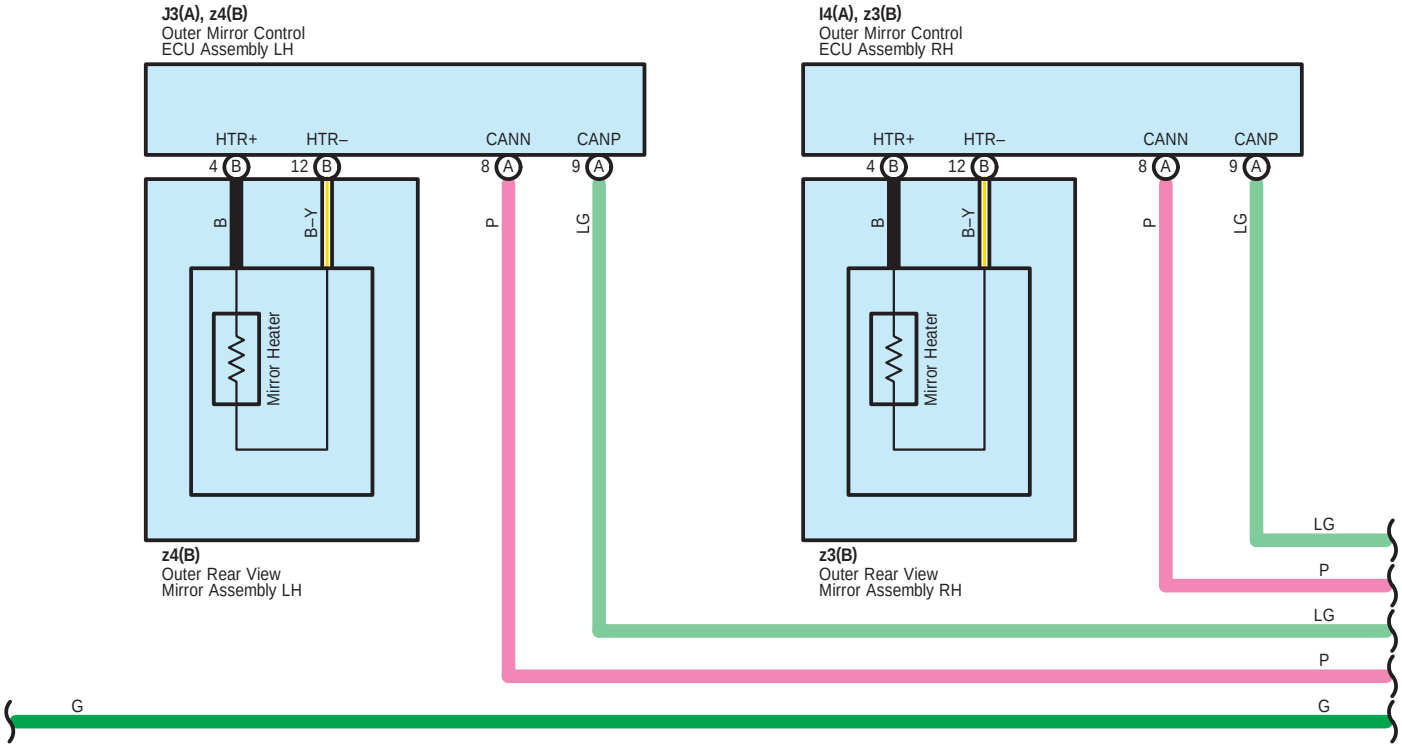
J3(A), z4(B)
Outer Mirror Control
ECU Assembly LH
HTR+
HTR–
CANN
CANP
4 B
12 B
8 A
9 A
B
B–Y
P
LG
Mirror Heater
z4(B)
Outer Rear View
Mirror Assembly LH
I4(A), z3(B)
Outer Mirror Control
ECU Assembly RH
HTR+
HTR–
CANN
CANP
4 B
12 B
8 A
9 A
B
B–Y
P
LG
Mirror Heater
z3(B)
Outer Rear View
Mirror Assembly RH
LG
P
LG
P
G
G

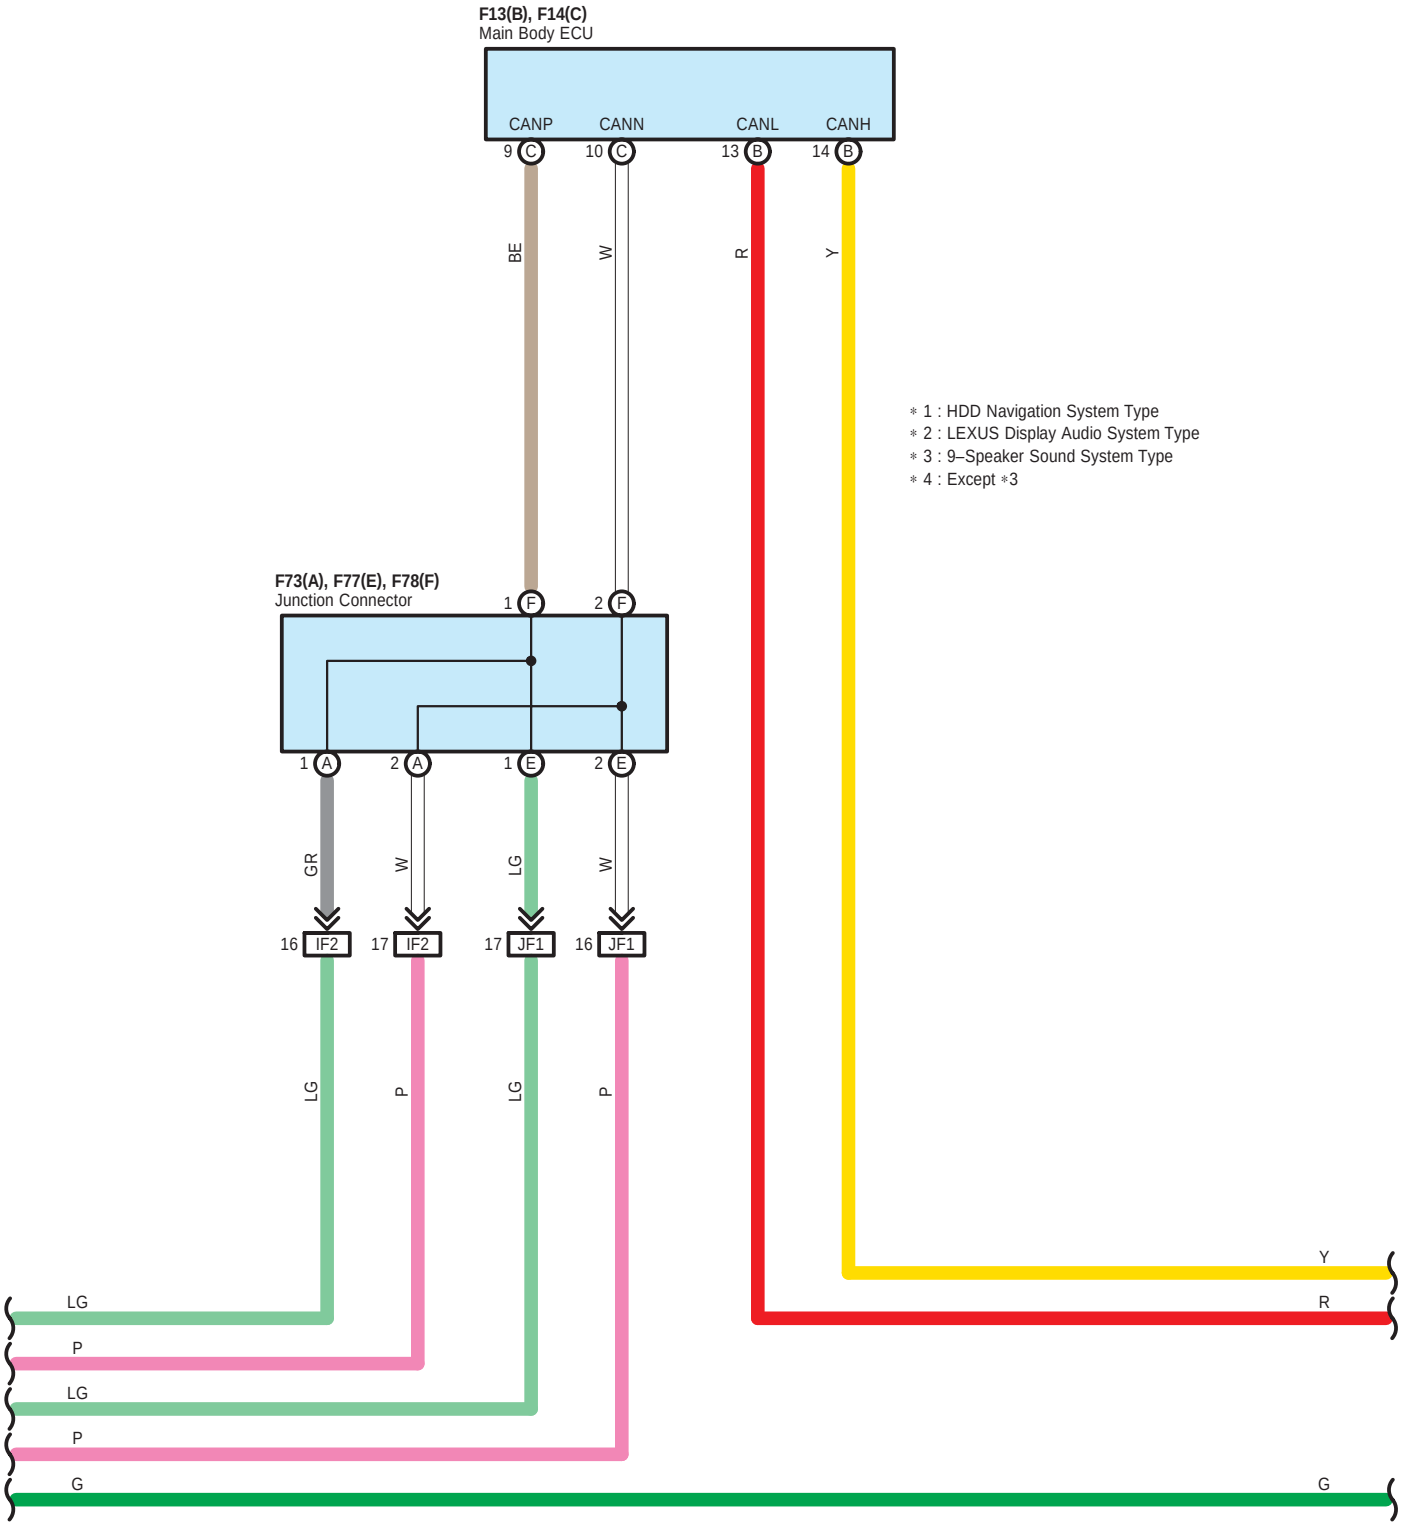
F13(B), F14(C)
Main Body ECU
CANP
CANN
CANL
CANH
9 C
10 C
13 B
14 B
BE
W
R
Y
∗ 1 : HDD Navigation System Type
∗ 2 : LEXUS Display Audio System Type
∗ 3 : 9–Speaker Sound System Type
∗ 4 : Except ∗3
F73(A), F77(E), F78(F)
Junction Connector
1 F
2 F
1 A
2 A
1 E
2 E
GR
W
LG
W
16 IF2
17 IF2
17 JF1
16 JF1
LG
P
LG
P
Y
R
LG
P
LG
P
G
G

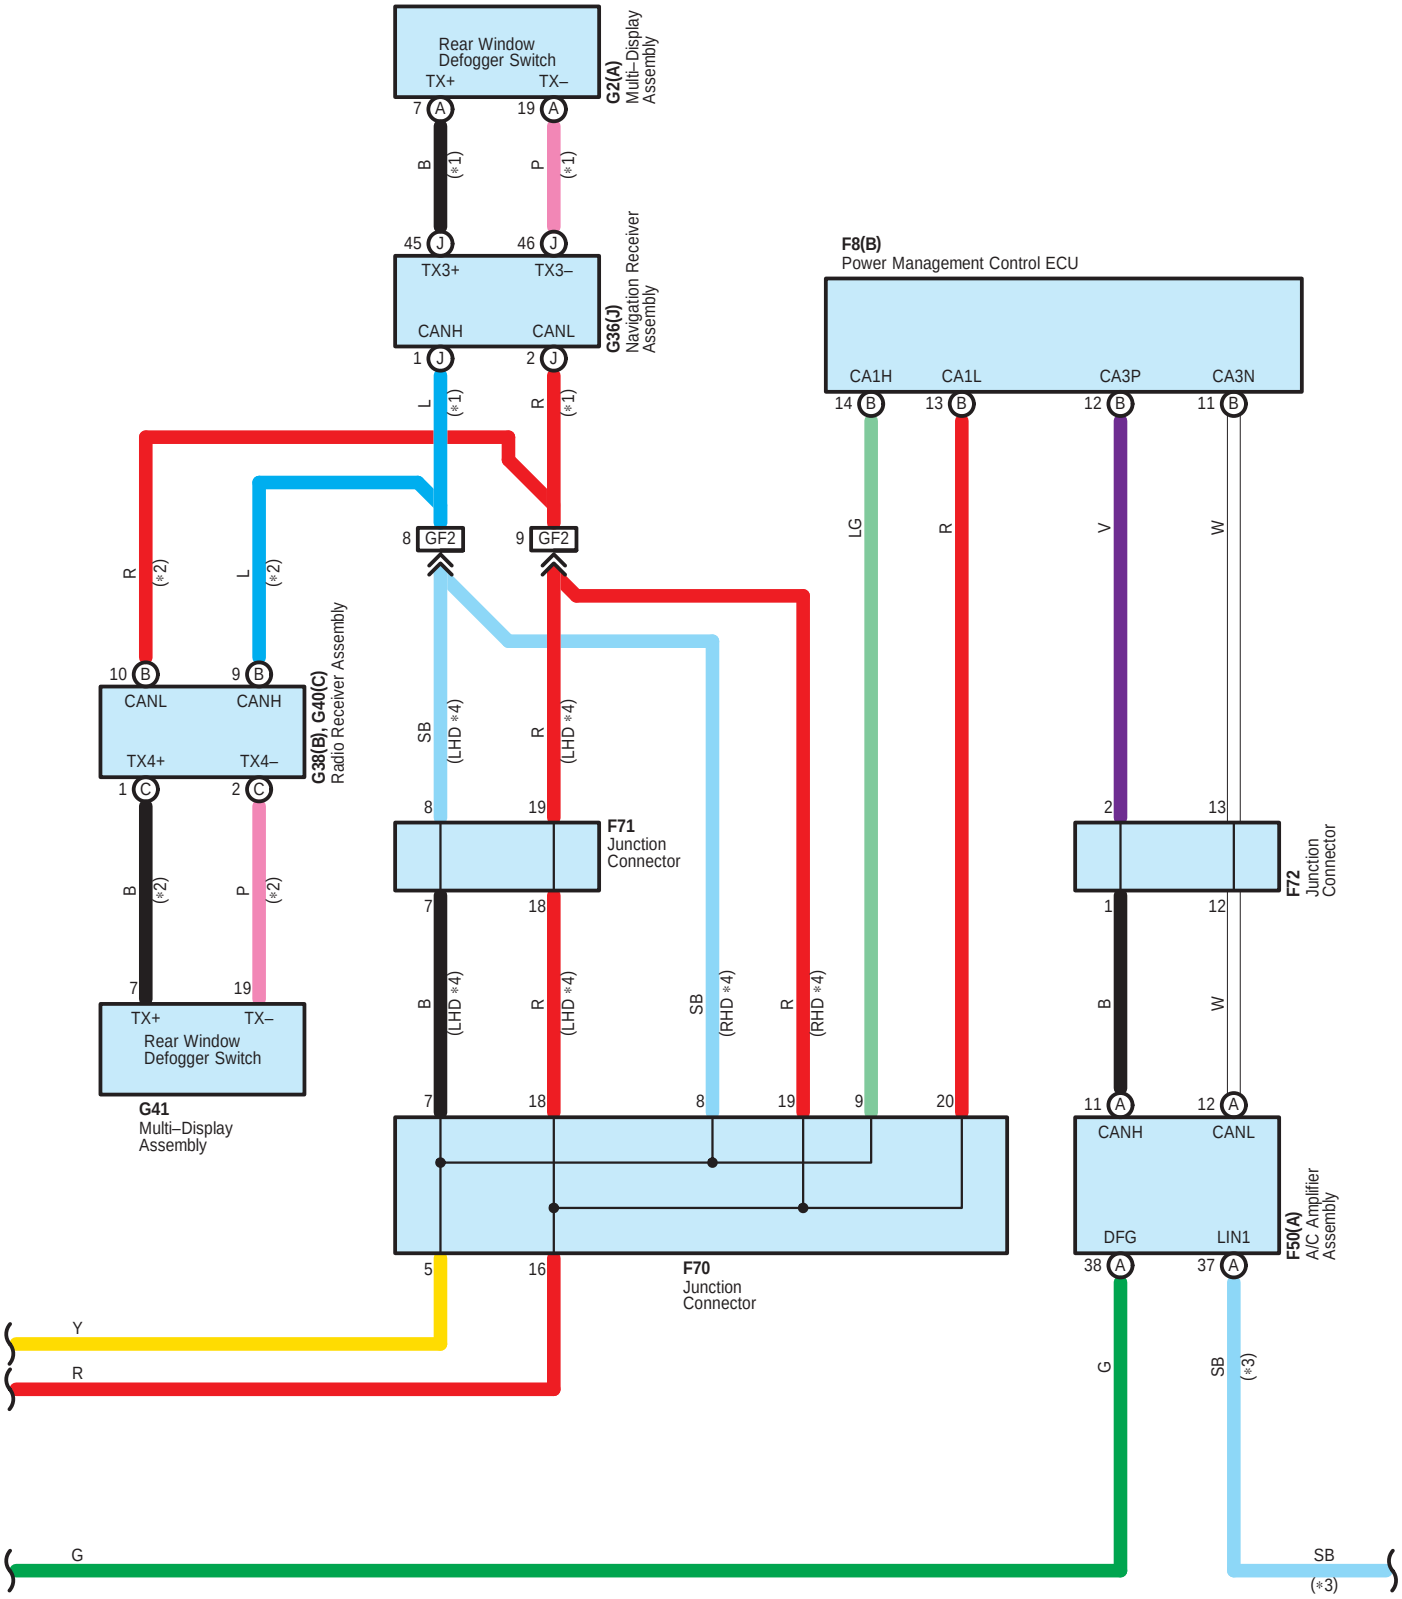
Rear Window Defogger Switch
TX+
TX–
G2(A) Multi–Display Assembly
TX3+
TX3–
CANH
CANL
G36(J) Navigation Receiver Assembly
F8(B) Power Management Control ECU
CA1H
CA1L
CA3P
CA3N
GF2
GF2
G38(B), G40(C) Radio Receiver Assembly
TX4+
TX4–
F71 Junction Connector
F72 Junction Connector
Rear Window Defogger Switch
G41 Multi–Display Assembly
F70 Junction Connector
F50(A) A/C Amplifier Assembly
DFG
LIN1
(*1)
(*2)
(LHD *4)
(RHD *4)
(*3)

∗ 3 : 9–Speaker Sound System Type

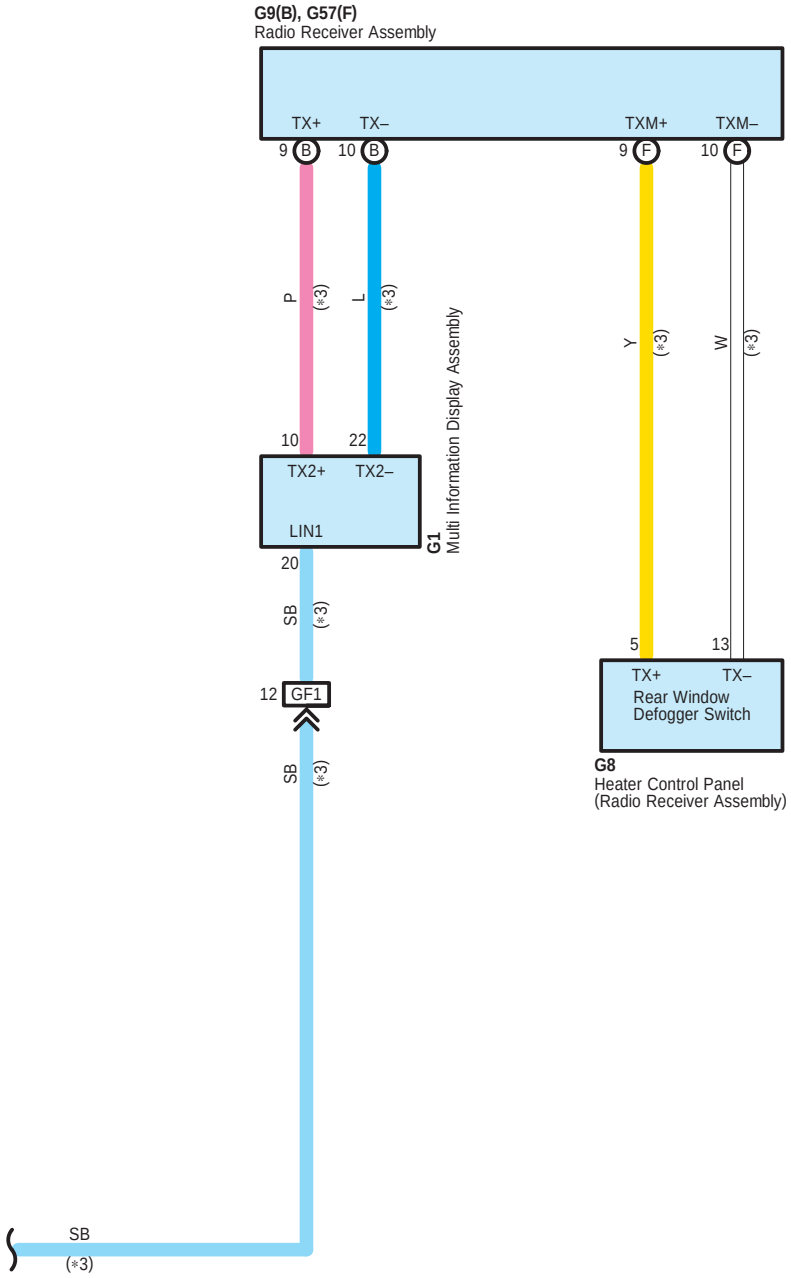

A 61
Black

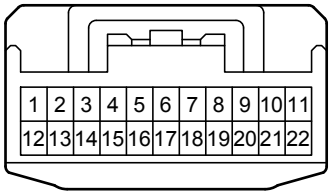

A 63
White

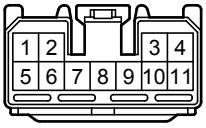

F 8
Black

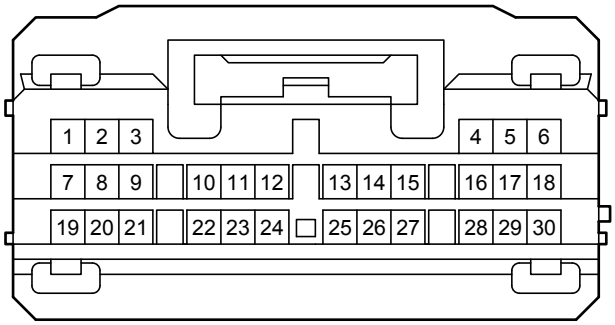

F 13
Black

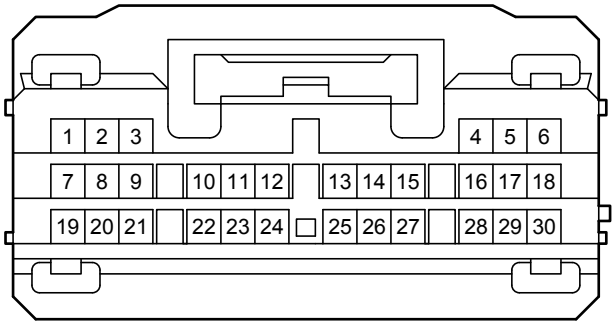

F 14
White

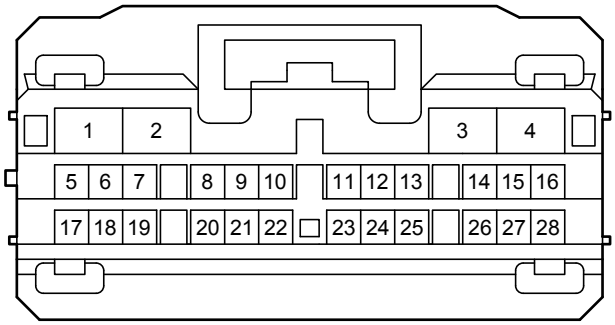

F 50
White

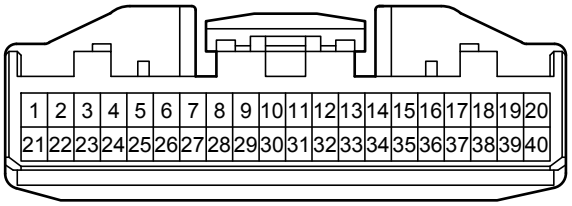

F 70
Blue

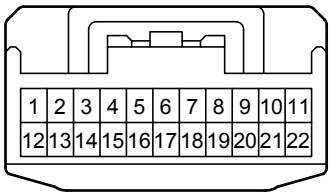

F 71
Blue

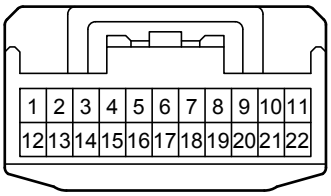

F 72
White

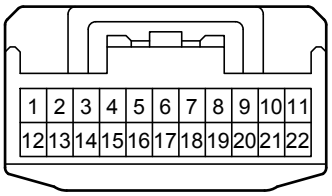

F 73
White



F 77
White



F 78
White



G 1
White

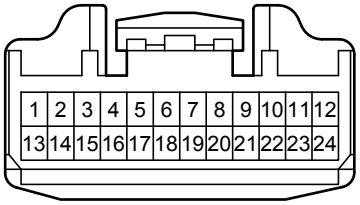

G 2
White

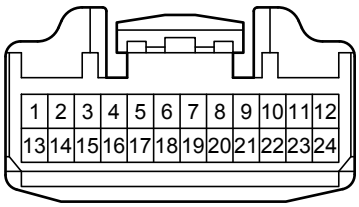

G 8
White

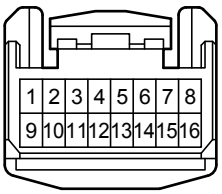

G 9
White

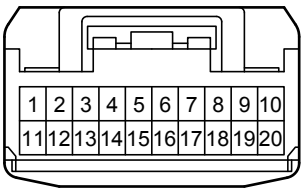

G 36
White

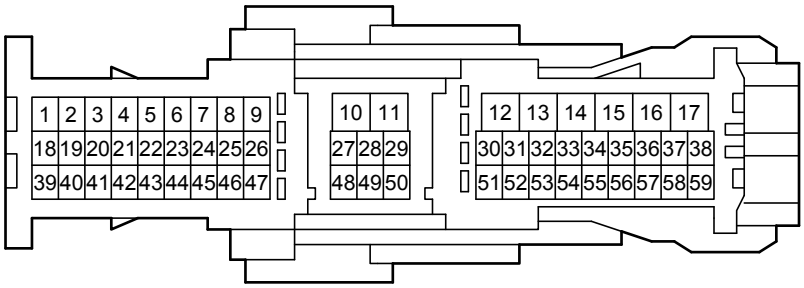

G 38
White

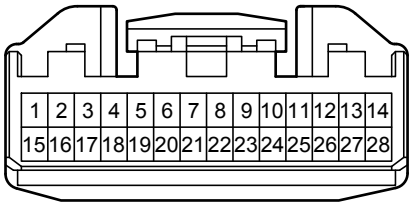

G 40
White

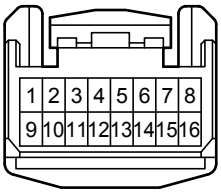

G 41
White

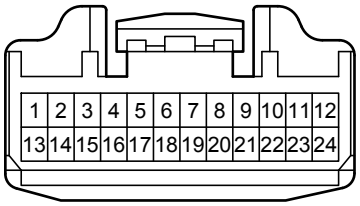

G 57
White

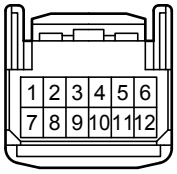

I 4
White

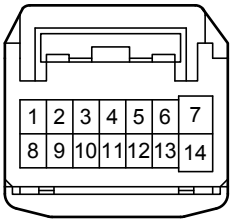

J 3
White

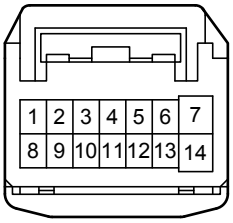

P 31
Gray



Y 6
Black



Y 8
White



Y 16
White



Y 23
White

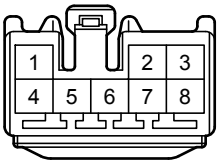

z 3
White

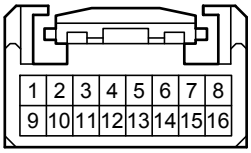

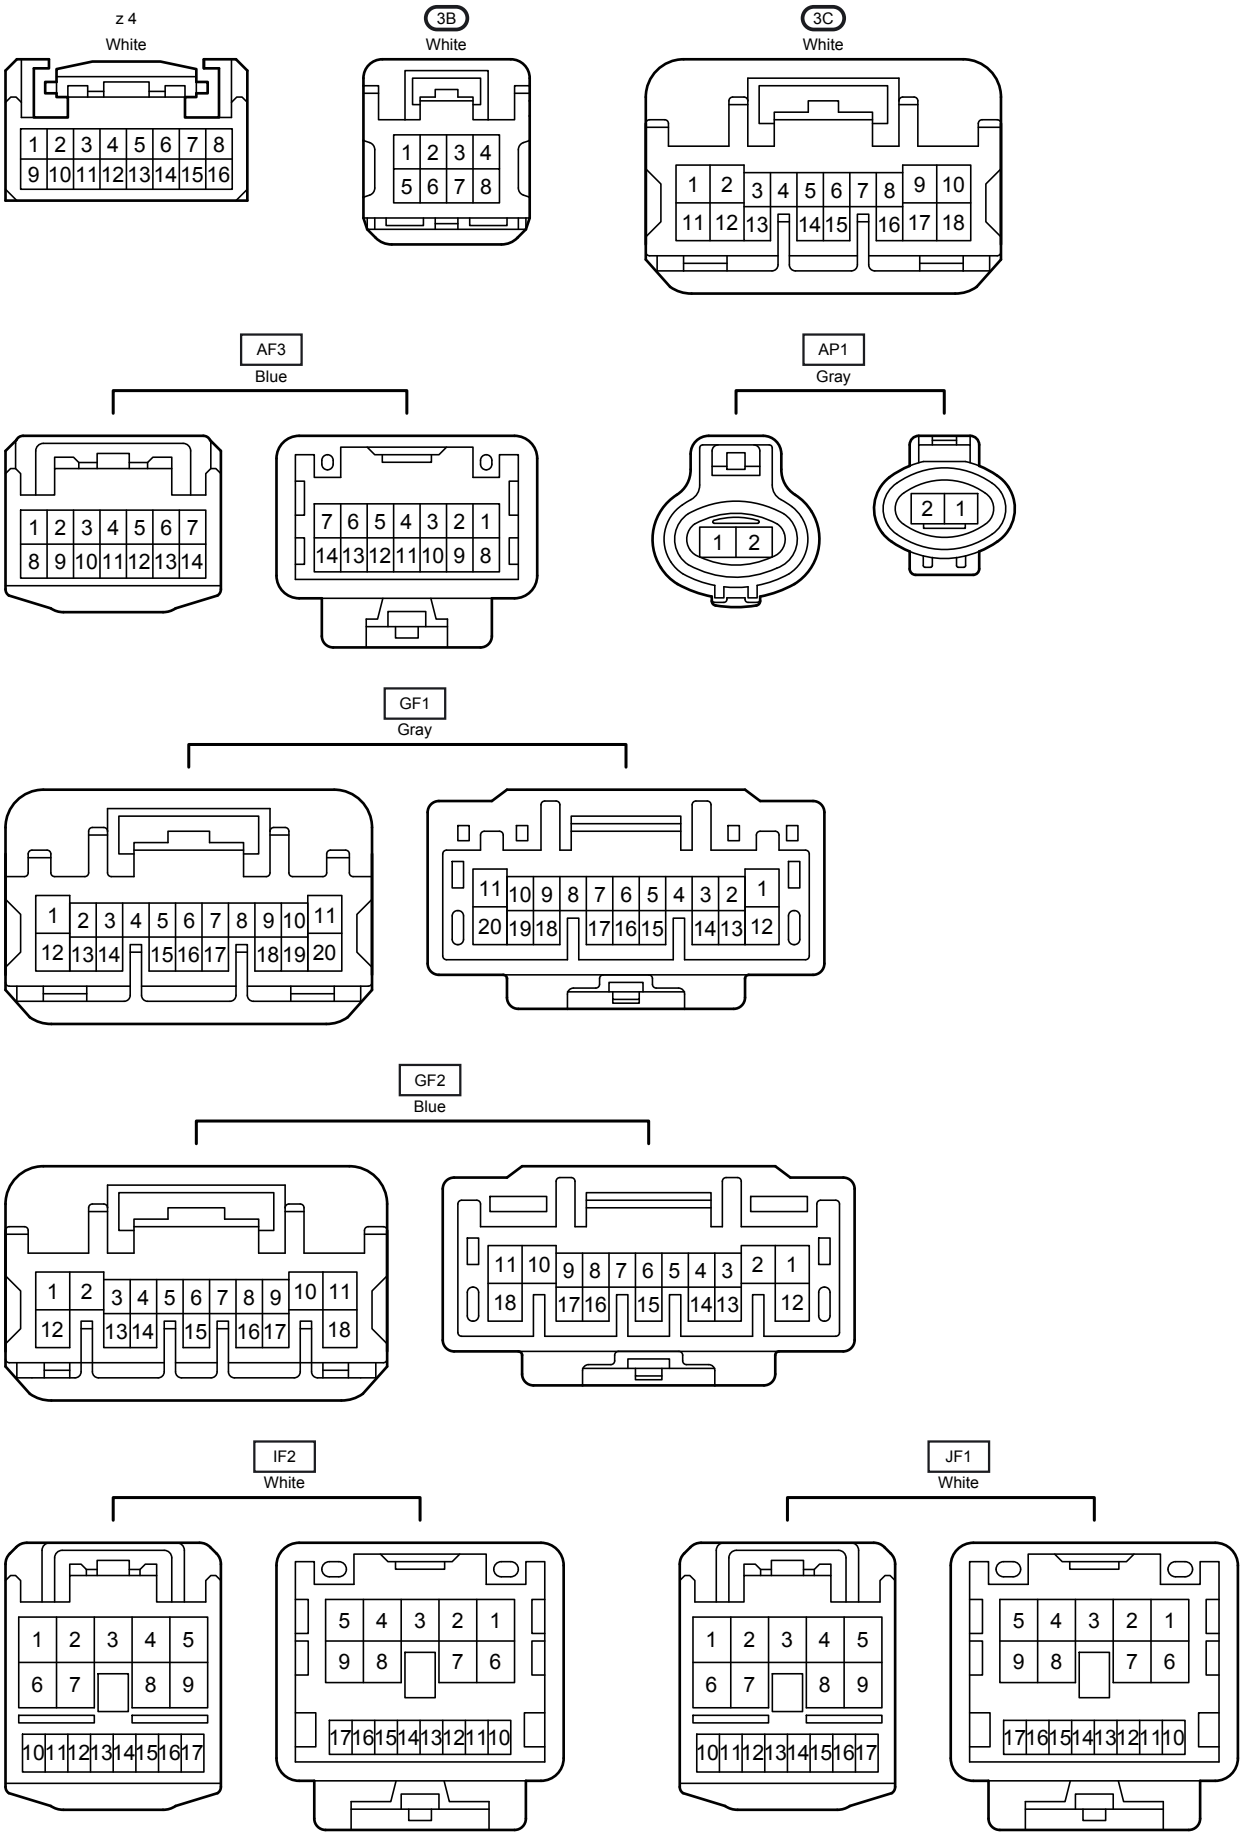
z 4
White
3B
White
3C
White
AF3
Blue
AP1
Gray
GF1
Gray
GF2
Blue
IF2
White
JF1
White

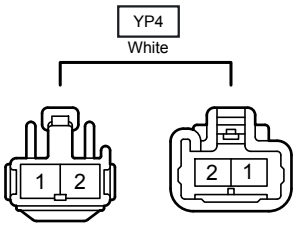
YP4
White
1
2
2
1