25 RX 450h

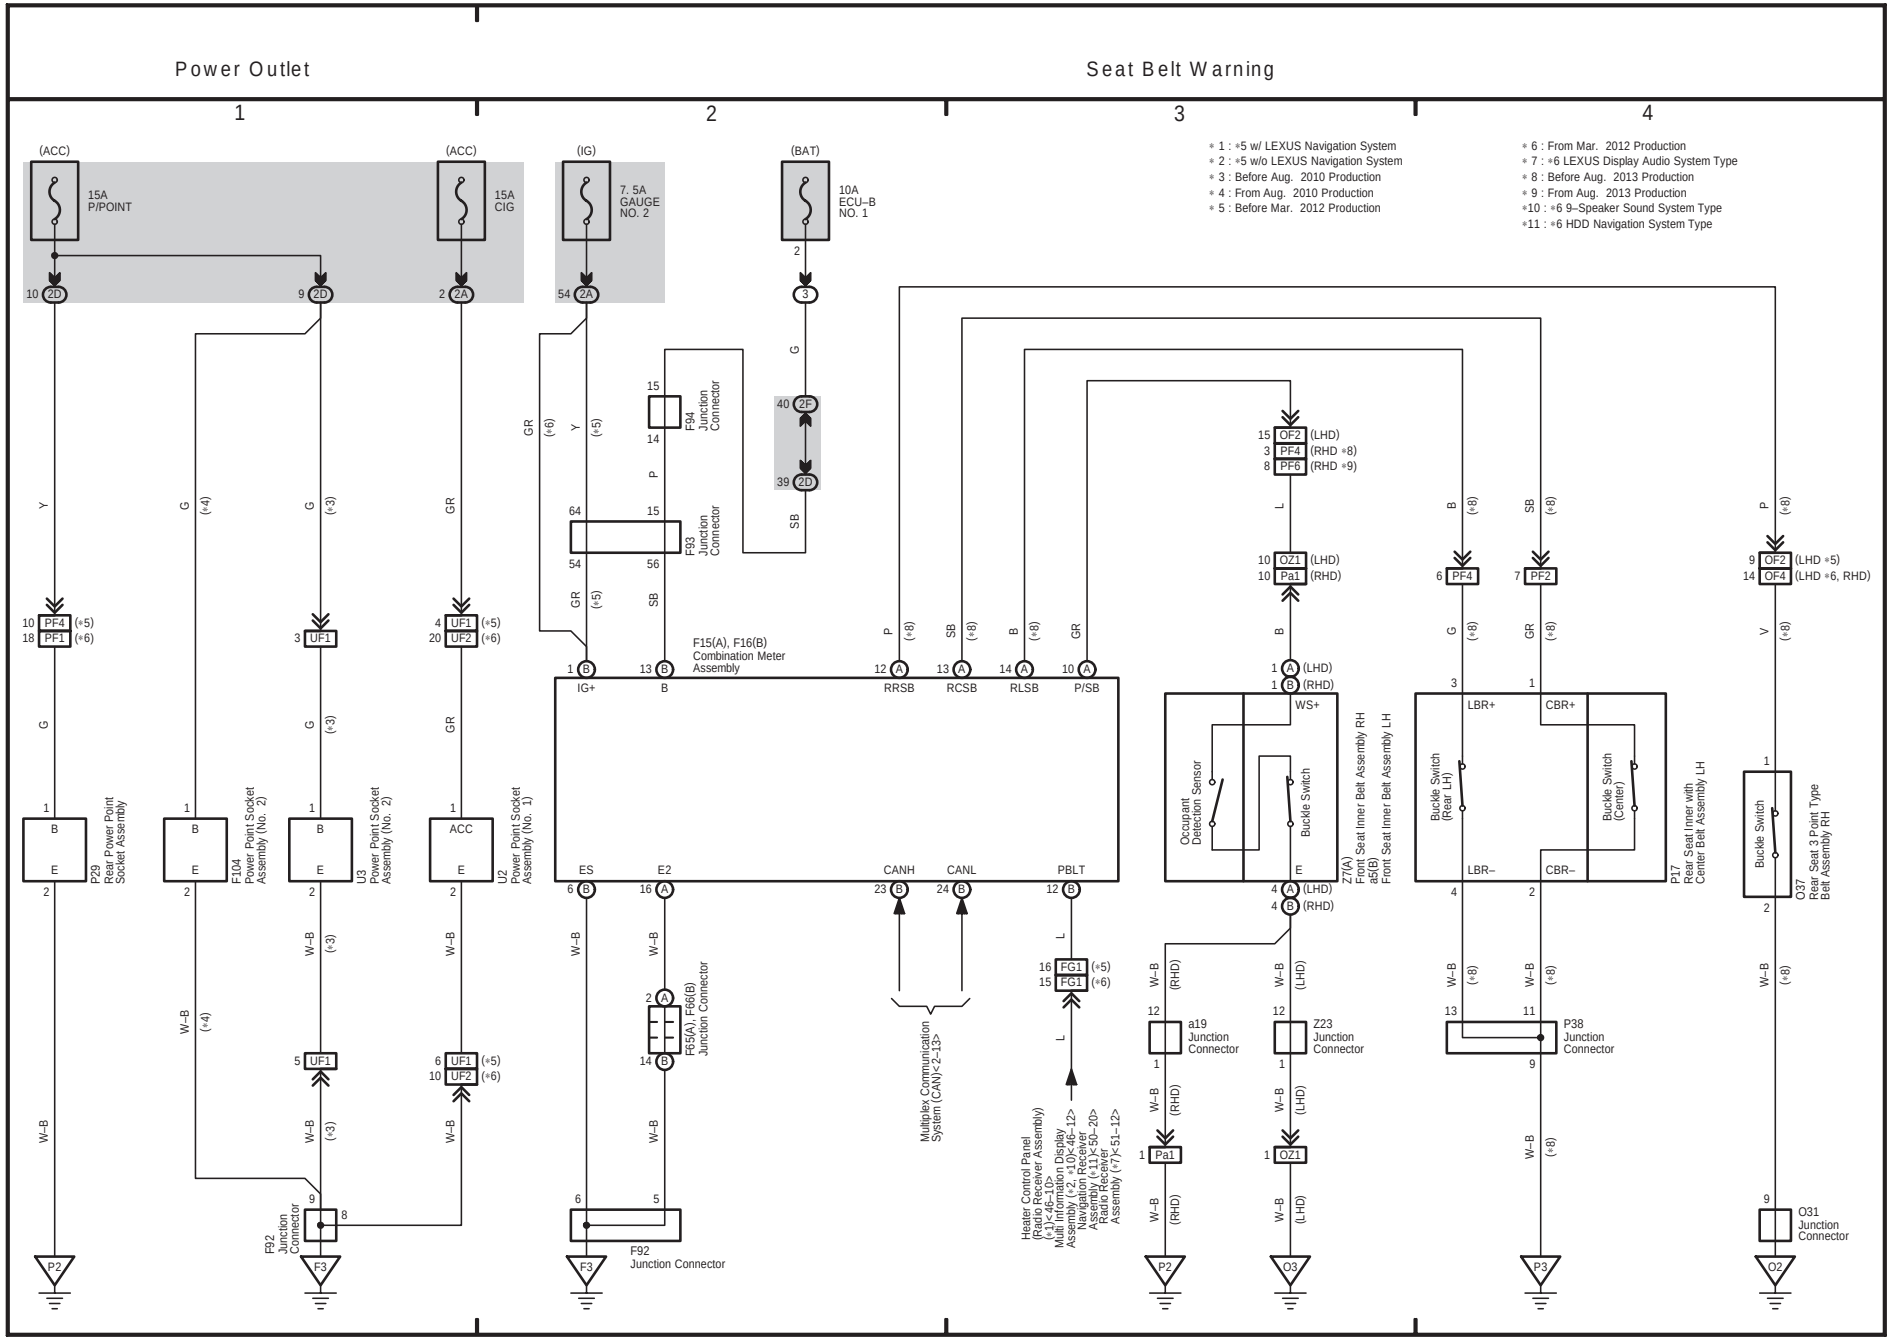
Power Outlet
Seat Belt Warning
1
2
3
4
(ACC)
15A P/POINT
(ACC)
15A CIG
(IG)
7. 5A GAUGE NO. 2
(BAT)
10A ECU–B NO. 1
* 1 : *5 w/ LEXUS Navigation System
* 2 : *5 w/o LEXUS Navigation System
* 3 : Before Aug. 2010 Production
* 4 : From Aug. 2010 Production
* 5 : Before Mar. 2012 Production
* 6 : From Mar. 2012 Production
* 7 : *6 LEXUS Display Audio System Type
* 8 : Before Aug. 2013 Production
* 9 : From Aug. 2013 Production
*10 : *6 9–Speaker Sound System Type
*11 : *6 HDD Navigation System Type
F94 Junction Connector
F93 Junction Connector
F15(A), F16(B) Combination Meter Assembly
IG+
B
RRSB
RCSB
RLSB
P/SB
ES
E2
CANH
CANL
PBLT
F65(A), F66(B) Junction Connector
F92 Junction Connector
Multiplex Communication System (CAN)<2–13>
Heater Control Panel (Radio Receiver Assembly) (*1)<46–10> Multi Information Display Assembly (*2, *10)<46–12> Navigation Receiver Assembly (*11)<50–20> Radio Receiver Assembly (*7)<51–12>
P29 Rear Power Point Socket Assembly
F104 Power Point Socket Assembly (No. 2)
U3 Power Point Socket Assembly (No. 2)
U2 Power Point Socket Assembly (No. 1)
Occupant Detection Sensor
Buckle Switch
Z7(A) Front Seat Inner Belt Assembly RH
a5(B) Front Seat Inner Belt Assembly LH
Buckle Switch (Rear LH)
Buckle Switch (Center)
P17 Rear Seat Inner with Center Belt Assembly LH
Buckle Switch
O37 Rear Seat 3 Point Type Belt Assembly RH
a19 Junction Connector
Z23 Junction Connector
P38 Junction Connector
O31 Junction Connector
F92 Junction Connector
P2
F3
P3
O2
O3