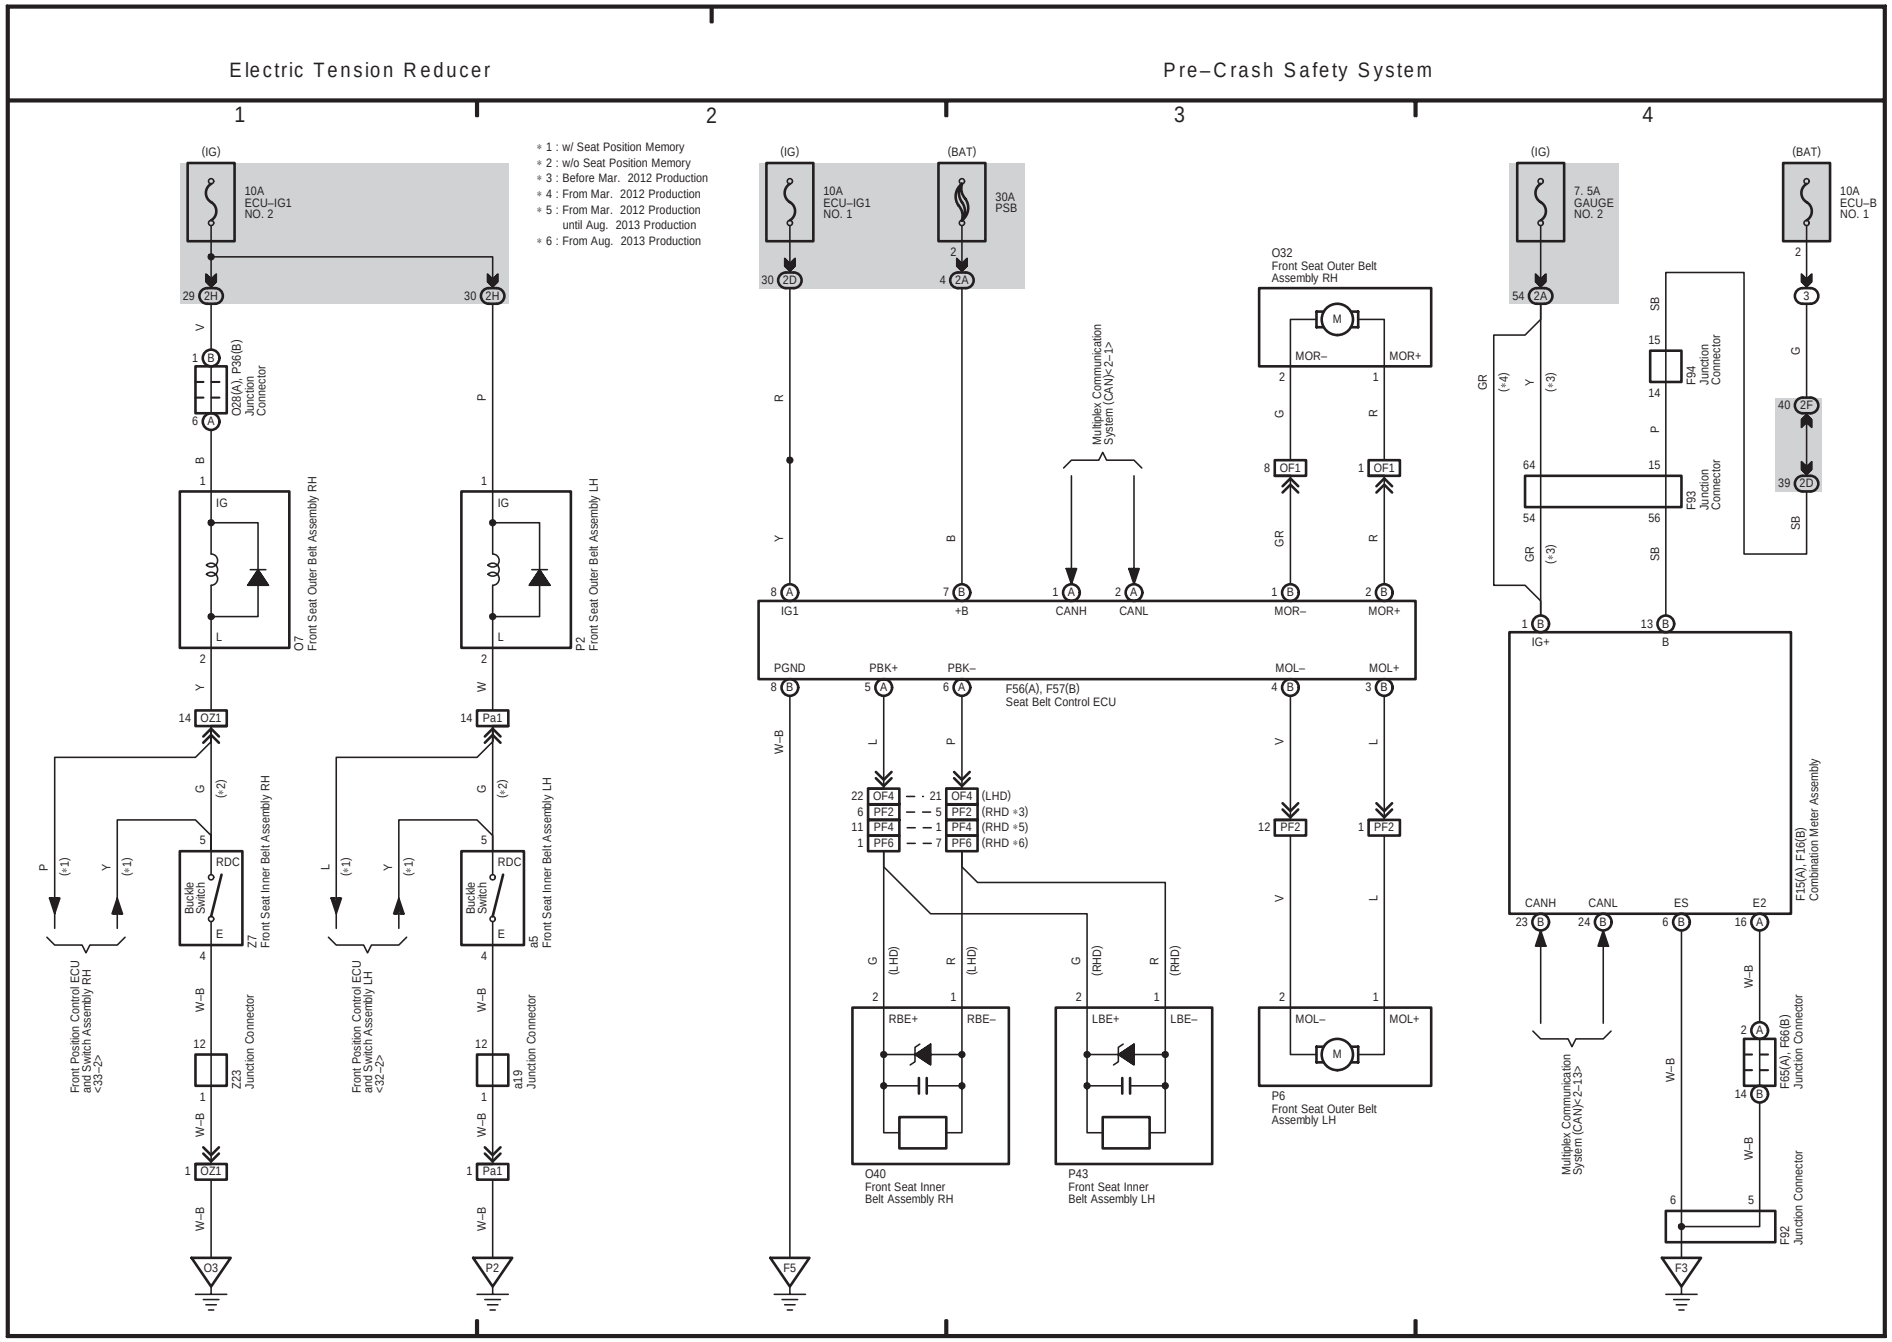
Electric Tension Reducer
Pre–Crash Safety System
1
2
3
4
∗ 1 : w/ Seat Position Memory
∗ 2 : w/o Seat Position Memory
∗ 3 : Before Mar. 2012 Production
∗ 4 : From Mar. 2012 Production
∗ 5 : From Mar. 2012 Production until Aug. 2013 Production
∗ 6 : From Aug. 2013 Production
(IG)
10A ECU–IG1 NO. 2
O28(A), P36(B) Junction Connector
O7 Front Seat Outer Belt Assembly RH
P2 Front Seat Outer Belt Assembly LH
Z7 Front Seat Inner Belt Assembly RH
a5 Front Seat Inner Belt Assembly LH
Buckle Switch
RDC
Front Position Control ECU and Switch Assembly RH <33–2>
Front Position Control ECU and Switch Assembly LH <32–2>
Z23 Junction Connector
a19 Junction Connector
(BAT)
10A ECU–IG1 NO. 1
30A PSB
O32 Front Seat Outer Belt Assembly RH
Multiplex Communication System (CAN)<2–1>
IG1
+B
CANH
CANL
MOR–
MOR+
PGND
PBK+
PBK–
MOL–
MOL+
F56(A), F57(B) Seat Belt Control ECU
(LHD)
(RHD ∗3)
(RHD ∗5)
(RHD ∗6)
RBE+
RBE–
LBE+
LBE–
O40 Front Seat Inner Belt Assembly RH
P43 Front Seat Inner Belt Assembly LH
P6 Front Seat Outer Belt Assembly LH
7. 5A GAUGE NO. 2
10A ECU–B NO. 1
F94 Junction Connector
F93 Junction Connector
IG+
B
ES
E2
F15(A), F16(B) Combination Meter Assembly
Multiplex Communication System (CAN)<2–13>
F65(A), F66(B) Junction Connector
F32 Junction Connector
O3
P2
F5
F3