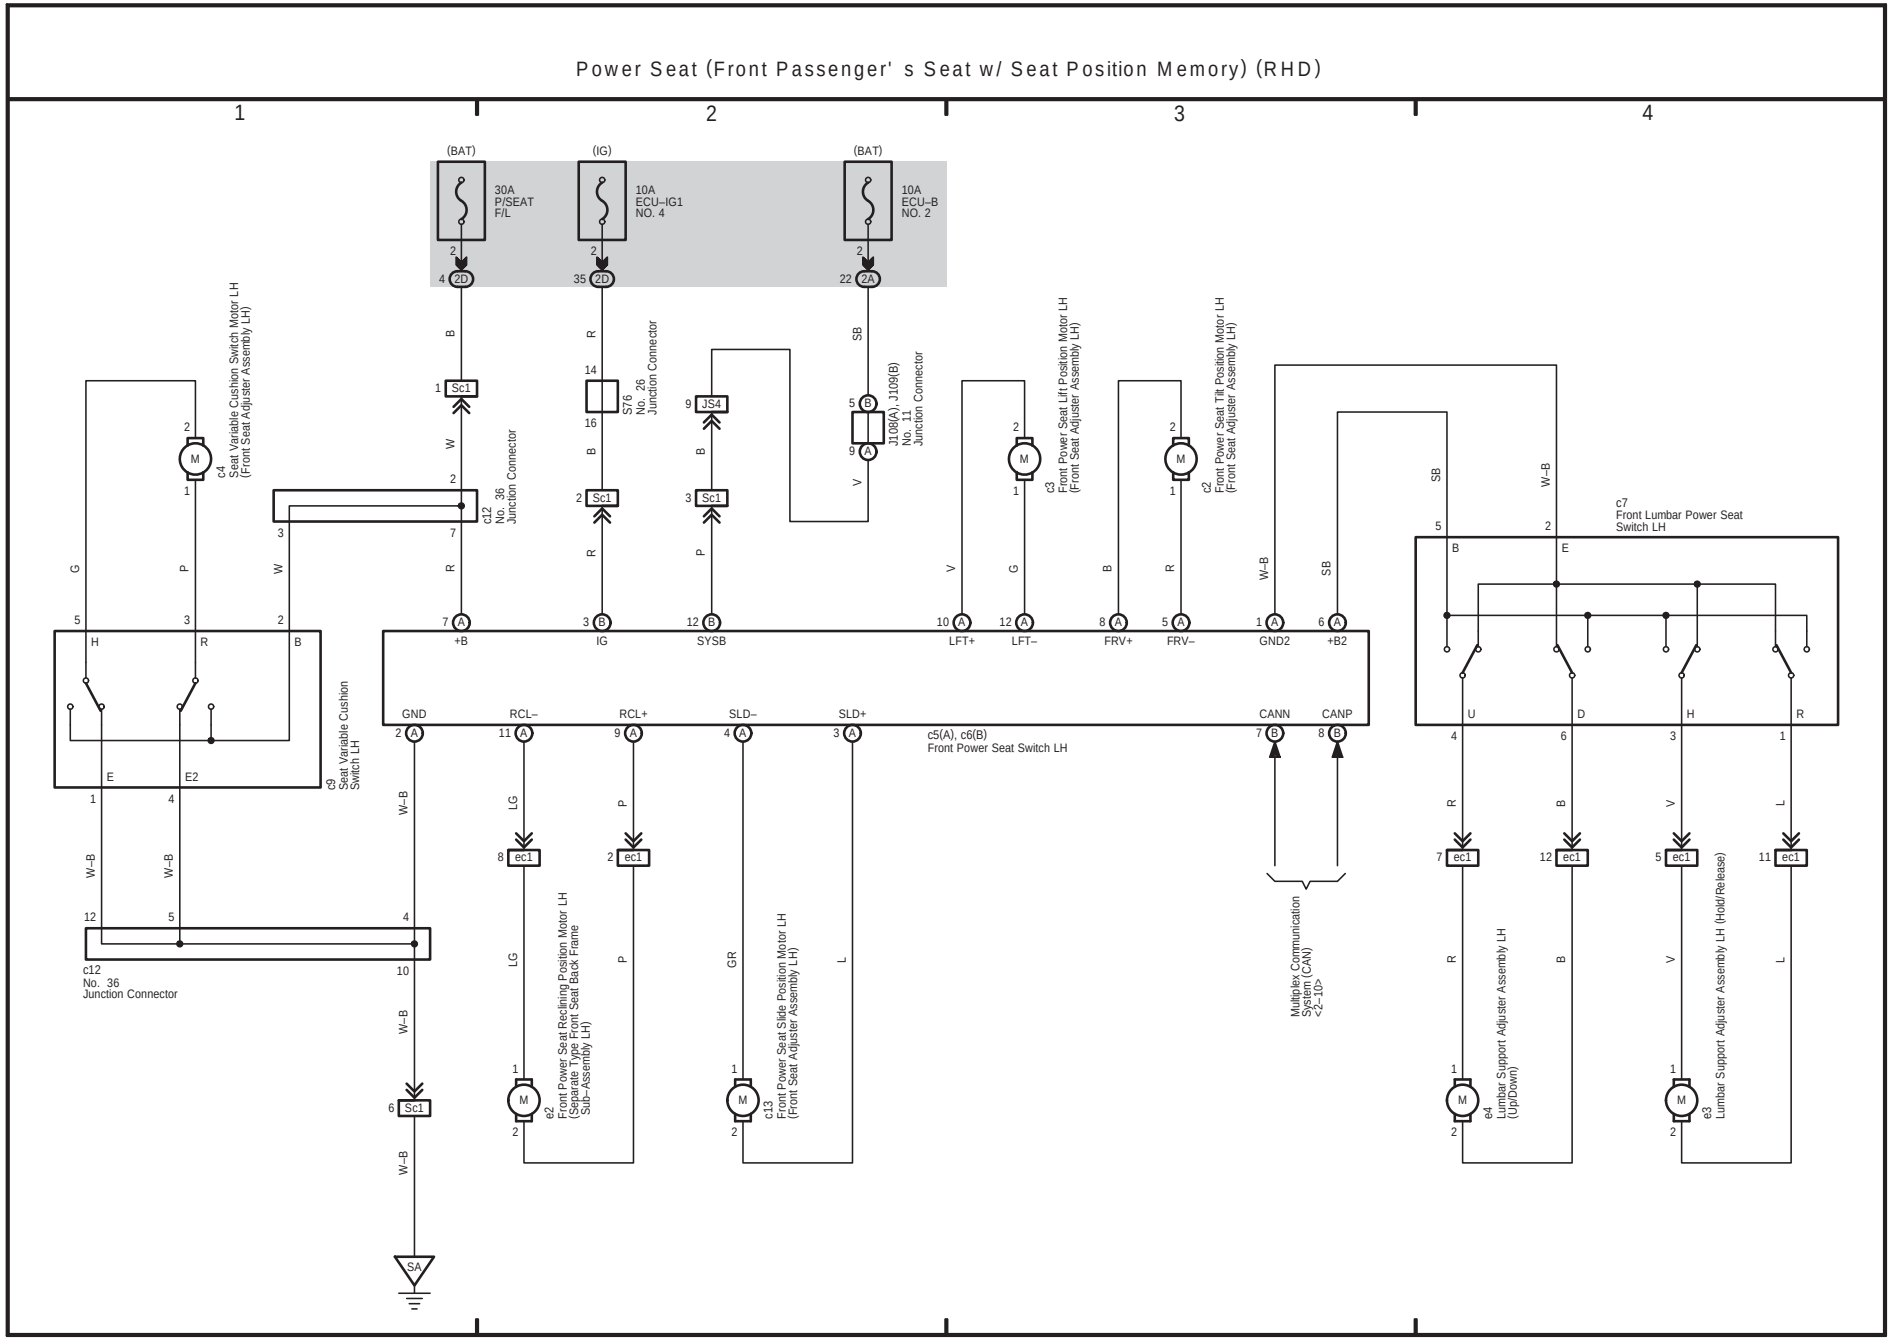
Power Seat (Front Passenger' s Seat w/ Seat Position Memory) (RHD)
1
2
3
4
(BAT)
30A
P/SEAT
F/L
(IG)
10A
ECU–IG1
NO. 4
(BAT)
10A
ECU–B
NO. 2
c4
Seat Variable Cushion Switch Motor LH
(Front Seat Adjuster Assembly LH)
c12
No. 36
Junction Connector
S76
No. 26
Junction Connector
J108(A), J109(B)
No. 11
Junction Connector
c3
Front Power Seat Lift Position Motor LH
(Front Seat Adjuster Assembly LH)
c2
Front Power Seat Tilt Position Motor LH
(Front Seat Adjuster Assembly LH)
c7
Front Lumbar Power Seat
Switch LH
c9
Seat Variable Cushion
Switch LH
+B
IG
SYSB
LFT+
LFT–
FRV+
FRV–
GND2
+B2
GND
RCL–
RCL+
SLD–
SLD+
CANN
CANP
c5(A), c6(B)
Front Power Seat Switch LH
c12
No. 36
Junction Connector
e2
Front Power Seat Reclining Position Motor LH
(Separate Type Front Seat Back Frame
Sub-Assembly LH)
c13
Front Power Seat Slide Position Motor LH
(Front Seat Adjuster Assembly LH)
Multiplex Communication
System (CAN)
<2–10>
e4
Lumbar Support Adjuster Assembly LH
(Up/Down)
e3
Lumbar Support Adjuster Assembly LH (Hold/Release)
SA