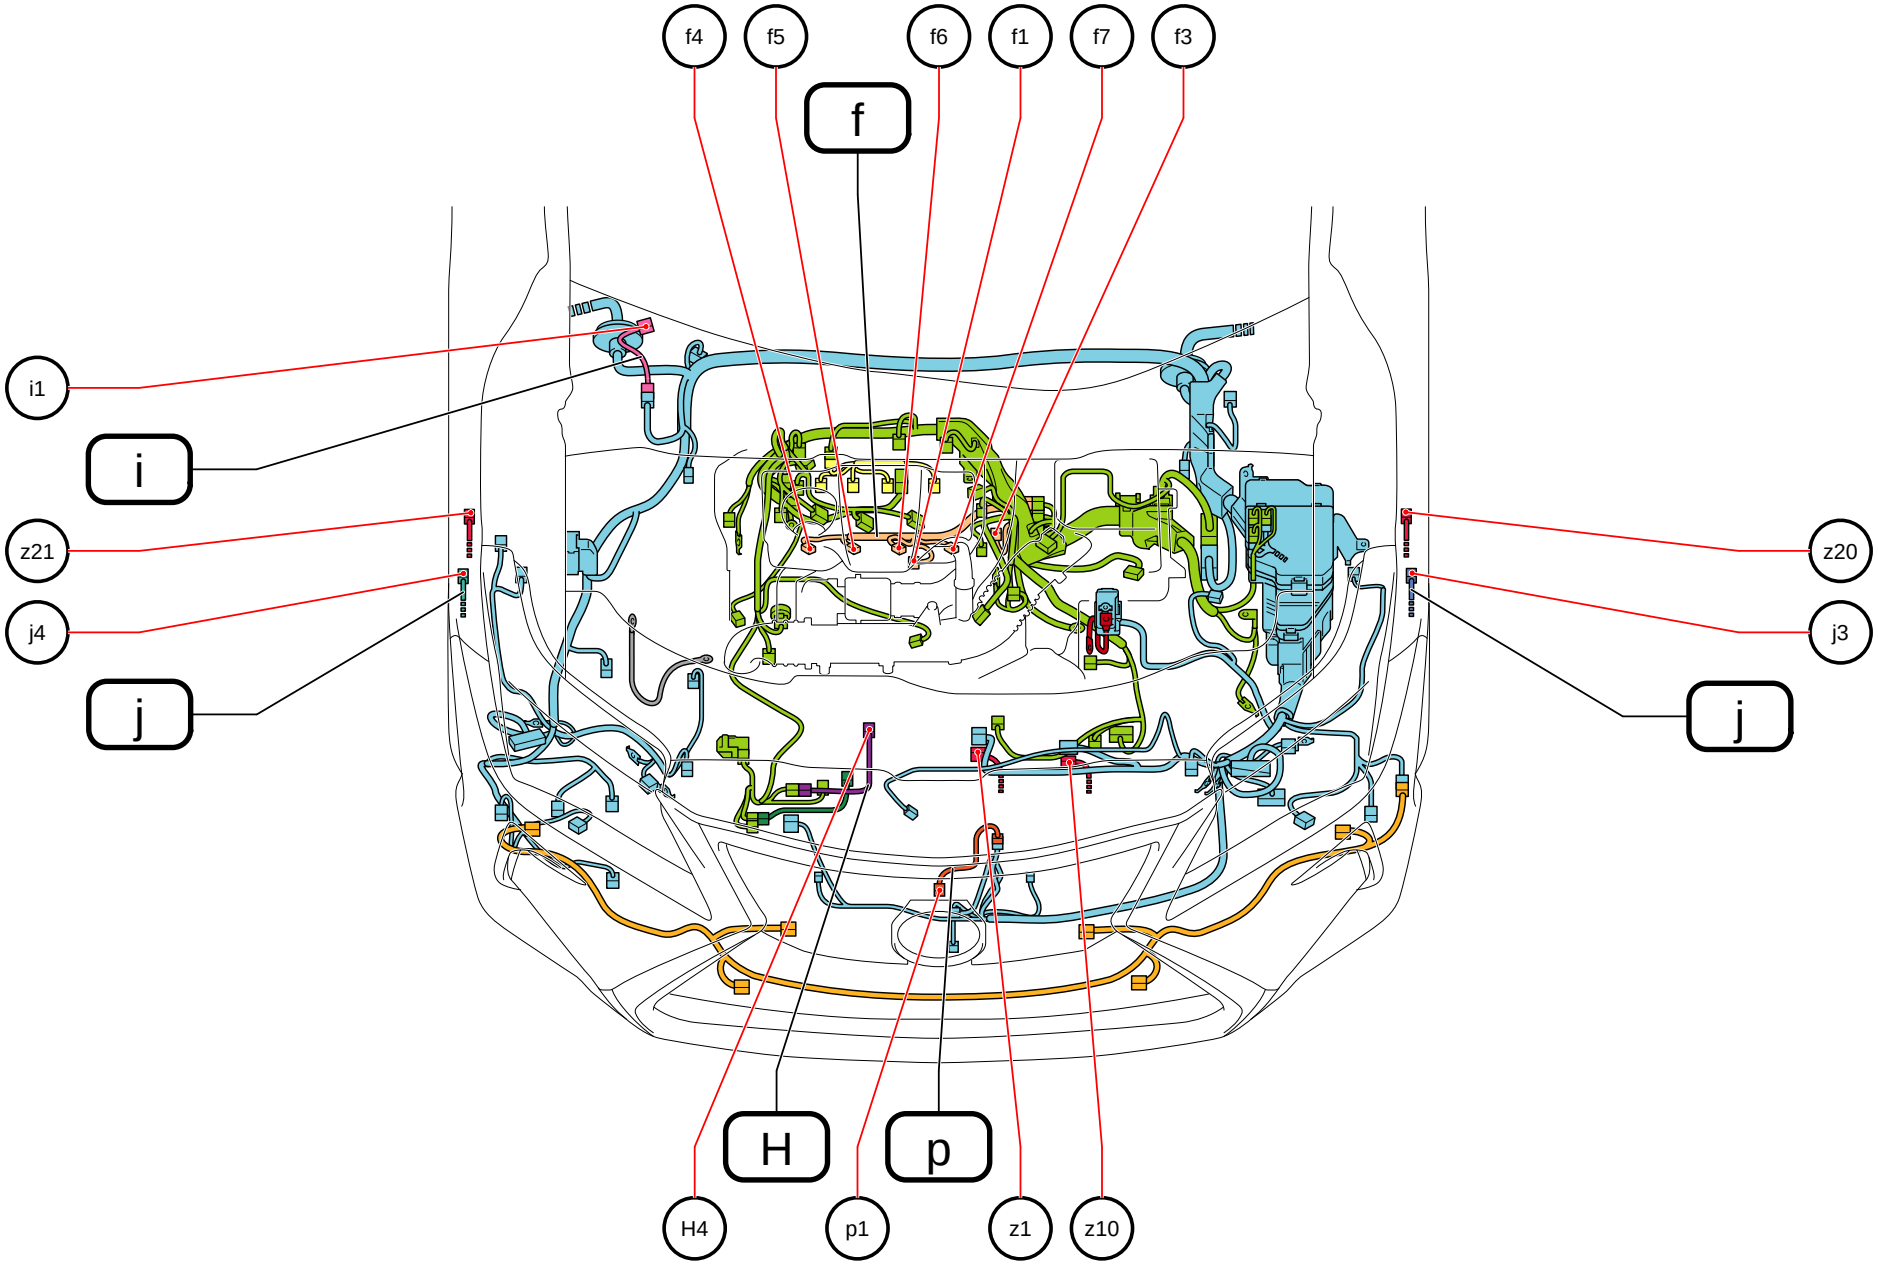
f4
f5
f6
f1
f7
f3
f
i1
i
z21
j4
j
z20
j3
j
H
p
H4
p1
z1
z10

H4	Oil Pressure Switching Valve Assembly
f1	Knock Control Sensor (Bank 1)
f3	Fuel Pressure Sensor (High Pressure Side)
f4	Fuel Injector Assembly No. 1 (for Direct Injection)
f5	Fuel Injector Assembly No. 2 (for Direct Injection)
f6	Fuel Injector Assembly No. 3 (for Direct Injection)
f7	Fuel Injector Assembly No. 4 (for Direct Injection)
i1	Front Wiper Motor & Link Assembly
j3	Front Skid Control Sensor Wire LH , Front Shock Absorber Assembly LH
j4	Front Skid Control Sensor Wire RH , Front Shock Absorber Assembly RH
p1	Front Television Camera Assembly
z1	Cooling Fan Motor , Cooling Fan ECU
z10	No. 2 Cooling Fan ECU , No. 2 Cooling Fan Motor
z20	Front Speed Sensor LH , Front Skid Control Sensor Wire LH
z21	Front Speed Sensor RH , Front Skid Control Sensor Wire RH

H4
Black

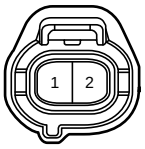

90980-12B06

f1
Black



90980-11875

f3
Black

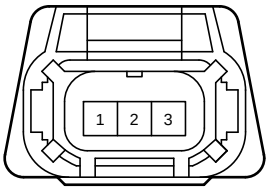

90980-12A19

f4
Black

90980-12117

f5
Gray

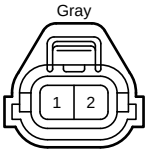

90980-12117

f6
Black

90980-12117

f7
Gray

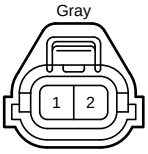

90980-12117

i1
Black



90980-11885

j3
Black

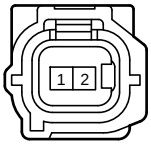

90980-12416

j4
Black

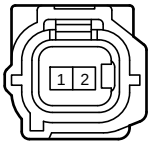

90980-12416

p1
Black

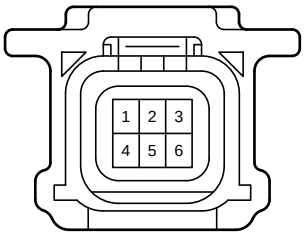

90980-12A59

z1
Gray

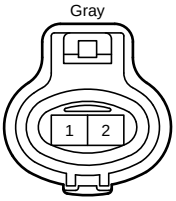

90980-10928

z10
Gray

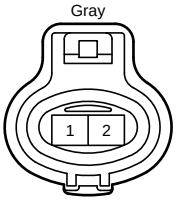

90980-10928

z20
Gray

90980-11448

z21
Gray

90980-11448