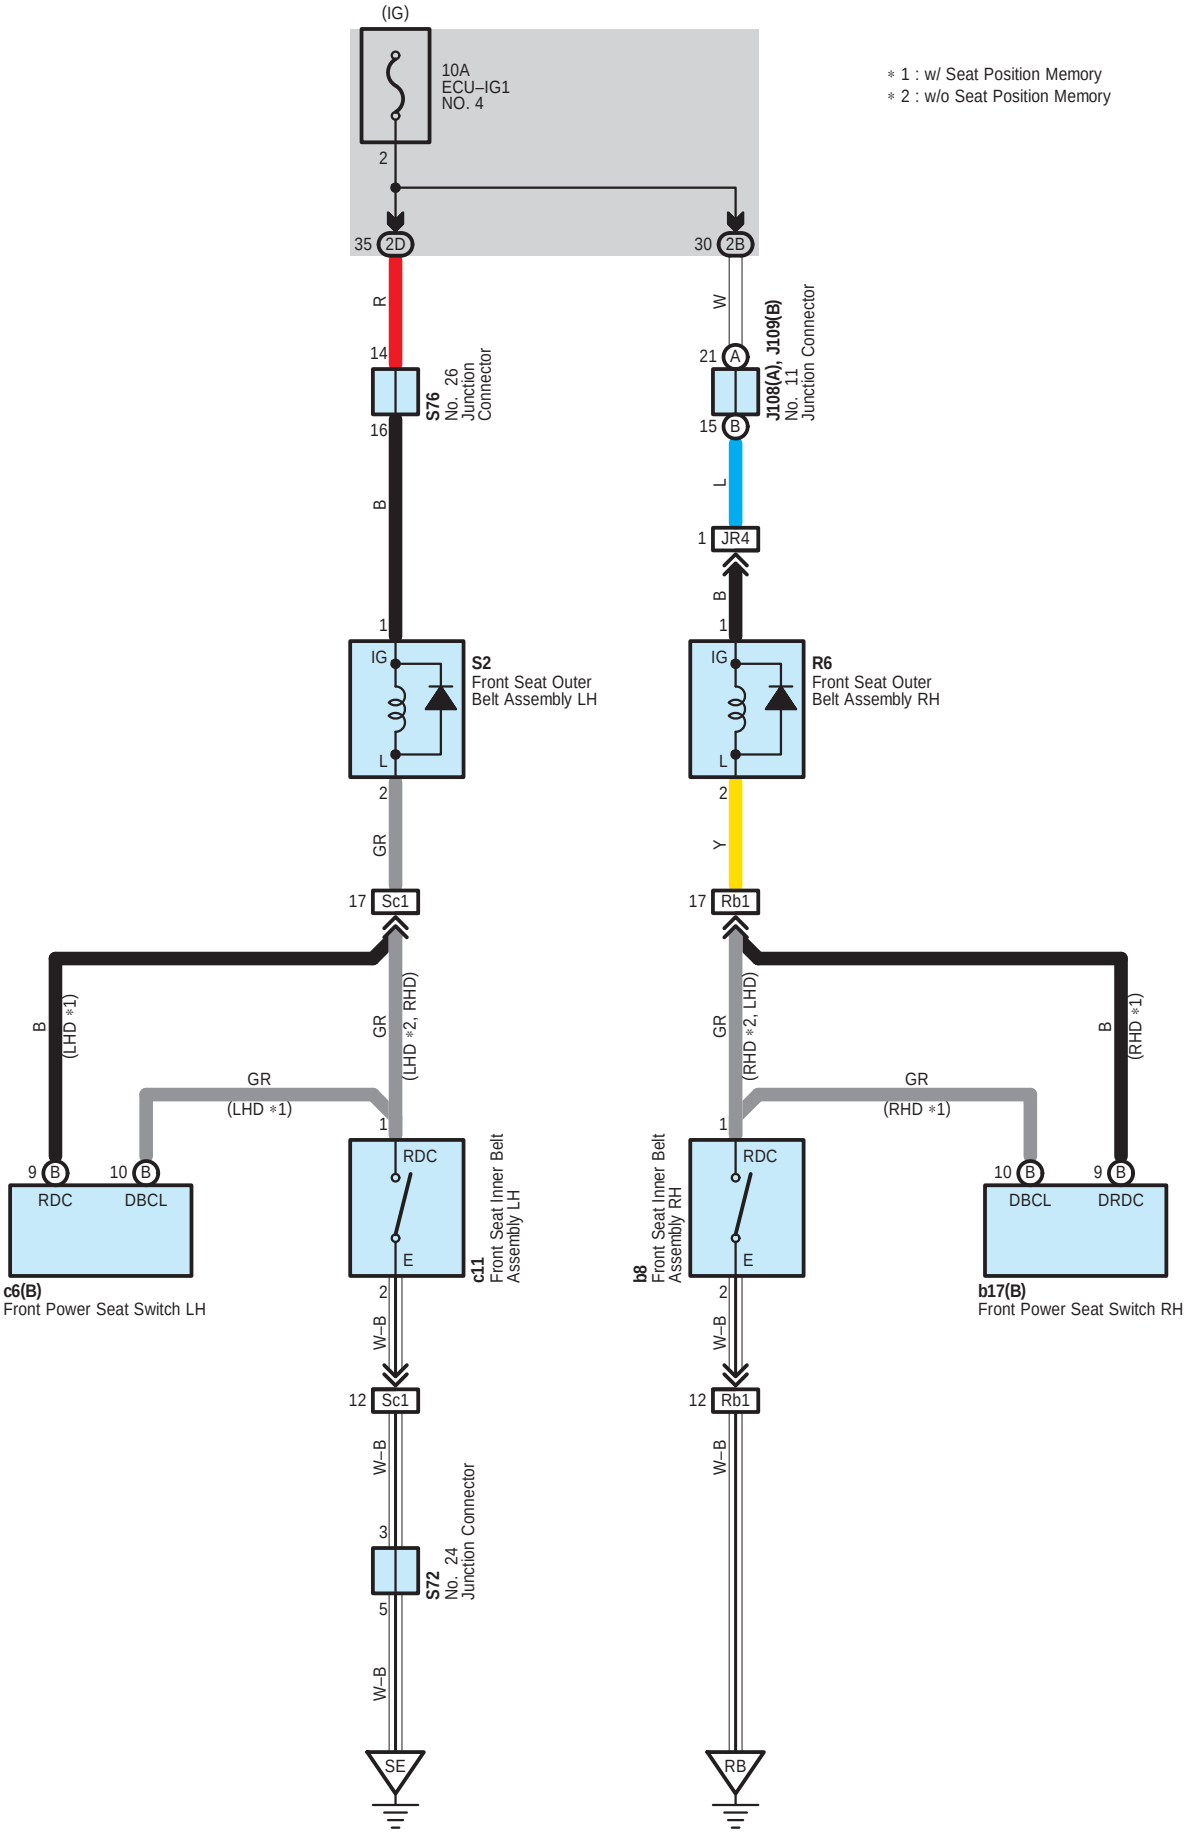
(IG)
10A
ECU–IG1
NO. 4
2
35 2D
30 2B
∗ 1 : w/ Seat Position Memory
∗ 2 : w/o Seat Position Memory
R
14
16
S76
No. 26
Junction
Connector
B
W
21 A
15 B
J108(A), J109(B)
No. 11
Junction Connector
L
1 JR4
B
1
IG
L
S2
Front Seat Outer
Belt Assembly LH
R6
Front Seat Outer
Belt Assembly RH
2
GR
Y
17 Sc1
17 Rb1
B
(LHD ∗1)
GR
(LHD ∗2, RHD)
GR
(RHD ∗2, LHD)
B
(RHD ∗1)
GR
(LHD ∗1)
GR
(RHD ∗1)
9 B
10 B
RDC
DBCL
RDC
E
c11
Front Seat Inner Belt
Assembly LH
c6(B)
Front Power Seat Switch LH
b8
Front Seat Inner Belt
Assembly RH
10 B
9 B
DBCL
DRDC
b17(B)
Front Power Seat Switch RH
W–B
12 Sc1
12 Rb1
3
S72
No. 24
Junction Connector
5
SE
RB

J108
Blue

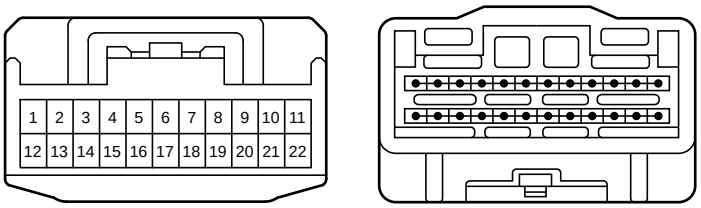

90980-12372

J109
Gray

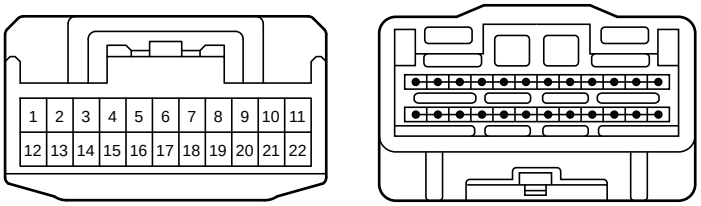

90980-12372

R6
White



90980-12063

S2
White



90980-12063

S72
Black

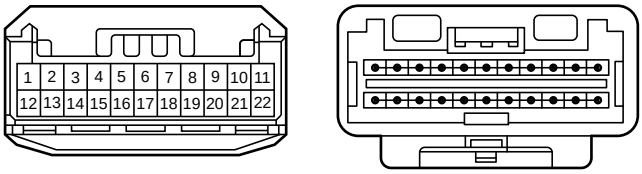

90980-12B54

S76
Black

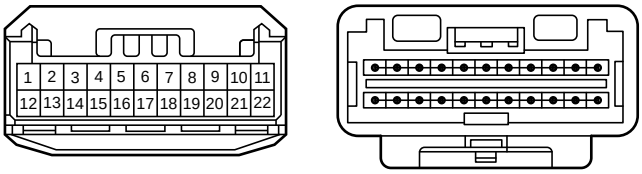

90980-12B54

b8
White

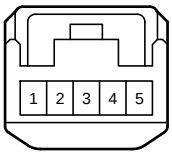

90980-12366

b17
White

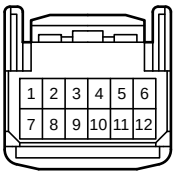

90980-12552

c6
White

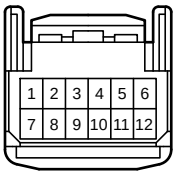

90980-12552

c11
White

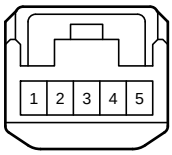

90980-12366

2B
White

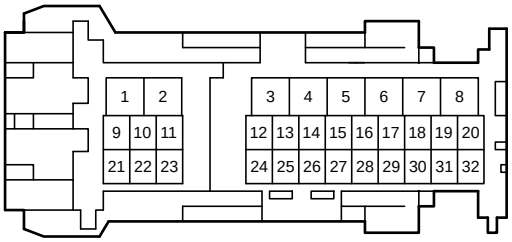

90980-12A48

2D
White

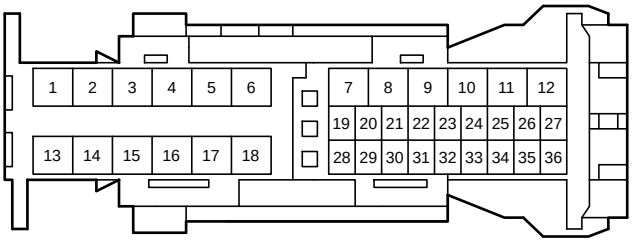

90980-12944

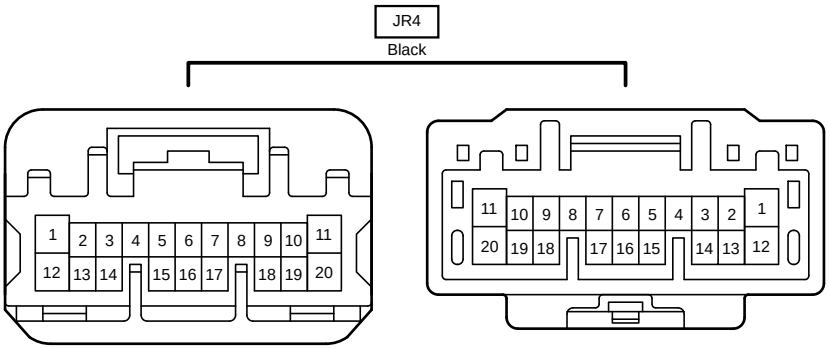

90980-12741

90980-12740

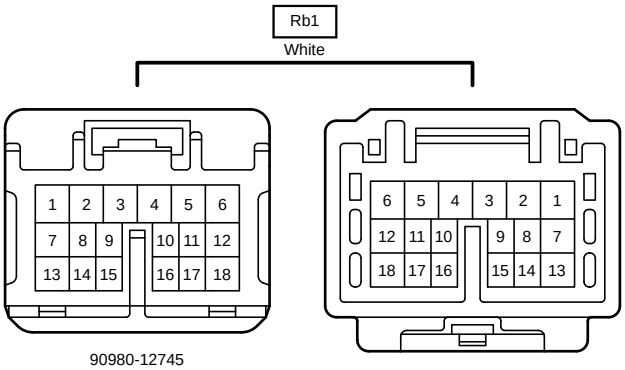

90980-12745

90980-12744

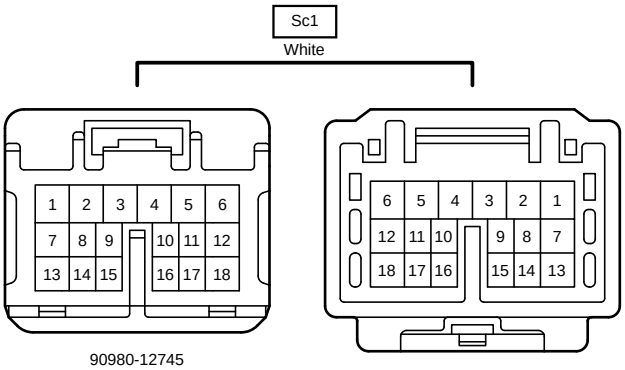

90980-12745

90980-12744