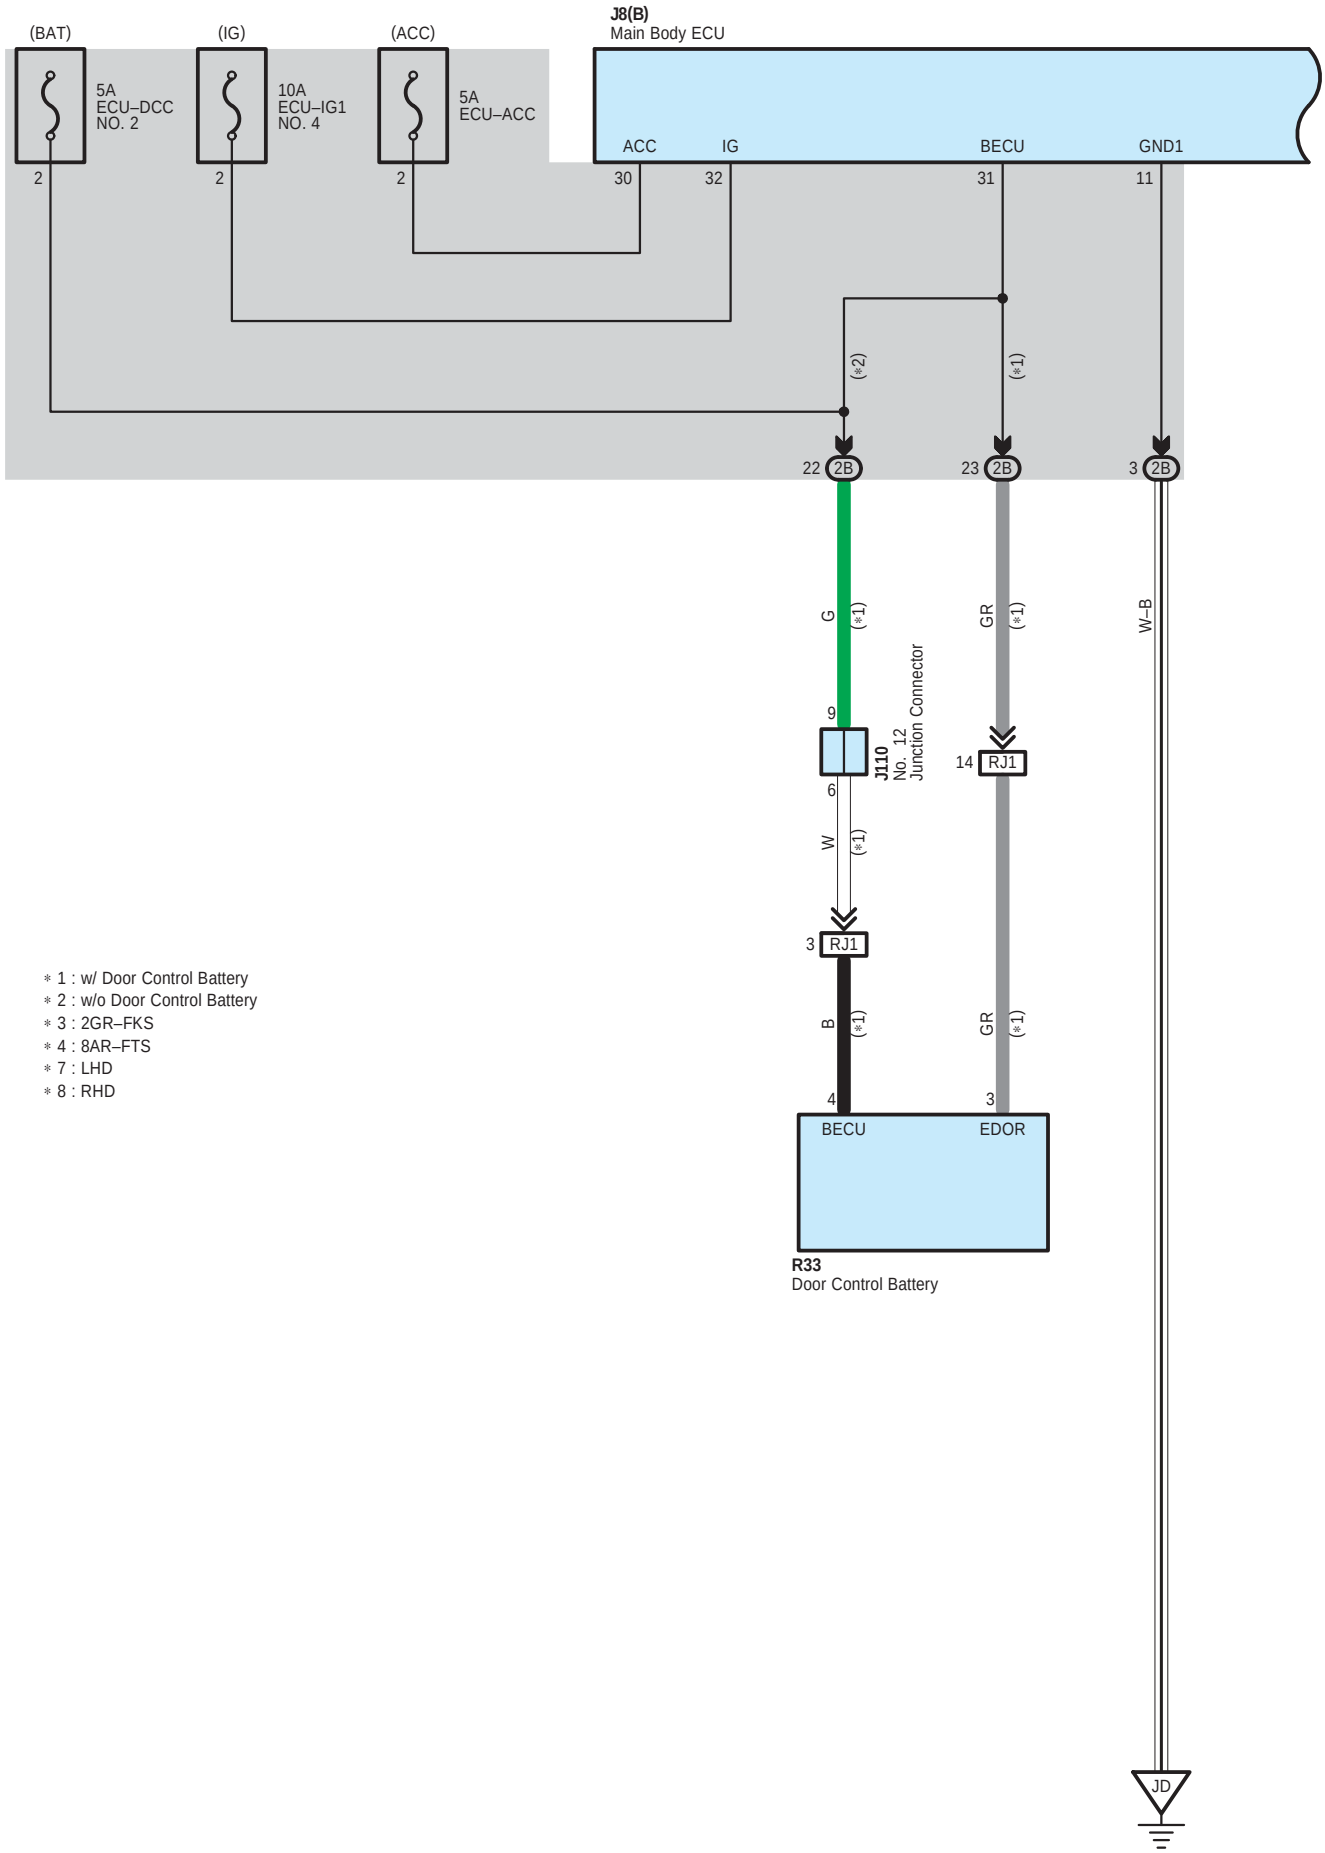

* 1 : w/ Door Control Battery
* 2 : w/o Door Control Battery
* 3 : 2GR–FKS
* 4 : 8AR–FTS
* 7 : LHD
* 8 : RHD

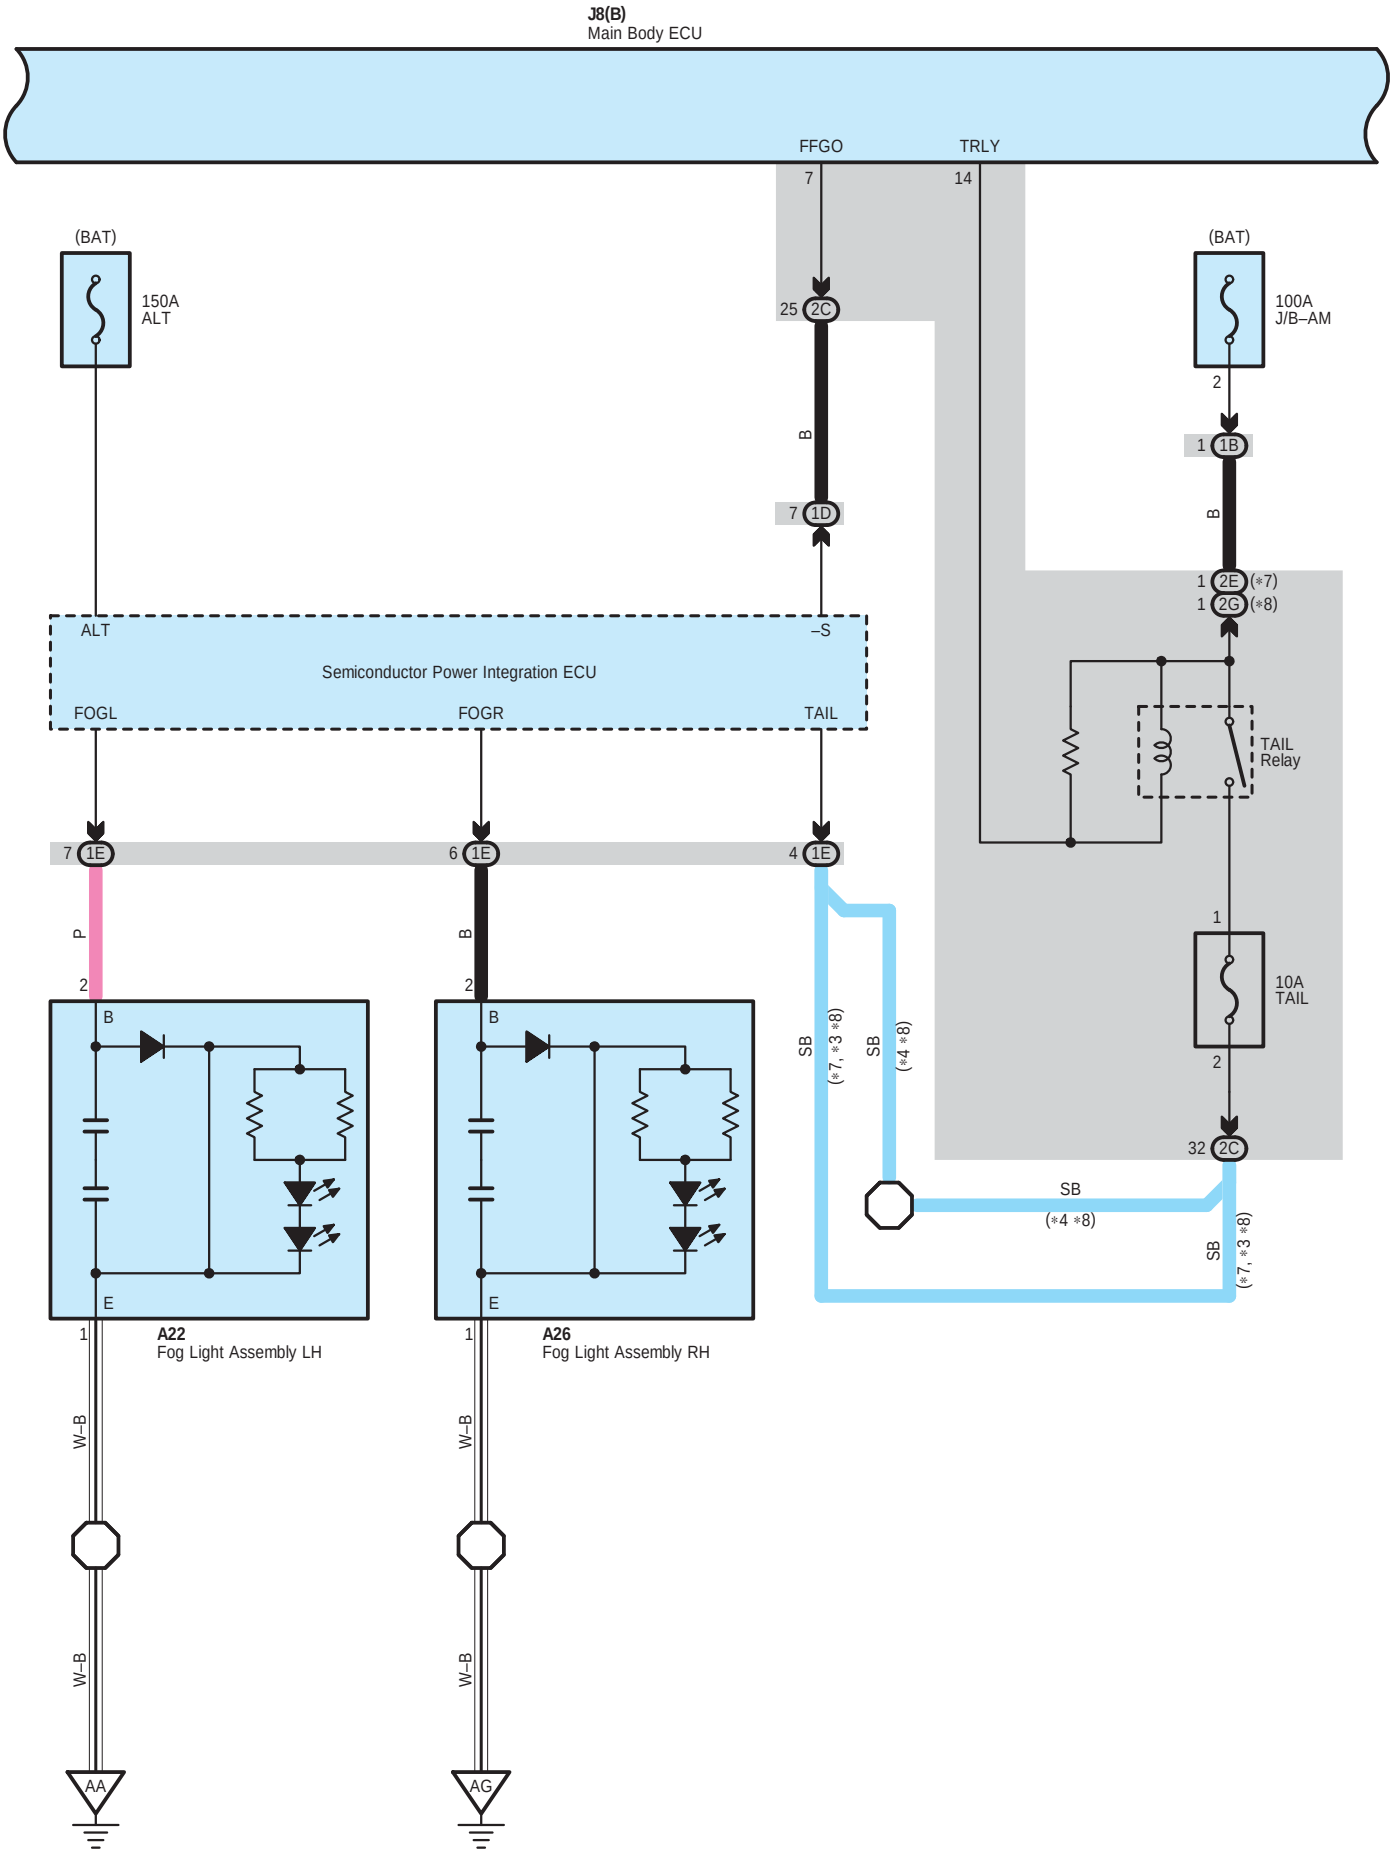
J8(B)
Main Body ECU
FFGO
TRLY
7
14
(BAT)
150A
ALT
25 2C
B
7 1D
(BAT)
100A
J/B–AM
2
1 1B
B
1 2E (*7)
1 2G (*8)
ALT
–S
Semiconductor Power Integration ECU
FOGL
FOGR
TAIL
TAIL
Relay
7 1E
6 1E
4 1E
P
B
2
B
2
B
SB
(*7, *3 *8)
SB
(*4 *8)
1
10A
TAIL
2
32 2C
SB
(*4 *8)
SB
(*7, *3 *8)
E
1
A22
Fog Light Assembly LH
E
1
A26
Fog Light Assembly RH
W–B
W–B
W–B
W–B
AA
AG

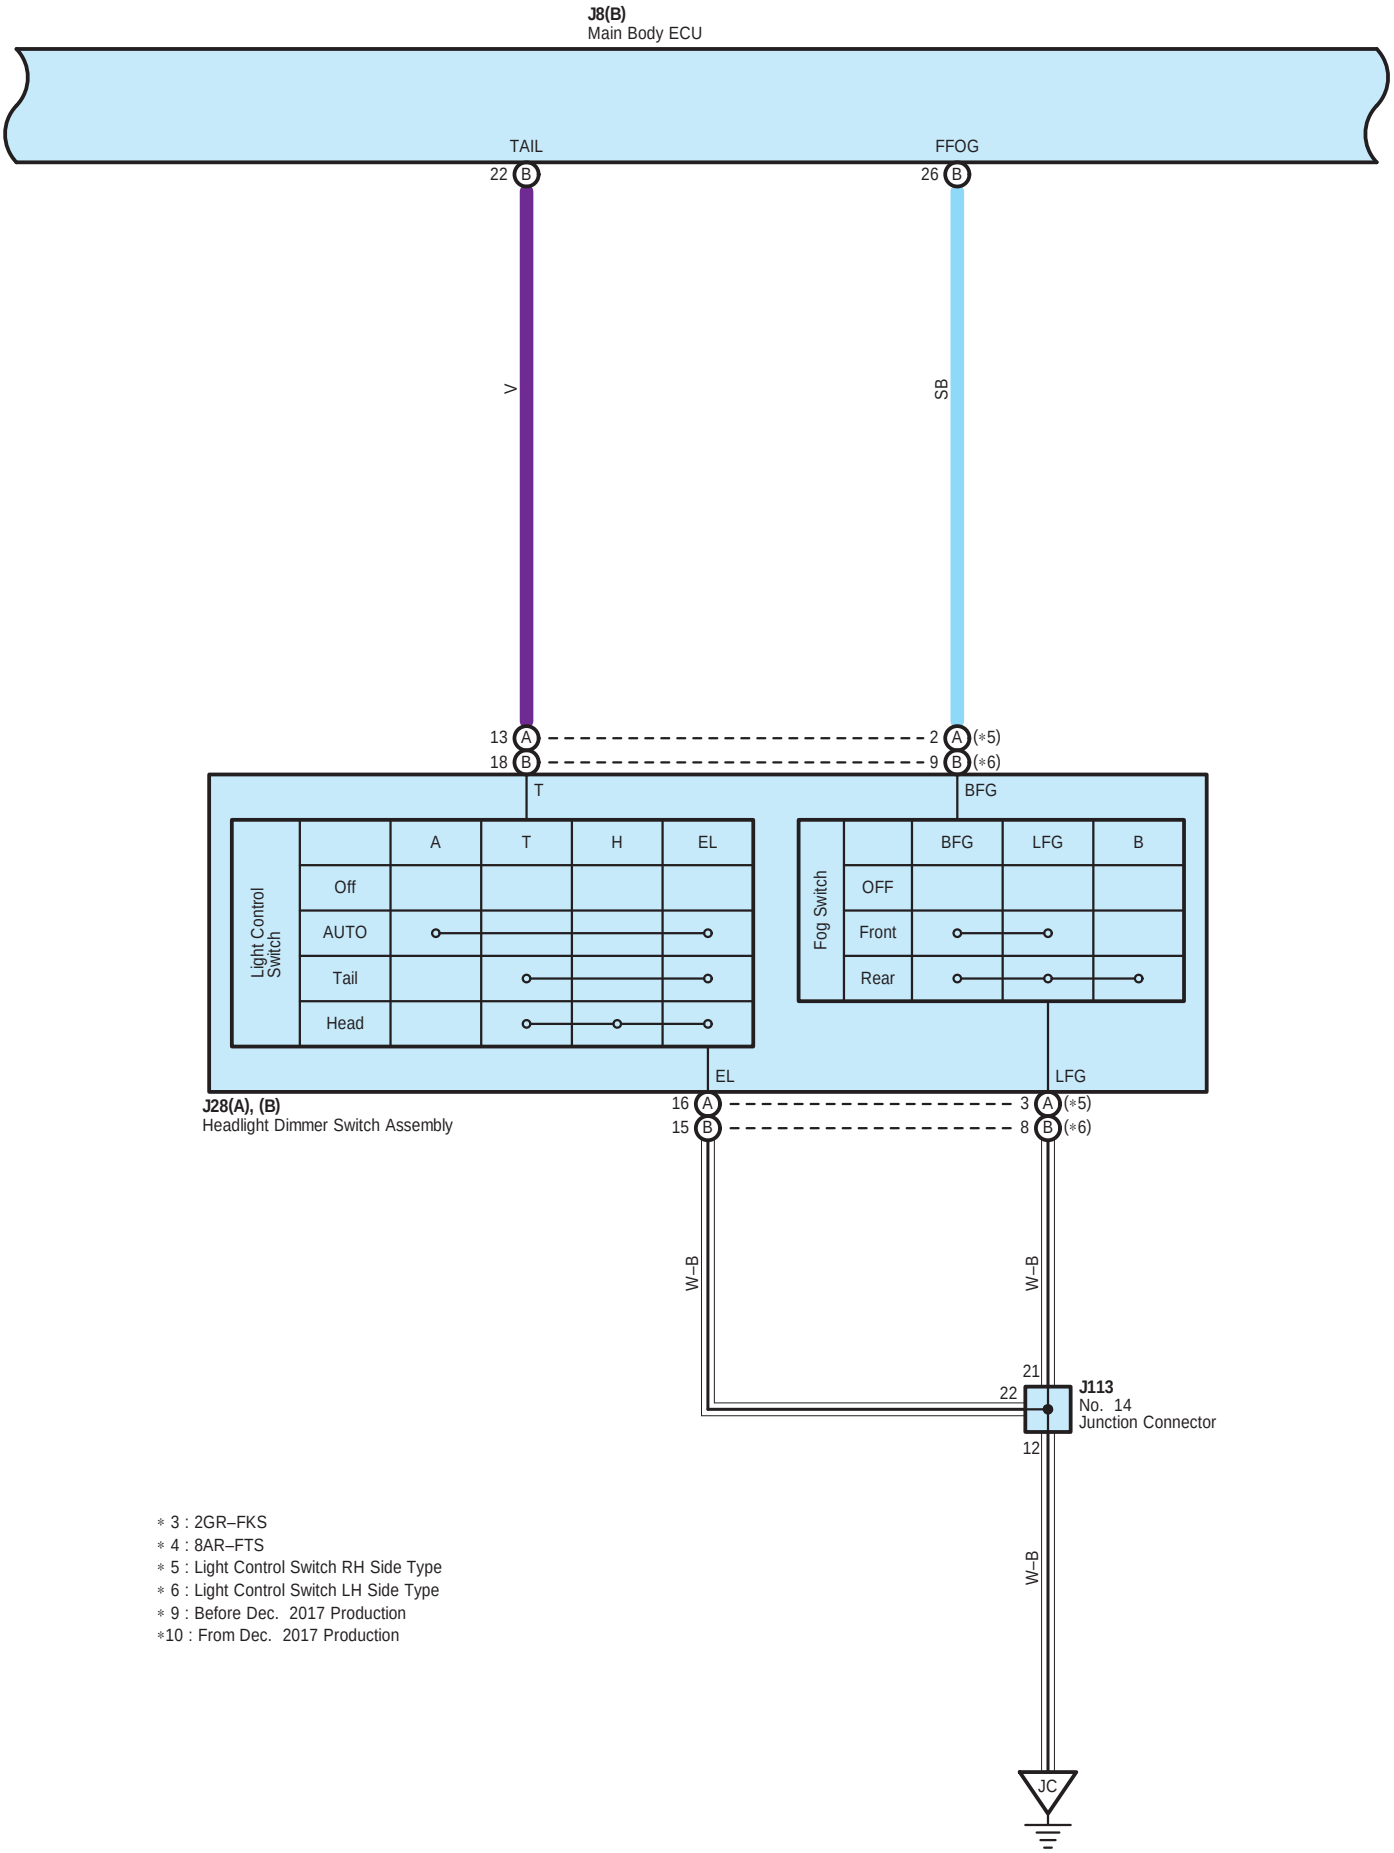

* 3 : 2GR–FKS
* 4 : 8AR–FTS
* 5 : Light Control Switch RH Side Type
* 6 : Light Control Switch LH Side Type
* 9 : Before Dec. 2017 Production
*10 : From Dec. 2017 Production

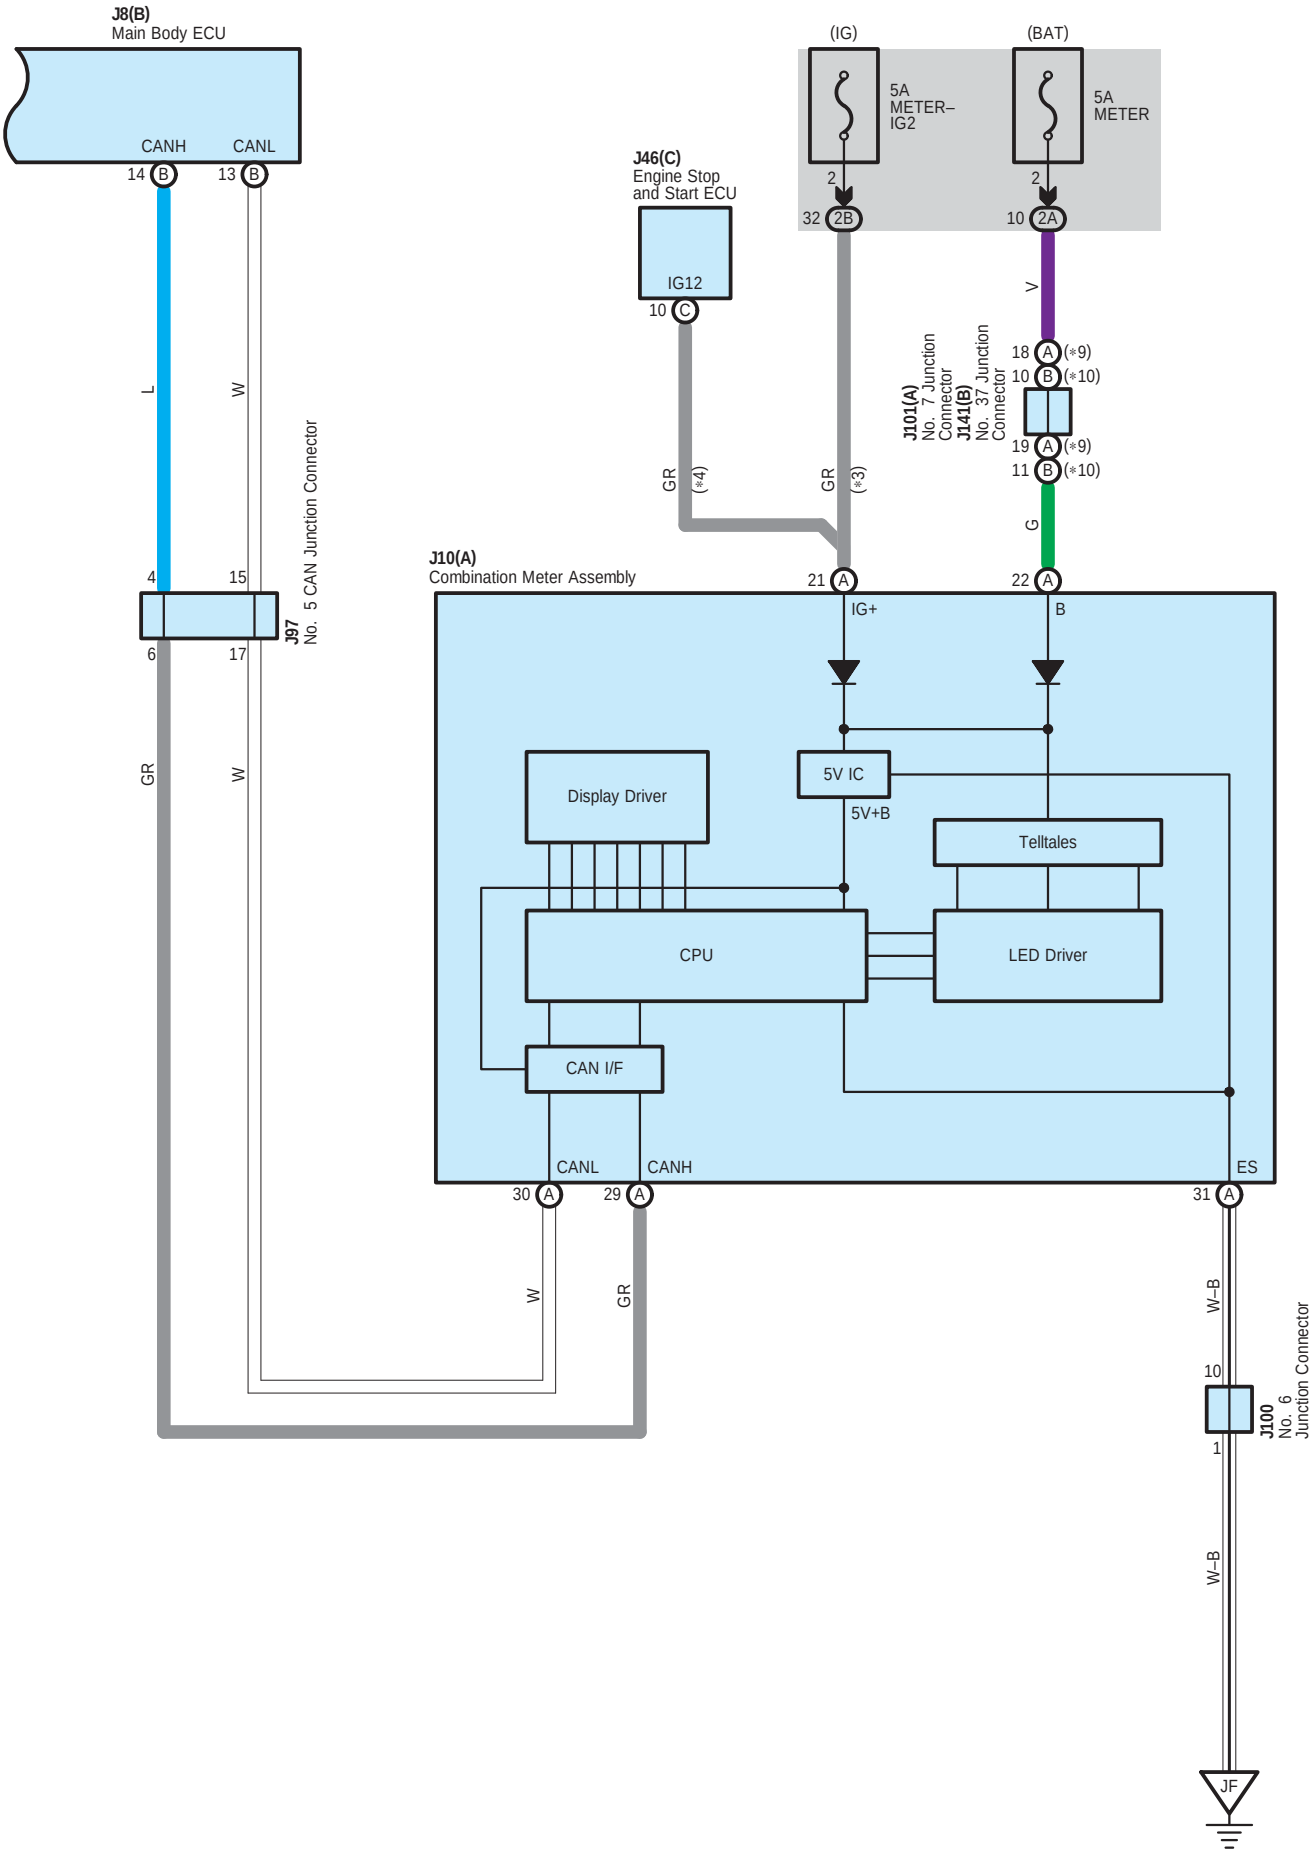
J8(B)
Main Body ECU
CANH
CANL
14 B
13 B
L
W
4
15
6
17
J97
No. 5 CAN Junction Connector
GR
W
(IG)
(BAT)
5A
METER–
IG2
5A
METER
2
32 2B
2
10 2A
J46(C)
Engine Stop
and Start ECU
IG12
10 C
GR
(*4)
GR
(*3)
V
18 A (*9)
10 B (*10)
J101(A)
No. 7 Junction
Connector
J141(B)
No. 37 Junction
Connector
19 A (*9)
11 B (*10)
G
J10(A)
Combination Meter Assembly
21 A
22 A
IG+
B
5V IC
5V+B
Display Driver
Telltales
CPU
LED Driver
CAN I/F
CANL
CANH
ES
30 A
29 A
31 A
W
GR
W–B
10
J100
No. 6
Junction Connector
1
W–B
JF

A22
Black

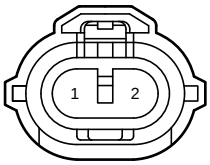

82824-60460

A26
Black

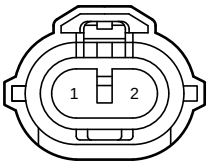

82824-60460

J8
White

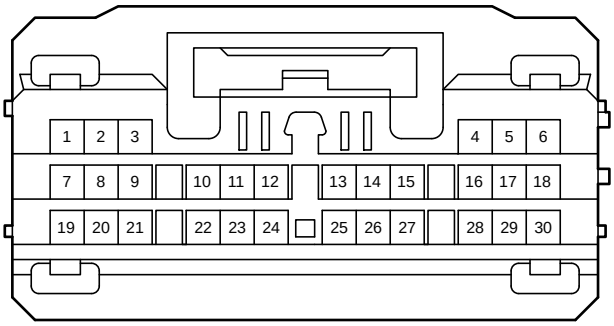

90980-12909

J10
Black

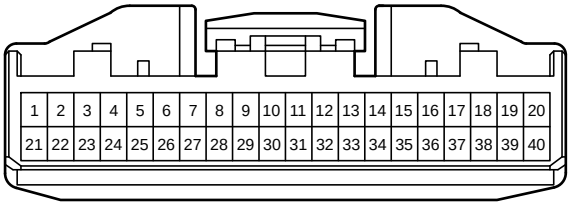

90980-12557

J28
Black

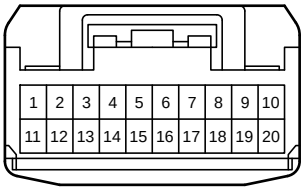

90980-12460

J46
Black

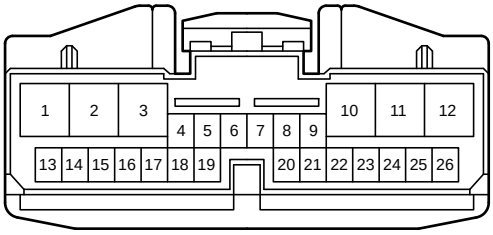

82824-12510

J97
Gray

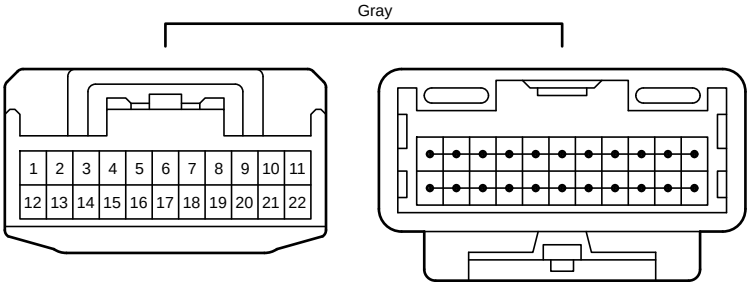

90980-12372

J100
White

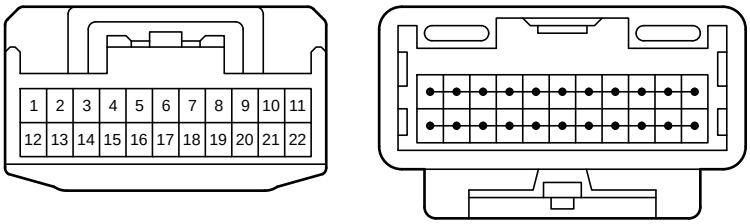

90980-12372

J101
Black

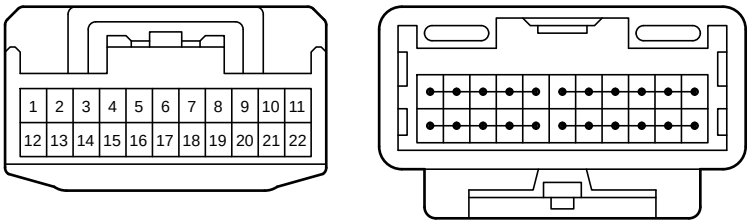

90980-12372

J110
Gray

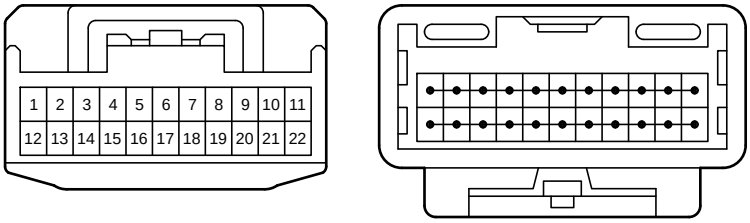

90980-12372
(Before Aug. 2016 Production)

J110
White

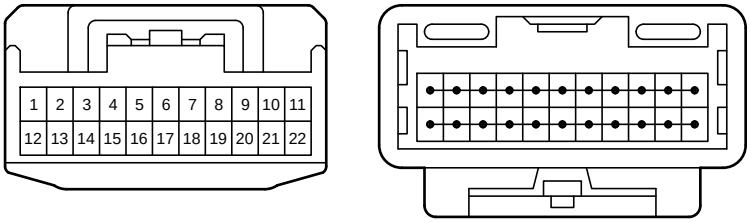

90980-12372
(From Aug. 2016 Production)

J113
Gray

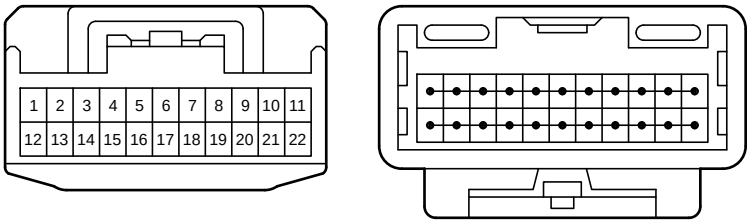

90980-12372

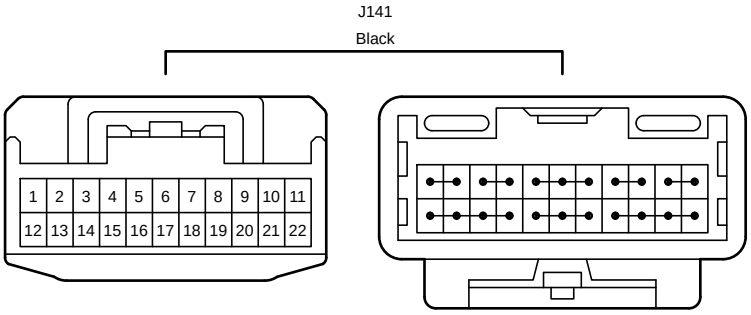

90980-12372

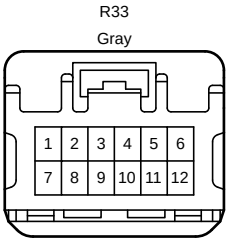

90980-12737

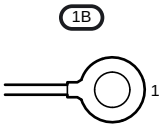

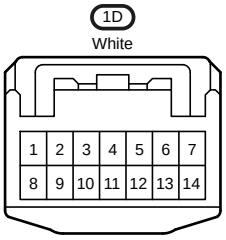

90980-12370

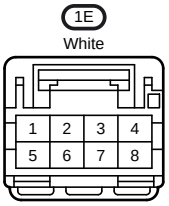

90980-12A55

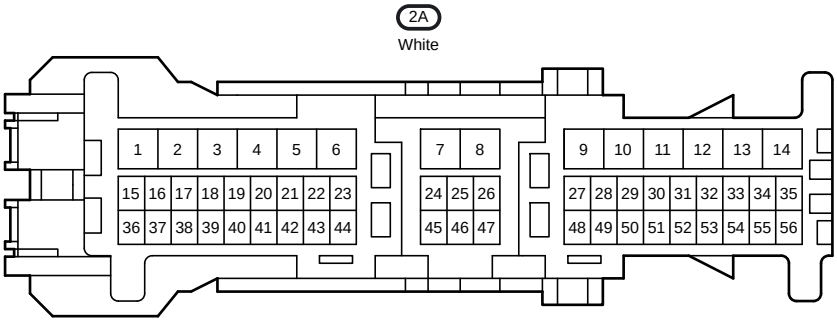

90980-12890

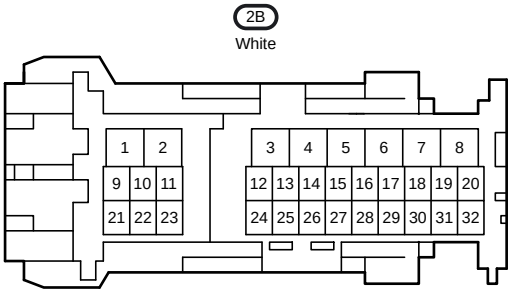

90980-12A48

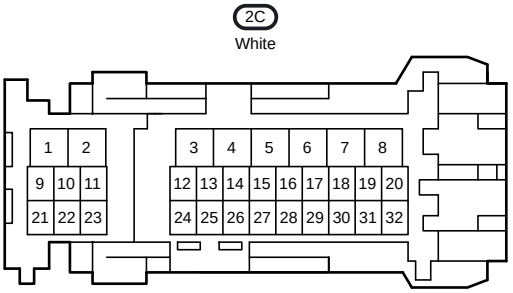

90980-12A47

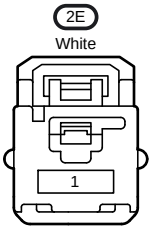

90980-12756

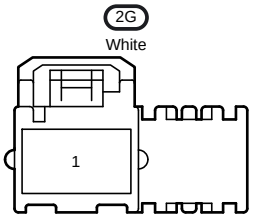

82824-74010

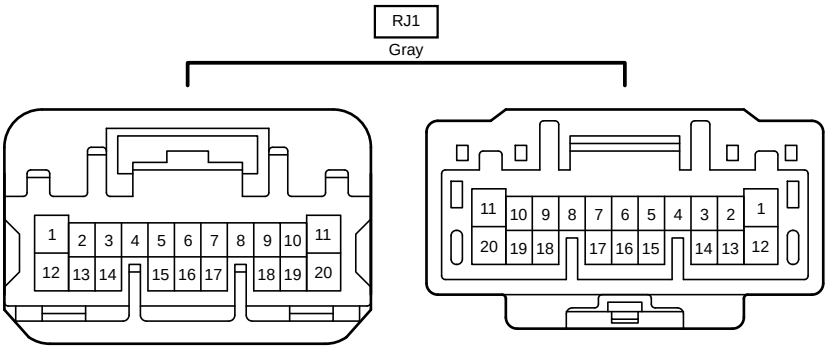

90980-12741

90980-12740