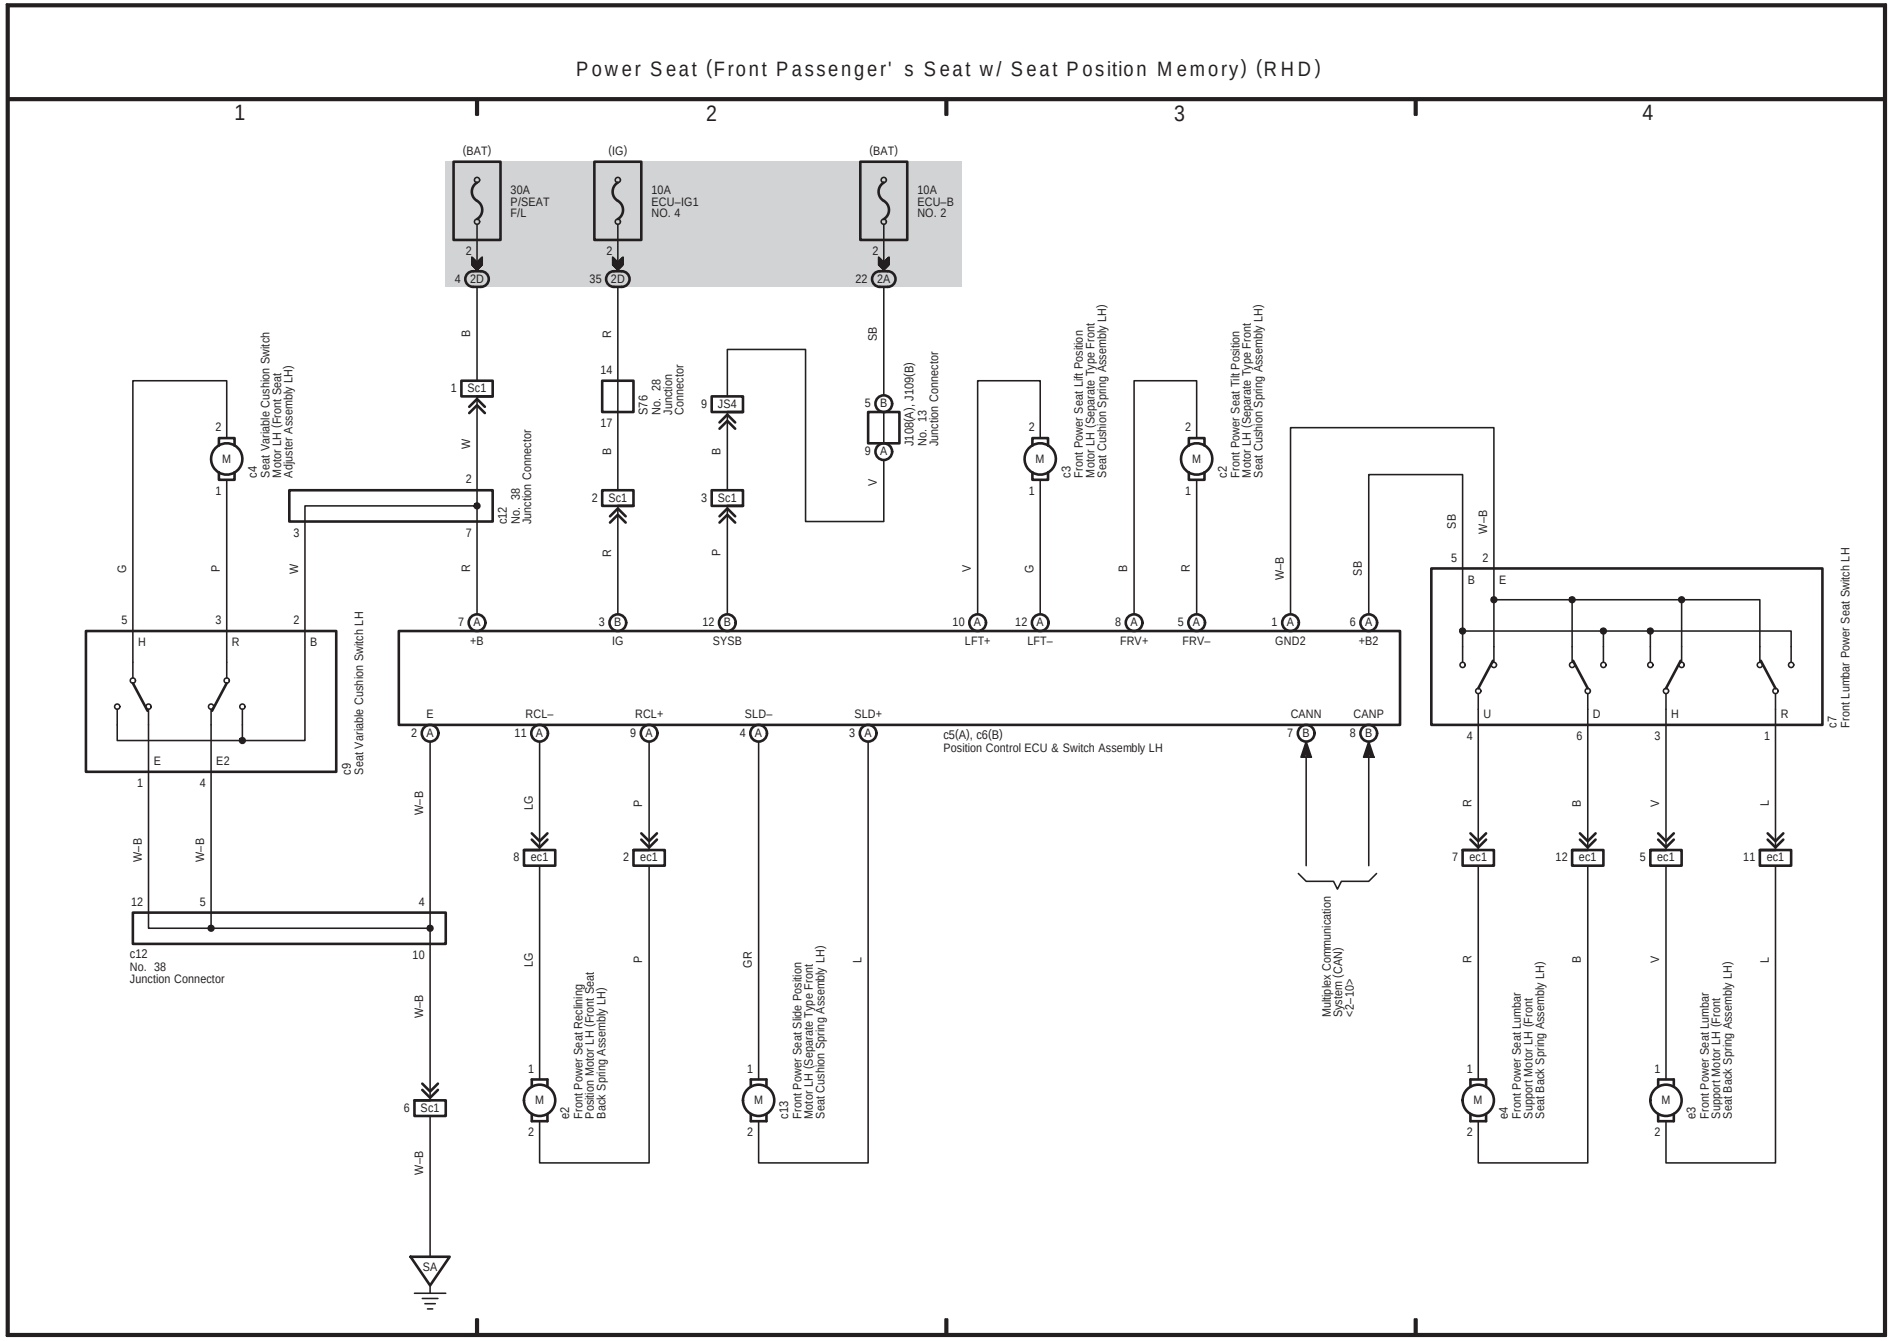
Power Seat (Front Passenger' s Seat w/ Seat Position Memory) (RHD)
1
2
3
4
(BAT)
30A
P/SEAT
F/L
(IG)
10A
ECU–IG1
NO. 4
(BAT)
10A
ECU–B
NO. 2
c4
Seat Variable Cushion Switch
Motor LH (Front Seat
Adjuster Assembly LH)
c12
No. 38
Junction Connector
S76
No. 28
Junction
Connector
J108(A), J109(B)
No. 13
Junction Connector
c3
Front Power Seat Lift Position
Motor LH (Separate Type Front
Seat Cushion Spring Assembly LH)
c2
Front Power Seat Tilt Position
Motor LH (Separate Type Front
Seat Cushion Spring Assembly LH)
c9
Seat Variable Cushion Switch LH
+B
IG
SYSB
LFT+
LFT–
FRV+
FRV–
GND2
+B2
RCL–
RCL+
SLD–
SLD+
CANN
CANP
c5(A), c6(B)
Position Control ECU & Switch Assembly LH
c7
Front Lumbar Power Seat Switch LH
c12
No. 38
Junction Connector
e2
Front Power Seat Reclining
Position Motor LH (Front Seat
Back Spring Assembly LH)
c13
Front Power Seat Slide Position
Motor LH (Separate Type Front
Seat Cushion Spring Assembly LH)
Multiplex Communication
System (CAN)
<2–10>
e4
Front Power Seat Lumbar
Support Motor LH (Front
Seat Back Spring Assembly LH)
e3
Front Power Seat Lumbar
Support Motor LH (Front
Seat Back Spring Assembly LH)
SA