(Cont. next page)

Entry & Start System (RHD), Immobiliser System (RHD), Starting (RHD), Steering Lock (RHD), Wireless Door Lock Control (RHD)

*10 : Before Dec. 2017 Production
*11 : From Dec. 2017 Production

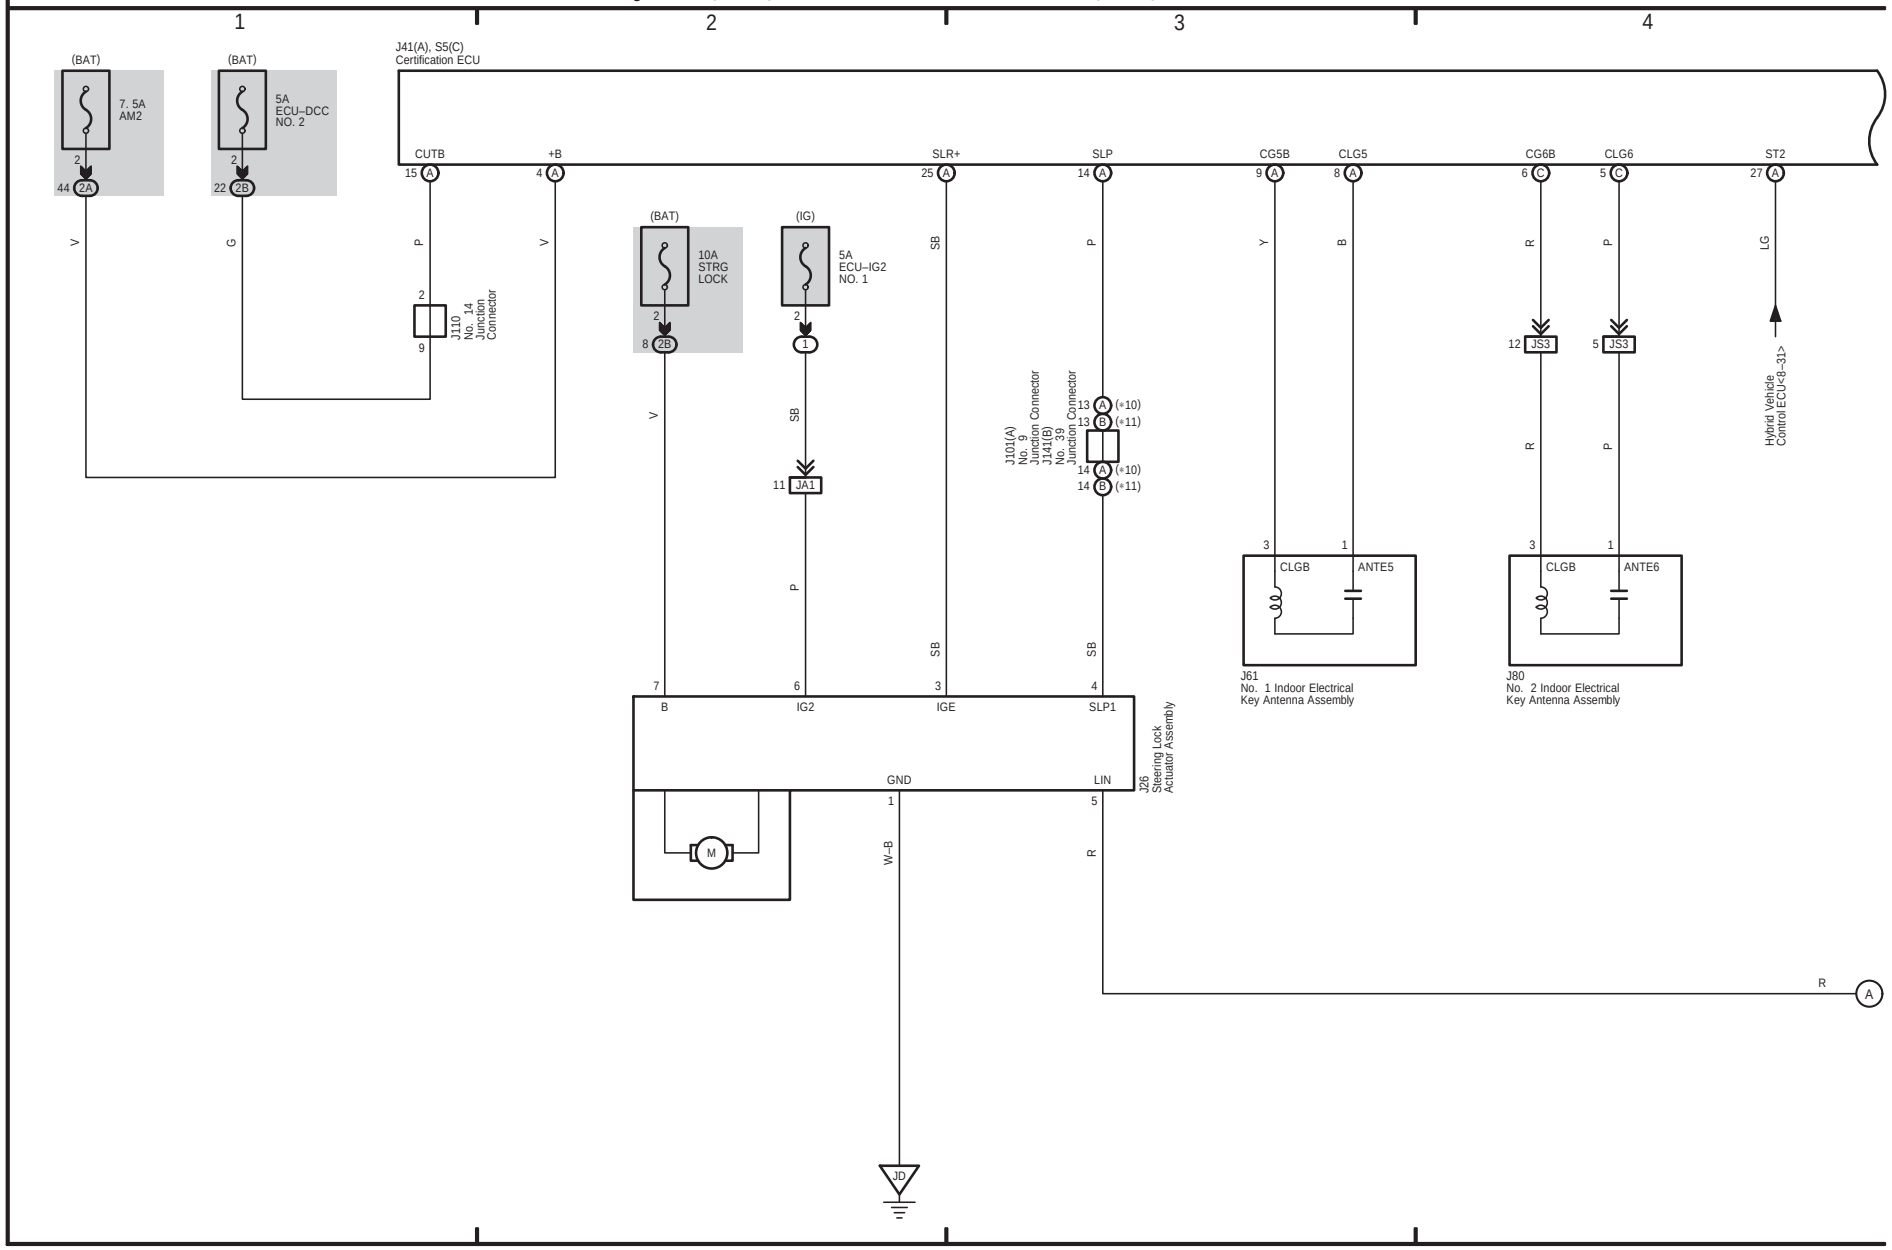

(Cont. next page)

Entry & Start System (RHD), Immobiliser System (RHD), Starting (RHD), Steering Lock (RHD), Wireless Door Lock Control (RHD)

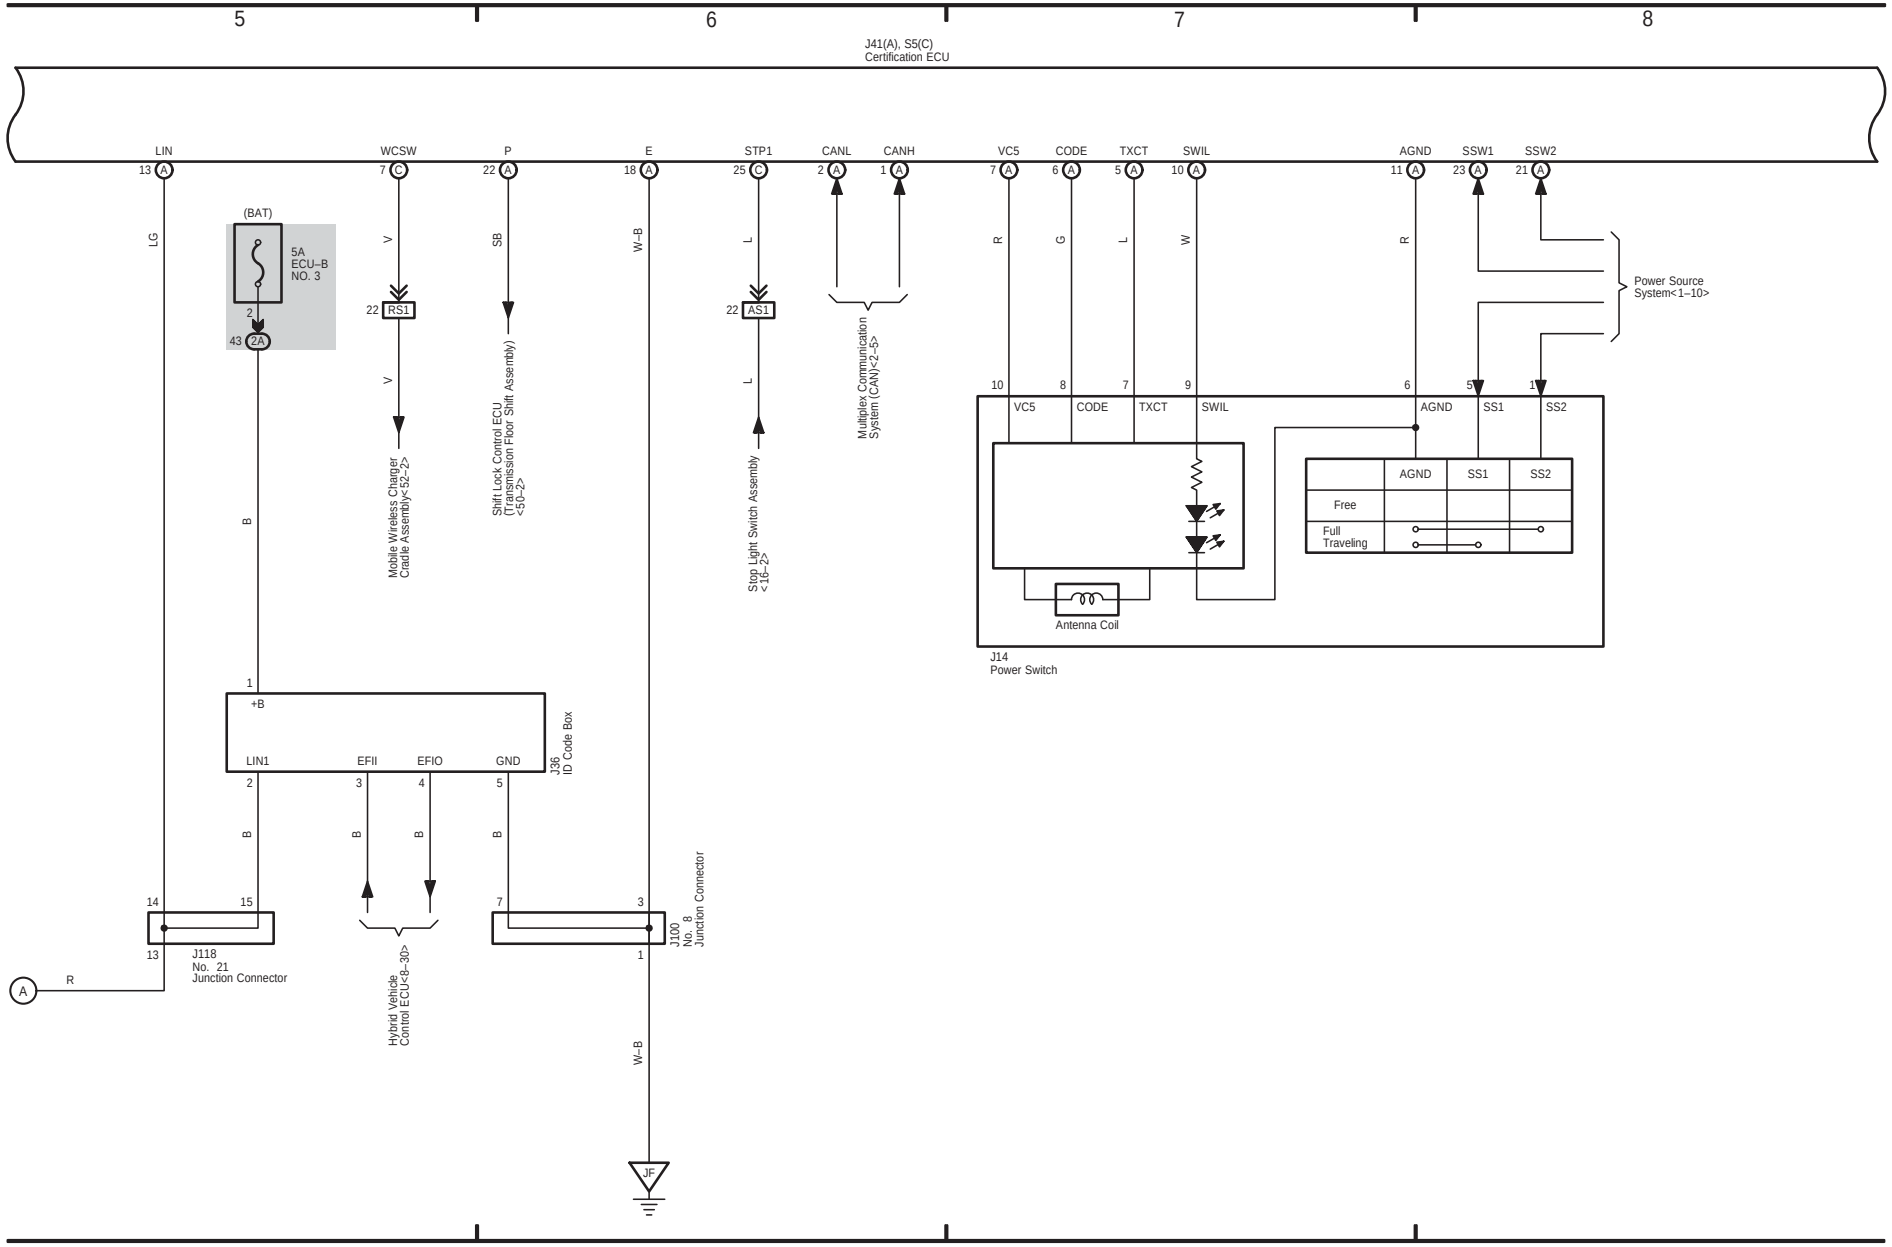

(Cont. next page)

Entry & Start System (RHD), Immobiliser System (RHD), Starting (RHD), Steering Lock (RHD), Wireless Door Lock Control (RHD)

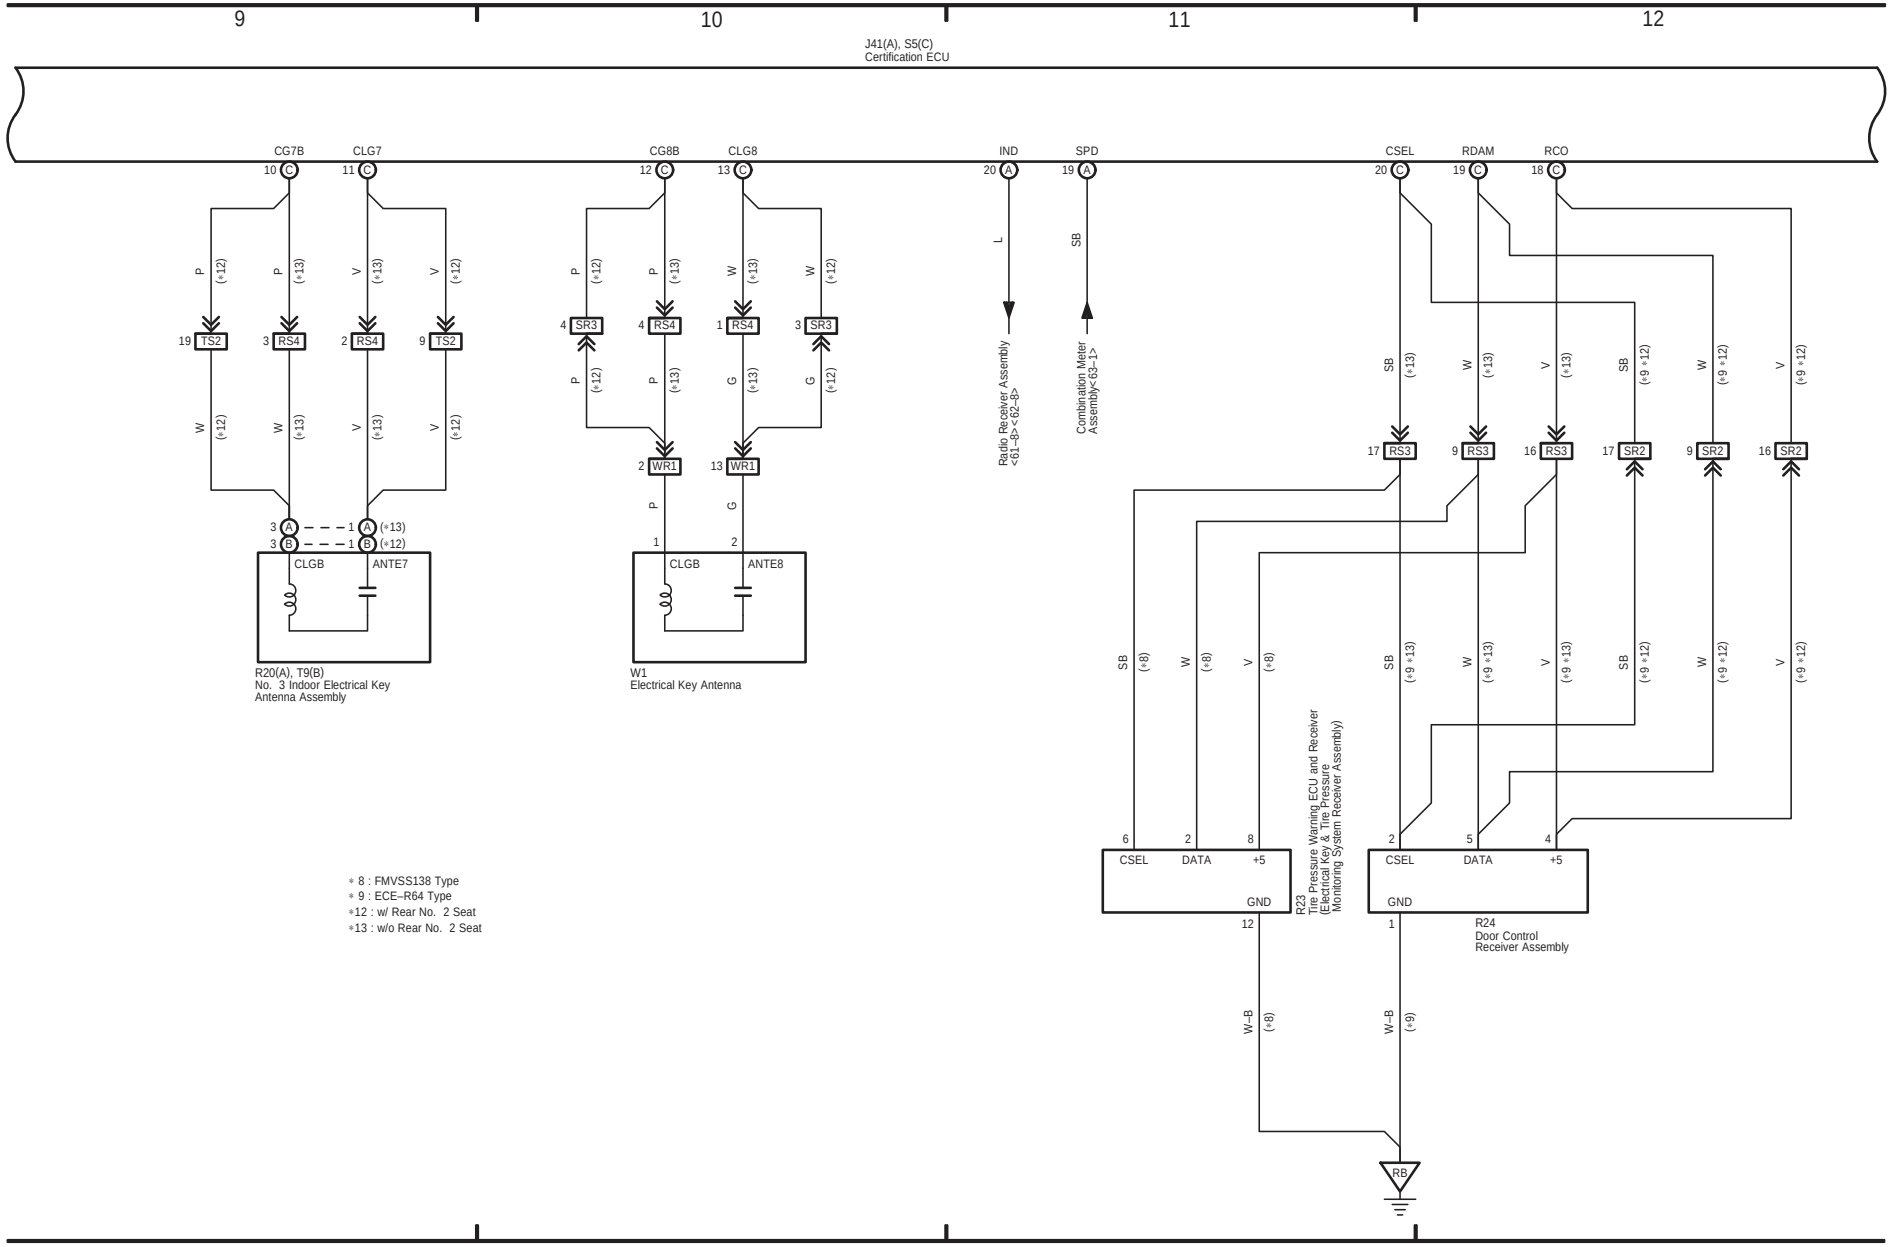

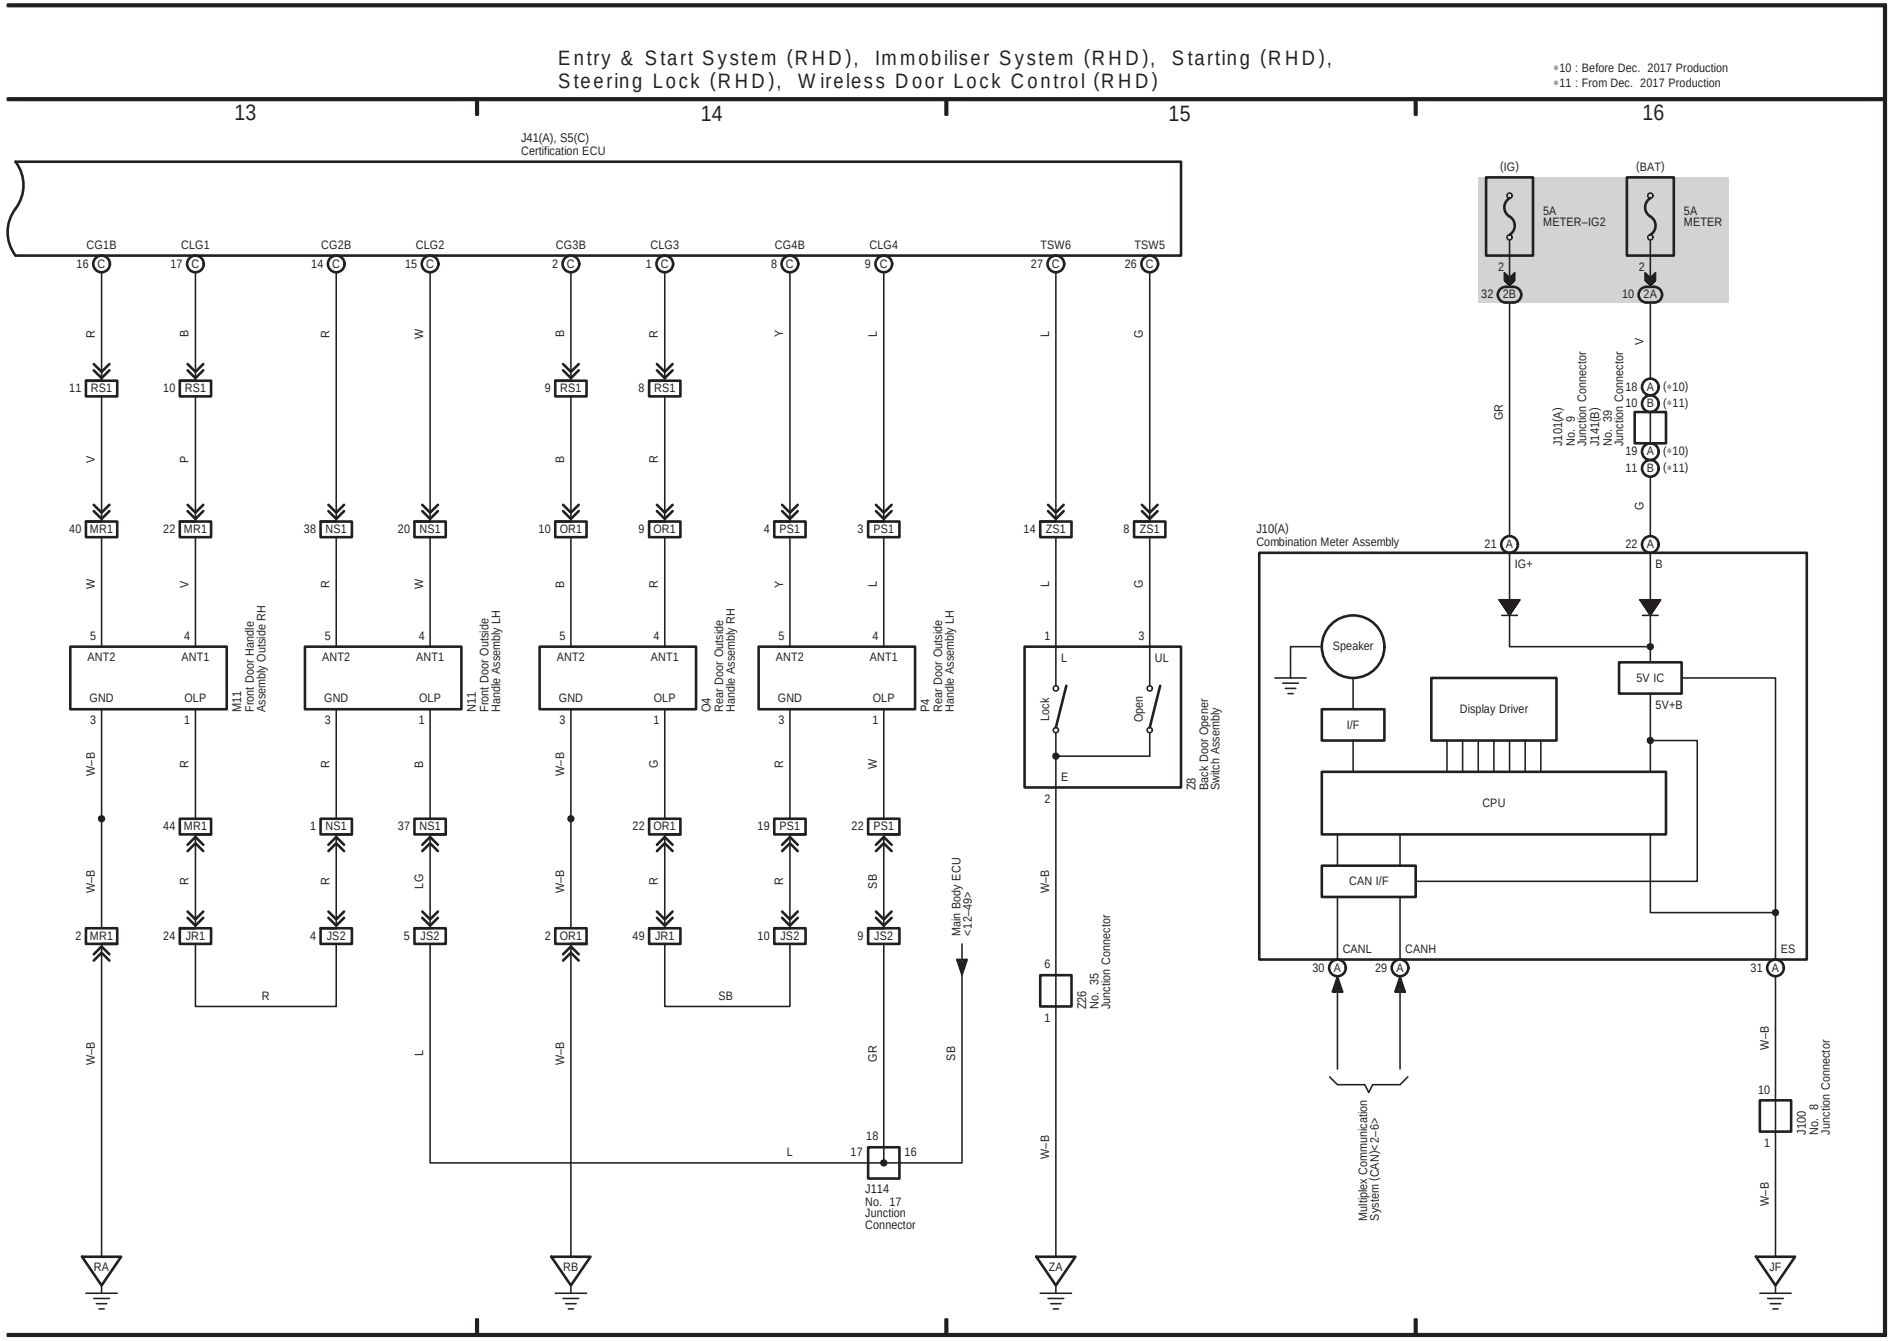
Entry & Start System (RHD), Immobiliser System (RHD), Starting (RHD), Steering Lock (RHD), Wireless Door Lock Control (RHD)
*10 : Before Dec. 2017 Production
*11 : From Dec. 2017 Production
13
14
15
16
J41(A), S5(C)
Certification ECU
CG1B
CLG1
CG2B
CLG2
CG3B
CLG3
CG4B
CLG4
TSW6
TSW5
M11
Front Door Handle Assembly Outside RH
N11
Front Door Outside Handle Assembly LH
O4
Rear Door Outside Handle Assembly RH
P4
Rear Door Outside Handle Assembly LH
Z8
Back Door Opener Switch Assembly
Lock
Open
Main Body ECU <12–49>
J114
No. 17
Junction Connector
Z26
No. 35
Junction Connector
RA
RB
ZA
(IG)
(BAT)
5A METER–IG2
5A METER
J101(A)
No. 9
Junction Connector
J141(B)
No. 39
Junction Connector
J10(A)
Combination Meter Assembly
Speaker
I/F
Display Driver
5V IC
5V+B
CPU
CAN I/F
CANL
CANH
ES
Multiplex Communication System (CAN)<2–6>
J100
No. 8
Junction Connector
JF