[Body]

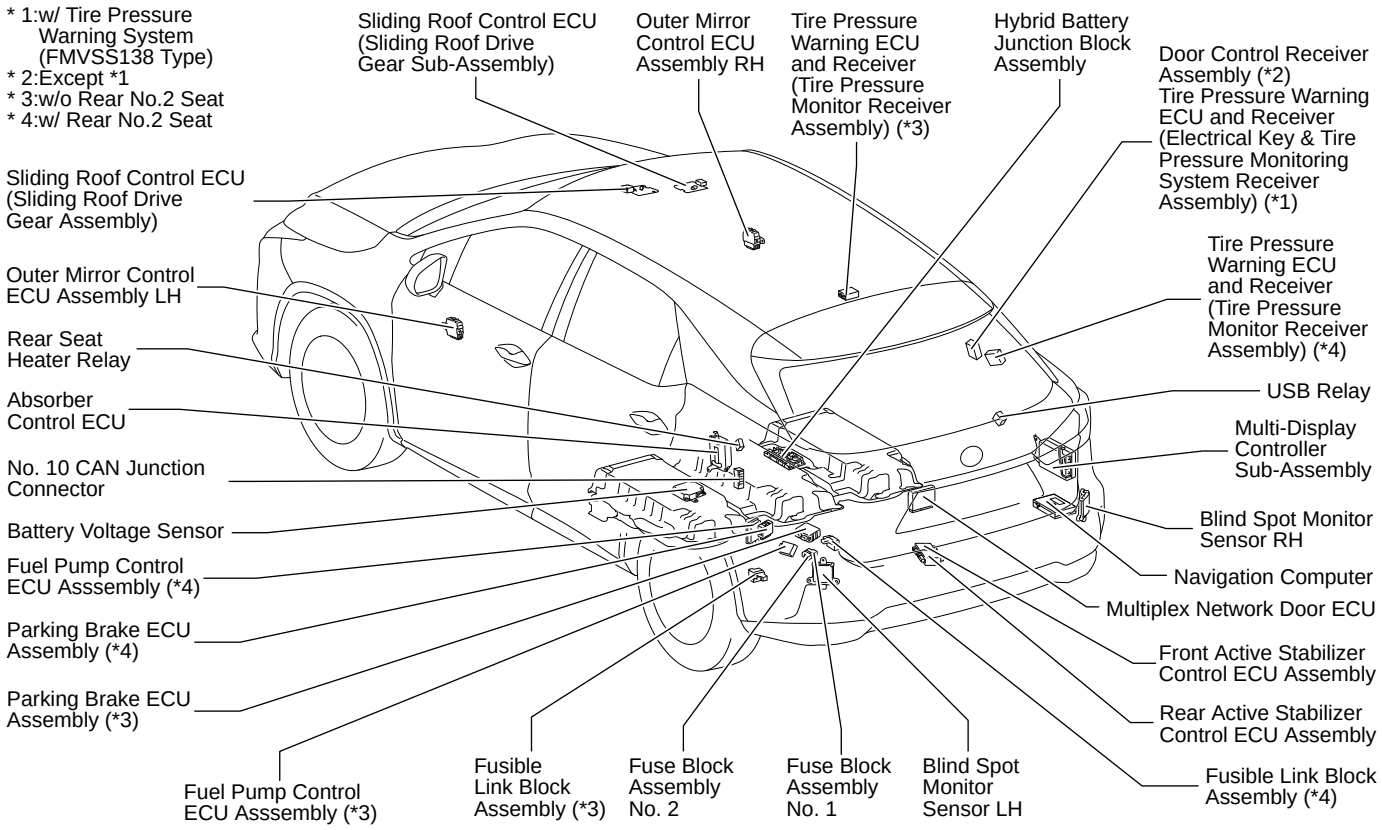
* 1:w/ Tire Pressure Warning System (FMVSS138 Type)
* 2:Except *1
* 3:w/o Rear No.2 Seat
* 4:w/ Rear No.2 Seat
Sliding Roof Control ECU (Sliding Roof Drive Gear Sub-Assembly)
Outer Mirror Control ECU Assembly RH
Tire Pressure Warning ECU and Receiver (Tire Pressure Monitor Receiver Assembly) (*3)
Hybrid Battery Junction Block Assembly
Door Control Receiver Assembly (*2)
Tire Pressure Warning ECU and Receiver (Electrical Key & Tire Pressure Monitoring System Receiver Assembly) (*1)
Sliding Roof Control ECU (Sliding Roof Drive Gear Assembly)
Tire Pressure Warning ECU and Receiver (Tire Pressure Monitor Receiver Assembly) (*4)
Outer Mirror Control ECU Assembly LH
Rear Seat Heater Relay
USB Relay
Absorber Control ECU
Multi-Display Controller Sub-Assembly
No. 10 CAN Junction Connector
Blind Spot Monitor Sensor RH
Battery Voltage Sensor
Navigation Computer
Fuel Pump Control ECU Asssembly (*4)
Multiplex Network Door ECU
Parking Brake ECU Assembly (*4)
Front Active Stabilizer Control ECU Assembly
Parking Brake ECU Assembly (*3)
Rear Active Stabilizer Control ECU Assembly
Fusible Link Block Assembly (*4)
Fuel Pump Control ECU Asssembly (*3)
Fusible Link Block Assembly (*3)
Fuse Block Assembly No. 2
Fuse Block Assembly No. 1
Blind Spot Monitor Sensor LH