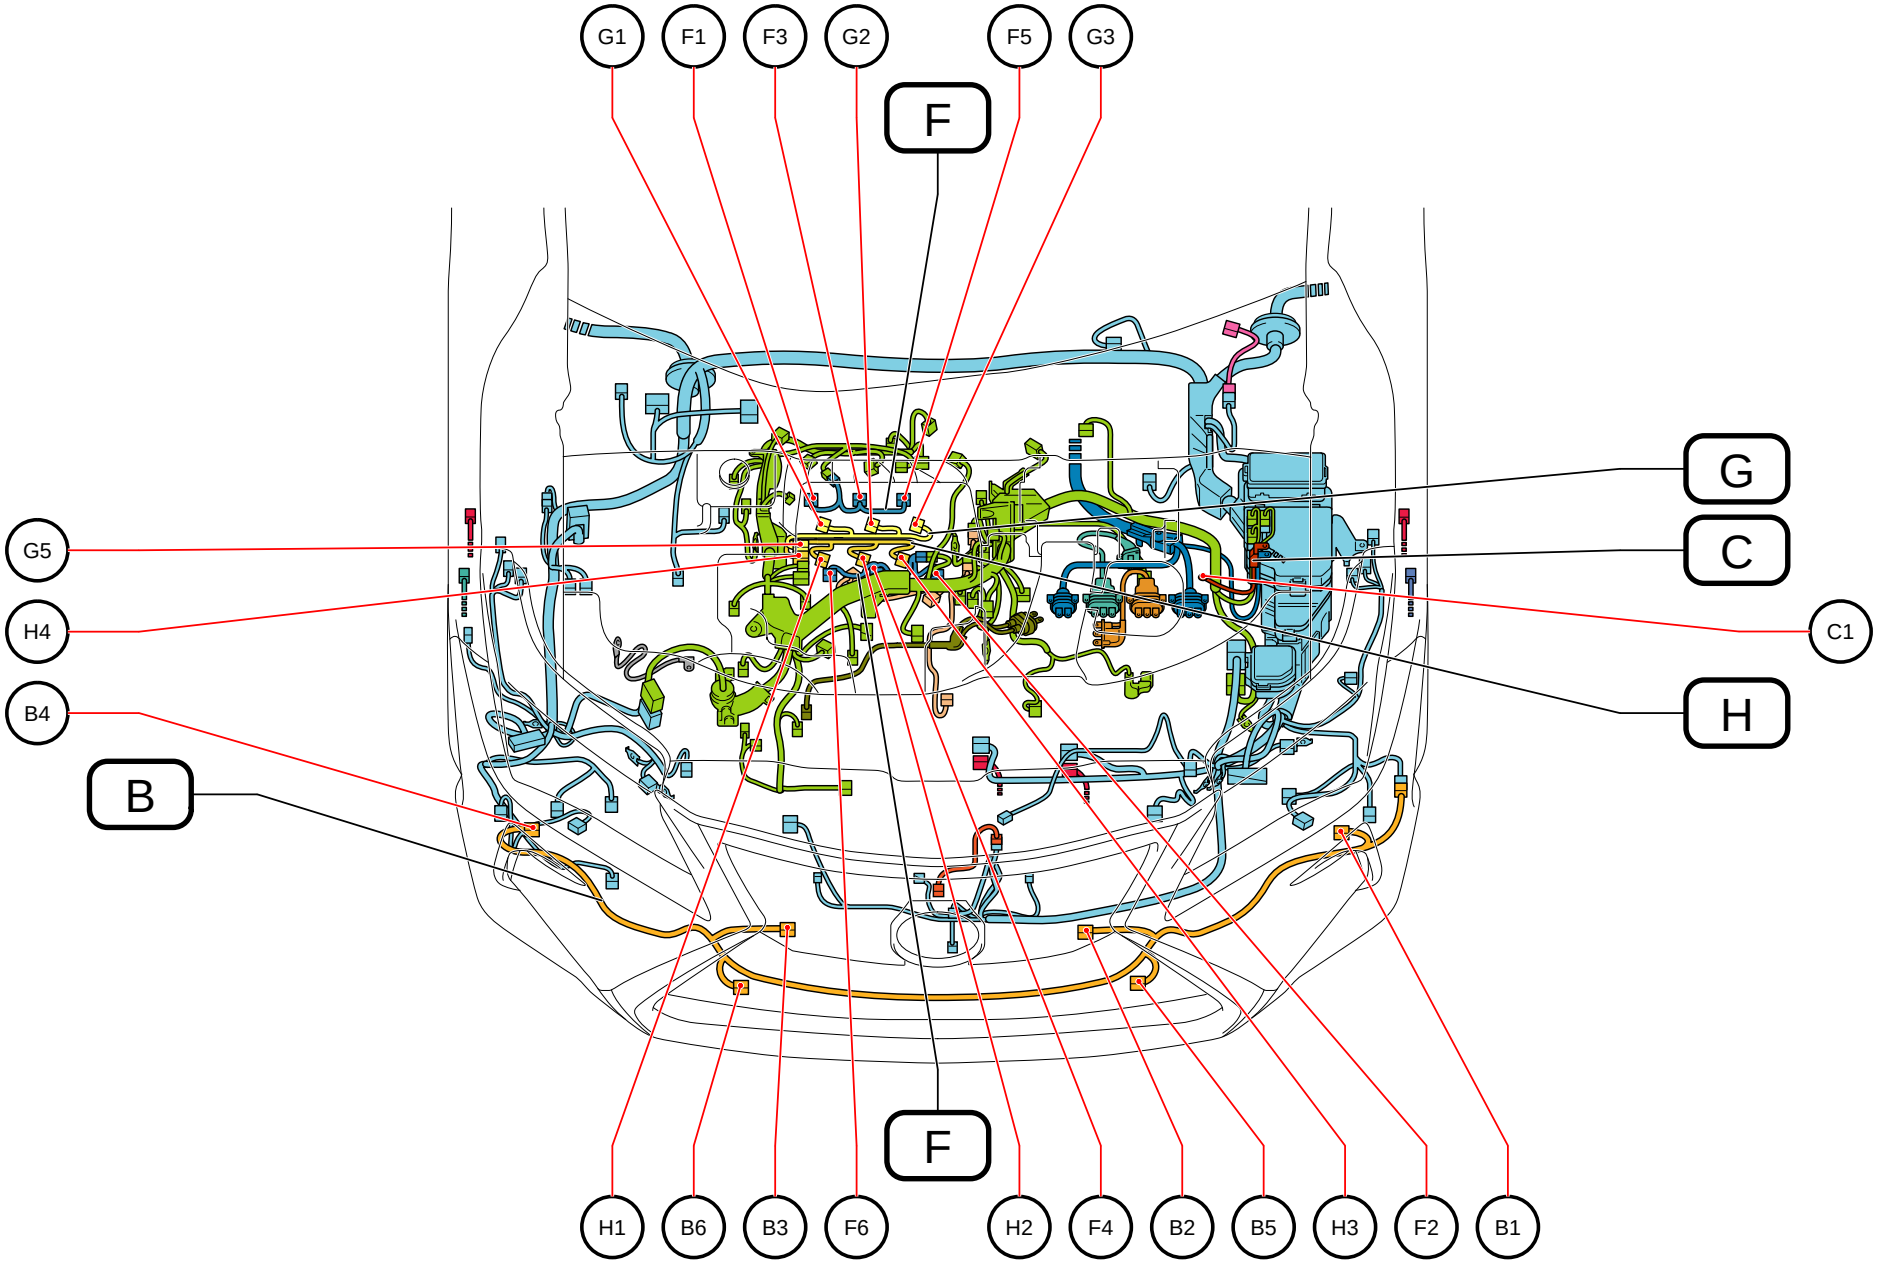
G1
F1
F3
G2
F5
G3
F
G
C
C1
H
G5
H4
B4
B
F
H1
B6
B3
F6
H2
F4
B2
B5
H3
F2
B1

B1 Front No. 1 Ultrasonic Sensor LH
B2 Front No. 1 Ultrasonic Sensor LH Center
B3 Front No. 1 Ultrasonic Sensor RH Center
B4 Front No. 1 Ultrasonic Sensor RH
B5 Front No. 1 Ultrasonic Sensor LH Center
B6 Front No. 1 Ultrasonic Sensor RH Center

C1 Inverter with Converter Assembly

F1 Fuel Injector Assembly No. 1 (for Port Injection)
F2 Fuel Injector Assembly No. 6 (for Port Injection)
F3 Fuel Injector Assembly No. 3 (for Port Injection)
F4 Fuel Injector Assembly No. 4 (for Port Injection)
F5 Fuel Injector Assembly No. 5 (for Port Injection)
F6 Fuel Injector Assembly No. 2 (for Port Injection)

G1 Fuel Injector Assembly No. 1 (for Direct Injection)
G2 Fuel Injector Assembly No. 3 (for Direct Injection)
G3 Fuel Injector Assembly No. 5 (for Direct Injection)
G5 Injector Driver

H1 Fuel Injector Assembly No. 2 (for Direct Injection)
H2 Fuel Injector Assembly No. 4 (for Direct Injection)
H3 Fuel Injector Assembly No. 6 (for Direct Injection)
H4 Injector Driver

B1
Black

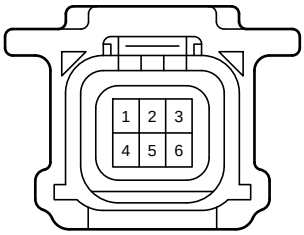

90980-12A59

B2
Black

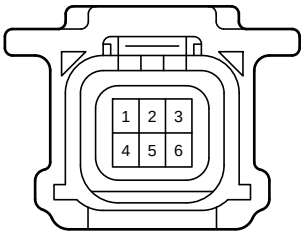

90980-12A59

B3
Black

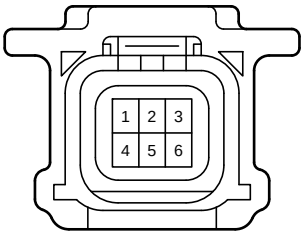

90980-12A59

B4
Black

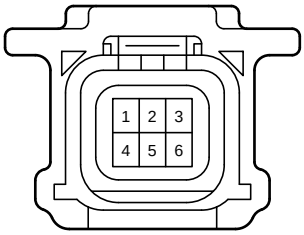

90980-12A59

B5
Black

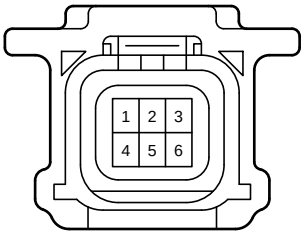

90980-12A59

B6
Black

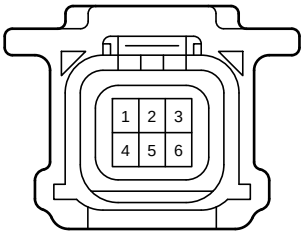

90980-12A59

C1



F1
Black

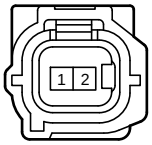

90980-12416

F2
Black

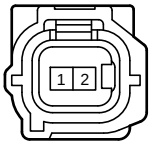

90980-12416

F3
Black

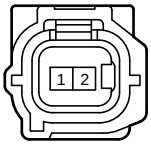

90980-12416

F4
Black

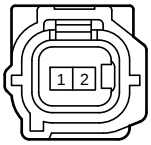

90980-12416

F5
Black

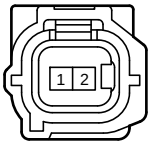

90980-12416

F6
Black

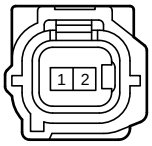

90980-12416

G1
Black

90980-10578

G2
Black

90980-10578

G3
Black

90980-10578

G5
Black

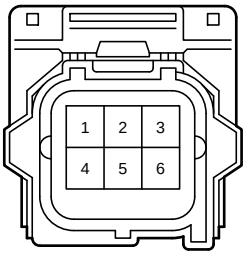

90980-12655

H1
Black

90980-10578

H2
Black

90980-10578

H3
Black

90980-10578

H4
Gray

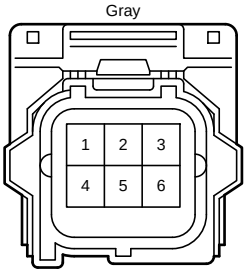

90980-12656