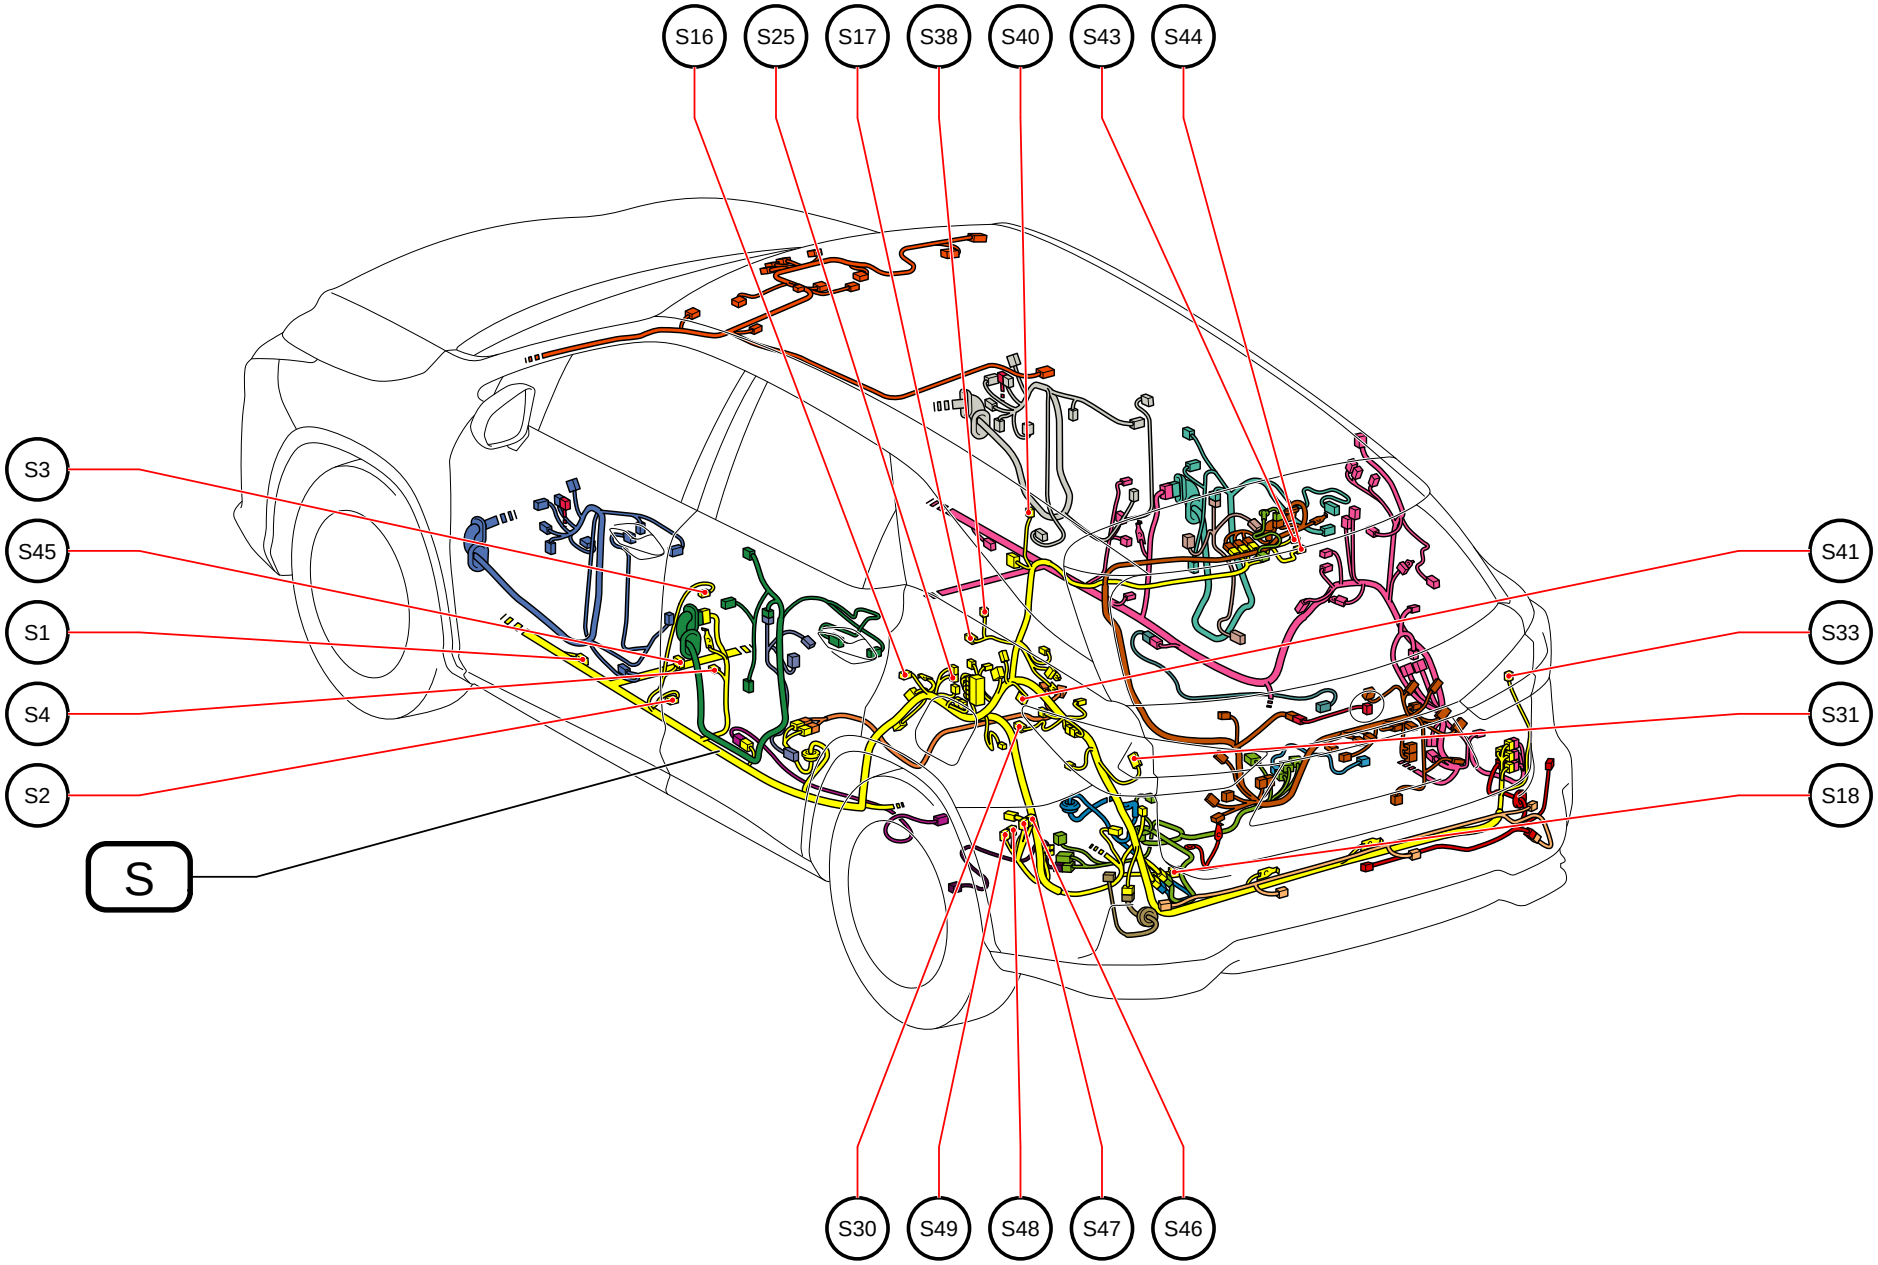
S16
S25
S17
S38
S40
S43
S44
S3
S45
S1
S4
S2
S
S41
S33
S31
S18
S30
S49
S48
S47
S46

S1	Front Scuff Plate Light LH (Front Door Scuff Plate LH)
S2	Front Seat Outer Belt Assembly LH
S3	Front Door Courtesy Light Switch Assembly LH
S4	Front Seat Outer Belt Assembly LH
S16	Rear Door Courtesy Light Switch Assembly LH
S17	Rear No. 1 Seat Belt Assembly Outer LH
S18	Brake Control Power Supply Assembly
S25	Absorber Control ECU
S30	Fuel Lid Lock with Motor Assembly
S31	Rear Combination Light Assembly LH
S33	Rear Combination Light Assembly RH
S38	Quarter Side Speaker Assembly LH
S40	Curtain Shield Airbag Assembly LH
S41	Noise Filter
S43	Radio Setting Condenser
S44	Radio Setting Condenser
S45	Side Airbag Sensor Assembly LH
S46	Parking Brake ECU Assembly
S47	Parking Brake ECU Assembly
S48	Fuel Pump Control ECU Assembly
S49	Fuel Pump Control ECU Assembly

Position of Parts in Body (LHD w/ Rear No. 2 Seat)

S1
White

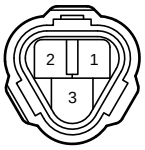

90980-11407

S2
White



90980-12063

S3
Black

90980-10871

S4
Black



90980-12452

S16
White

90980-10871

S17
Black



90980-12452

S18
White

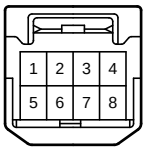

90980-12910

S25
Black

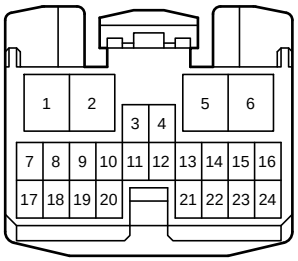

90980-12560

S30
White



90980-10860

S31
White

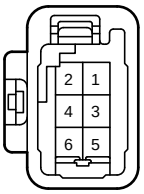

90980-11452

S33
White

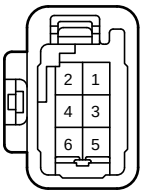

90980-11452

S38
Black

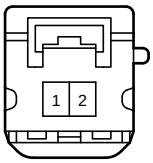

90980-12808

S40
Black

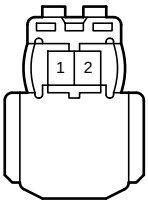

90980-12575

S41
Black



S43
White



90980-11259

S44
Black

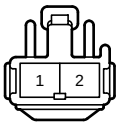

90980-10916

S45
Yellow

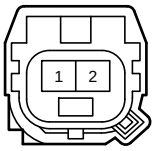

90980-12490

S46
White

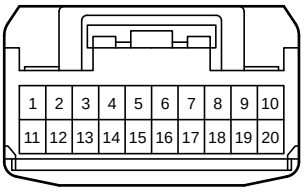

90980-12460

S47
Gray

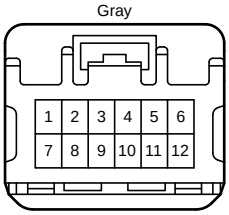

90980-12737

S48
Black

90980-11150

S49
White

90980-11145