

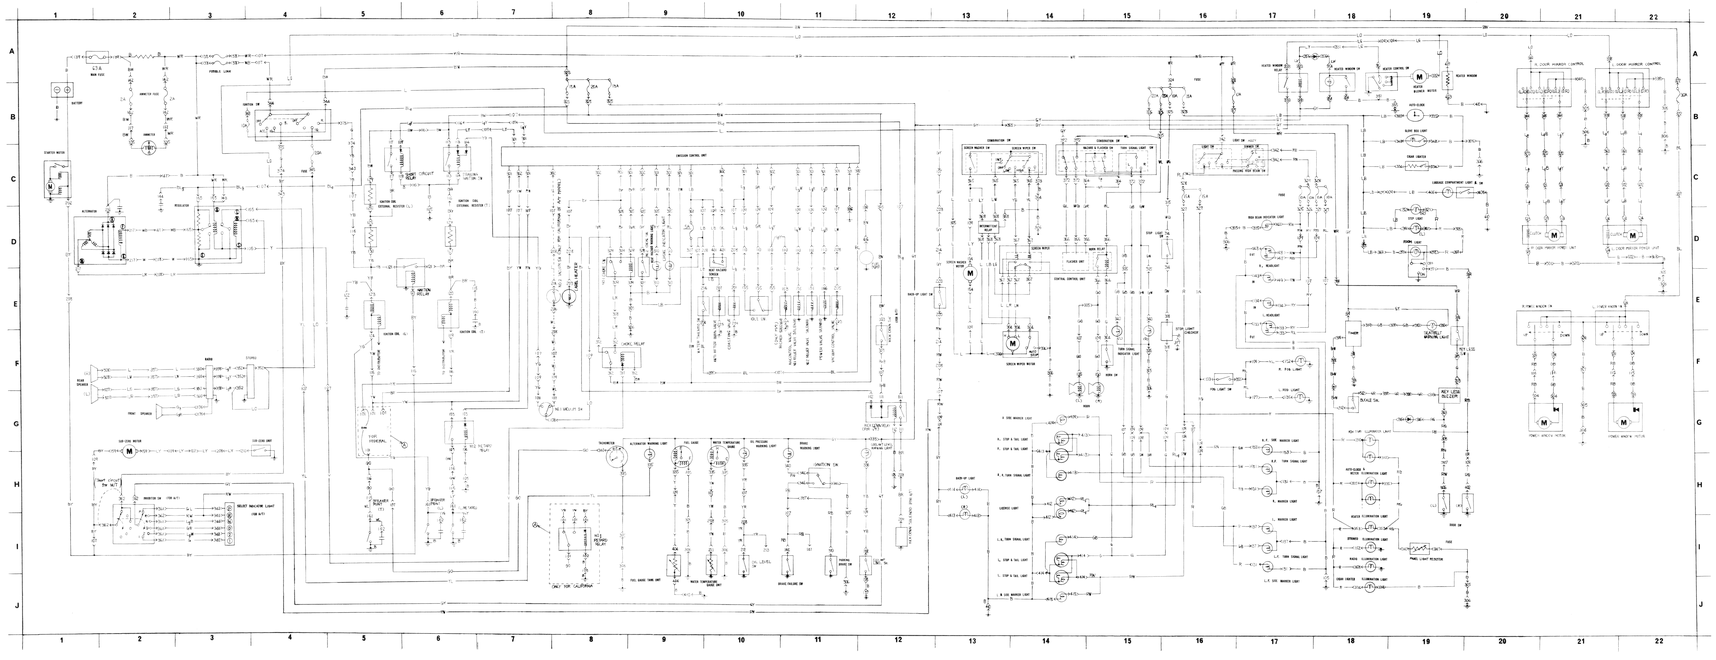


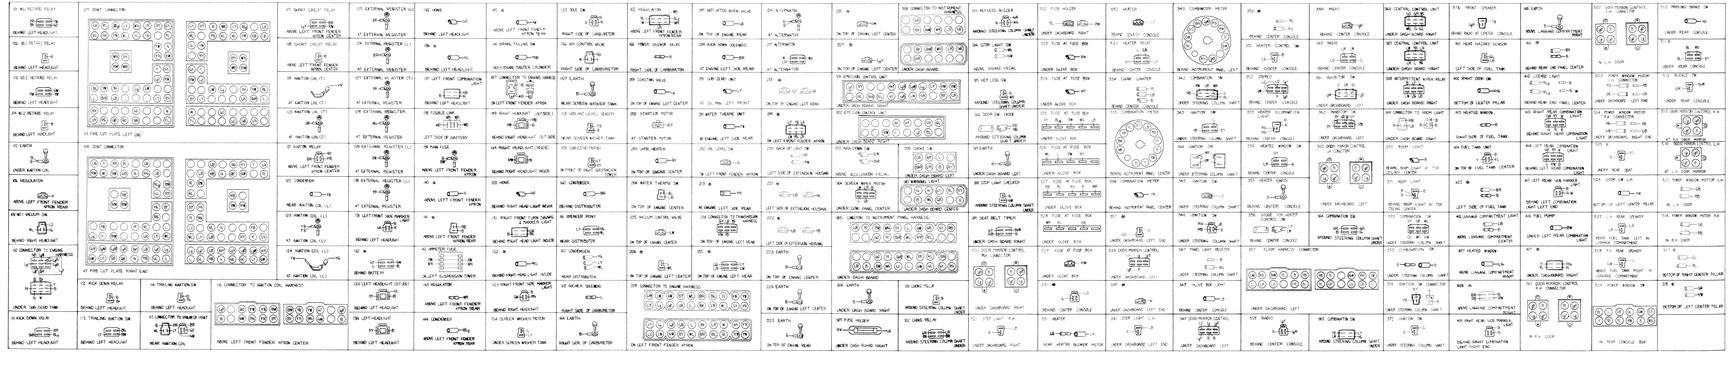

INDEX

COMPONENT	LOCATION
AIR CONTROL VALVE	E-21
ALTERNATOR	E-21 35
ALTERNATOR WARNING LIGHT	E-21 74
AMMETER	E-21 74
AMMETER FUSE	E-21 74
ANTI-CAPACITANCE VALVE	E-21 54
AUTO CLOCK	E-24 95
BACKUP LIGHT	
LEFT	E-24 45
RIGHT	E-24 53
BACKUP LIGHT SW	E-24 53
BATTERY	E-21 1
BRAKE FAILURE SW	E-21 11
BRAKE WARNING LIGHT	E-21 11
BUZZER SW	E-21 85
CARB. HEATER	E-24 51
CENTRAL CONTROL UNIT	E-24 84
CHOKE INDICATOR LIGHT	E-24 81
CHOKE RELAY	E-24 51
CIGAR LIGHTER	E-24 65
COMBINATION SW	E-24
RADIATO R FLASHER SW	E-24 27
SCREEN WASHER SW	E-24
SCREEN WIPER SW	E-24
COOLANT LEVEL SW	E-24
COOLANT LEVEL WARNING LIGHT	E-24
STARTING VALVE	E-24
DISTRIBUTOR	E-24, E-25
DOOR SW	E-24
L	E-24
R	E-24
DOOR MIRROR CONTROL	E-24
L	E-24
R	E-24
DOOR MIRROR POWER UNIT	E-24
L	E-24
R	E-24
EMISSION CONTROL UNIT	E-24
EXTERNAL RESISTER	E-24
FUEL GAUGE	E-24
FUEL GAUGE TANK UNIT	E-24
FUSE BOX	E-24
FUSIBLE LINK	E-24
FUEL PUMP	E-24
GLOVE BOX LIGHT	E-24
HEADLIGHT	
LEFT LO	E-24
LEFT UP	E-24
RIGHT LO	E-24
RIGHT UP	E-24
HEAT RAISING SENSOR	E-24
HEAT RAISING WARNING LIGHT	E-24
HEATED WINDOW	E-24
HEATED WINDOW RELAY	E-24
HEATED WINDOW SW	E-24
HEATER BLOWER MOTOR	E-24
HEATER BLOWER RELAY	E-24
HIGH BEAM INDICATOR LIGHT	E-24
HORN	
LEFT	E-24
RIGHT	E-24
HORN SW	E-24
IDLE SW	E-24
IGNITION COIL	E-24
IGNITION RELAY	E-24
IGNITION SW	E-24
ILLUMINATION LIGHT	
CIGAR LIGHTER	E-24
HEATER	E-24
RADIO	E-24
STEREO	E-24
INDICATOR SW	E-24
INTERMITTENT RELAY	E-24
KNOCKED SENSOR	E-24
KNOCKED UNIT	E-24
KICK-DOWN SOLENOID	E-24
KICK-DOWN SW	E-24
LICENSE LIGHT	E-24
LIGHT SW	E-24
LUGGAGE COMPARTMENT LIGHT & SW	E-24
MAIN FUSE	E-24
MARKER LIGHT	E-24
LEFT	E-24
RIGHT	E-24
NO. 1 CHOKE SW	E-24
NO. 2 CHOKE SW	E-24
NO. 3 CHOKE SW	E-24
NO. 4 CHOKE SW	E-24
OIL LEVEL SW	E-24
OIL LEVEL WARNING LIGHT	E-24
PANEL LIGHT REGULATOR	E-24
PARKING BRAKE SW	E-24
POWER TRACK INSTRUMENT	E-24
POWER WINDOW MOTOR	
LEFT	E-24
RIGHT	E-24
POWER WINDOW SW	E-24
LEFT	E-24
RIGHT	E-24
RADIO	E-24
REGULATOR	E-24
RADIO RELAY (M) (NL)	E-24
RUDDER SOLENOID	E-24
ROOM LIGHT	E-24
SCREEN WASHER MOTOR	E-24
SCREEN WIPER MOTOR	E-24
SEAT LEVER LIGHT	E-24
SEAT LEVER SW	E-24
SHIFT INDICATOR LIGHT	E-24
SPEAKER	E-24
FRONT	E-24
REAR LEFT	E-24
REAR RIGHT	E-24
STARTER MOTOR	E-24
STEP LIGHT	E-24
LEFT	E-24
RIGHT	E-24
STEREO	E-24
STOP & TAIL LIGHT	
LEFT	E-24
RIGHT	E-24
STOP LIGHT CHECKER	E-24
STOP LIGHT SW	E-24
TACHO-METER	E-24
TIMER	E-24
TRAILING IGNITION SW	E-24
TURN SIGNAL LIGHT	
FRONT LEFT	E-24
FRONT RIGHT	E-24
REAR LEFT	E-24
REAR RIGHT	E-24
TURN SIGNAL INDICATOR LIGHT	E-24
VACUUM CONTROL VALVE	E-24
WATER TEMPERATURE GAUGE	E-24
WATER TEMPERATURE GAUGE UNIT	E-24
WATER THERMO SW	E-24

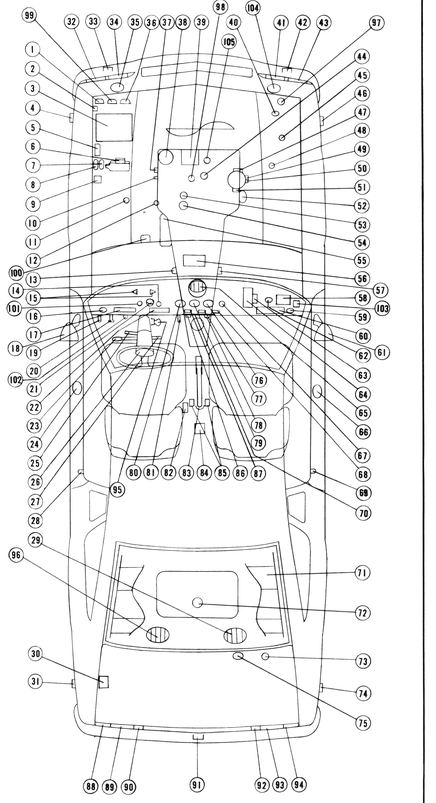

WIRING CODE

B	BLACK
G	GREEN
L	BLUE
LG	LIGHT GREEN
O	ORANGE
R	RED
W	WHITE
Y	YELLOW

EXAMPLE

W	WHITE
R	RED
W-R	WHITE TRACER RED

FEMALE

MALE

Mazda COSMO WIRING DIAGRAM

© 1975 TOYO KOGYO CO.,LTD.
PRINTED IN JAPAN

5505-10-751 LE-FU