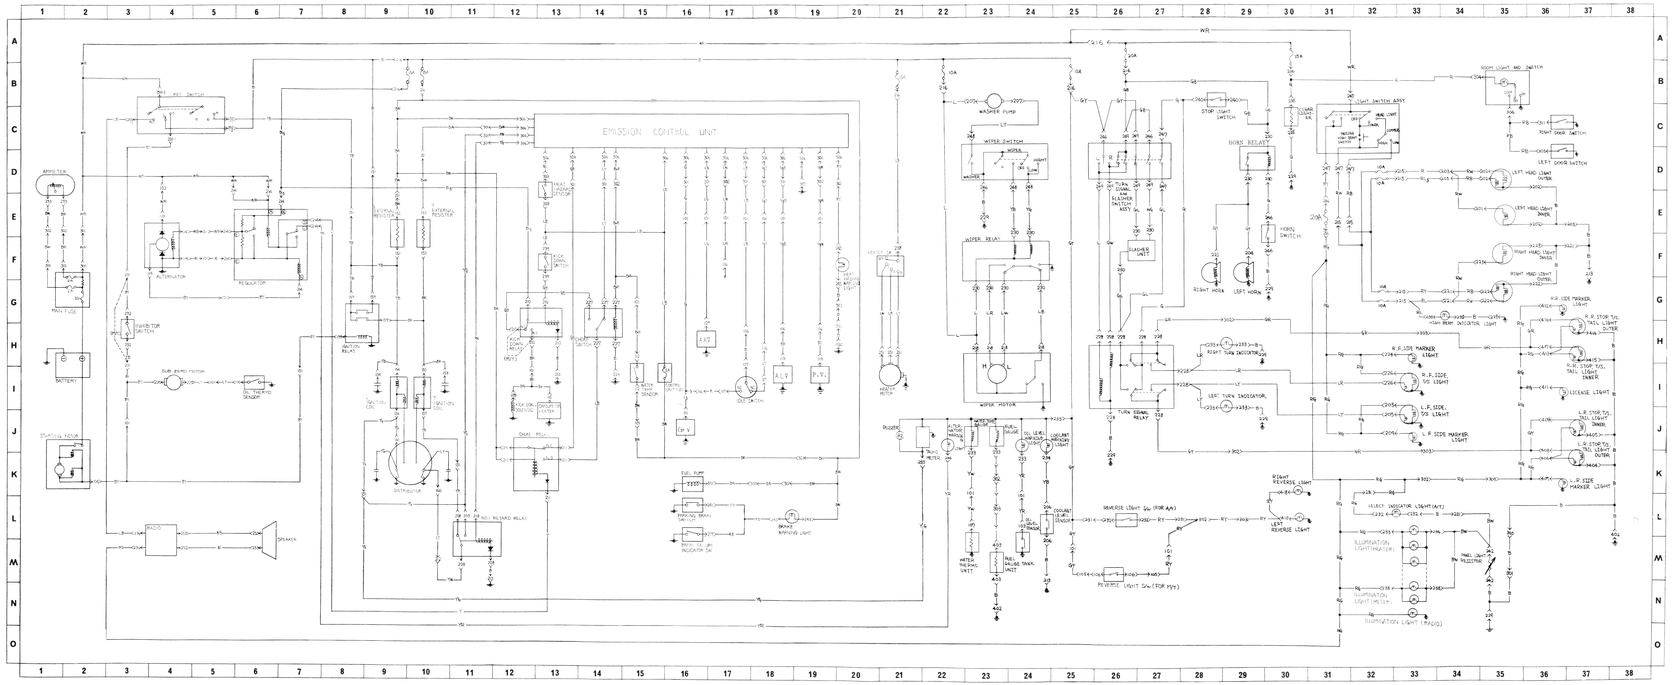

EMISSION CONTROL UNIT
IGNITION SWITCH
ALTERNATOR
REGULATOR
BATTERY
STARTING MOTOR
DISTRIBUTOR
IGNITION COIL
RADIO
SPEAKER
WIPER MOTOR
WIPER SWITCH
WIPER RELAY
WASHER PUMP
HORN RELAY
HORN SWITCH
RIGHT HORN
LEFT HORN
STOP LIGHT SWITCH
TURN SIGNAL FLASHER UNIT
TURN SIGNAL RELAY
HEAD LIGHT DIMMER SWITCH
RIGHT HEAD LIGHT DIMMER
LEFT HEAD LIGHT DIMMER
RIGHT HEAD LIGHT
LEFT HEAD LIGHT
R.H. SIDE MARKER LIGHT
L.H. SIDE MARKER LIGHT
R.H. STOP TAIL LIGHT
L.H. STOP TAIL LIGHT
LICENSE LIGHT
R.H. SIDE TURN SIGNAL LIGHT
L.H. SIDE TURN SIGNAL LIGHT
RIGHT REVERSE LIGHT
LEFT REVERSE LIGHT
ILLUMINATION LIGHT (RADIO)
ILLUMINATION LIGHT (METER)
PANEL LIGHT RHEOSTAT
SELECT INDICATOR LIGHT (A/T)
KICK DOWN SOLENOID
KICK DOWN RELAY
INHIBITOR SWITCH
OIL LEVEL SENSOR
OIL LEVEL WARNING LIGHT
COOLANT LEVEL SENSOR
COOLANT WARNING LIGHT
FUEL GAUGE UNIT
FUEL PUMP
FUEL GAUGE
FUEL WARNING LIGHT
BRAKE WARNING LIGHT
PARKING BRAKE SWITCH
BRAKE FAILURE SWITCH
BUZZER
SEAT BELT WARNING LIGHT
SEAT BELT SWITCH
DOOR SWITCH (LEFT)
DOOR SWITCH (RIGHT)
MAIN FUSE
HEAD LIGHT FUSE
SUB ZERO MOTOR
CHOKE HEATER
CHOKE RELAY
CHOKE SWITCH
COASTING VALVE
IDLE SOLENOID
IDLE ADJUSTING SCREW
ANTI AFTERBURN VALVE
AIR CONTROL VALVE
AIR PUMP
AIR INJECTION NOZZLE
POWER VALVE
THERMO VALVE
THERMO SENSOR
THERMO SWITCH
TACHO METER
TURN SIGNAL INDICATOR LIGHT
TURN SIGNAL RELAY
WATER TEMP. GAUGE
WATER TEMP. SENSOR
WATER THERMO UNIT
WIPER MOTOR
REAR WIPER MOTOR
REAR WIPER SWITCH
REAR WIPER RELAY
REAR WASHER PUMP
REAR WASHER SWITCH
REAR WASHER TANK
REAR WASHER NOZZLE
REAR WASHER TUBE
REAR WASHER RELAY
REAR WIPER LIMIT SWITCH
REAR WIPER MOTOR
REAR WIPER LIMIT