


X 1

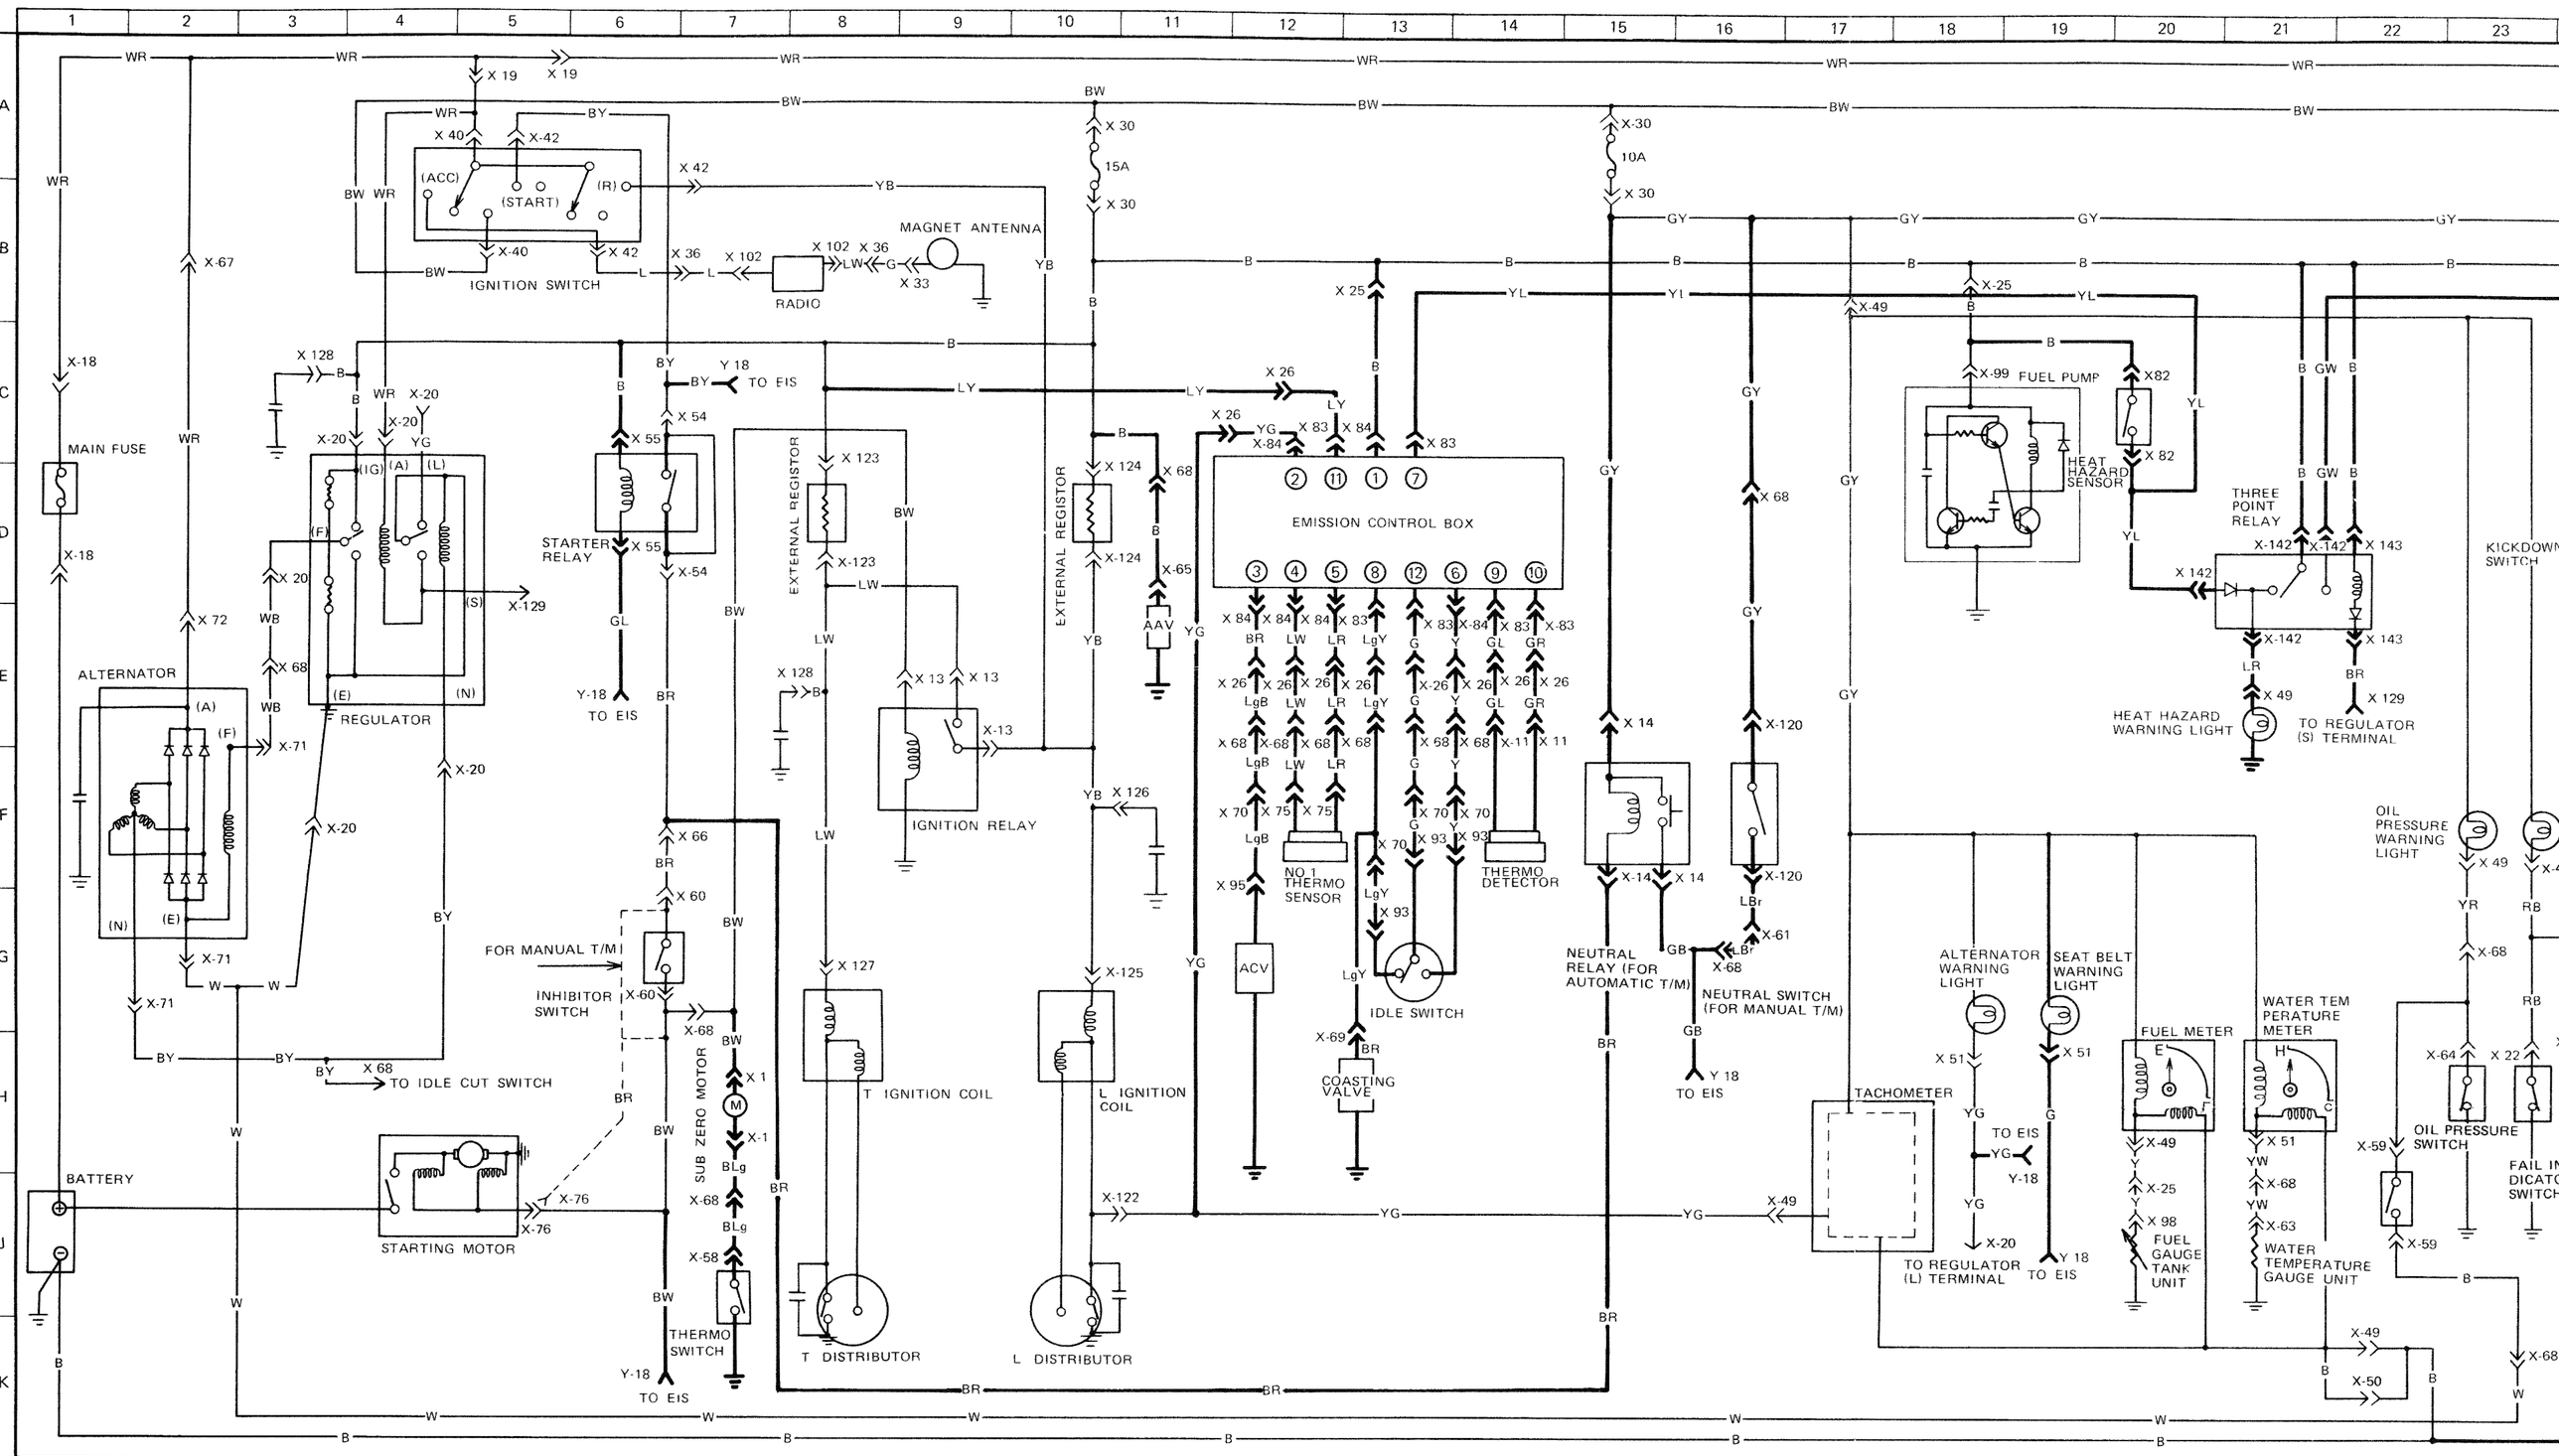

AT SUB ZERO MOTOR –UNDER MASTER VAC

X 3

AT COMPRESSOR –UNDER TRAILING SIDE IGNITION COIL

X 11




CONNECTION TO THERMO DETECTOR –NEAR RIGHT OF BATTERY

X-12


AT NEGATIVE TERMINAL OF BATTERY

X 13



AT IGNITION RELAY –NEAR RIGHT OF BATTERY

X 17




AT COOLER RELAY –NEAR RIGHT OF BATTERY

X 18


AT MAIN FUSE

X 19



NEAR RIGHT OF BATTERY

X 20




AT REGULATOR ON REAR RIGHT IN ENGINE COMPARTMENT

X 22


AT FAIL INDICATOR

X 24




CONNECTION TO HEATER EARTH –UNDER RIGHT DASH PANEL

X 25

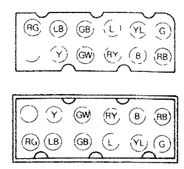


UNDER RIGHT DASH PANEL

X 26

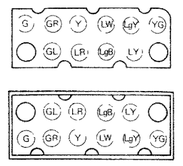

UNDER RIGHT DASH PANEL

X 30

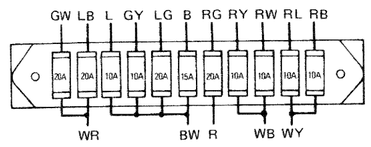

AT FUSE BOX –UNDER GROVE BOX

X 33




CONNECTION TO MAGNET ANTENNA UNDER DASH PANEL CENTRE


X 35

UNDER DASH PANEL CENTRE

X 36



X 40

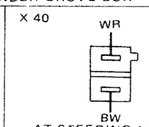

AT STEERING LOCK ON LEFT OF INSTRU MENT PANEL


X 42



AT STEERING LOCK –ON LEFT OF INSTRU MENT PANEL

X 48

X 49

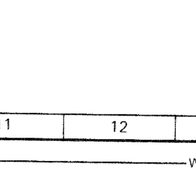

AT COMBINATION METER –BEHIND INSTRUMENT PANEL

X 50

BEHIND INSTRUMENT PANEL

X 51

AT COMBINATION METER –BEHIND INSTRUMENT PANEL


X 54

AT STARTER RELAY –ON LEFT OF INSTRUMENT PANEL

X 55

AT STARTER RELAY –ON LEFT OF INSTRUMENT PANEL

X-59



AT OIL LEVEL UNIT (NOT USED) –ON FRONT LEFT SIDE OF ENGINE

X 58

AT SUB ZERO SWITCH

X 60



ON LEFT FRONT OF TRANS MISSION

X 62

AT KICK DOWN SOLENOID

X 63

AT HEAT GAUGE UNIT

X 64




AT OIL PRESSURE SWITCH

X 65

AT ANTI AFTERBURN VALVE

X 66



CONNECTION TO STARTER RELAY –ON LEFT SIDE PA NEL IN ENGINE COMPART MENT


X-68

ON LEFT SIDE PANEL IN ENGINE COMPARTMENT

X 69


AT COASTING VALVE

X 70




CONNECTION TO IDLE SWITCH AND AIR CONTROL VALVE –NEAR REAR OF ALTER NATOR

X 71



AT ALTERNATOR

X 72



AT ALTERNATOR

X 74

AT CARBURETOR HEATER

X 75

AT THERMO SENSOR

X 76

AT MAGNET SWITCH OF STARTER

X 82

CONNECTION TO HEAT HAZARD SENSOR –IN TRUNK ROOM

X 84

AT EMISSION CONTROL BOX - IN TRUNK ROOM

X 87


CONNECTION TO HEATABLE WINDOW –IN TRUNK ROOM


X 88

AT IDLE CUT SWITCH

X 93

AT IDLE SWITCH

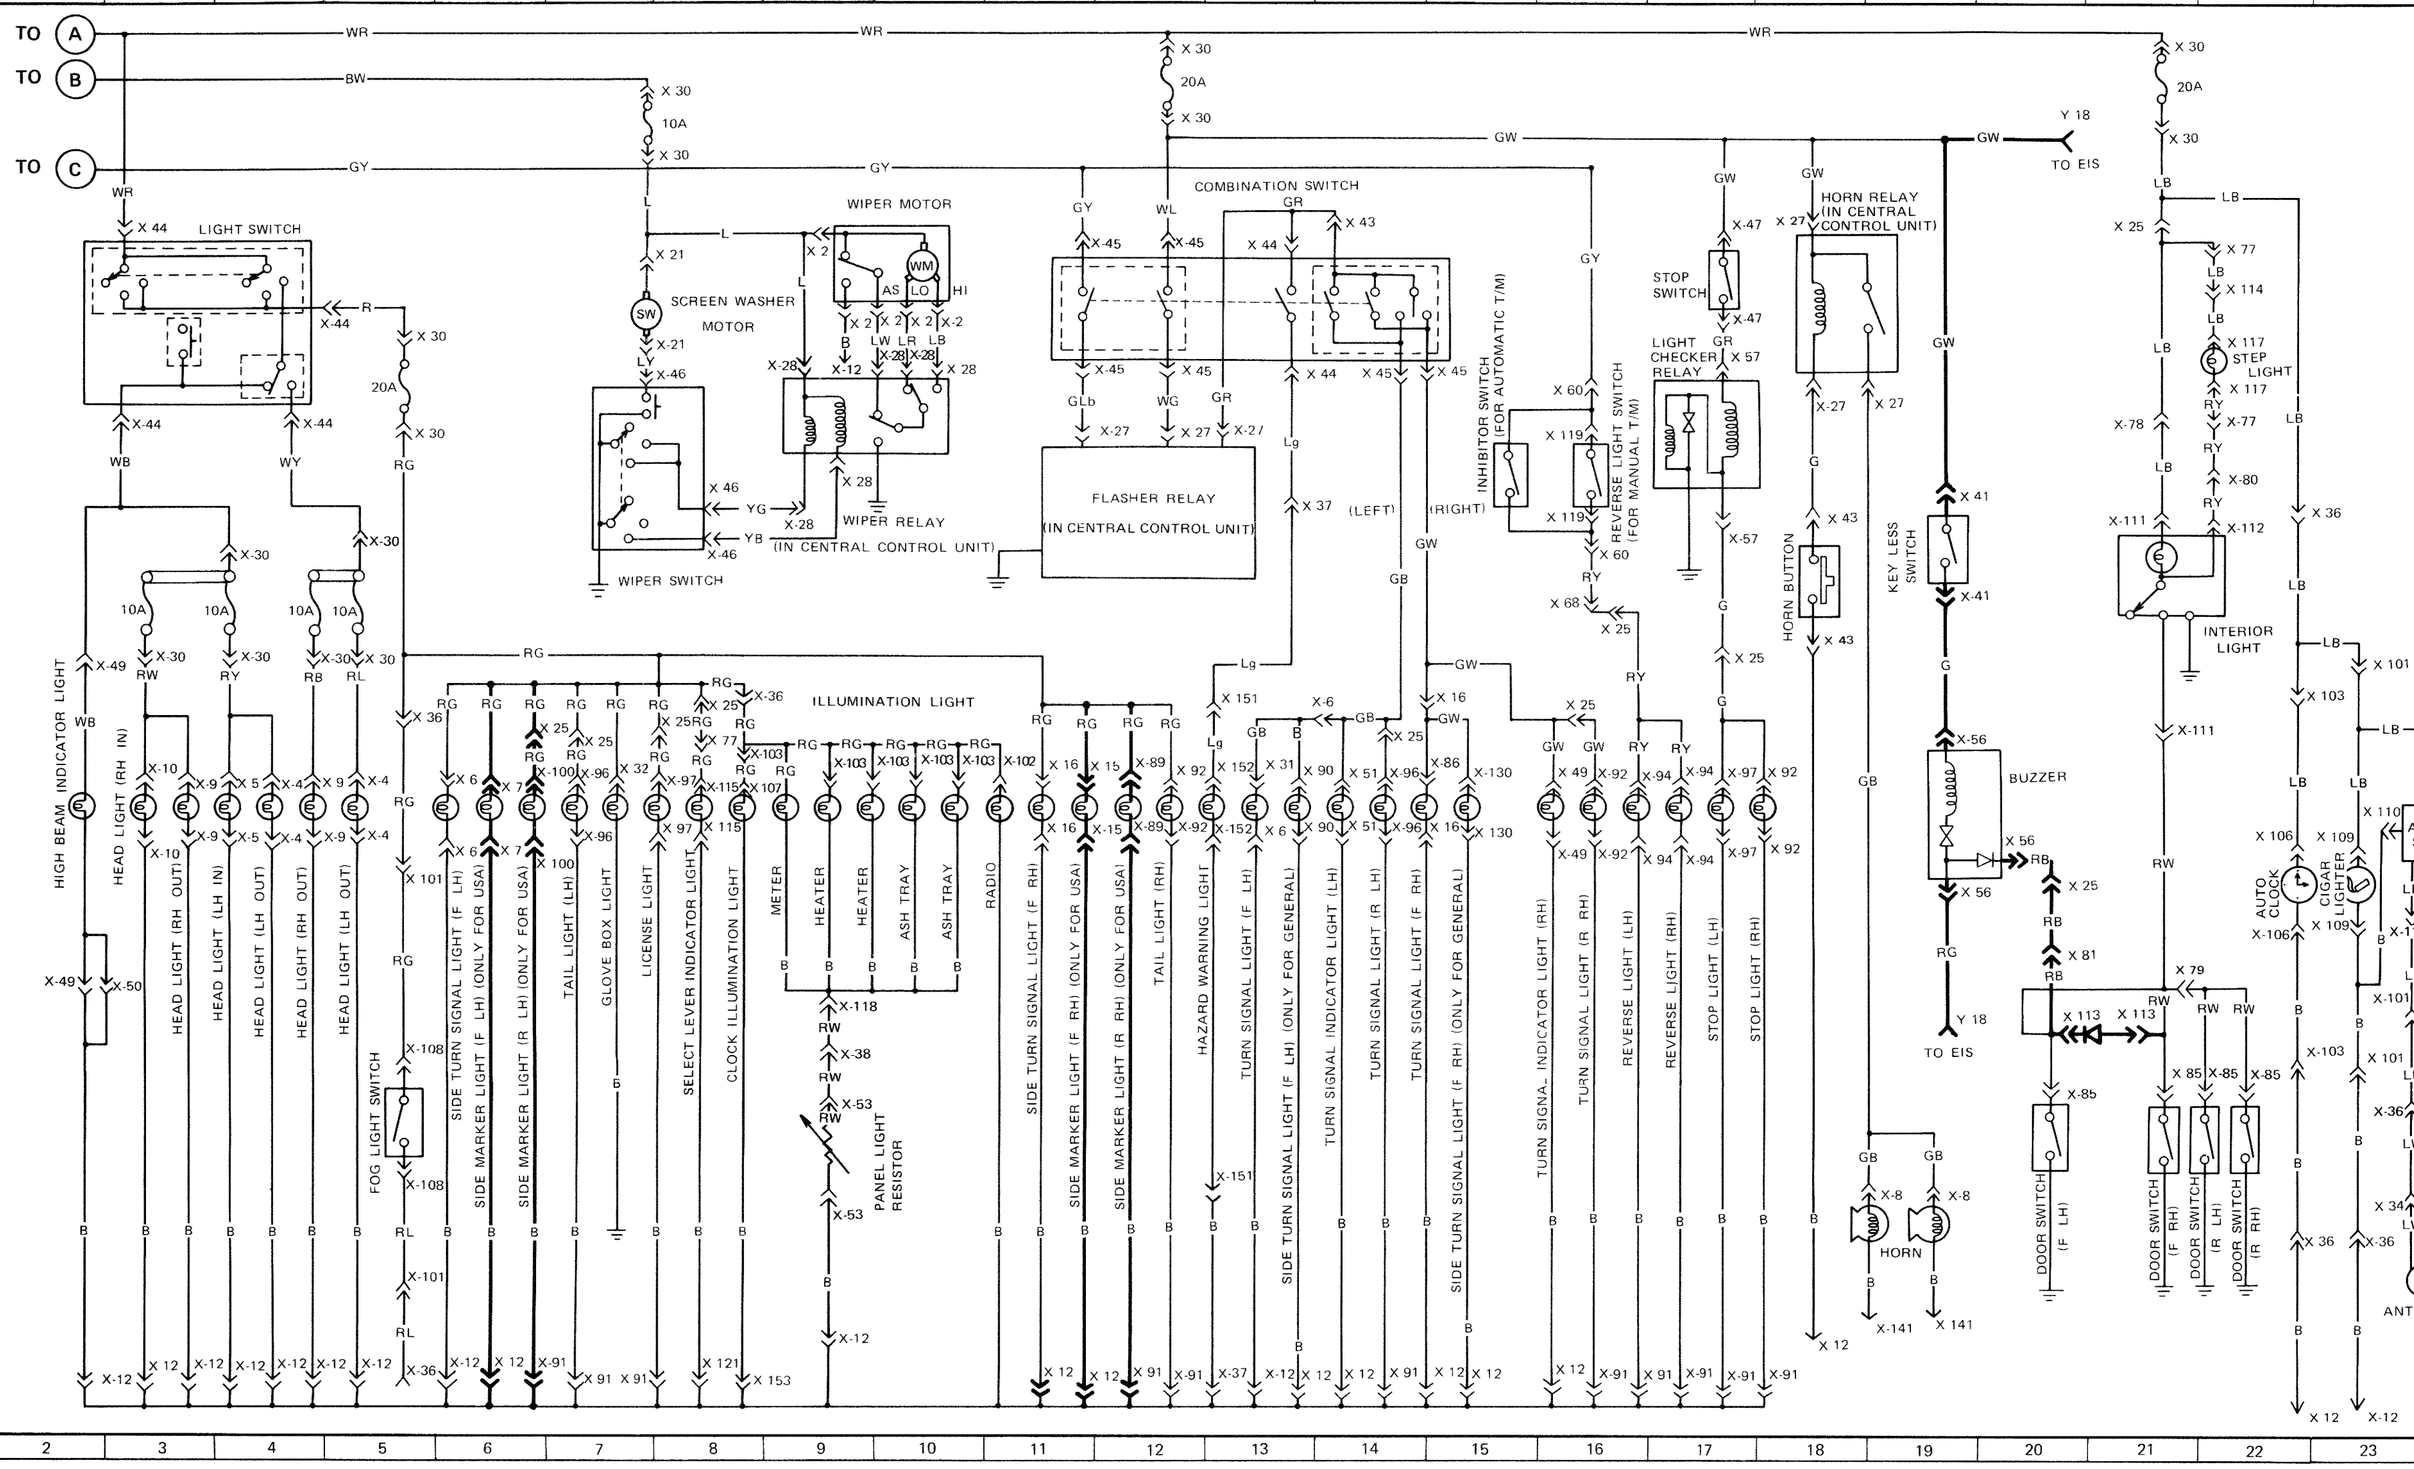
TO A
TO B
TO C
WR
BW
GY
X 30
10A
20A
LIGHT SWITCH
X 44
R
X-44
WB
WY
RG
WIPER MOTOR
SCREEN WASHER MOTOR
SW
WM
AS LO HI
WIPER RELAY
(IN CENTRAL CONTROL UNIT)
WIPER SWITCH
COMBINATION SWITCH
FLASHER RELAY
(IN CENTRAL CONTROL UNIT)
INHIBITOR SWITCH (FOR AUTOMATIC T/M)
REVERSE LIGHT SWITCH (FOR MANUAL T/M)
STOP SWITCH
LIGHT CHECKER RELAY
HORN RELAY (IN CENTRAL CONTROL UNIT)
HORN BUTTON
KEY LESS SWITCH
BUZZER
TO EIS
Y 18
STEP LIGHT
INTERIOR LIGHT
AUTO CLOCK
CIGAR LIGHTER
DOOR SWITCH (F RH)
DOOR SWITCH (R LH)
DOOR SWITCH (R RH)
DOOR SWITCH (F LH)
HORN
ILLUMINATION LIGHT
PANEL LIGHT RESISTOR
FOG LIGHT SWITCH
HIGH BEAM INDICATOR LIGHT
HEAD LIGHT (RH IN)
HEAD LIGHT (RH OUT)
HEAD LIGHT (LH IN)
HEAD LIGHT (LH OUT)
SIDE TURN SIGNAL LIGHT (F LH)
SIDE MARKER LIGHT (F LH) (ONLY FOR USA)
SIDE MARKER LIGHT (R LH) (ONLY FOR USA)
TAIL LIGHT (LH)
GLOVE BOX LIGHT
LICENSE LIGHT
SELECT LEVER INDICATOR LIGHT
CLOCK ILLUMINATION LIGHT
METER
HEATER
ASH TRAY
RADIO
SIDE TURN SIGNAL LIGHT (F RH)
SIDE MARKER LIGHT (F RH) (ONLY FOR USA)
SIDE MARKER LIGHT (R RH) (ONLY FOR USA)
TAIL LIGHT (RH)
HAZARD WARNING LIGHT
TURN SIGNAL LIGHT (F LH)
SIDE TURN SIGNAL LIGHT (F LH) (ONLY FOR GENERAL)
TURN SIGNAL INDICATOR LIGHT (LH)
TURN SIGNAL LIGHT (R LH)
TURN SIGNAL LIGHT (F RH)
SIDE TURN SIGNAL LIGHT (F RH) (ONLY FOR GENERAL)
TURN SIGNAL INDICATOR LIGHT (RH)
TURN SIGNAL LIGHT (R RH)
REVERSE LIGHT (LH)
REVERSE LIGHT (RH)
STOP LIGHT (LH)
STOP LIGHT (RH)

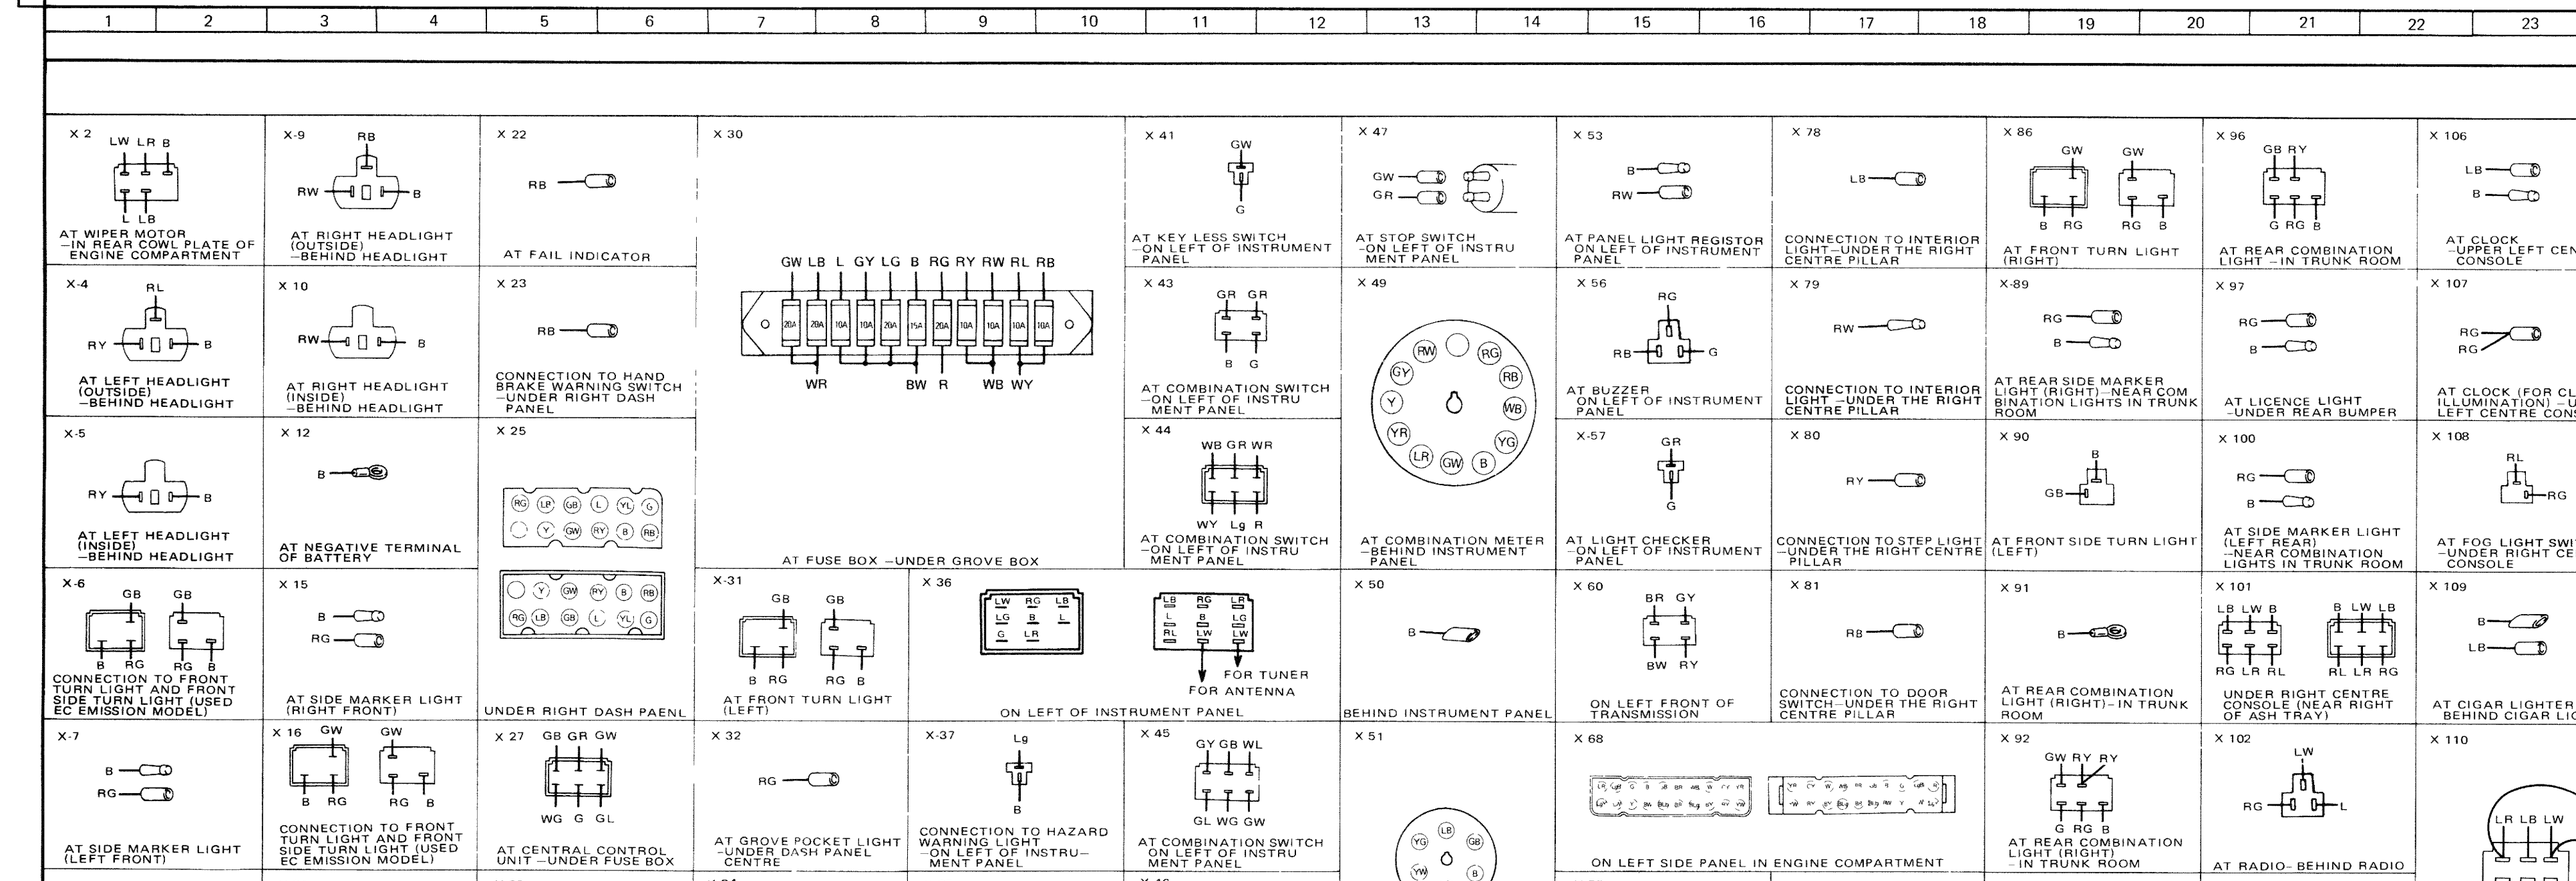
X 2 LW LR B
X-9 RB
X 22 RB
X 30 GW LB L GY LG B RG RY RW RL RB
X 41 GW G
X 47 GW GR
X 53 B RW
X 78 LB
X 86 GW GW B RG RG B
X 96 GB RY G RG B
X 106 LB B
X-4 RL RY B
X 10 RW B
X 23 RB
X 43 GR GR B G
X 49
X 56 RG RB G
X 79 RW
X-89 RG B
X 97 RG B
X 107 RG RG
X-5 RY B
X 12 B
X 25
X 44 WB GR WR WY Lg R
X-57 GR G
X 80 RY
X 90 B GB
X 100 RG B
X 108 RL RG
X-6 GB GB B RG RG B
X 15 B RG
X-31 GB GB B RG RG B
X 36
X 50 B
X 60 BR GY BW RY
X 81 RB
X 91 B
X 101 LB LW B RG LR RL B LW LB RL LR RG
X 109 B LB
X-7 B RG
X 16 GW GW B RG RG B
X 27 GB GR GW WG G GL
X 32 RG
X-37 Lg B
X 45 GY GB WL GL WG GW
X 51
X 68
X 92 GW RY RY G RG B
X 102 LW RG L
X 110
X-8
X 21
X 28 LW YB LB
X 34
X 38 RW RW
X 46 YB LY
X 77
X 85
X 94
X 103 B RG RG RG B
X 111 RW
X 12 B
X-12 B
X-36 RL
X-38 RW
X-53 RW
X-101 RL
X-108
X-118 RW
X-151
X-152
X-49 WB
X-50
X-10
X-100
X-103
X-107
X-115
X-130
X-141
X 141
X 153
X-111
X-112
X-114
X-117
X-56
X-41
X-47
X-57
X-27
X-43
X-60
X-119
X-68
X-25
X-78
X-80
X-81
X-85
X-92
X-94
X-97
X-99
X-106
X-109
X-110
X-113
20A 20A 10A 10A 20A 15A 20A 10A 10A 10A 10A
WR BW R WB WY
HIGH BEAM INDICATOR LIGHT
HEAD LIGHT (RH IN)
HEAD LIGHT (RH OUT)
HEAD LIGHT (LH IN)
HEAD LIGHT (LH OUT)
HEAD LIGHT (RH OUT)
HEAD LIGHT (LH OUT)
FOG LIGHT SWITCH
SIDE TURN SIGNAL LIGHT (F LH)
SIDE MARKER LIGHT (F LH) (ONLY FOR USA)
SIDE MARKER LIGHT (R LH) (ONLY FOR USA)
TAIL LIGHT (LH)
GLOVE BOX LIGHT
LICENSE LIGHT
SELECT LEVER INDICATOR LIGHT
CLOCK ILLUMINATION LIGHT
METER
HEATER
HEATER
ASH TRAY
ASH TRAY
RADIO
SIDE TURN SIGNAL LIGHT (F RH)
SIDE MARKER LIGHT (F RH) (ONLY FOR USA)
SIDE MARKER LIGHT (R RH) (ONLY FOR USA)
TAIL LIGHT (RH)
HAZARD WARNING LIGHT
TURN SIGNAL LIGHT (F LH)
SIDE TURN SIGNAL LIGHT (F LH) (ONLY FOR GENERAL)
TURN SIGNAL INDICATOR LIGHT (LH)
TURN SIGNAL LIGHT (R LH)
TURN SIGNAL LIGHT (F RH)
SIDE TURN SIGNAL LIGHT (F RH) (ONLY FOR GENERAL)
TURN SIGNAL INDICATOR LIGHT (RH)
TURN SIGNAL LIGHT (R RH)
REVERSE LIGHT (LH)
REVERSE LIGHT (RH)
STOP LIGHT (LH)
STOP LIGHT (RH)

AT WIPER MOTOR –IN REAR COWL PLATE OF ENGINE COMPARTMENT
AT RIGHT HEADLIGHT (OUTSIDE) –BEHIND HEADLIGHT
AT FAIL INDICATOR
AT FUSE BOX –UNDER GROVE BOX
AT KEY LESS SWITCH –ON LEFT OF INSTRUMENT PANEL
AT STOP SWITCH –ON LEFT OF INSTRU MENT PANEL
AT PANEL LIGHT REGISTOR ON LEFT OF INSTRUMENT PANEL
CONNECTION TO INTERIOR LIGHT –UNDER THE RIGHT CENTRE PILLAR
AT FRONT TURN LIGHT (RIGHT)
AT REAR COMBINATION LIGHT – IN TRUNK ROOM
AT CLOCK –UPPER LEFT CEN CONSOLE
AT LEFT HEADLIGHT (OUTSIDE) –BEHIND HEADLIGHT
AT RIGHT HEADLIGHT (INSIDE) –BEHIND HEADLIGHT
CONNECTION TO HAND BRAKE WARNING SWITCH –UNDER RIGHT DASH PANEL
AT COMBINATION SWITCH –ON LEFT OF INSTRU MENT PANEL
AT COMBINATION METER –BEHIND INSTRUMENT PANEL
AT BUZZER ON LEFT OF INSTRUMENT PANEL
CONNECTION TO INTERIOR LIGHT –UNDER THE RIGHT CENTRE PILLAR
AT REAR SIDE MARKER LIGHT (RIGHT)–NEAR COM BINATION LIGHTS IN TRUNK ROOM
AT LICENSE LIGHT –UNDER REAR BUMPER
AT CLOCK (FOR CL ILLUMINATION) –U LEFT CENTRE CONS
AT LEFT HEADLIGHT (INSIDE) –BEHIND HEADLIGHT
AT NEGATIVE TERMINAL OF BATTERY
AT COMBINATION SWITCH –ON LEFT OF INSTRU MENT PANEL
AT LIGHT CHECKER –ON LEFT OF INSTRUMENT PANEL
CONNECTION TO STEP LIGHT –UNDER THE RIGHT CENTRE PILLAR
AT FRONT SIDE TURN LIGHT (LEFT)
AT SIDE MARKER LIGHT (LEFT REAR) –NEAR COMBINATION LIGHTS IN TRUNK ROOM
AT FOG LIGHT SWI –UNDER RIGHT CE CONSOLE
CONNECTION TO FRONT TURN LIGHT AND FRONT SIDE TURN LIGHT (USED EC EMISSION MODEL)
AT SIDE MARKER LIGHT (RIGHT FRONT)
UNDER RIGHT DASH PAENL
AT FRONT TURN LIGHT (LEFT)
ON LEFT OF INSTRUMENT PANEL
FOR TUNER
FOR ANTENNA
BEHIND INSTRUMENT PANEL
ON LEFT FRONT OF TRANSMISSION
CONNECTION TO DOOR SWITCH –UNDER THE RIGHT CENTRE PILLAR
AT REAR COMBINATION LIGHT (RIGHT) – IN TRUNK ROOM
UNDER RIGHT CENTRE CONSOLE (NEAR RIGHT OF ASH TRAY)
AT CIGAR LIGHTER BEHIND CIGAR LIG
AT SIDE MARKER LIGHT (LEFT FRONT)
CONNECTION TO FRONT TURN LIGHT AND FRONT SIDE TURN LIGHT (USED EC EMISSION MODEL)
AT CENTRAL CONTROL UNIT –UNDER FUSE BOX
AT GROVE POCKET LIGHT –UNDER DASH PANEL CENTRE
CONNECTION TO HAZARD WARNING LIGHT –ON LEFT OF INSTRU– MENT PANEL
AT COMBINATION SWITCH ON LEFT OF INSTRU MENT PANEL
ON LEFT SIDE PANEL IN ENGINE COMPARTMENT
AT REAR COMBINATION LIGHT (RIGHT) – IN TRUNK ROOM
AT RADIO– BEHIND RADIO
AT FRONT TURN LIGHT (RIGHT)
AT REAR COMBINATION LIGHT (LEFT) – IN TRUNK ROOM
AT ANTENNA
AT GLOVE BOX LIGHT
AT CONNECTION TO HAND BRAKE WARNING SWITCH –UNDER RIGHT DASH PANEL
AT FAIL INDICATOR
AT SELECT LEVER INDICATOR LIGHT
AT CLOCK ILLUMINATION LIGHT
AT METER
AT HEATER
AT ASH TRAY
AT RADIO
AT SIDE TURN SIGNAL LIGHT (F RH)
AT SIDE MARKER LIGHT (F RH)
AT SIDE MARKER LIGHT (R RH)
AT TAIL LIGHT (RH)
AT HAZARD WARNING LIGHT
AT TURN SIGNAL LIGHT (F LH)
AT SIDE TURN SIGNAL LIGHT (F LH)
AT TURN SIGNAL INDICATOR LIGHT (LH)
AT TURN SIGNAL LIGHT (R LH)
AT TURN SIGNAL LIGHT (F RH)
AT SIDE TURN SIGNAL LIGHT (F RH)
AT TURN SIGNA– INDICATOR LIGHT (RH)
AT TURN SIGNAL LIGHT (R RH)
AT REVERSE LIGHT (LH)
AT REVERSE LIGHT (RH)
AT STOP LIGHT (LH)
AT STOP LIGHT (RH)