
Parts Catalog

Mazda RX-7
U.S.A.
('81-'83)

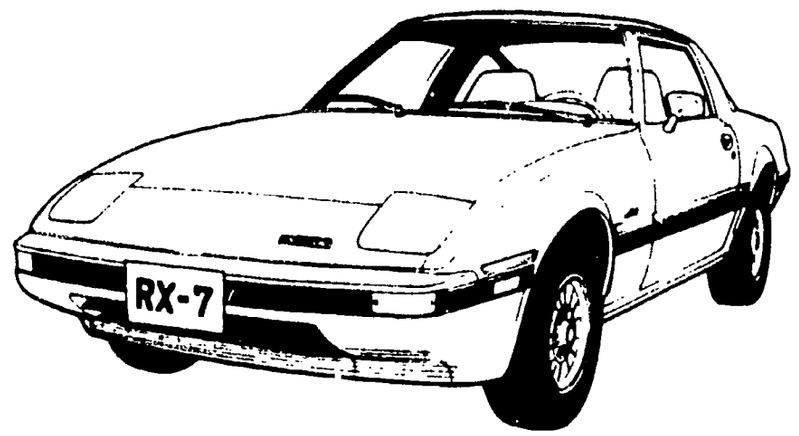


(FB331-500001 ~) (Mazda Rotary Engine Licensed by NSU-WANKEL)

April '92

mazda

PICTORIAL INDEX

ROTARY ENGINE (1/2)

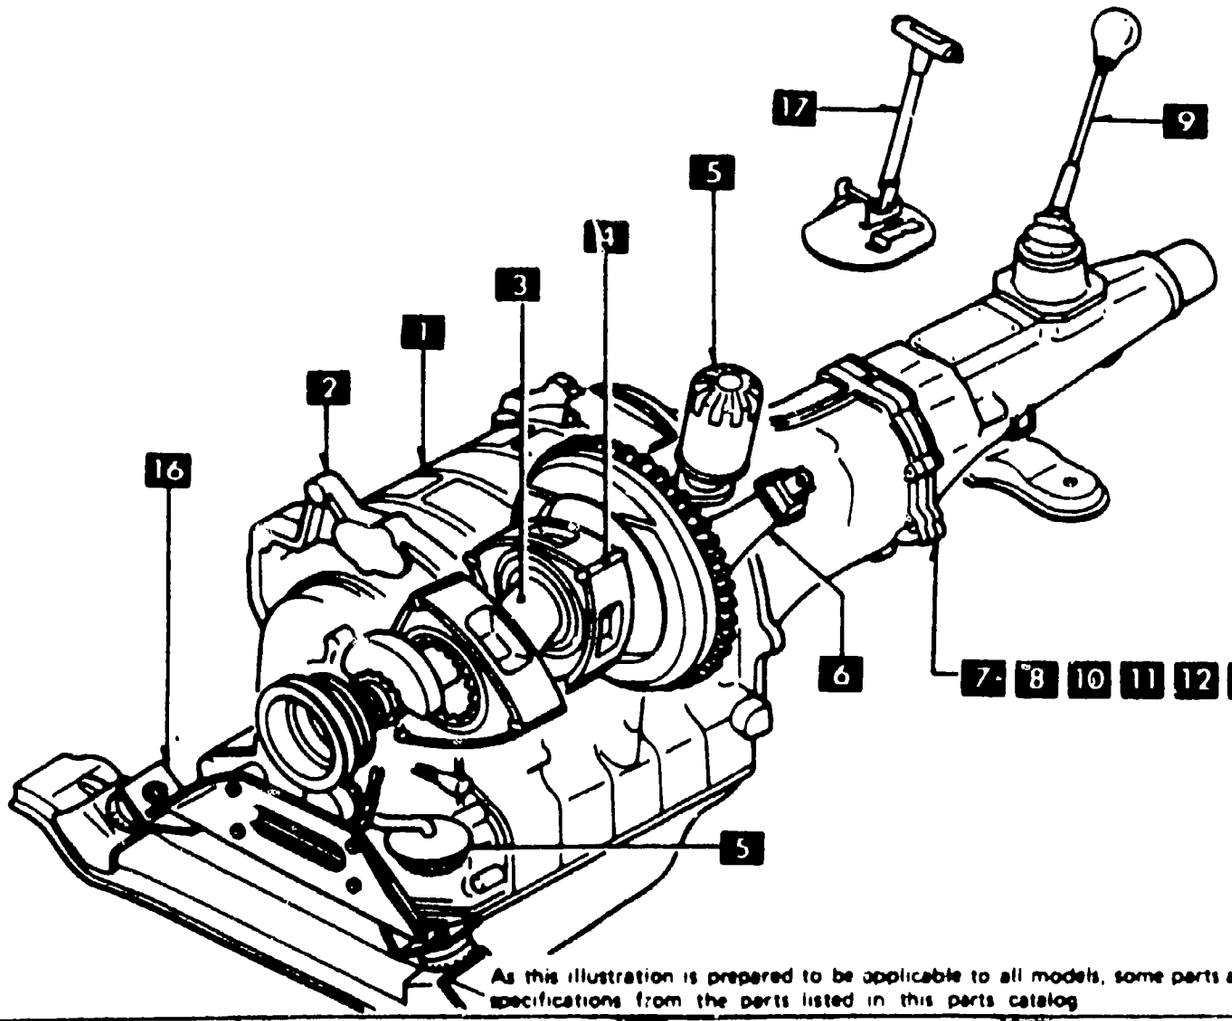

As this illustration is prepared to be applicable to all models, some parts are different in specifications from the parts listed in this parts catalog

1000A



SHORT ENGINE & GASKET SETS

1 1030A




ROTOR HOUSING

2 1040A



OIL PAN & FRONT & REAR HOUSINGS

3 1100A

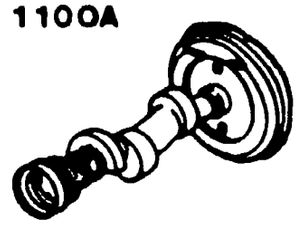


ECCENTRIC SHAFT & FLYWHEEL

4 1110A




ROTOR & RELATED

5 1400A

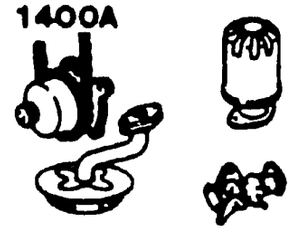


OIL PUMP & FILTER

6 1600A

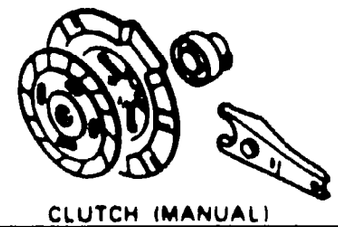


CLUTCH (MANUAL)

7 1700A

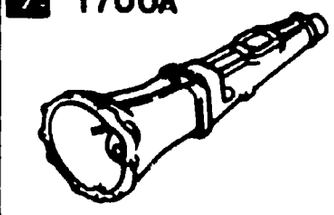


T/MISSION CASE (MANUAL)

8 1710A

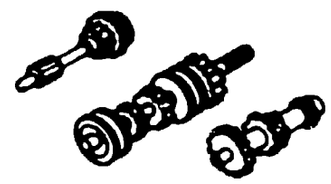

T/MISSION GEARS (MANUAL)

9 1720A

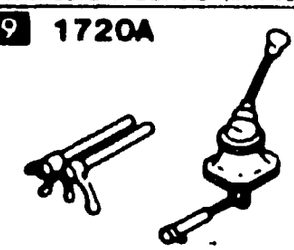

CHANGE CONTROLS (MANUAL)

10 1900A




TORQUE GLIDE (MANUAL)

11 1910A




CONVERTER, OIL PUMP & PIPING (AUTOMATIC T/MISSION)

12 1920A

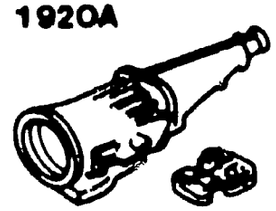


CASE & MAIN CONTROLS (AUTOMATIC T/MISSION)

13 1930A

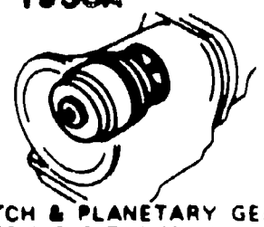

CLUTCH & PLANETARY GEARS (AUTOMATIC T/MISSION)

14 1940A

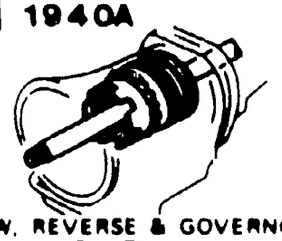


LOW, REVERSE & GOVERNOR (AUTOMATIC T/MISSION)

15 1950A




MANUAL LINKAGE (AUTOMATIC T/MISSION)

16 3900A

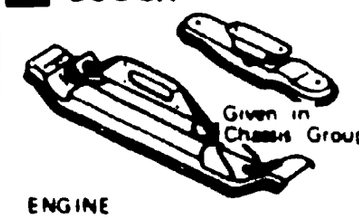

ENGINE & T/MISSION MOUNTINGS


17 4600A

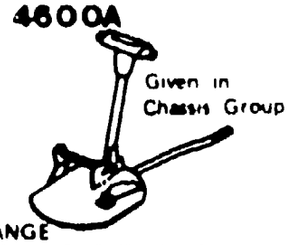

CHANGE CONTROLS (MANUAL)

PICTORIAL INDEX

ROTARY ENGINE (2/2)

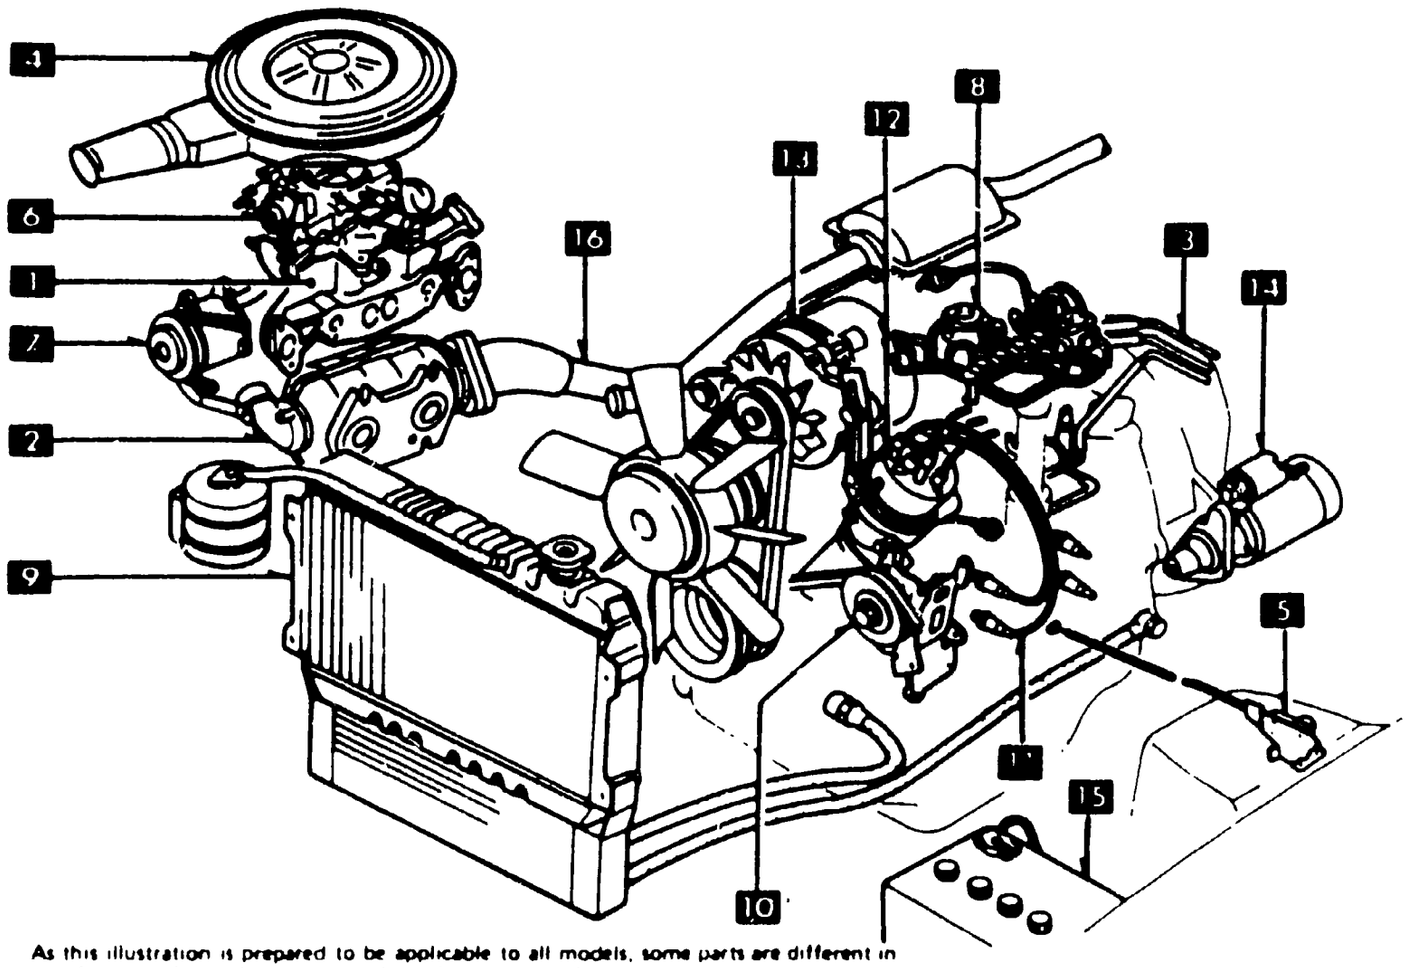


As this illustration is prepared to be applicable to all models, some parts are different in specifications from the parts listed in this parts catalog


1 1300A

IN MANIFOLD

2 1310A

THERMAL REACTOR

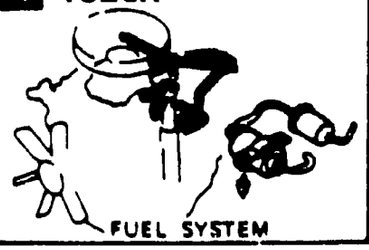3 1320A

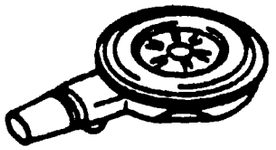FUEL SYSTEM

4 1330A

AIR CLEANER

5 1350A

STARTING ASSIST SYSTEM

6 1360A


CARBURETOR

7 1371A

EMISSION CONTROLS (AIR PUMP & CONTROL VALVE)


8 1380A

EMISSION CONTROLS (EX SIDE)

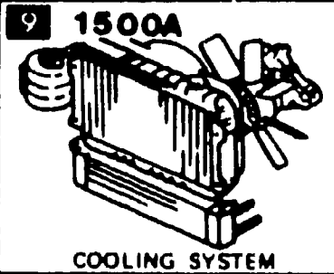
9 1500A

COOLING SYSTEM


10 1580A

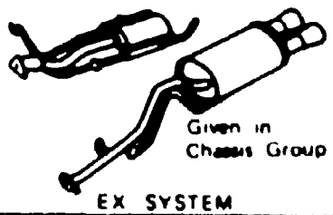COMPRESSOR BRACKET, PULLEY & BELT (AIR CONDITIONER)

16 4000A

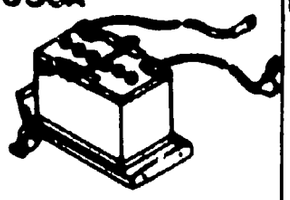
EX SYSTEM

15 1850A

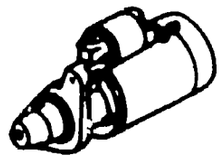BATTERY & CABLES


14 1840A

STARTER

13 1830A

ALTERNATOR

12 1820A

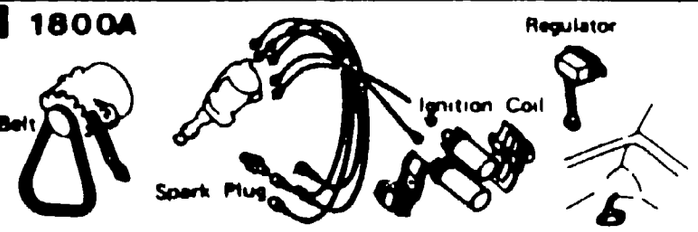
DISTRIBUTOR

11 1800A


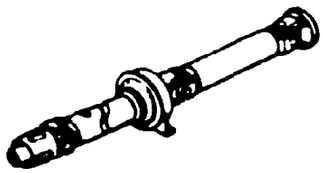
ELECTRICAL SYSTEM (ENGINE)

PICTORIAL INDEX

CHASSIS (1/2)

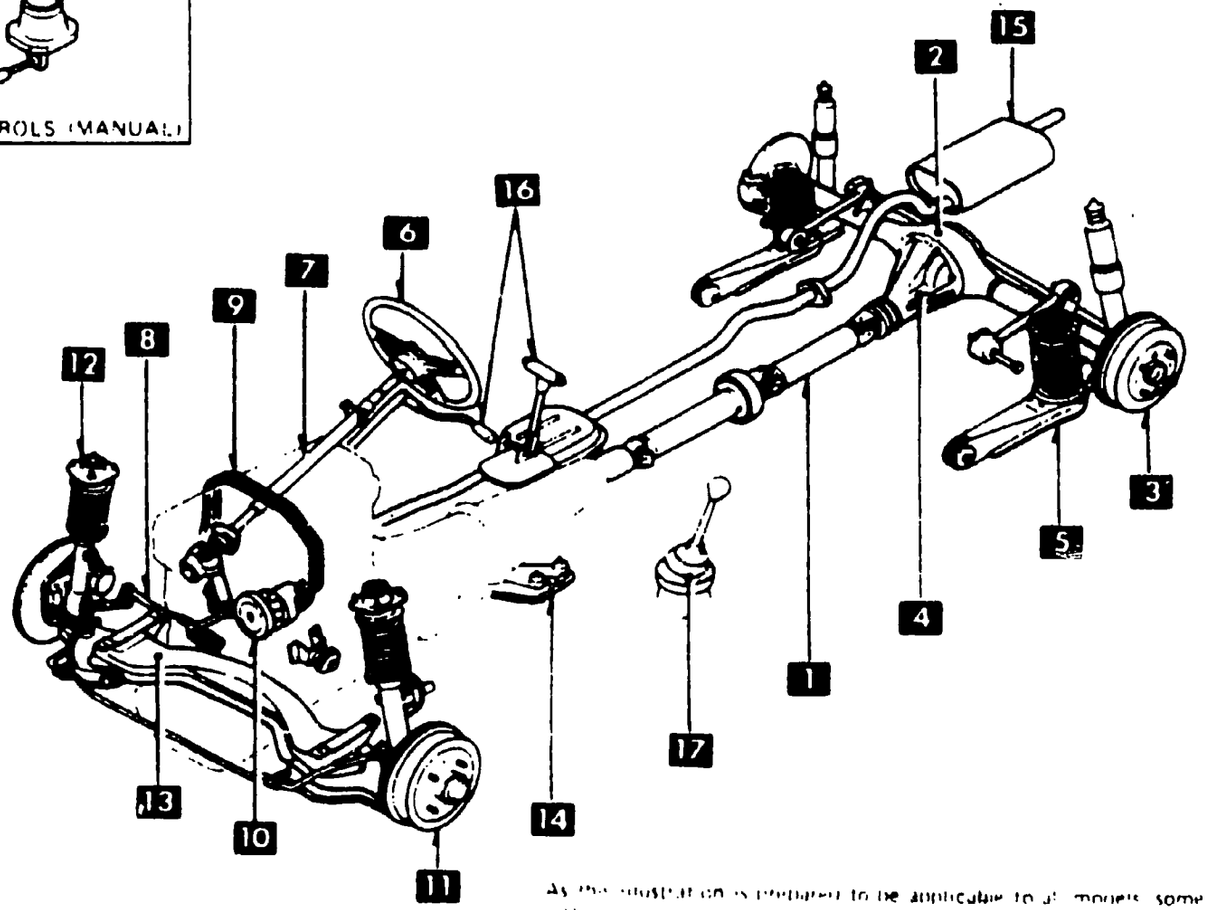


1 2500A



PROPELLER SHAFT

2 2600A

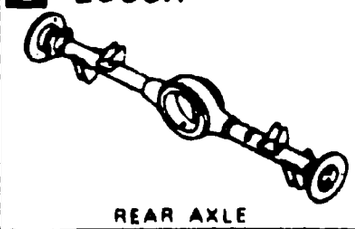


REAR AXLE

3 2610A




REAR BRAKES

4 2700A

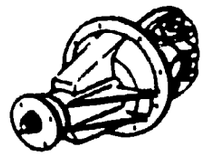

DIFFERENTIAL

5 2800A

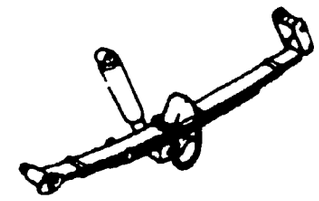


REAR SUSPENSION

6 3200A




STEERING WHEEL

7 3210A

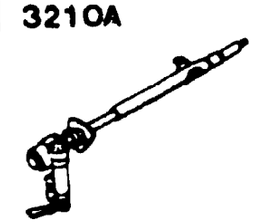

STEERING GEAR & COLUMN

8 3230A

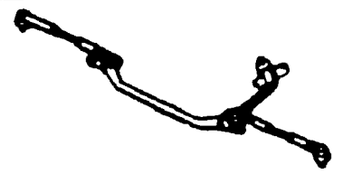

STEERING LINKAGE

9 3240A



POWER STEERING SYSTEM

10 3260A



VANE PUMP (POWER STEERING)

11 3300A




FRONT AXLE & BRAKES

12 3400A




FRONT SUSPENSION

13 3410A

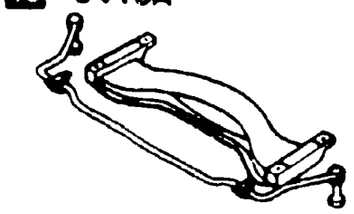


CROSSMEMBER & STABILIZER

14 3900A

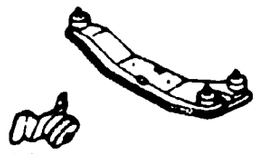


ENGINE
& TRANSMISSION MOUNTINGS

15 4000A

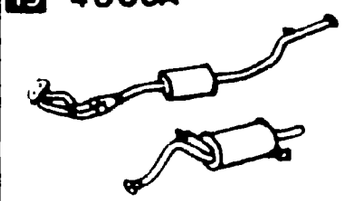


EXHAUST SYSTEM

16 4600A

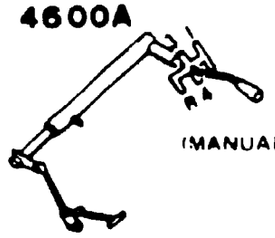


(MANUAL)

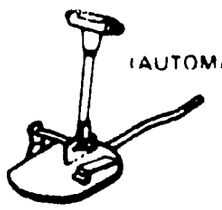

(AUTOMATIC)

CHANGE CONTROLS

17 1720A

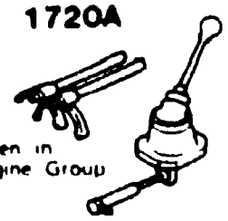


CHANGE CONTROLS (MANUAL)

As this illustration is prepared to be applicable to all models, some parts are different in specifications from the parts listed in this parts catalog.

PICTORIAL INDEX

1 3700A

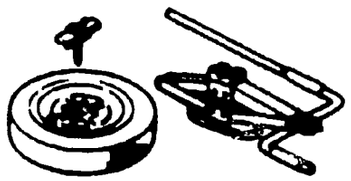

TIRE & JACK

2 4140A




CLUTCH RELEASE & MASTER CYLINDERS

3 4160A




ACCELERATOR CONTROLS

4 4200A

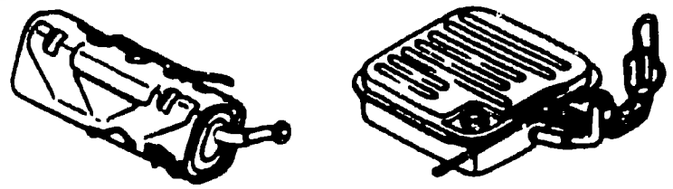


FUEL TANK

5 4300A

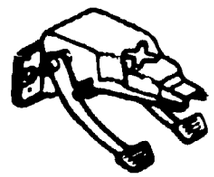


CLUTCH & BRAKE

CHASSIS (2/2)

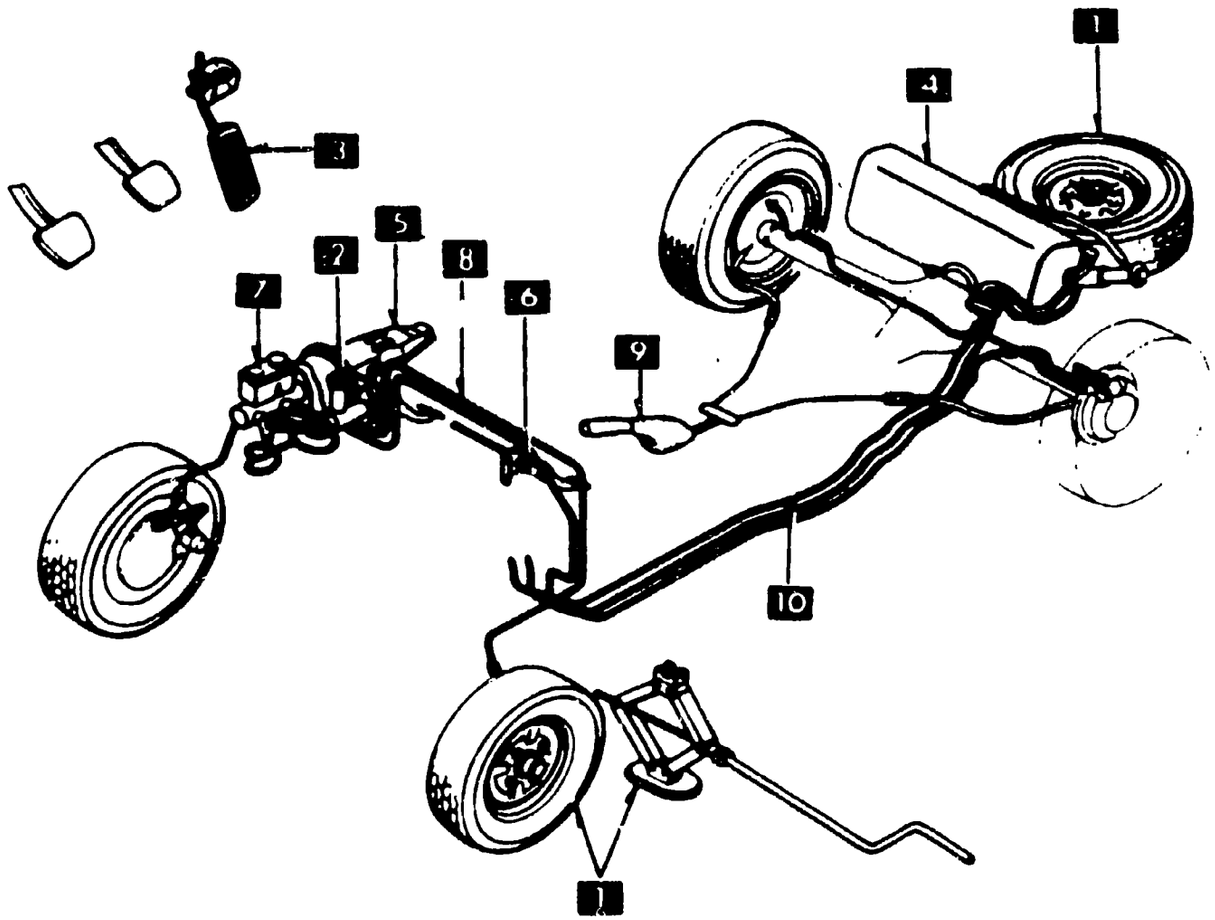


As this illustration is prepared to be applicable to all models some parts are different in specifications from the parts listed in this parts catalog


6 4310A

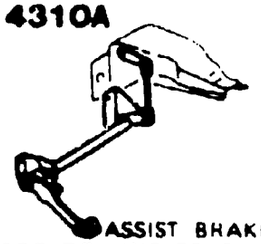

ASSIST BRAKE (FOR DRIVING SCHOOL)


7 4340A

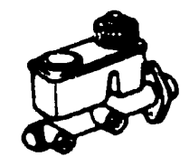

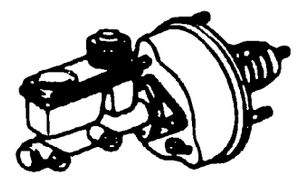


TANDEM MASTER CYL & VACUUM POWER ASSIST SYSTEM

8 4360A

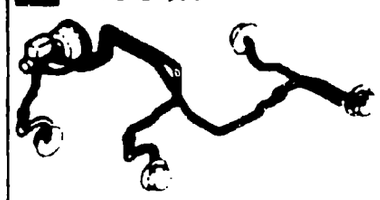


BRAKE PIPING

10 4500A

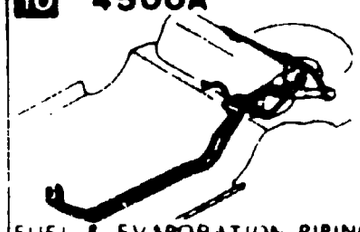

FUEL & EVAPORATION PIPINGS


9 4400A

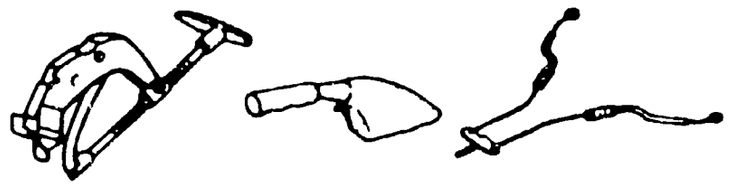

PARKING BRAKE SYSTEM

PICTORIAL INDEX

1 0900A

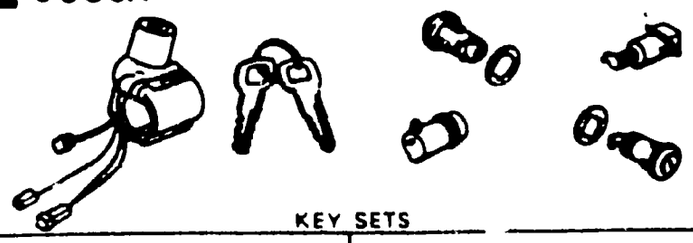

KEY SETS

2 5020A




HEAD LAMP CLEANER

3 5100A




LAMPS (FRONT & SIDE)

4 5110A

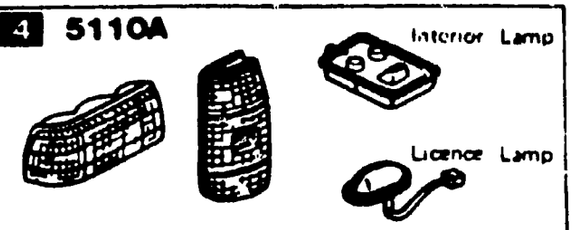


LAMPS (REAR & INTERIOR)

BODY(1/3)

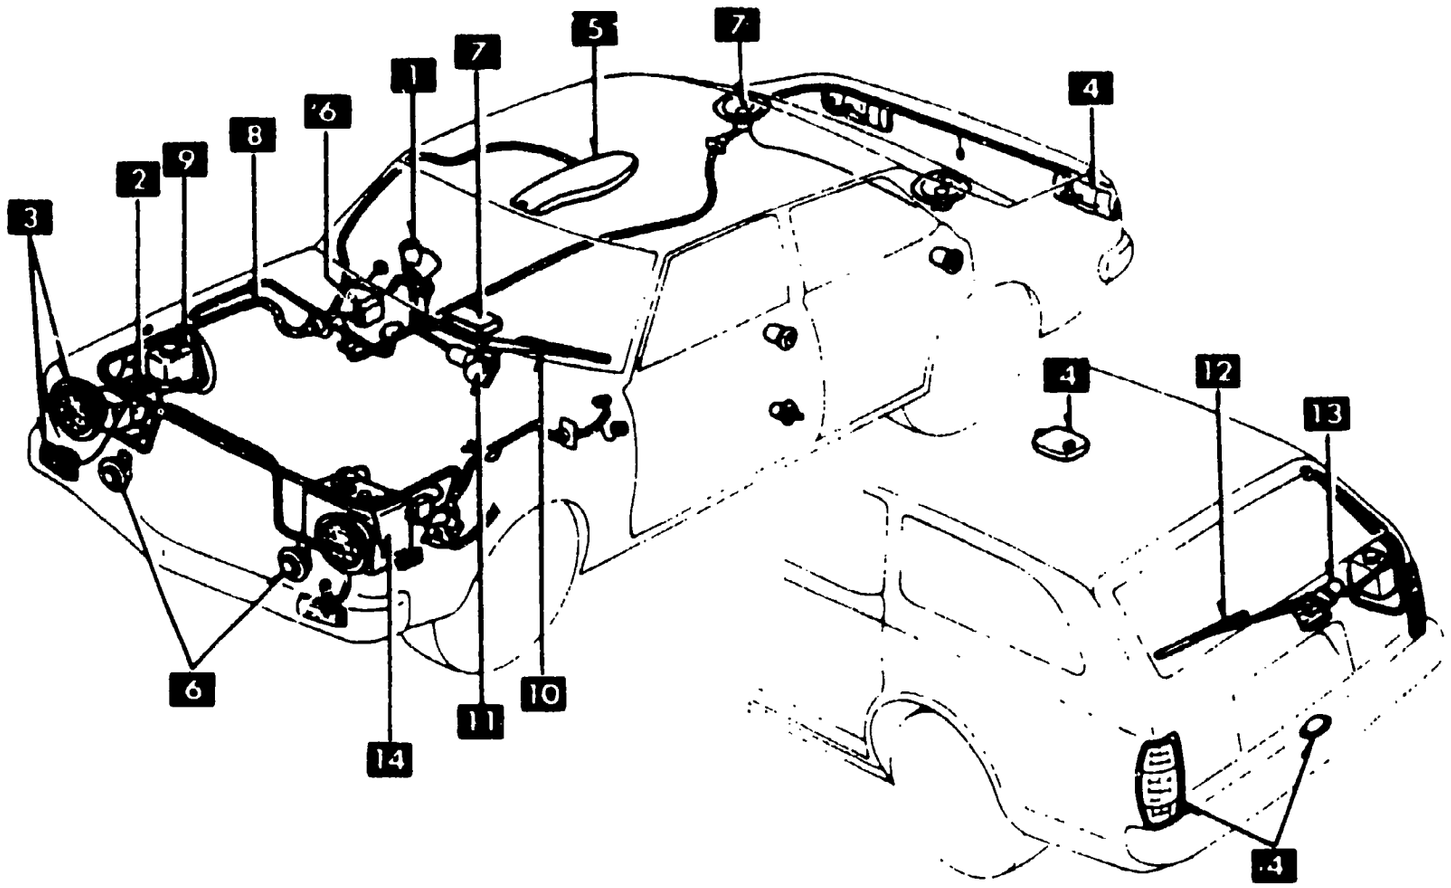


As this illustration is prepared to be applicable to all models some parts are different in specifications from the parts listed in this parts catalog

5 5130A

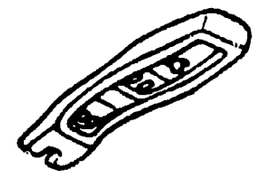


OVERHEAD CONSOLE

6 6600A

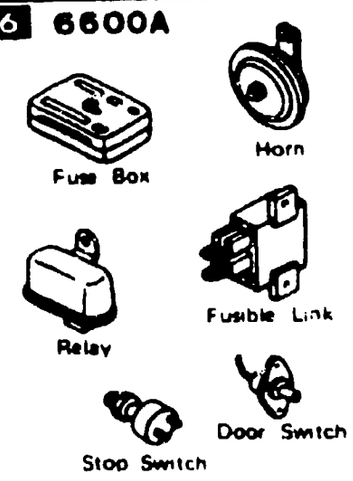


ELECTRIC EQUIPMENT (BODY)

7 6680A

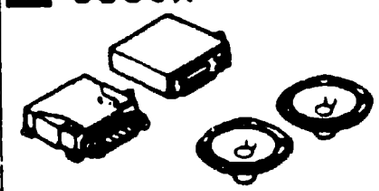

RADIO & STEREO SYSTEMS

14 1850A

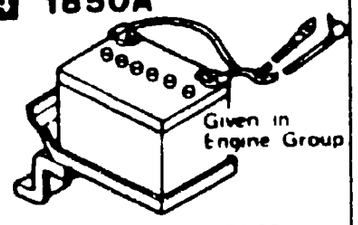


BATTERY & CABLES

13 6760A



REAR WINDOW WIPER MOTOR (COMPONENTS ONLY)

12 6750A

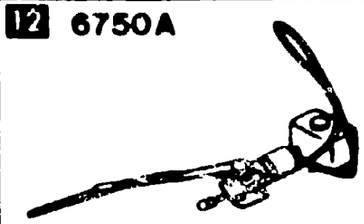

REAR WINDOW WIPER & WASHER

11 6740A




WIPER MOTOR (COMPONENTS ONLY)

10 6730A



WINDSHIELD WIPER

9 6720A

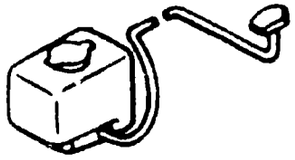

WINDSHIELD WASHER


8 6700A




WIRE HARNESS & CLAMPS

PICTORIAL INDEX


BODY(2/3)

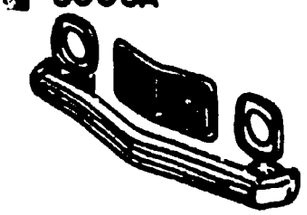
1 5000A

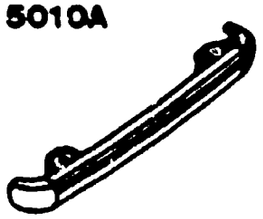FRONT BUMPER & GRILLE


2 5010A

REAR BUMPER

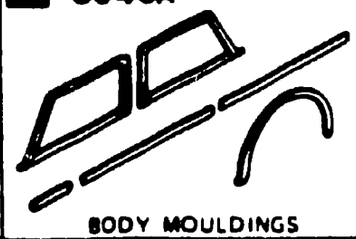
3 5030A

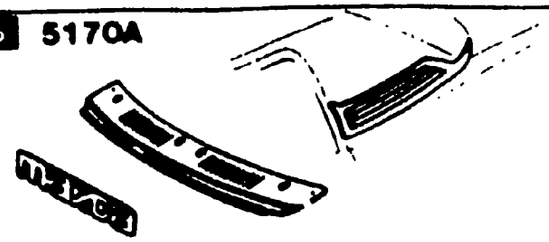WINDOW MOULDINGS

4 5040A

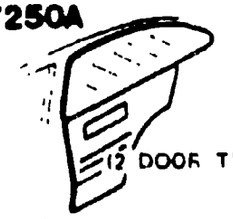BODY MOULDINGS


5 5170A

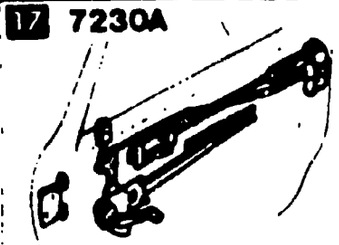COWL & EXTRACTOR GRILLES & ORNAMENTS


18 7250A

(2 DOOR TYPE)
REAR WINDOW GLASS & TRIM

17 7230A

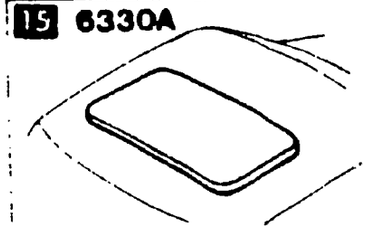REAR DOOR MECHANISMS


16 7200A

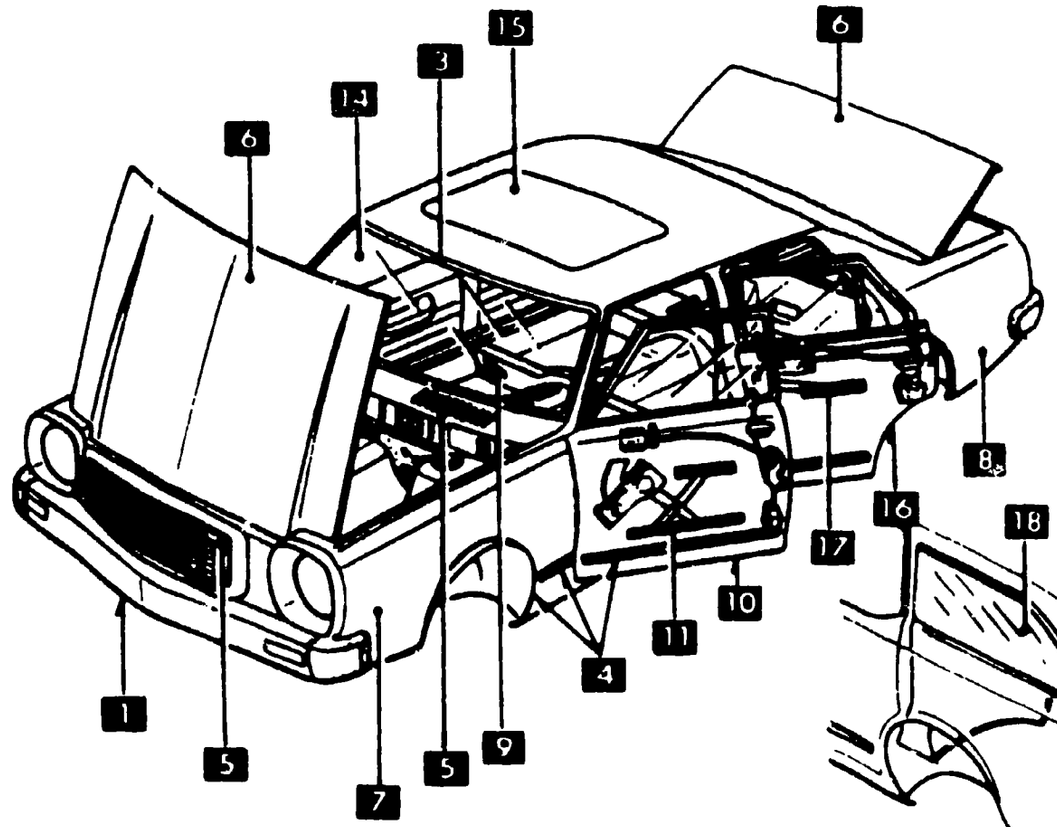
REAR DOOR


15 6330A

SUNROOF

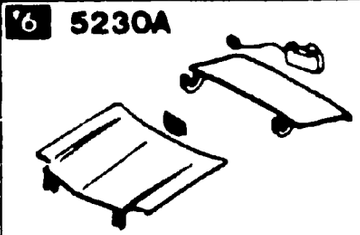



As this illustration is prepared to be applicable to all models, some parts are different in specifications from the parts listed in this parts catalog

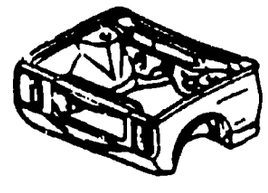
6 5230A

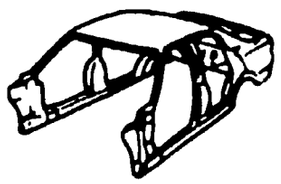BONNET & TRUNK LID


7 5310A

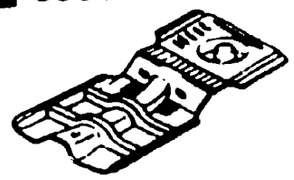BODY PANELS (FRONT)

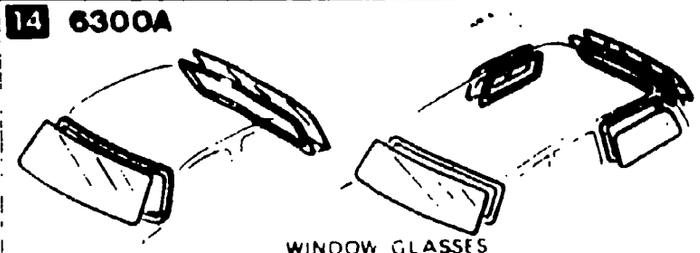
8 5340A

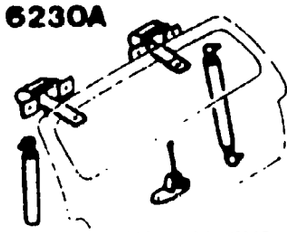BODY PANELS (SIDE & ROOF)


9 5360A

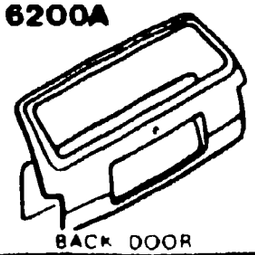BODY PANELS (FLOOR)

14 6300A

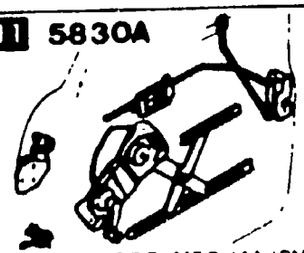WINDOW GLASSES

13 6230A

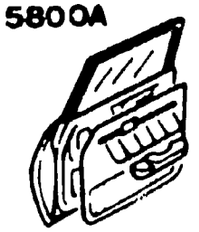BACK DOOR MECHANISMS


12 6200A

BACK DOOR

11 5830A

FRONT DOOR MECHANISMS

10 5800A

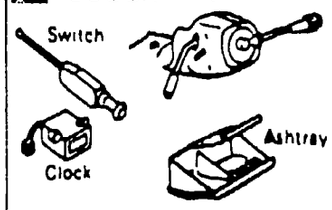FRONT DOOR


PICTORIAL INDEX

1 5500A




DASHBOARD EQUIPMENT

2 5540A

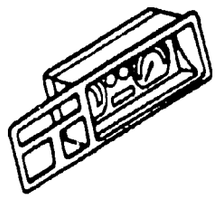


METERS

3 5560A

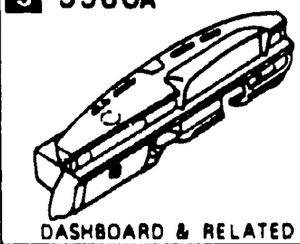


DASHBOARD & RELATED

4 5570A

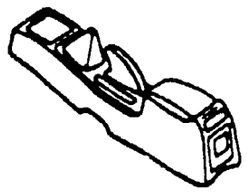


CONSOLE

5 5580A

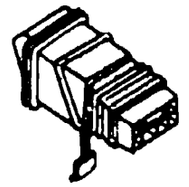


VENTILATOR

6 5700A

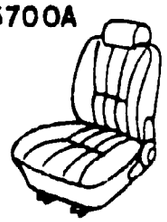


FRONT SEAT

17 6930A

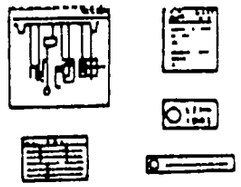


CAUTION PLATES

16 6900A

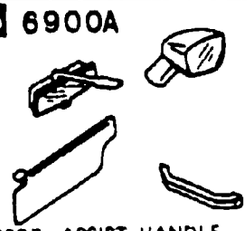

VISOR, ASSIST HANDLE & MIRRORS

15 6870A

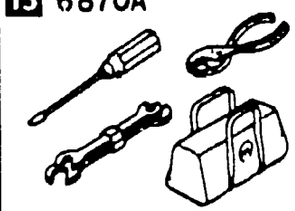


SERVICE TOOLS

14 6860A



FLOOR MATS & PADS

BODY(3/3)

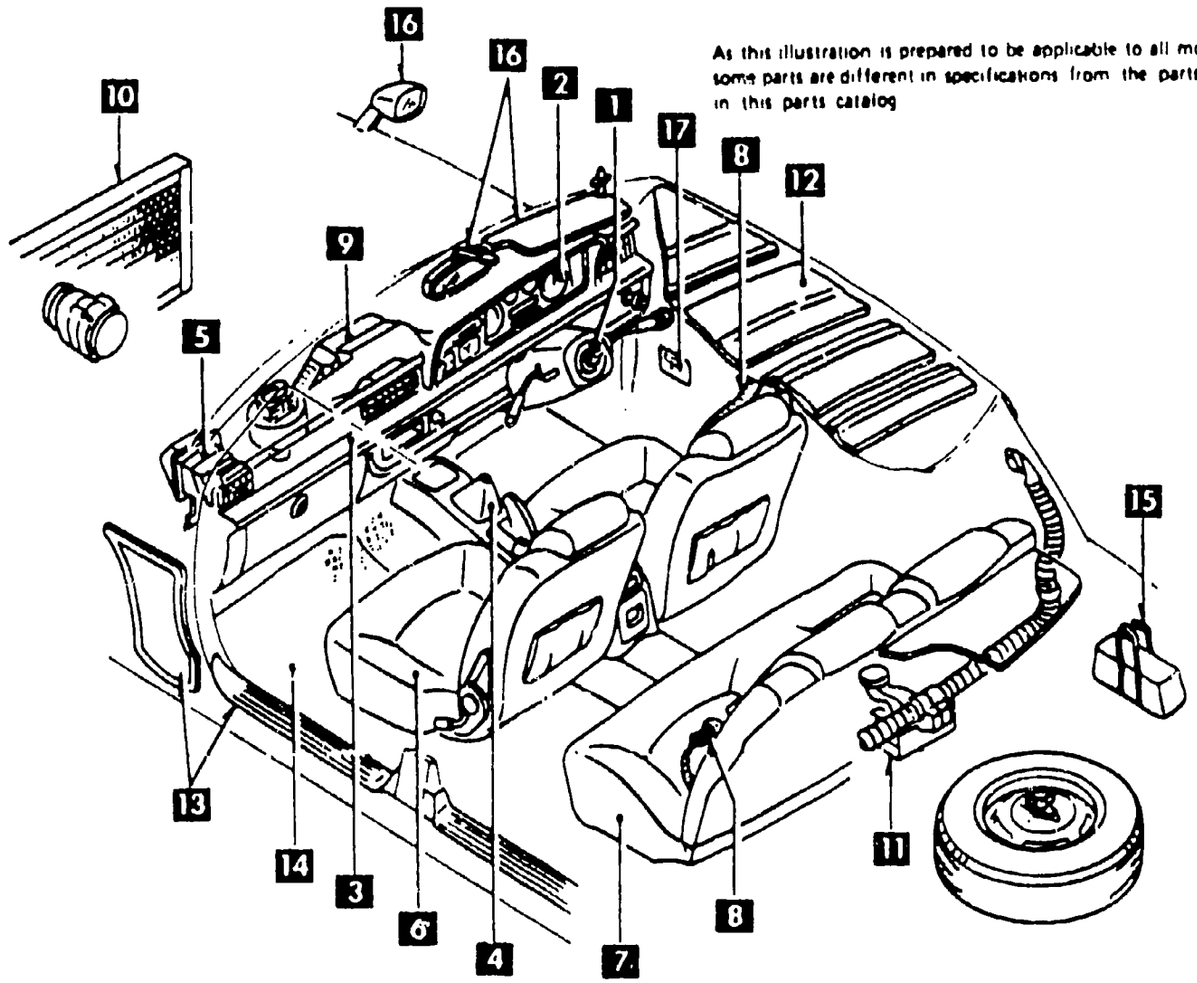


As this illustration is prepared to be applicable to all models, some parts are different in specifications from the parts listed in this parts catalog

7 5720A




REAR SEAT

8 5760A

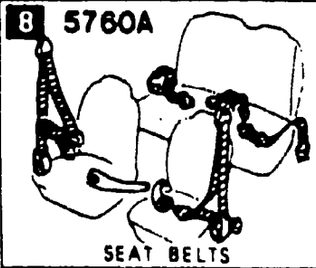


SEAT BELTS

9 6100A

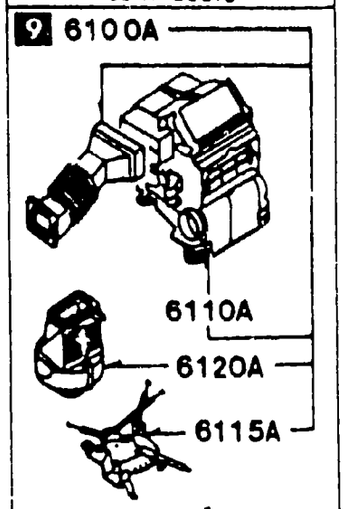


HEATER

13 6840A

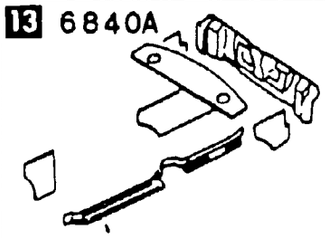


TRIM & SCUFF PLATE

12 6860A

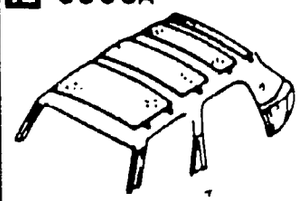


CEILING TRIM

11 6180A

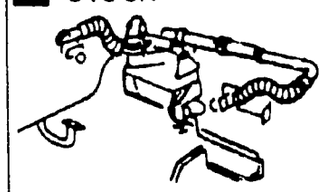


REAR COOLER

10 6130A

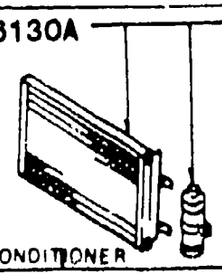


AIR CONDITIONER

(ENGINE GROUP)

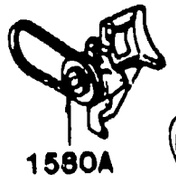



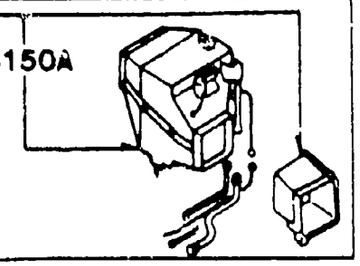

MODEL IDENTIFICATION

MAZDA RX-7

(1981 MODELS MANUFACTURED FROM JULY 1980.)

(1982 MODELS MANUFACTURED FROM MAY 1981.)

(1983 MODELS MANUFACTURED FROM JULY 1982.)

MDL NO.	STATE		ENG	T/M		BRAKE		ROOF		YEAR				VIN
	CALIFORNIA	FEDERAL	ROTARY 12A	MANUAL 5 SPEED	AUTOMATIC	FRONT DISC	4 WHEEL DISC	SUNROOF	NORMAL ROOF	1981	1982	1983	1984	
FA02	CAL		12	5S		F			N/R	X				FB331-500001-600000
FA03	CAL		12	5S		F		S/R		X				FB331-500001-600000
FA04	CAL		12		A/T	F			N/R	X				FB331-500001-600000
FA05	CAL		12		A/T	F		S/R		X				FB331-500001-600000
FA20	CAL		12	5S			F/R	S/R		X				FB331-500001-600000
FA21	CAL		12		A/T		F/R	S/R		X				FB331-500001-600000

MODEL IDENTIFICATION

MAZDA RX-7

(1981 MODELS MANUFACTURED FROM JULY 1980.)

(1982 MODELS MANUFACTURED FROM MAY 1981.)

(1983 MODELS MANUFACTURED FROM JULY 1982.)

MDL NO.	STATE		ENG	T/M		BRAKE		ROOF		YEAR				VIN
	CALIFORNIA	FEDERAL	ROTARY 12A	MANUAL 5 SPEED	AUTOMATIC	FRONT DISC	4 WHEEL DISC	SUNROOF	NORMAL ROOF	1981	1982	1983	1984	
FA07		FED	12	5S		F			N/R	X				FB331-500001-600000
FA08		FED	12		A/T	F			N/R	X				FB331-500001-600000
FA09		FED	12	5S		F		S/R		X				FB331-500001-600000
FA10		FED	12		A/T	F		S/R		X				FB331-500001-600000
FA18		FED	12	5S			F/R	S/R		X				FB331-500001-600000
FA19		FED	12		A/T		F/R	S/R		X				FB331-500001-600000
FA32	CAL		12	5S		F			N/R		X			FB331-600001-700000

MODEL IDENTIFICATION

MAZDA RX-7

(1981 MODELS MANUFACTURED FROM JULY 1980.)

(1982 MODELS MANUFACTURED FROM MAY 1981.)

(1983 MODELS MANUFACTURED FROM JULY 1982.)

MDL NO.	STATE		ENG	T/M		BRAKE		ROOF		YEAR				VIN
	CALIFORNIA	FEDERAL	ROTARY 12A	MANUAL 5 SPEED	AUTOMATIC	FRONT DISC	4 WHEEL DISC	SUNROOF	NORMAL ROOF	1981	1982	1983	1984	
FA34	CAL		12	5S		F		S/R			X			FB331-600001-700000
FA35	CAL		12		A/T	F		S/R			X			FB331-600001-700000
FA40	CAL		12	5S			F/R	S/R			X			FB331-600001-700000
FA41	CAL		12		A/T		F/R	S/R			X			FA331-600001-700000
FA30		FED	12	5S		F			N/R		X			FA331-600001-700000
FA31		FED	12		A/T	F			N/R		X			FB331-600001-700000

MODEL IDENTIFICATION

MAZDA RX-7

(1981 MODELS MANUFACTURED FROM JULY 1980.)

(1982 MODELS MANUFACTURED FROM MAY 1981.)

(1983 MODELS MANUFACTURED FROM JULY 1982.)

MDL NO.	STATE		ENG	T/M		BRAKE		ROOF		YEAR				VIN
	CALIFORNIA	FEDERAL	ROTARY 12A	MANUAL 5 SPEED	AUTOMATIC	FRONT DISC	4 WHEEL DISC	SUNROOF	NORMAL ROOF	1981	1982	1983	1984	
FA36		FED	12	5S		F		S/R			X			FB331-600001-700000
FA37		FED	12		A/T	F		S/R			X			FB331-600001-700000
FA38		FED	12	5S			F/R	S/R			X			FB331-600001-700000
FA39		FED	12		A/T		F/R	S/R			X			FB331-600001-700000
FA42		FED	12	5S		F			N/R			X		FB331-700000-
FA43		FED	12		A/T	F			N/R			X		FB331-700000-
FA46		FED	12	5S		F		S/R			X			FB331-700000-

MODEL IDENTIFICATION

MAZDA RX-7

(1981 MODELS MANUFACTURED FROM JULY 1980.)

(1982 MODELS MANUFACTURED FROM MAY 1981.)

(1983 MODELS MANUFACTURED FROM JULY 1982.)

MDL NO.	STATE		ENG	T/M		BRAKE		ROOF		YEAR				VIN
	CALIFORNIA	FEDERAL	ROTARY 12A	MANUAL 5 SPEED	AUTOMATIC	FRONT DISC	4 WHEEL DISC	SUNROOF	NORMAL ROOF	1981	1982	1983	1984	
FA47		FED	12		A/T	F		S/R				X		FB331-700001-
FA48		FED	12	5S			F/R	S/R				X		FB331-700001-
FA49		FED	12		A/T		F/R	S/R				X		FB331-700001-
FA44	CAL		12	5S		F			N/R			X		FB331-700001-
FA45	CAL		12		A/T	F			N/R			X		FB331-700001-
FA50	CAL		12	5S		F		S/R				X		FB331-700001-
FA51	CAL		12		A/T	F		S/R				X		FB331-700001-
FA52	CAL		12	5S			F/R	S/R				X		FB331-700001-
FA53	CAL		12		A/T		F/R	S/R				X		FB331-700001-

LIST OF MONTHLY STARTING VIN (CHASSIS NO.)

'81 MODEL

YR./NO. / MODEL	JAN. 80/1	FEB. 80/2	MAR. 80/3	APR. 80/4	MAY 80/5	JUN. 80/6	JUL. 80/7	AUG. 80/8	SEP. 80/9	OCT. 80/10	NOV. 80/11	DEC. 80/12
RX-7 FB331					...	...	500001	508876	513736	517335	518973	514495

'81 MODEL

YR./NO. / MODEL	JAN. 81/1	FEB. 81/2	MAR. 81/3	APR. 81/4	MAY 81/5	JUN. 81/6	JUL. 81/7	AUG. 81/8	SEP. 81/9	OCT. 81/10	NOV. 81/11	DEC. 81/12
RX-7 FB331	518602	521856	525552	529439	533994	...	...	...				

'82 MODEL

YR./NO. / MODEL	JAN. 81/1	FEB. 81/2	MAR. 81/3	APR. 81/4	MAY 81/5	JUN. 81/6	JUL. 81/7	AUG. 81/8	SEP. 81/9	OCT. 81/10	NOV. 81/11	DEC. 81/12
RX-7 FB331			...	...	...	600001	605980	610656	613695	618135	622546	626755

'82-'83 MODEL

YR./NO. / MODEL	JAN. 82/1	FEB. 82/2	MAR. 82/3	APR. 82/4	MAY 82/5	JUN. 82/6	JUL. 82/7	AUG. 82/8	SEP. 82/9	OCT. 82/10	NOV. 82/11	DEC. 82/12
RX-7 FB331	629395	633361	637250	642150	647749	652186	700132	703771				

LIST OF COMPLETE ASSEMBLY UNIT'S PART NUMBERS

COMPLETE MODEL NO.	ENGINE	TRANSMISSION	REAR AXLE	CABIN	REMARKS
FA42	8231-02-000	M520-05-000	F025-05-000	FA42-07-000	Federal M/T Normal roof Front disc brake only
FA43	8232-02-000	AT09-19-000	F025-05-000	FA42-07-000	Federal A/T Normal roof Front disc brake only
FA46	8231-02-000	M520-05-000	F025-05-000	FA46-07-000	Federal M/T Sunroof Front disc brake only
FA47	8232-02-000	AT09-19-000	F025-05-000	FA46-07-000	Federal A/T Sunroof Front disc brake only
FA48	8231-02-000	M520-05-000	F026-05-000	FA46-07-000	Federal M/T Sunroof Front & rear disc brake
FA49	8232-02-000	AT09-19-000	F026-05-000	FA46-07-000	Federal A/T Sunroof Front & rear disc brake
FA44	8233-02-000	M520-05-000	F025-05-000	FA42-07-000	California M/T Normal roof Front disc brake only
FA45	8234-02-000	AT09-19-000	F025-05-000	FA42-07-000	California A/T Normal roof Front disc brake only
FA50	8233-02-000	M520-05-000	F025-05-000	FA46-07-000	California M/T Sunroof Front disc brake only
FA51	8234-02-000	AT09-19-000	F025-05-000	FA46-07-000	California A/T Sunroof Front disc brake only
FA52	8233-02-000	M520-05-000	F026-05-000	FA46-07-000	California M/T Sunroof Front & rear disc brake
FA53	8234-02-000	AT09-19-000	F026-05-000	FA46-07-000	California A/T Sunroof Front & rear disc brake

NOTE: Complete assemblies are available and manufactured in accordance with current production specifications only.

INSTRUCTIONS

HOW TO LOCATE PARTS IN THE CATALOG

Realistically, there can only be four possible scenarios when looking for a part(s). These are:

1. Either **image of the part** or the **location** on vehicle are known.

2. **D-Code** and/or **Group number** (of part) are known.

3. **Part Number** is known.

4. **Name of part** is known.

If one or more of the items listed above are known, the parts catalog user may use the appropriate index to facilitate part(s) location. The four indeces that may be used are:

PICTORIAL INDEX -
Use if either the image of the part and/or location on vehicle are known.

SECTION NUMBER INDEX -
Use if D-Code, Group Number or type of part is known.

PART NUMBER INDEX -
Use if part number is known.

ALPHABETICAL INDEX -
Use if name of part is known.

The following two pages outline how to use these indeces.

USING THE PICTORIAL INDEX

1. The PICTORIAL INDEX is the 1st column of every fiche.

2. Decide whether the desired part is an engine, chassis or body part.

3. Look through the PICTORIAL INDEX for the part. Take note of all possible fiche locations where the part may be found. These information will be useful in thoroughly tracking down the part.

4. Once the appropriate illustration is found, note the section number. Refer to the SECTION NUMBER INDEX for fiche location.

USING THE SECTION NUMBER INDEX

1. The SECTION NUMBER INDEX is the first row of every fiche.

2. The column labeled STARTING LOCATION denotes the microfiche GRID LOCATION for a particular section.

   EXAMPLE:

   1 - G6
   1 = denotes the fiche number, i.e., 1 of 3, 2 of 3, 3 of 3
   G = denotes the horizontal row location
   6 = denotes the vertical column location

3. As an additional feature, the sections located in every column are enclosed in a "highlight box" in the SECTION NUMBER INDEX.

4. At this point, it is just a simple matter of going to the correct frame and locating the desired part number.

USING THE PART NUMBER INDEX

1. If the part number is known, simply use the PART NUMBER INDEX.

2. The PART NUMBER INDEX is located at the very end of the catalog, on the last fiche of a fiche set.

3. The index shows the section number and the grid location where the part number may be found.

4. When the PART NUMBER INDEX is used, remember that the part number is NOT read from "left to right". The base part number is read first. The base part number consists of the center two digits plus the next three (or four) digits to the right.

5. Use the grid location to go to the appropriate frame where the part number may be found. Cross-reference the part number with the illustration and text to ensure that it is indeed the desired part.

USING THE ALPHABETICAL INDEX


1. If the name of the part is known, simply use the ALPHABETICAL INDEX.

2. The ALPHABETICAL INDEX is located right before the PART NUMBER INDEX, at the very end of the catalog, on the last fiche of a fiche set.

3. The ALPHABETICAL INDEX contains the section number and the grid location where the desired part may be found.

4. Use the grid location to go to the appropriate frame where the part number may be found. Cross-reference the part number with the illustration and text to ensure that it is indeed the desired part.

HOW TO INTERPRET THE ILLUSTRATION

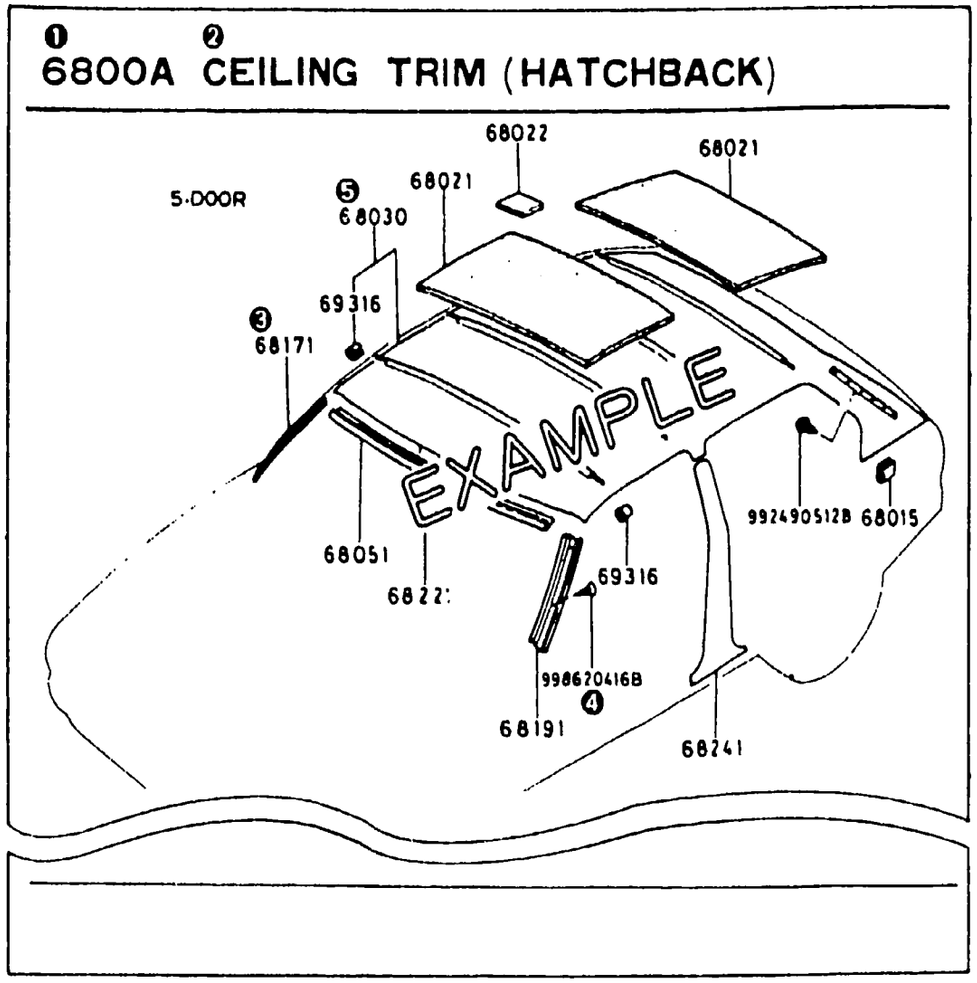

In the example shown above, the interpretation of each item appearing in the illustration area is as follows.

❶ SECTION NUMBER

Each illustration is given a Section Number, which is a "IDENTIFICATION NUMBER" of the group of parts classified in function.

Section Number basically consists of four numeric characters and alpha "A". But when a Section (a group of parts) is shown in more than one illustration over the same catalog, an additional alphabetical character is incorporated, e.g.,

Section No.	Section Name
6800A	Ceiling Trim (Hatchback)
6800AA	Ceiling Trim (Wagon)

[Note]
Illustrations are always arranged in numerical sequence by SECTION NUMBER throughout the fiches in the set. (Exception: Section No. "0900A key Sets" is located in the first section of Body group.)

❷ SECTION NAME

This is a descriptive name of the illustration (the group of parts).

❸ D-CODE (KEY NUMBER)

D-Code consists of five or six digits, and serves as a "KEY NUMBER" to co-ordinate a part's illustration with its related text.

[Note]
Those parts which appear in the illustration without D-Code are not available as spare parts. (Exception: Most Standard Parts do not have D-Code, but are available as spare parts.)

❹ STANDARD PART NUMBER

Those parts which are standardized in form, dimension, material, etc. such as bolts, nuts, washers, etc. are called "Standard Parts". In most cases, Standard Part Numbers are shown on the illustration instead of via the D-Code, and are distinguised from D-Code by the number which consists of nine or ten digits starting with "9", e.g., 99862-0416B. Those Parts do not appear in the text and part number index.

❺ ASSEMBLY AND COMPONENTS' RELATIONSHIP

The relationship between an Assembly and its Components is indicated in the illustration but not in the text.

If the D-Code appeared as the example, the correct interpretation of that would be: D-Code 68030 includes D-Code 69316 and Top Ceiling (no D-Code indicated).

HOW TO INTERPRET THE TEXT

IMPORTANT
As there are many abbreviated words used in the text, refer to "Abbreviation List" located in the lower corner of each fiche (frame No. N1).

6800A-1 CEILING TRIM (HATCHBACK)

D-CODE (Key No.)	PART NAME	PART No.	Qty	MODEL/DESCRIPTION	VIN (Chassis No.)
❶ 68030	❷ CEILING, TOP	❹ 8531-68-030	❻ 1	❼ (USE W/DEFROSTER) 3-DOOR ❽	
	❸ BLACK	❺ 00			
	BEIGE	31			
		85?-68-030	1	(USE W/O DEFROSTER) 5-DOOR	
	BLACK	00			
	BEIGE	31			
68051	PLATE, T/CEILING	853-68-051	1		FA4PS.. 500001 –522625 FA4TS.. 500001 –688439
	❾ <AN>	❿ •853-68-051A	1		⓫ FA4PS.. 522627– FA4TS.. 688440–

EXAMPLE

In the example shown above, the interpretation of the information appearing in each column is as follows.

❶ D-CODE (KEY NUMBER)
This is to serve as a "KEY NUMBER" to co-ordinate with a part on the illustration.
Those parts which are identical in function and descriptive name, are given a common code over the Mazda Spare Parts.
Within each Section Number, the D-Code appears in numerical sequence.

❷ PART NAME
Part Names are shown in English and/or French and/or Spanish and/or German, depending upon Catalogs and are given to each "D-CODE".

❸ COLOR NAME
Color Names appear here when Color Codes are indicated in the "PART No." column. These are shown in English only.

❹ PART NUMBER
Under the same D-Code, if there are more than one Part Number, Part Numbers are always listed in numerical and/or alphabetical sequence regardless of the order of modification history of parts.

❺ COLOR CODE
When Color Code(s) appear(s), the indicated Part Number requires the Color Code to properly identify the color of the part, e.g., 8531-68-030 00, 8531-68-030 31.

❻ QUANTITY
This denotes the Quantity of each part number per the D-Code used on the applicable model(s).

❼ DESCRIPTION
An additional descriptive information for each part is provided as necessary.

❽ MODEL APPLICATION
Model Application for a part is shown in this column if necessary.
If there is no Model Application indicated, the affected part is applicable to "ALL MODELS" covered in the page.
For further information, refer to "HOW TO INTERPRET THE MODEL APPLICATION" shown later (frame No. G16).

❾ INTERCHANGEABILITY CODE
The code in < > brackets appearing in this column indicates the level of interchangeability between the indicated part and the former one.
For the definition of the Codes, refer to "INTERCHANGEABILITY CODE LIST" shown in the lower corner of each fiche (frame No. N1).

❿ NEW PART NUMBER'S SIGN
An asterisk (•) appearing in the "Part Number" column indicates that the affected Part Number has been newly added since the last edition.


⓫ VIN (CHASSIS No.)
VIN (Vehicle Identification Number) is shown in this column if necessary, to identify the vehicles applicable to the affected part.
For further details, refer to "HOW TO INTERPRET THE VIN (CHASSIS No.)" located in frame No. H16 of this fiche.

HOW TO INTERPRET THE VIN (CHASSIS No.)

VEHICLE IDENTIFICATION SYSTEM FOR MAZDA RX-7 SERIES (1981–)

Vehicle Identification Number (VIN) for RX-7 (1981 and later year models) consists of World Manufacturer Identifier, Vehicle Description Section (VDS), Check Digit, Model Year Code and Production Serial Number which is sequentially numbered within each VDS.

Shown below as an example is the VIN for Mazda RX-7 (1981 model).

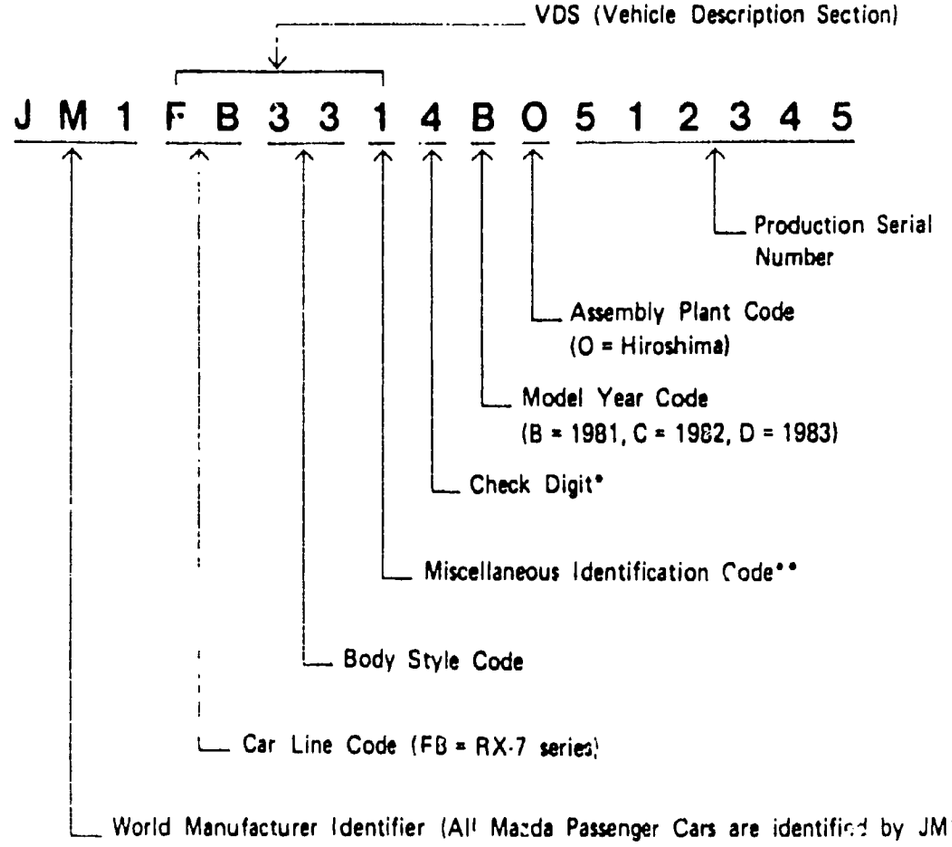

* Check Digit is included as a VIN security feature to permit law enforcement verification of the authenticity of a suspected illegal VIN plate. This single digit number is determined, based upon a complex mathematical formula which is applied to each vehicle's VIN number.

** Miscellaneous Identification Code identifies major components such as engine, brake system, cab type, etc. However, if all models of the same car line use the same such components, this code is indicated as a numeric character "1" only.

VIN PRESENTATION ON THE PARTS CATALOG

VIN does NOT ALWAYS APPEAR. No "VIN" indicated denotes that a Part is applicable to the affected model from the FIRST PRODUCTION and ON (up to now).

If the information in the "VIN" column appeared as the example below:

6230A-1 BACK DOOR MECHANISMS (HATCHBACK)

D-CODE (Key No.)	PART NAME	PART No.	Qty	MODEL/DESCRIPTION	VIN (Chassis No.)
62210A	HINGE, BACK DOOR	8531-62-210B	2	1000 1300	❶ FA4PS.. 500001 –522626 FA4TS.. 500001 –688439
		*8531-62-210D	2		❷ FA4PS.. 522627– FA4TS.. 688440– FA4US.. 500001–
62310	LOCK, BACK DOOR	8531-62-310B	2		❸

... the correct interpretation of the above would be:

❶ Part No. 8531-62-210B is applicable to Model 1000 from VIN FA4PS-500001 thru FA4PS-522626 and Model 1300 from VIN FA4TS-500001 thru FA4TS-688439 for the Hatchback respectively.

❷ Part No. 8531-62-210D is applicable to Model 1000 from VIN FA4PS-522627 and on, Model 1300 from VIN FA4TS-688440 and on, and Model 1400 from VIN FA4US-500001 (the first production) and on for the Hatchback respectively.

❸ Part No. 8531-62-310B is applicable to ALL MODELS (1000, 1300 and 1400) of the Hatchback series from the FIRST PRODUCTION and ON (up to now).

HOW TO INTERPRET THE MODEL APPLICATION

Model Application does NOT ALWAYS APPEAR. No "Model Application" indicated denotes that a Part is applicable to ALL MODELS covered by the affected page.

If the information in the "MODEL/DESCRIPTION" column appeared as the exampie below:

4000A-1 EX. SYSTEM (HATCHBACK)

D-CODE (Key No.)	PART NAME	PART No.	Qty	MODEL/DESCRIPTION	VIN (Chassis No.)
40061	HANGER, SILENCER	3874-40-060	1	❶	
40081	BRACKET	3952-40-080A	1	CAL. ❷	
		8021-40-080C	1	FED. ❸	

. . . the correct interpretation of the above would be:

❶ Part No. 3874-40-060 is applicable to All of Hatchbacks.

❷ Part No. 3952-40-080A is applicable to the Hatchbacks of CAL. applications.

❸ Part No. 8021-40-080C is applicable to All Hatchbacks for FED. applications.

CAL. = California

FED. = Federal


MAZDA PART NUMBERING SYSTEM

Mazda Part Numbers are generally classified into three categories: General Parts, Standard Parts and Special Tools.

MAZDA GENERAL PARTS

The Part Number basically consists of nine or ten digits. The 10th digit (if applicable) denotes modification of the part. It has twelve digits when a color code consisting of two digits is required.

EXAMPLE

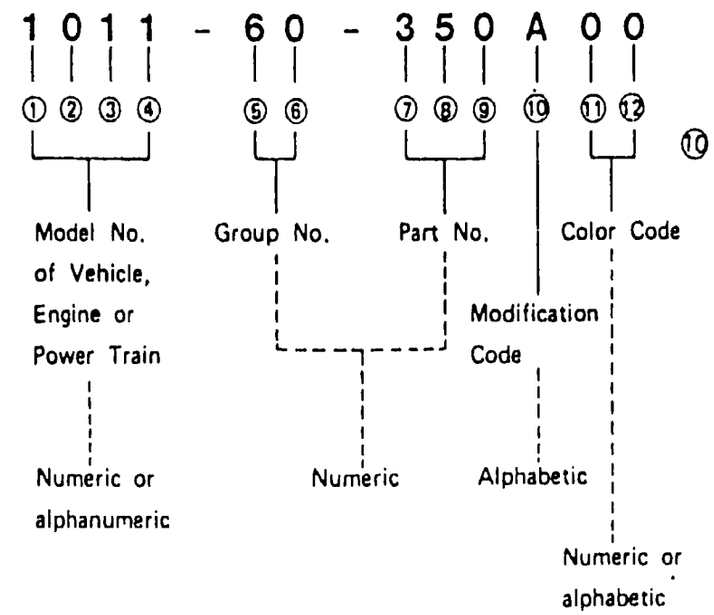

[Note]
If a color code was required but not modification code, the 10th digit would be blank and the color code would follow, e.g.,

1011-60-350 00
↑
└blank


MAZDA STANDARD PARTS

Those Parts which are standardizeo in form and dimension such as Bolts, Nuts, Washers, Hoses, Disc Wheels, etc. are called Mazda Standard Parts.

All the Mazda Standard Parts are identified by a Part Number starting with "9". The numbering structure of Standard Parts ,varies depending upon the kind of parts.

The following is just one example of Standard Part Numbers.
For further details and examples, refer to the wall chart, "LIST OF STANDARD PARTS".


EXAMPLE

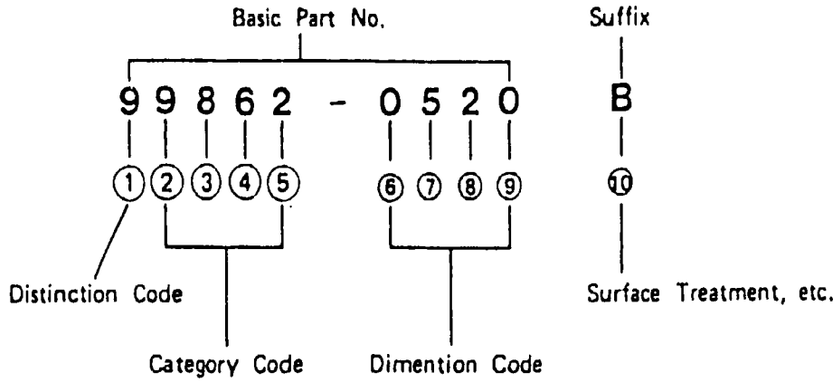

MAZDA SPECIAL TOOLS

In order to repair Mazda Vehicles, certain equipment is required. Those are called Mazda Soecial Tools.

EXAMPLE

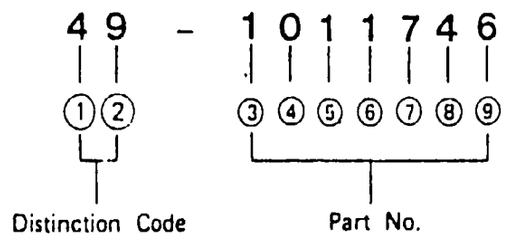

(Note)
As Mazda Special Tools are not shown in the Parts Catalog, refer to "LIST OF SPECIAL TOOLS & APPLYING MODELS" as for further details.

INTERCHANGEABILITY CODE LIST

Code	Definition	
AN	⟷ (Both Ways)	A new part and the former part are fully interchangeable.
A	→ (One Way)	A new part can be used in place of the former part, but the former part cannot be used in place of a new part.
C	Plus	A new part with some additional part(s) can be used in place of the former part.
G	Plus	Some modification work is required to use a new part in place of the former part.
S	← (One Way Backward)	The former part can be used in place of a new part, but a new part cannot be used in place of the former part.

ABBREVIATION LIST

ABBREV.	MAY REPLACE
1ST	First
2ND	Second
3RD	Third
4TH	Fourth
4 SPD	Four Speed
4WS	Four Wheel Steering
4WD, 4X4	Four Wheel Drive
5TH	Fifth
5 SPD	Five Speed
A.A.	Anti Afterburn
A.A.S.	Auto Adjusting Suspension
ABS	Anti Lock Braking System
A/C	Air Conditioning
A.C.C.	Automatic Cruise Control
ACCEL.	Accelerator
A.C.V.	Air Control Valve
A.E.	Acoustical Equalizer
ALUM	Aluminum
ALL	Automatic Load Leveling
ALT.	Alternator
AMP.	Amplifier
ANT.	Antenna
APR.	April
ASSY.	Assembly
A/T	Automatic Transmission
AUG.	August
AUTO.	Automatic
BAL.	Balance
BELT.	Beltline
BFGR	B. F. Goodrich
BRDG	Bridgestone
BRG.	Bearing
BRKT.	Bracket
BRN.	Brown
BLK.	Black
BLU.	Blue
BMPR.	Bumper
B.S.V.	Bleed Solenoid Valve
BULL.	Bulletin
BW	Black Wall
CAL.	California
CASS.	Cassette
CAT.	Category
Cd	Coefficient Of Drag
CD	Compact Disk
C.G.R.	Constant Gear Ratio
CHG.	Change
CHK.	Check
CHMBR	Chamber
CHN.	Chain
CIGAR.	Cigarette
Cl	Coefficient Of Lift
CLPR	Caliper
CNVTR.	Converter
COMB.	Combination
COND.	Condenser
COMP.	Compressor
CONV.	Convertible
C/P	Cab Plus
C.S.D.	Cold Start Device
CSTG.	Coasting
CTR.	Center
CTRL.	Control
CV	Constant Velocity
CVR.	Cover
CYL.	Cylinder
DASH.	Dashboard
Db	Decibels
DEC.	December
DEF.	Defroster
DIAPH	Diaphragm
DIFF.	Differential
DNLP	Dunlop
DOHC	Double Overhead Camshaft
DSL.	Diesel
DTSS	Dynamic Tracking Suspension System
DX	Deluxe
ECAT	Electronically Controlled A/T
EGI	Electronic Gas Injection
EGR	Exhaust Gas Recirculation

ABBREVIATION LIST

ABBREV.	MAY REPLACE
ELEC.	Electric
ENG.	Engine
ETR	Electronically Tuned Radio
EXC.	Except
EXH.	Exhaust
EXT.	Extension
EQ	Equalizer
FEB.	February
FED.	Federal
F.I.	Fuel Injection
FLEX	Flexible
F/LID	Fuel Lid
FRT.	Front
FRST	Firestone
FSTNR.	Fastener
G	Gram
GAS.	Gasoline
GDYR	Goodyear
GEN.	General
GOV.	Governor
GRN.	Green
GRY.	Gray
GSKT.	Gasket
H.A.C.	High Altitude Compensator
HARN.	Harness
H/B	Hatchback
HD.	Head
H/DUTY	Heavy Duty
HDWE.	Hardware
HI. ALT.	High Altitude
HSG.	House, Housing
HTR.	Heater
IC	Integrated Circuit
ID	Inside Diameter
IGN.	Ignition
ILLUM.	Illumination, Illuminated
INCL	Includes
IND	Indicator
INFO.	Information
INST.	Instrument
INN.	Inner
INT.	Interior
INTMT.	Intermittent
INJ.	Injector, Injected
I.R.S.	Independent Rear Suspension
JAN.	January
JUL.	July
JUN.	June
KG	Kilogram
KM	Kilometer
KW	Kilowatt
(L), LT	Left
L=	Length
LCD	Liquid Crystal Display
L/B	Long Bed
LH	Left Hand
LPG	Liquid Petroleum Gas
L.S.D.	Limited Slip Differential
LWR	Lower
LX	Luxury
M	Metallic
MAR.	March
MC	Mica
MCHN	Michelin
MLDG.	Moulding, Mould
MM	Millimeter
MNFLD.	Manifold
MPX	Multiplex
MSTR.	Master
M/T	Manual Transmission
MTG.	Mounting
MTR	Manually Tuned Radio
N=	Number Of Teeth
N/A	Not Available
N/B	Notchback
NO.	Number
NORM.	Normal
NOV.	November

ABBREVIATION LIST

ABBREV.	MAY REPLACE
OCT.	October
OD	Outer Diameter
O/DRIVE	Overdrive
OHC	Overhead Camshaft
OPT.	Optional
O.S.	Oversize
OUT.	Outer
PANSC	Panasonic
PARK.	Parking
PB	Parking Brake
PCV	Positive Crankcase Ventilation
PIN.	Pinion
PKG	Package
PLR	Pillar
PROD.	Production
P/S	Power Steering
P/TRIM	Pillar Trim
PTH	Phillips Truss Head
PWR.	Power
QTR.	Quarter
QTY.	Quantity
(R), RT	Right
RH	Right Hand
RAD.	Radiator
REINF.	Reinforcement
REG.	Regular
REGUL.	Regulator
REL.	Release
REM.	Remote
RET.	Return
REV.	Reverse
RR.	Rear
RWL.	Raised White Letters
S/B	Short Bed
S/ROD	Shift Rod
S/S	Supercession
SDN.	Sedan
SEP.	September
SERV.	Service
SLND.	Solenoid
SOHC	Single Overhead
SPEC.	Specification
SPEEDO.	Speedometer
SPG.	Spring
SPKR.	Speaker
SPRKT.	Sprocket
SRS	Supplemental Restraint System
STAB.	Stabilizer
STD.	Standard
STRG.	Steering
S/ROOF	Sunroof
SUSP.	Suspension
S/W	Station Wagon
SW.	Switch
SYNC.	Synchronizer
T=	Thickness
TEMP.	Temperature
THERMO.	Thermostat
TMG.	Timing
T/MISSION	Transmission
TRK.	Truck
T/LID	Trunk Lid
T/S	Touring Sedan
TTL	Twin Trapezoidal Links
TURBO	Turbocharged
UP.	Upper
U.S.	Undersize
VAC.	Vacuum
V.G.R.	Variable Gear Ratio
VPV	Variable Port Valve
VNL.	Vinyl
W=	Width
W/	With
W/P	Water Pump
WGN.	Wagon
WHL.	Wheel
W/O	Without
WHT.	White
W/SHIELD	Wind Shield, Screen Wind Screen
WTR.	Water
W/W	White Walls

AERO

0000-86-2200 - 1979-85, Lip Spoiler

AIR CONDITIONER
Refer to Accy. Bulletin XA-1 for Air Conditioner information.

ARM REST
Refer to Accy. Bulletin XN-1 for replacement parts.

BATTERY

0000-80-124K - 1979-83, ALL
Refer to Accy. Bulletin XG-4 for Battery information.

BLOCK HEATER

0000-88-6600 - ALL, Rotary Engine
Refer to Accy. Bulletin XG-5 for installation information.

CIGARETTE LIGHTERS

0000-88-209 -16 - 1981-82, All

DOOR EDGE GUARDS

0000-88-3199-BK - ALL, Black Universal Type

FRONT MASK

0000-88-0581-AS - 1981-83, W/O Air Dam

PAINT
Refer to Accy. Bulletin XE-2 for Touch-Up Paint information.

STEREO EQUIPMENT
Refer to Accy. Bulletins XS-1, XS-2, and XS-3 for Audio information.

SUNROOF


0000-86-2600 - 1980-85, Moonroof
0000-86-2600-KT - 1980-85, Left & Right Hinge
0000-86-2600-CP - 1980-85, Cap Nut Set
8346-62-885 - 1980-85, Slide Hook Latch

TIRES
Refer to Accy. Bulletins XE-1 for Tire information.

SECTION INDEX -- ENGINE


STARTING LOCATION	SECT. NO.	SECTION NAME
1 - C 3	1000A	SHORT ENGINE BLOCK & GASKET SETS
1 - D 3	1030A	ROTOR HOUSING
1 - E 3	1040A	OIL PAN & REAR HOUSING
1 - G 3	1100A	ECCENTRIC SHAFT & FLYWHEEL
1 - H 3	1110A	ROTOR & RELATED
1 - I 3	1300A	INTAKE MANIFOLD
1 - J 3	1310A	EXHAUST MANIFOLD
1 - K 3	1320A	FUEL SYSTEM
1 - L 3	1330A	AIR CLEANER
1 - M 3	1350A	STARTING ASSIST SYSTEM
1 - N 3	1359A	CARBURETOR, REPAIR KIT, GASKET SET & SCREW SET
1 - C 4	1360A	CARBURETOR COMPONENTS
1 - E 4	1371A	EMISSION CONTROLS (AIR PUMP & CONTROL VALVE)
1 - F 4	1380A	EMISSION CONTROLS (EXHAUST SIDE) ('81 & '82 MODELS)
1 - H 4	1380AA	EMISSION CONTROLS (EXHAUST SIDE) ('83 MODEL)
1 - I 4	1400A	OIL PUMP & FILTER ('81 & '82 MODELS)
1 - J 4	1400AA	OIL PUMP & FILTER ('83 MODEL)
1 - K 4	1500A	COOLING SYSTEM ('81 & '82 MODELS)
1 - M 4	1500AA	COOLING SYSTEM ('83 MODEL)
1 - N 4	1580A	COMPRESSOR BRACKET, PULLEY & BELT (A/C)
1 - C 5	1600A	CLUTCH (MANUAL)
1 - D 5	1700A	TRANSMISSION CASE (MANUAL)
1 - E 5	1710A	TRANSMISSION GEAR (MANUAL)
1 - G 5	1720A	CHANGE CONTROLS (MANUAL)
1 - H 5	1800A	ELECTRICAL SYSTEM (ENGINE)
1 - I 5	1820A	DISTRIBUTOR
1 - J 5	1830A	ALTERNATOR
1 - K 5	1840A	STARTER
1 - M 5	1850A	BATTERY & CABLES
1 - N 5	1910A	CONVERTER, OIL PUMP & PIPING (AUTOMATIC TRANSMISSSION)
1 - C 6	1920A	CASE & MAIN CONTROLS (AUTOMATIC TRANSMISSION)
1 - E 6	1930A	CLUTCH & PLANETARY GEAR (AUTOMATIC TRANSMISSION)
1 - G 6	1940A	LOW, REVERSE & GOVERNOR (AUTOMATIC TRANSMISSION)
1 - H 6	1950A	MANUAL LINKAGE (AUTOMATIC TRANSMISSION)

1000A-1 SHORT ENGINE BLOCK & GASKET SETS

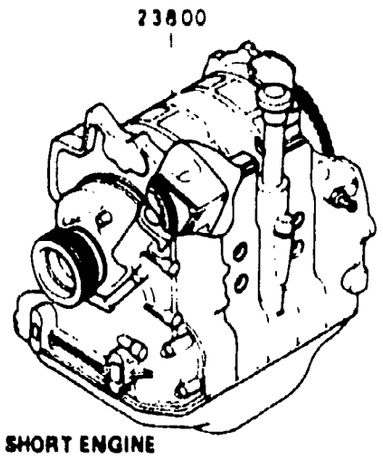


SHORT ENGINE

a-GASKET,OIL PAN.....(1)
b-GASKET,IN.MANIFOLD.....(1)
c-GASKET,PRE AIR PIPE .....(1)
d-GASKET,SHUTTER VALVE.....(1)
e-GASKET,EX.PIPE.....(1)
f-GASKET,A.C.VALVE.....(1)
g-GASKET,EX.MANIFOLD.....(1)
h-GASKET,A.L.C.VALVE.....(1)
i-GASKET,FRONT COVER.....(1)
j-GASKET,OIL STRAINER.....(1)
k-GASKET,WATER PUMP.....(1)
l-GASKET,WATER PUMP.....(2)
m-GASKET,PULLY..... .....(1)

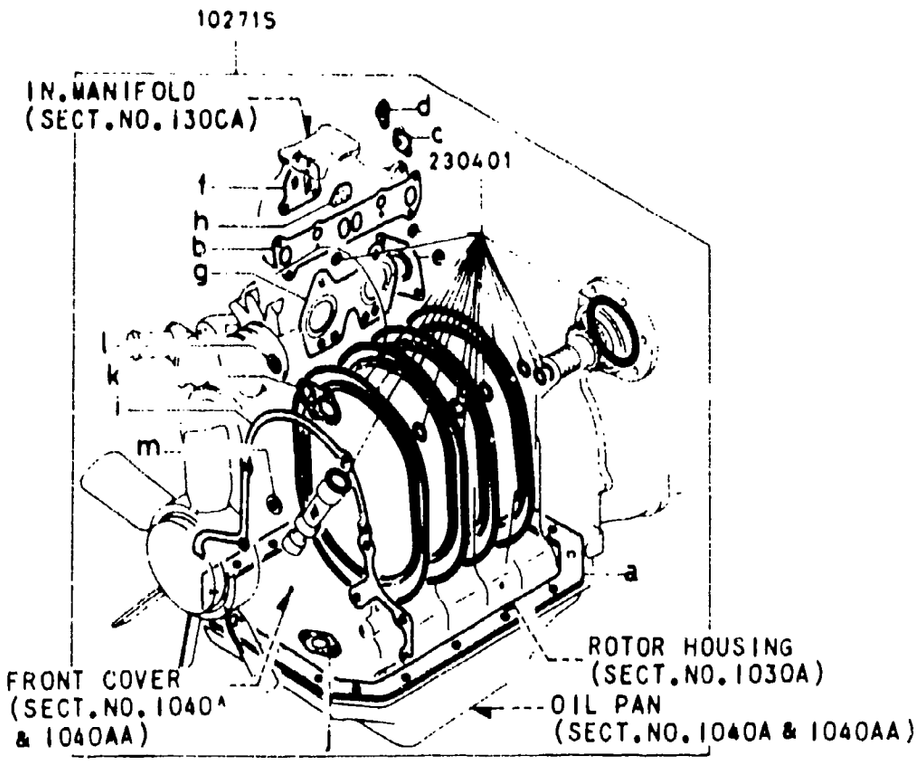


ITEM NO.	D-CODE	DESCRIPTION	PART NO.	QTY	MODEL/DESCRIPTION	REMARKS
	10 271S	GASKET SET, ENGINE	N201-99-100	1	'81 & '82 MODELS	
			N231-99-100	1	'83 MODEL	
	23 0401	O-RING SET	1757-23-040B	1		
	23 800	ENGINE BLOCK, SHORT	N201-23-200	1	'81 & '82 MODELS M/T	
		REFER TO PARTS BULL. NOS. R-6 & R-8 FOR MANA ENGINE PROGRAM.				
			N202-23-200	1	'81 & '82 MODELS A/T	
			N231-23-200	1	'83 MODEL M/T	
			N232-23-200	1	'83 MODEL A/T	

1030A-1 ROTOR HOUSING

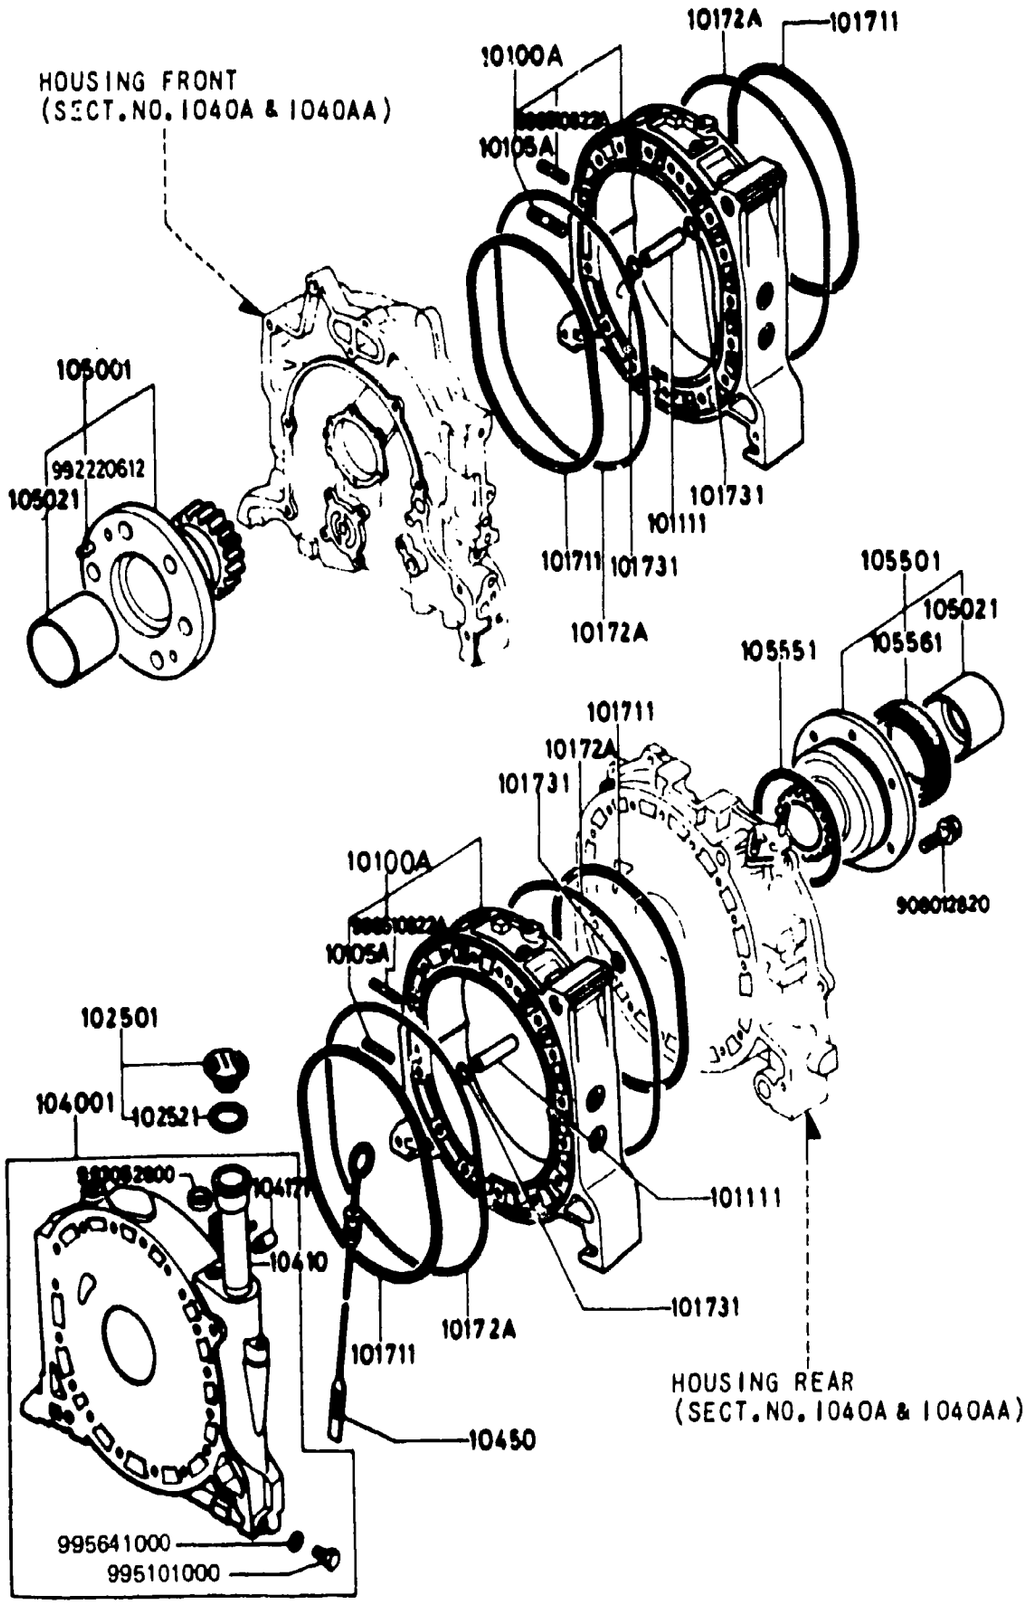


ITEM NO.	D-CODE	DESCRIPTION	PART NO.	QTY	MODEL/DESCRIPTION	REMARKS
	10 100A	HOUSING, ROTOR	N201-10-100	2		
	10 105A	STUD, REACTOR	0839-10-105	4		
	10 1111	DOWEL, TUBULAR	0839-10-111B	4		
	10 1711	RING, SQUARE	1757-10-171A	4		
	10 172A	RING, SQUARE-OUTER	1480-10-172	4		
	10 1731	O-RING	N231-10-173	4		
	10 2501	CAP, OIL FILLER	8871-10-250A	1		
	10 2521	GASKET, OIL CAP	8871-10-252	1		
	10 4001	HOUSING, INTERMEDIATE	8341-10-400	1		
	10 410	PIPE, OIL FILLER	3565-10-410A	1		
	10 4171	JOINT, PIPE	8562-10-417	1		
	10 450	DIPSTICK	N201-10-830	1		
	10 5001	GEAR, STATIONARY-FRONT	3743-10-500	1		
	10 5021	BEARING, MAIN	0820-10-502B	2		
	10 5501	GEAR, STATIONARY-REAR	3743-10-550A	1		
	10 5551	O-RING	0813-10-555A	1		
	10 5561	SEAL, OIL	1668-10-556A	1		

1040A-1 OIL PAN & REAR HOUSING

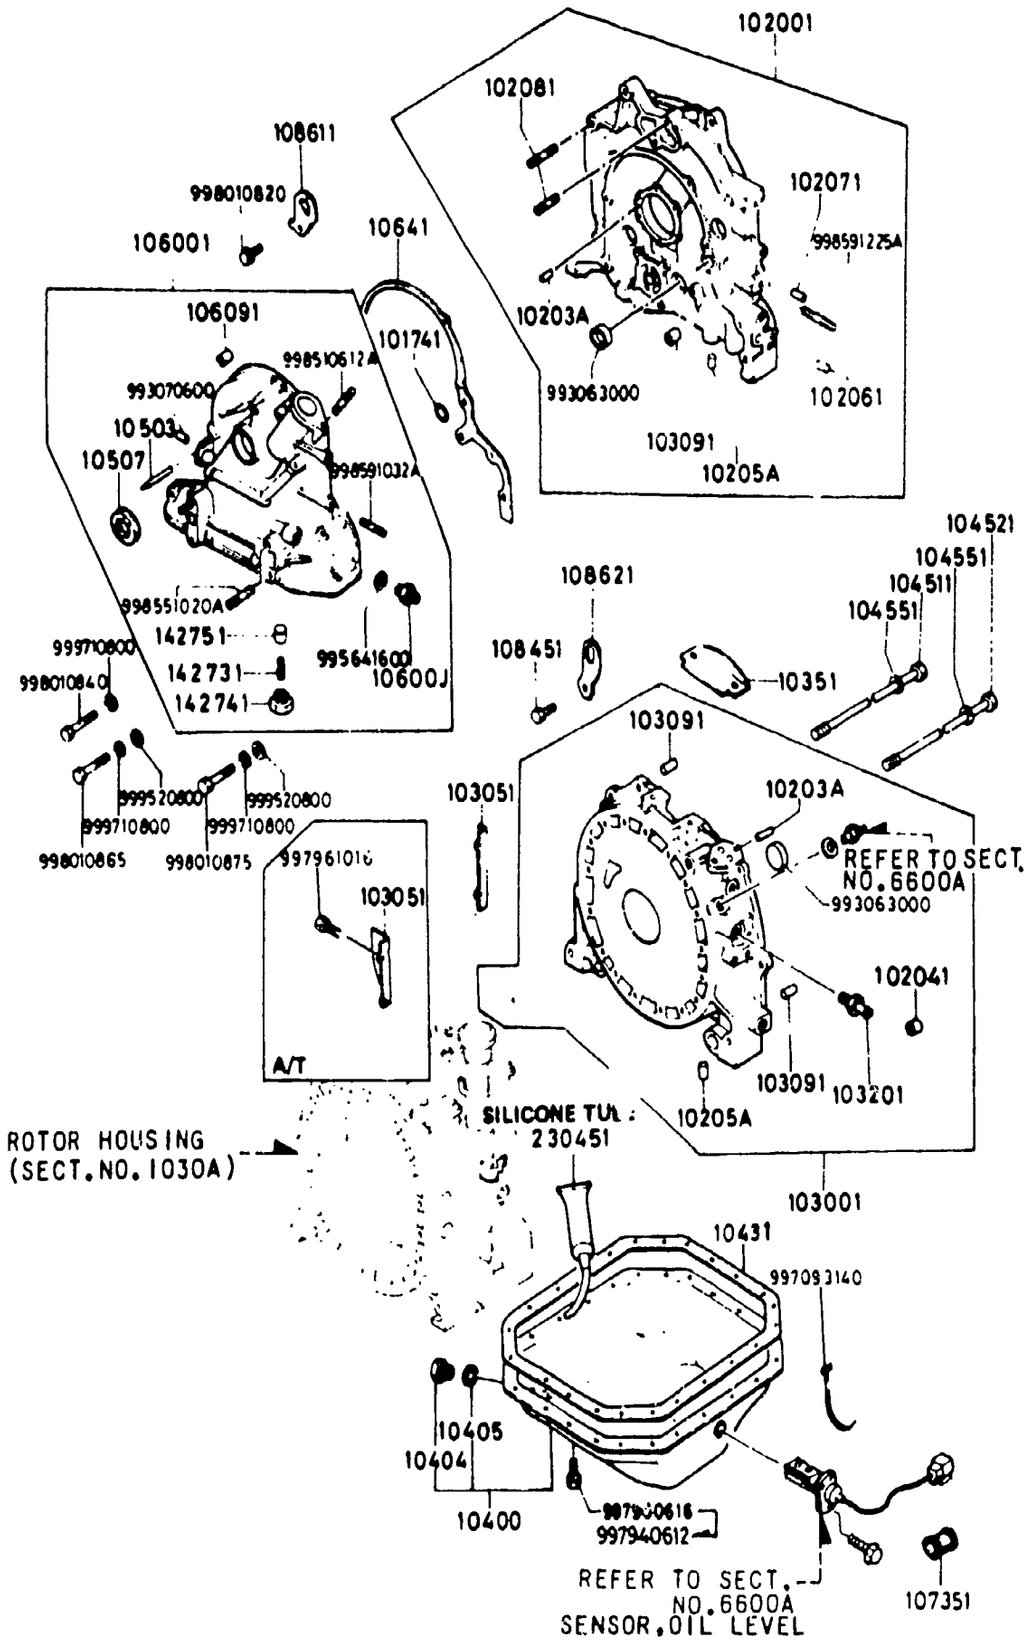


ITEM NO.	D-CODE	DESCRIPTION	PART NO.	QTY	MODEL/DESCRIPTION	REMARKS
	10 1741	O-RING	N231-10-174	1		
	10 2001	HOUSING, FRONT	8981-10-200	1		
		<C>	8981-10-200B	1	REQUIRES WASHER: 9995-21-200	
	10 203A	PIN, DOWEL	0839-10-203	2		
	10 2041	DOWEL, TUBULAR	1757-10-309	2		
	10 205A	PLUG, BLIND	8562-10-205	4		
	10 2061	PLUG, BLIND	1757-10-206A	1		
	10 2071	PLUG, BLIND	1757-10-207A	1		
	10 2081	STUD	1757-10-208	4		
	10 3001	HOUSING, REAR	N201-10-300A	1	'81 & '82 MODELS	
			N231-10-300A	1	'83 MODEL	
	10 3051	COVER, DUST	1480-10-305	1	M/T	
			1481-10-305	1	A/T	
	10 3091	PIN, TUBULAR	1757-10-309	2	'81 & '82 MODELS	
				4	'83 MODEL	
	10 3201	CONNECTOR, HOSE	0866-10-320A	1	'81 MODEL	
	10 351	COVER, DUST	1758-10-351	1	'81 & '82 MODELS M/T	
			N231-10-351A	1	'83 MODEL M/T	
	10 400	PAN, OIL	N201-10-700A	1	CAL.	
			N203-10-700	1	FED.	
	10 404	PLUG, DRAIN	9951-11-400	1		
		<AN>	HE03-10-404	1		
	10 405	GASKET, DRAIN PLUG	9956-41-400	1		
	10 431	GASKET, OIL PAN	0839-10-711	1		
	10 4511	BOLT, TENSION	1015-10-451B	16		
	10 4521	BOLT, TENSION	1015-10-452A	1		
	10 4551	WASHER, SEAL	0839-10-455	17		
	10 503	PIN, TOP INDICATOR	8871-10-631A	1		
	10 507	SEAL, OIL	0820-10-605	1		
	10 6001	COVER, FRONT	1480-10-600A	1		
	10 600J	JOINT, UNION	9938-41-200F	1		
	10 6091	PIN, SPRING	1757-10-609	1		
	10 641	GASKET, FRONT COVER	8527-10-641	1		
	10 7351	PROTECTOR	N231-10-735	1	'83 MODEL	
	10 8451	BOLT	8550-10-845	1		
	10 8611	HANGER, ENGINE	N225-10-861	1		
	10 8621	HANGER, ENGINE	8871-10-862	1		
	14 2731	SPRING	0839-14-273A	1	'81 & '82 MODELS	

1040A-2 OIL PAN & REAR HOUSING

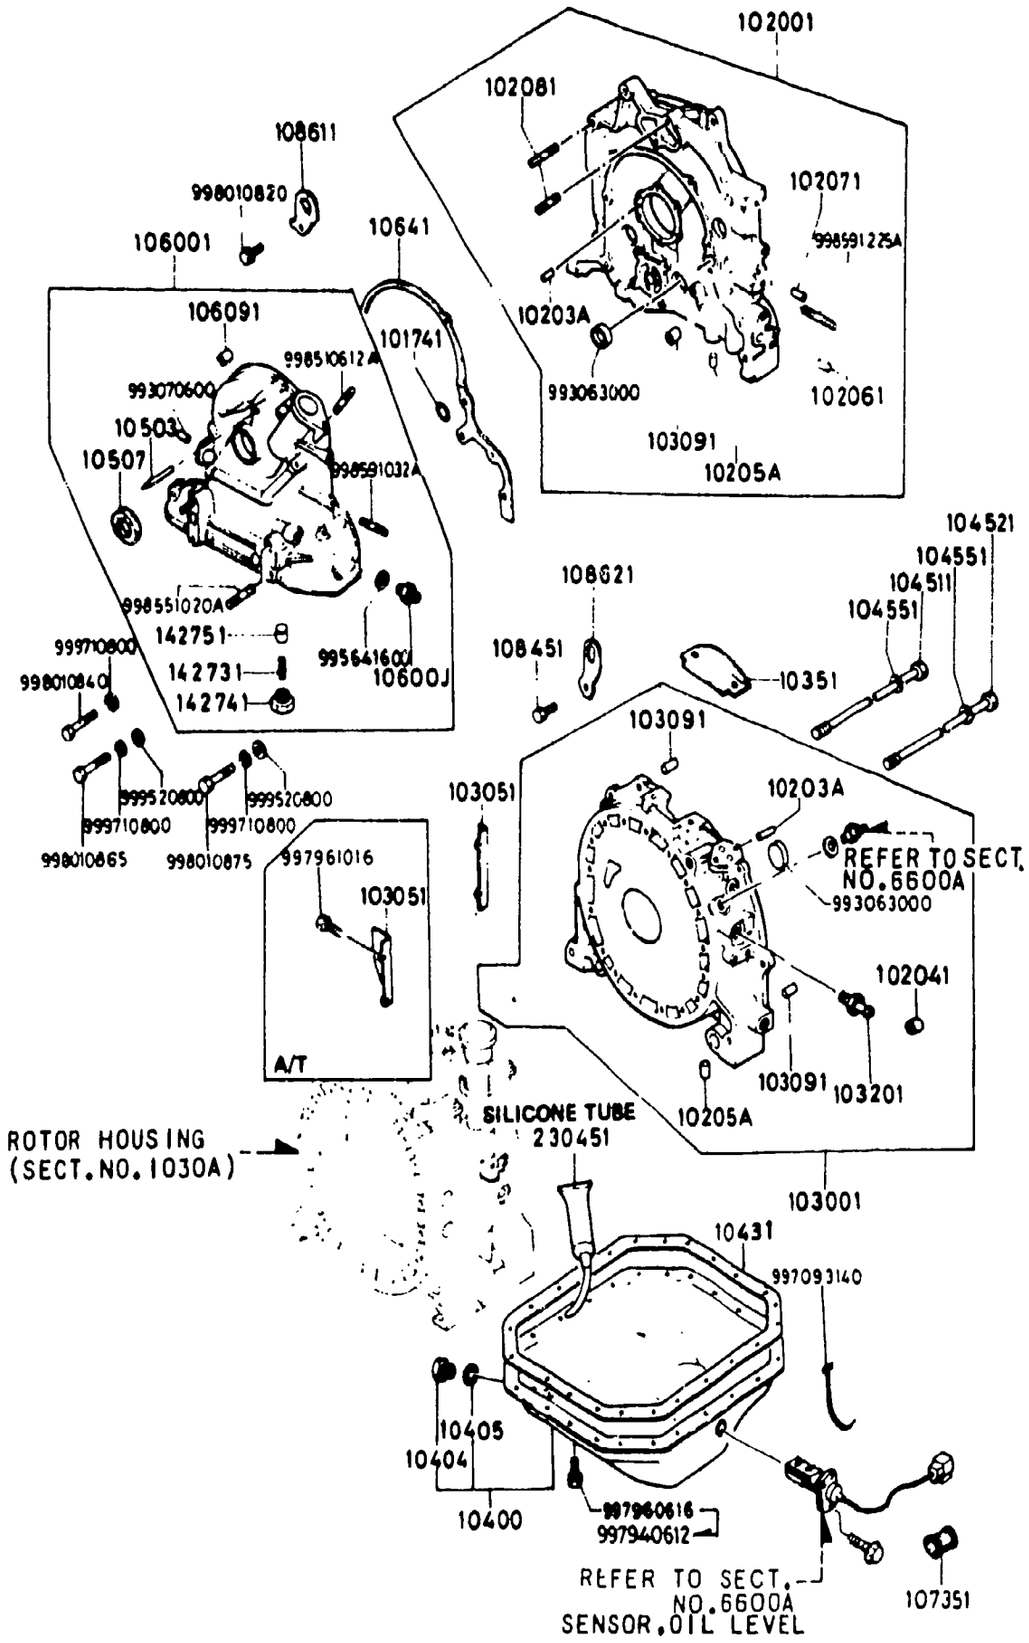


ITEM NO.	D-CODE	DESCRIPTION	PART NO.	QTY	MODEL/DESCRIPTION	REMARKS
	14 2731 (CONT'D)		N231-14-273	1	'83 MODEL	
	14 2741	PLUG	0839-14-274	1		
	14 2751	PLUNGER, CONTROL	0839-14-115	1		
	23 0451	SEALANT, SILICONE	8527-77-739	1	TUBE	

1100A-1 ECCENTRIC SHAFT & FLYWHEEL

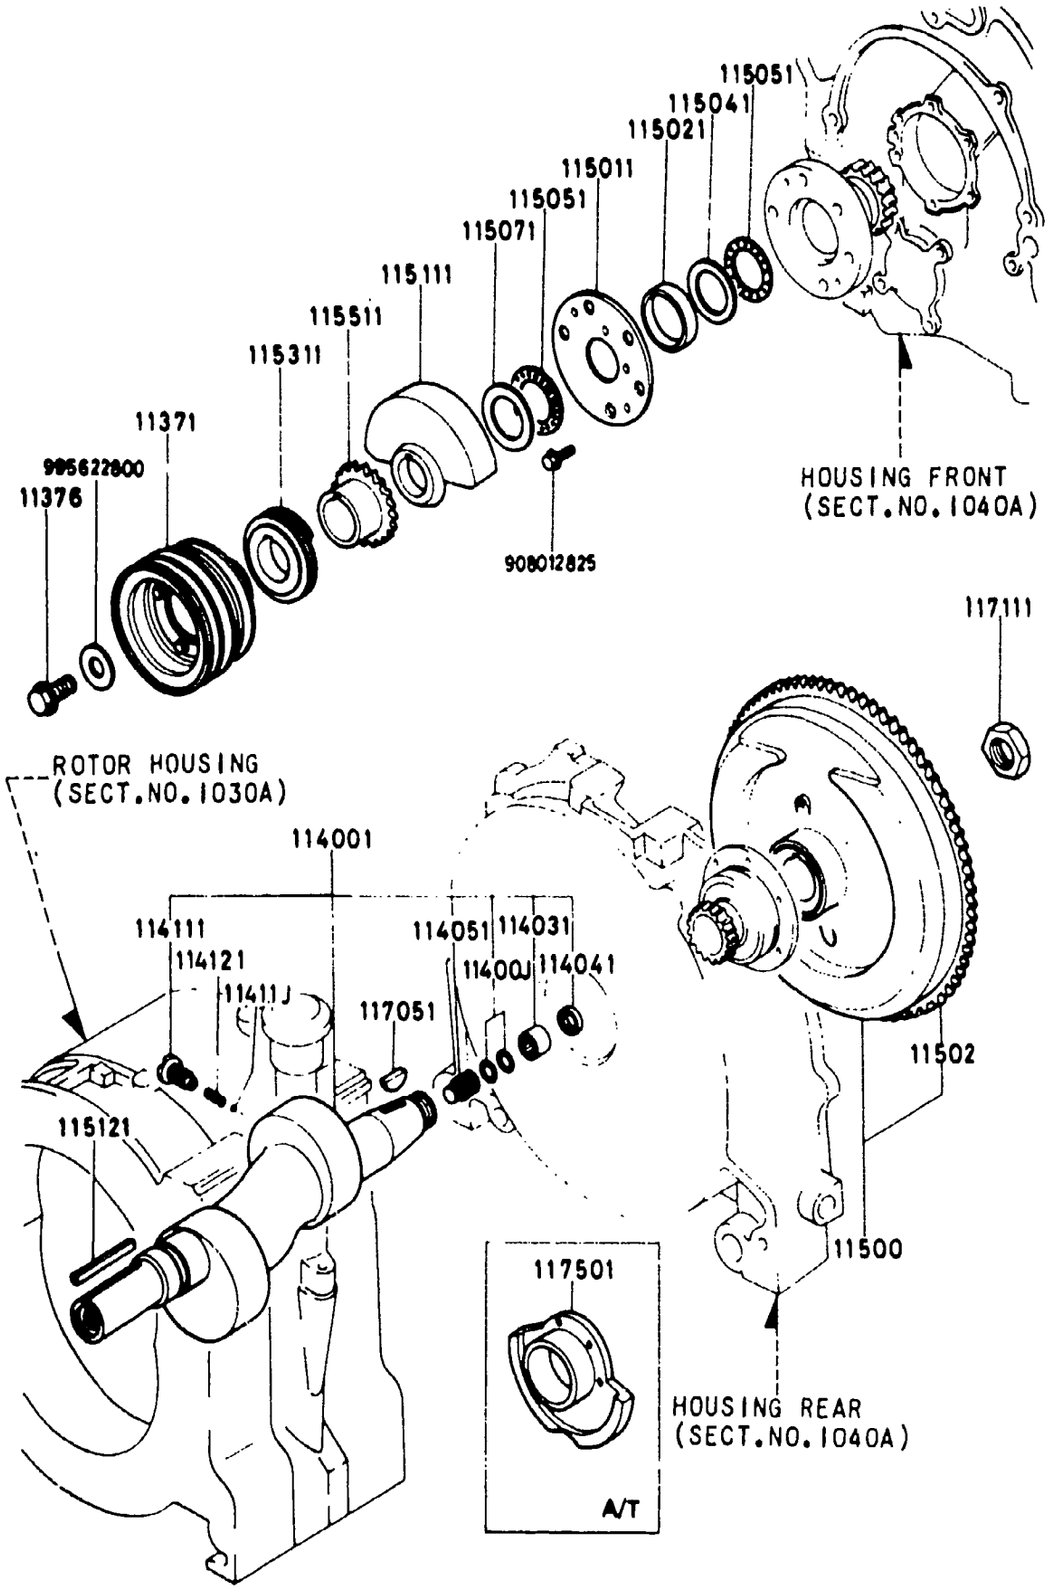


ITEM NO.	D-CODE	DESCRIPTION	PART NO.	QTY	MODEL/DESCRIPTION	REMARKS
	11 371	PULLEY, CRANKSHAFT	8649-11-600	1		
	11 376	BOLT, PULLEY	0820-11-611B	1		
	11 4001	SHAFT, ECCENTRIC	N201-11-400	1	M/T	
			1883-11-400A	1	A/T	
	11 400J	O-RING	9954-10-1101	2	THRU DEC. '81 PROD.	FB331 ..500001-629394
	11 4031	BEARING, NEEDLE	N326-11-D03	1	M/T	
	11 4041	SEAL, OIL	1881-11-404	1	M/T	
	11 4051	PLUG, BLIND	0813-11-405	1	'82 MODEL	FB331 ..629394-
	11 4111	PLUG, OIL JET	0839-11-411A	2		
	11 411J	BALL, STEEL	9961-12-000	2		
	11 4121	SPRING	0839-11-412	2		
	11 500	FLYWHEEL	N201-11-700	1	'81 - '82	
			N231-11-700A	1	'83	
	11 5011	PLATE	1011-11-501	1		
	11 502	GEAR, RING	0866-11-702	1	M/T	
	11 5021	SPACER	0839-11-509	1	(L=8.00)	
			0839-11-502	1	(L=8.02)	
			0839-11-508	1	(L=8.04)	
			8519-11-517	1	(L=8.06)	
			0839-11-506	1	(L=8.08)	
	11 5041	PLATE, THRUST	1011-11-504	1		
	11 5051	BEARING, NEEDLE	0813-11-505B	2		
	11 5071	WASHER, THRUST	1011-11-507	1		
	11 5111	WEIGHT, BALANCE	N201-11-511	1	M/T '81 MODEL A/T	FB331 .. 500001-500075
			1881-11-511	1	A/T	FB331 ..500076-
			N226-11-511A	1	'83 MODEL	
	11 5121	KEY	9923-60-571	1		
	11 5311	GEAR, DRIVE	0839-11-531	1		
	11 5511	GEAR, DRIVE-OIL PUMP	0839-11-551A	1		
	11 7051	KEY, FLYWHEEL	0820-11-705	1		
	11 7111	NUT, LOCK	0810-11-711	1		
	11 7501	WEIGHT, CONTROL	1883-11-751A	1	'81 & '82 MODELS A/T	
			N226-11-751A	1	'83 MODEL A/T	

1110A-1 ROTOR & RELATED

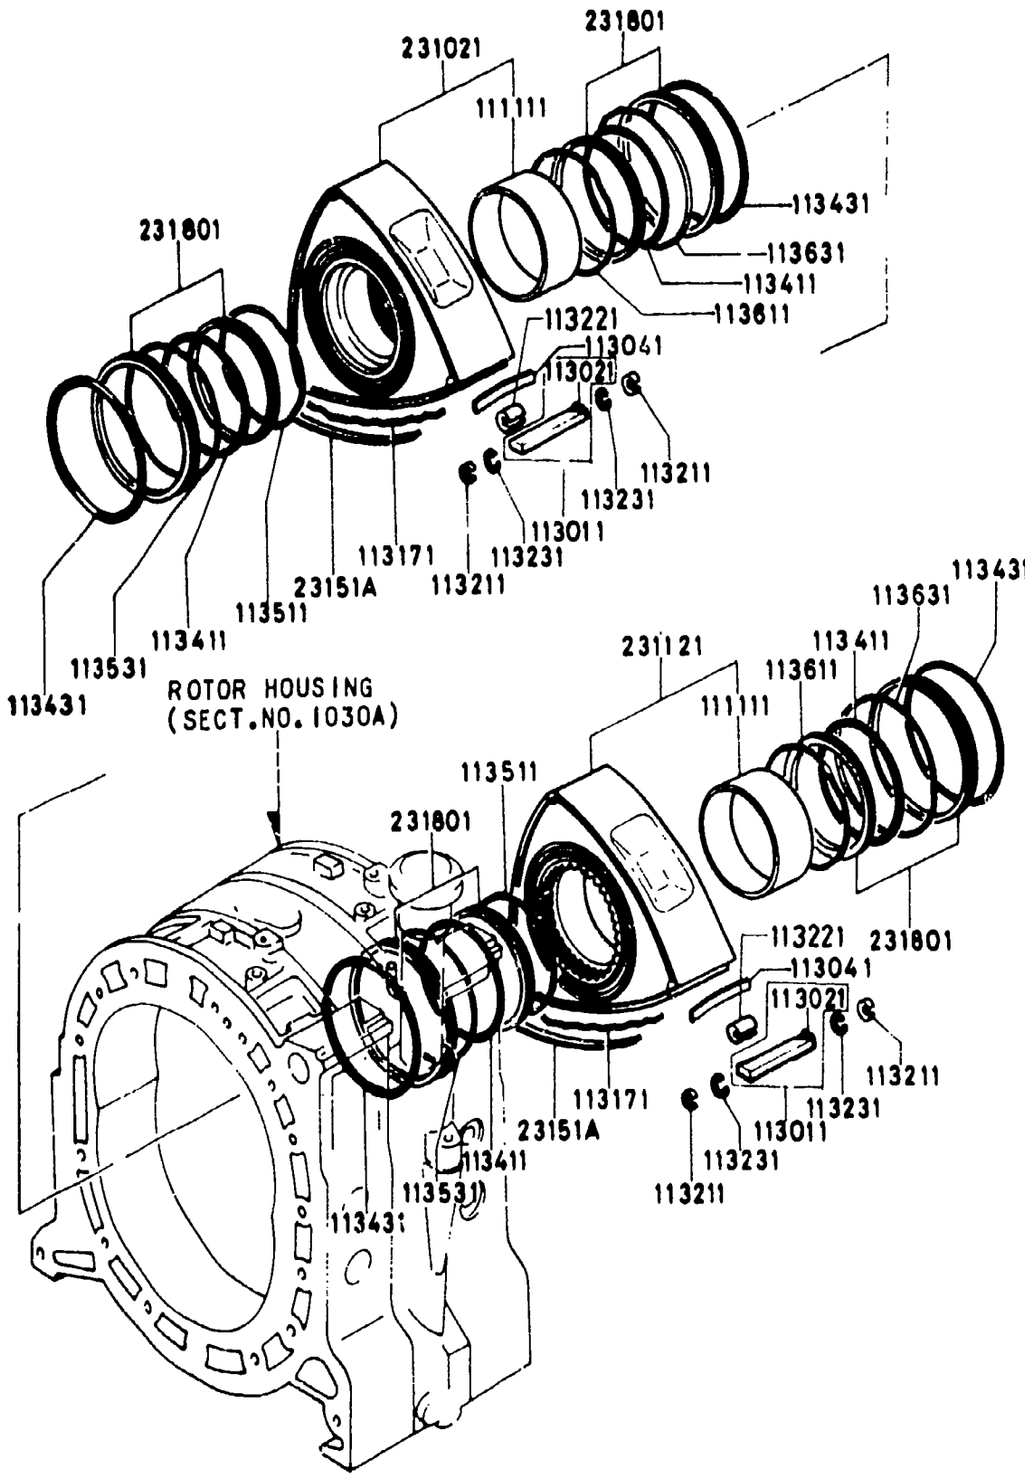


ITEM NO.	D-CODE	DESCRIPTION	PART NO.	QTY	MODEL/DESCRIPTION	REMARKS
	11 1111	BEARING, ROTOR	1011-11-111	2		
	11 3011	SEAL, APEX	N201-11-300A	6		
	11 3021	PIECE, SIDE	N201-11-302A	6		
	11 3041	SPRING, APEX SEAL	1011-11-304B	6		
	11 3171	SPRING, SIDE SEAL	0820-11-317	12		
	11 3211	SEAL, CORNER	1202-11-321	12	'81 & '82 MODELS	
			N225-11-321	12	'83 MODEL	
	11 3221	PLUG, CORNER SEAL	N201-11-322	12		
	11 3231	SPRING, CORNER SEAL	1202-11-323A	12		
	11 3411	O-RING, INNER	0820-11-341	4		
	11 3431	O-RING, OUTER	1202-11-343	4		
	11 3511	SPRING, FRONT-INNER	1011-11-351	2	'81 & '82 MODELS	
			N225-11-351	2	'83 MODFL	
	11 3531	SPRING, FRONT-OUTER	1011-11-353A	2		
	11 3611	SPRING, REAR-INNER	1011-11-361	2	'81 & '82 MODELS	
			N225-11-361	2	'83 MODEL	
	11 3631	SPRING, REAR-OUTER	1011-11-363A	2		
	23 1021	ROTOR, FRONT	1480-23-103	1	'81 & '82 MODELS	
			N225-23-103	1	'83 MODEL	
	23 1121	ROTOR, REAR	1480-23-113	1	'81 & '82 MODELS	
			N225-23-113	1	'83 MODEL	
	23 151A	SEAL, SIDE	1011-23-151A	12		
	23 1801	SEAL SET, OIL	8871-23-180	4		

1300A-1 INTAKE MANIFOLD

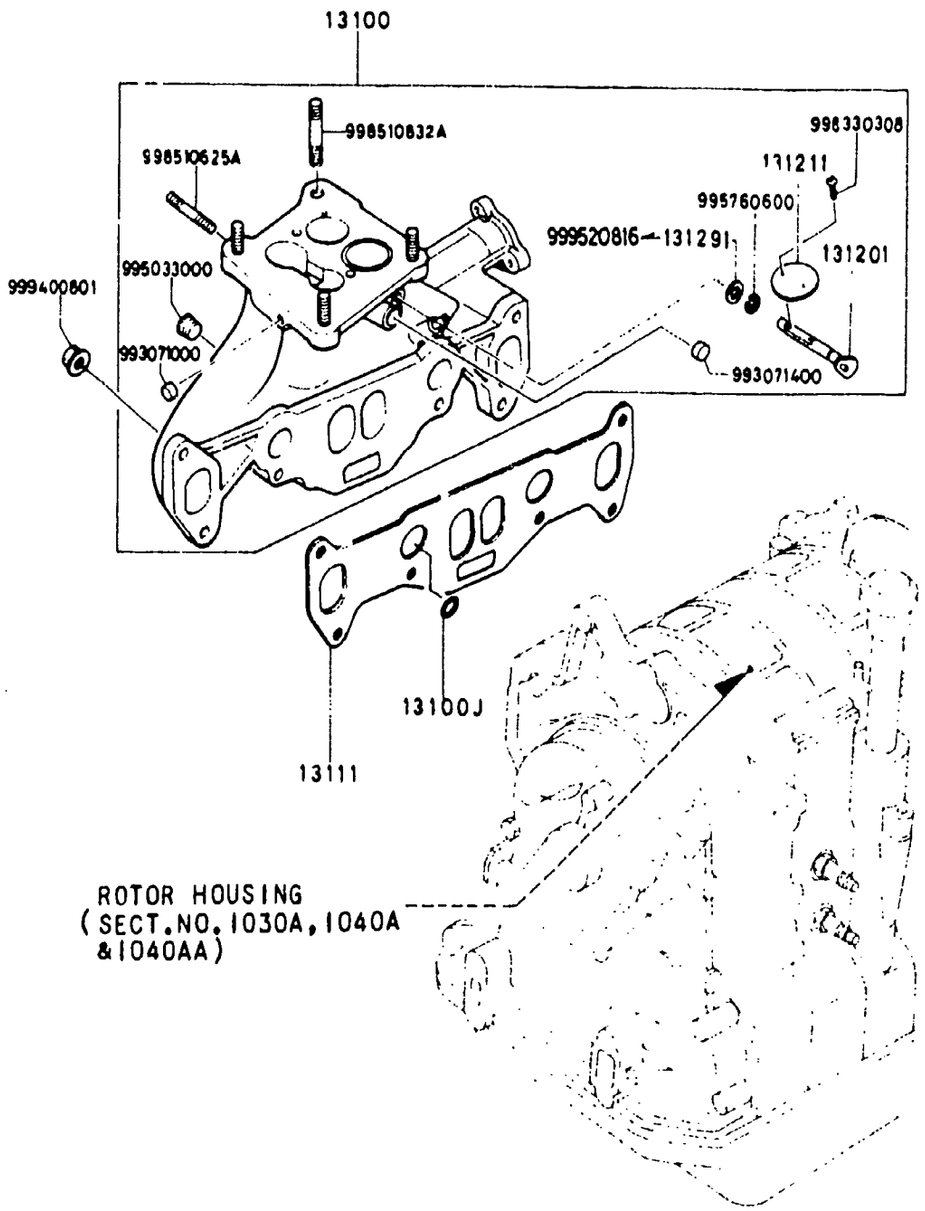


ITEM NO.	D-CODE	DESCRIPTION	PART NO.	QTY	MODEL/DESCRIPTION	REMARKS
	13 100	MANIFOLD, INTAKE	N201-13 100A	1		
	13 100J	O-RING	8527-13-113	2		
	13 111	GASKET, INTAKE MANIFOLD	1881-13-111A	1		
	13 1201	SHAFT, VALVE	1480-13-120A	1		
	13 1211	VALVE	N201-13-121	1		
	13 1291	PLATE, THRUST	1480-13-129	1	'81 MODEL	FB331 ..500001-507334

1310A-1 EXHAUST MANIFOLD

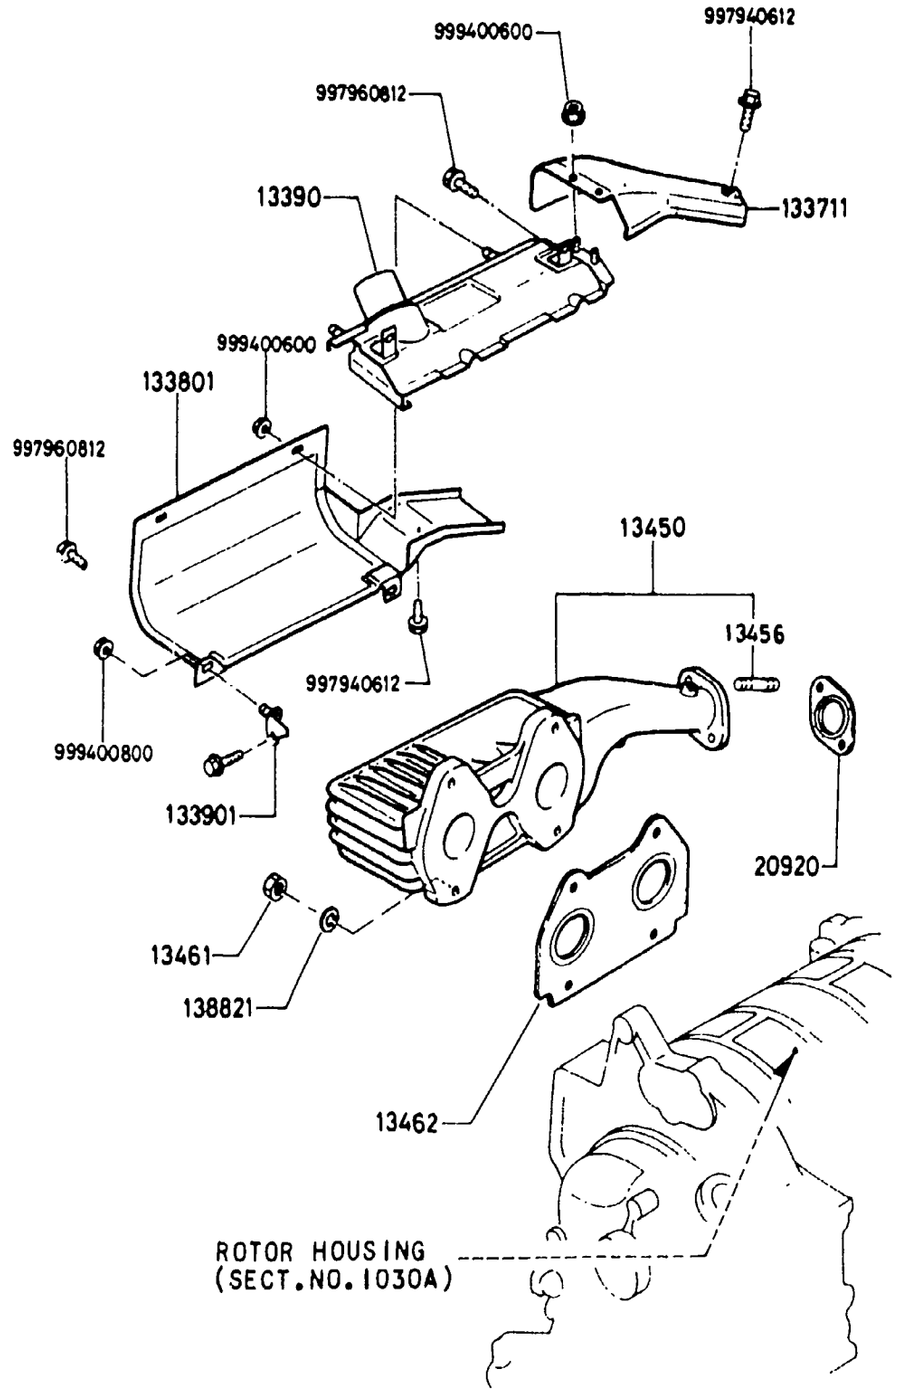


ITEM NO.	D-CODE	DESCRIPTION	PART NO.	QTY	MODEL/DESCRIPTION	REMARKS
	13 3711	INSULATOR, HEAT	1480-13-370	1		
	13 3801	PLATE, ABSORBER	1480-13-380A	1		
	13 390	DUCT, HOT AIR	1480-13-330	1		
	13 3901	BRACKET, ABSORBER	3565-13-390	1		
	13 450	MANIFOLD, EXHAUST	1480-13-600B	1		
	13 456	STUD	2329-13-876	2		
		<AN>	1757-13-857	2		
	13 461	NUT	8134-40-355	4		
	13 462	GASKET, EXHAUST MANIFOLD	1480-13-889A	1		
	13 8821	WASHER, SPRING	9997-11-000	4		
	20 920	GASKET, EXHAUST PIPE	1480-13-621	1		

1320A-1 FUEL SYSTEM

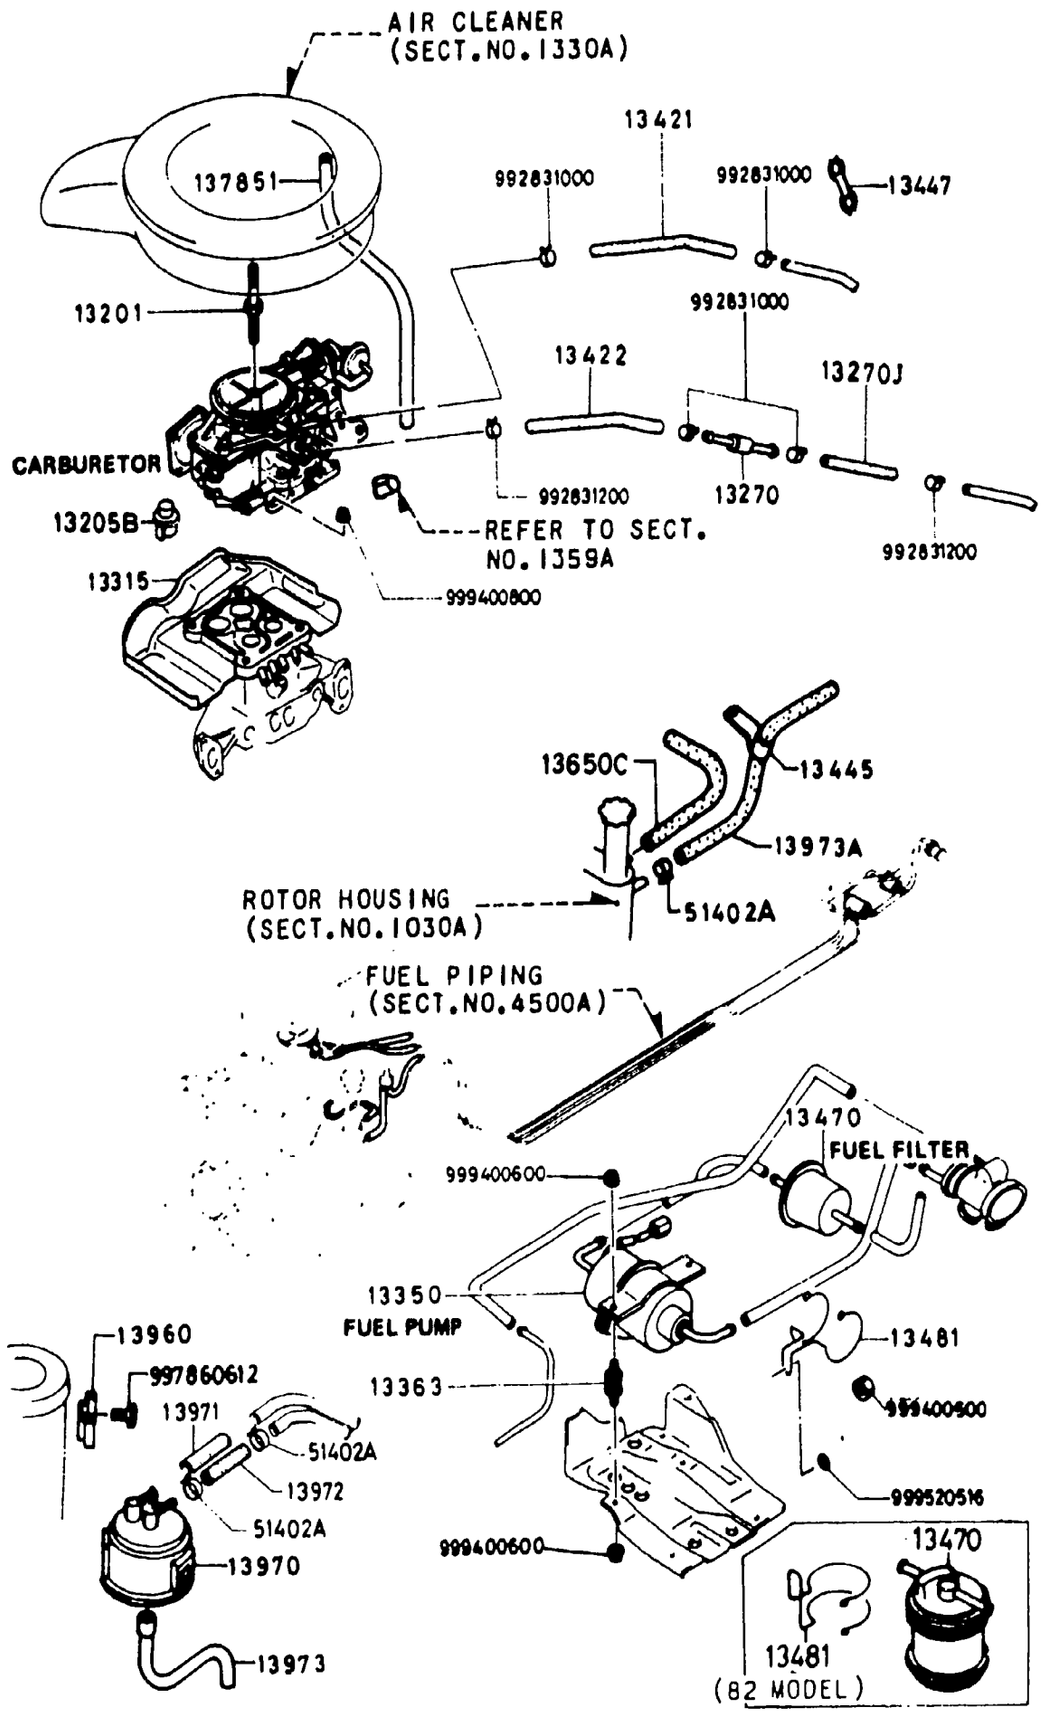


ITEM NO.	D-CODE	DESCRIPTION	PART NO.	QTY	MODEL/DESCRIPTION	REMARKS
	13 201	BOLT, AIR CLEANER	8871-13-201A	1		
	13 205B	CAP, IDLE SWITCH	1481-13-205C	1		
	13 270	VALVE, CHECK	3648-13-270A	1		
	13 270J	HOSE, FUEL	9935-80-6999		BULK QTY.	
	13 315	INSULATOR	1480-13-220B	1		
	13 350	PUMP, FUEL	8871-13-400B	1	'81 & '82 MODELS	
			N249-13-400B	1	'83 MODEL	
	13 363	RUBBER, INSULATION	8871-13-407	2		
	13 421	HOSE, FUEL MAIN	9935-80-8999		BULK QTY.	
	13 422	HOSE, FUEL RETURN	9935-80-69[illegible]		BULK QTY.	
	13 445	CLIP	1480-13-445	1	'81 MODEL	FB331 ..500001-507334
	13 447	CLIP	N201-13-445	1		
	13 470	FILTER, FUEL	0222-13-470B	1	'81 MODEL	FB331 ..500001-610655
			E508-13-470	1	'82 & '83 MODELS	FB331 ..610656-
		REFER TO SERV. BULL. NO. 033/81, CAT. 4 FOR MORE INFO.				
	13 481	CLAMP, FUEL FILTER	0381-13-481	1	'81 MODEL	FB331 ..500001-610655
			E508-13-481	1	'82 & '83 MODELS	FB331 ..610656
	13 650C	HOSE, AIR	9935-10-8999		BULK QTY.	
	13 7851	HOSE, VENTILATION	8871-13-785C	1		
	13 960	BRACKET, CANISTER	N201-20-611	1		
	13 970	CANISTER	N201-20-610A	1	'81 & '82 MODELS	
			N221-99-041	1	'83 MODEL	
		REFER TO RECALL CAMPAIGN NO. 21605 FOR MORE INFO.				
	13 971	HOSE, VENTILATION	9935-10-8999		BULK QTY.	
	13 972	HOSE, EVAPORATION	9935-10-4999		BULK QTY.	
	13 973	HOSE, DRAIN	N201-20-613	1	'81 MODEL	FB3J1 ..500001-509606
	13 973A	HOSE, EVAPORATION	9935-10-8999		BULK QTY.	
	51 402A	CLIP	3972-51-402	2	'81 MODEL	FB331 ..500001-507334

1330A-1 AIR CLEANER

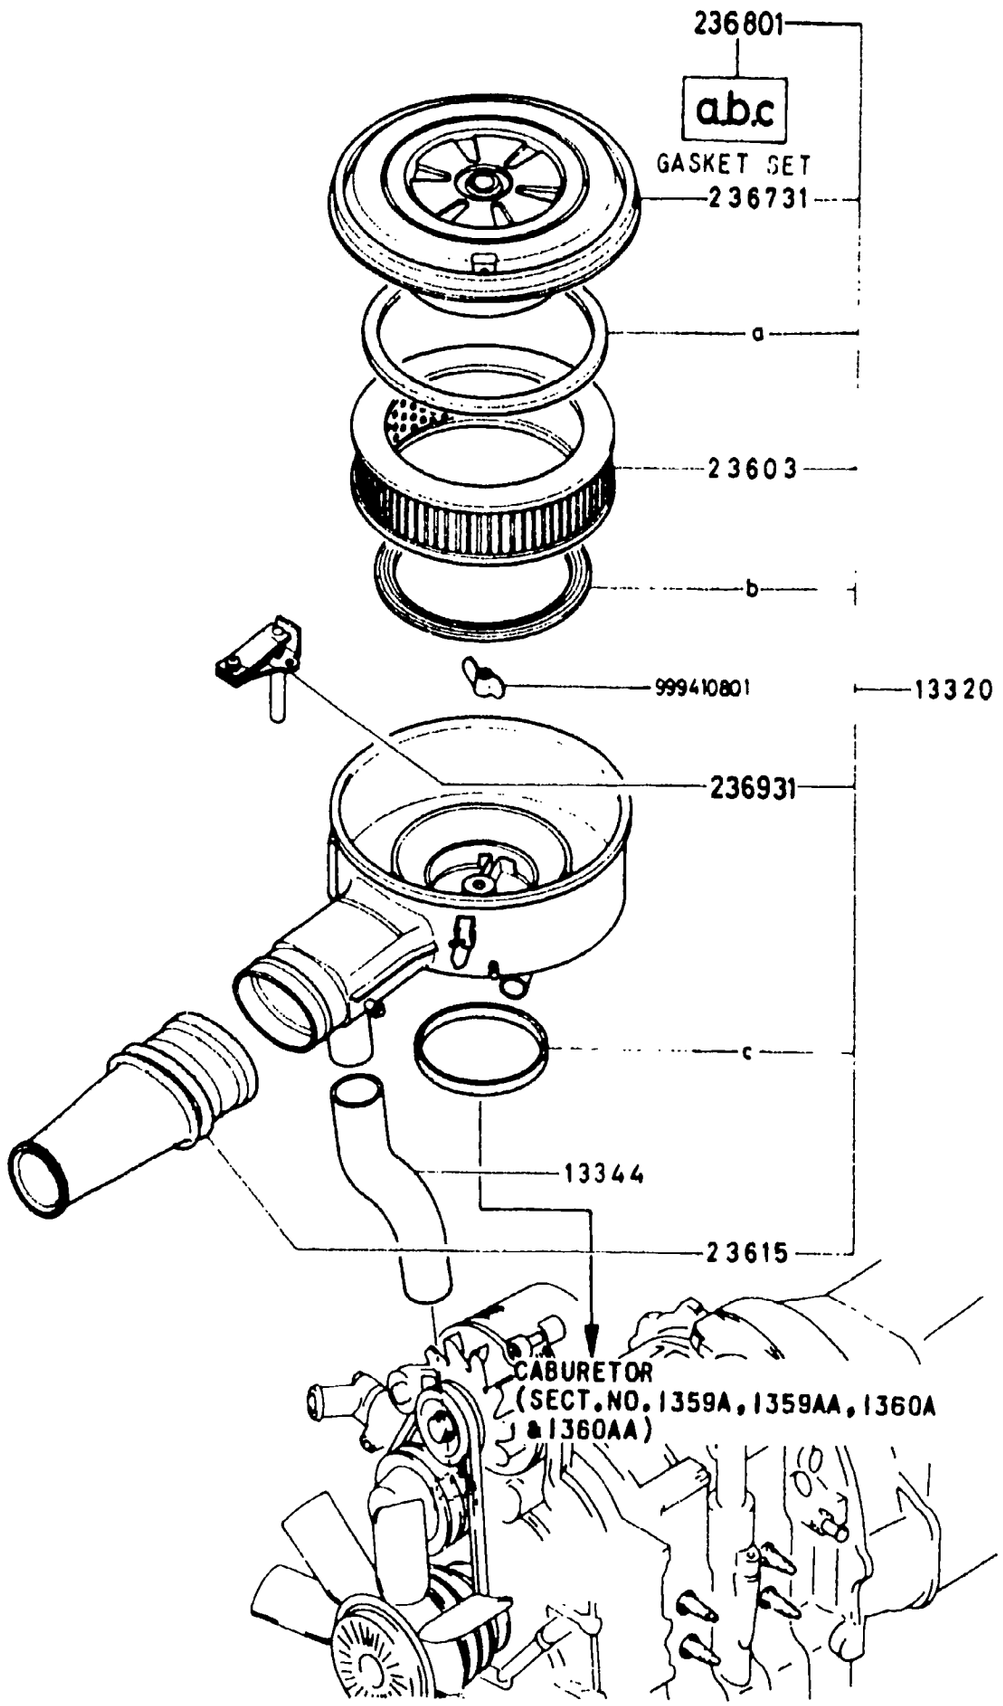


ITEM NO.	D-CODE	DESCRIPTION	PART NO.	QTY	MODEL/DESCRIPTION	REMARKS
	13 320	CLEANER, AIR	N201-13-300	1		
	13 344	HOSE, HOT AIR	8871-13-341A	1		
	23 603	ELEMENT, AIR CLEANER	8341-23-672	1		
	23 615	PIPE, AIR INTAKE	1757-13-351A	1		
	23 6731	COVER	8245-23-673	1		
	23 6801	GASKET SET	1757-23-680	1		
	23 6931	COMPENSATOR	3648-23-693A	1		

1350A-1 STARTING ASSIST SYSTEM

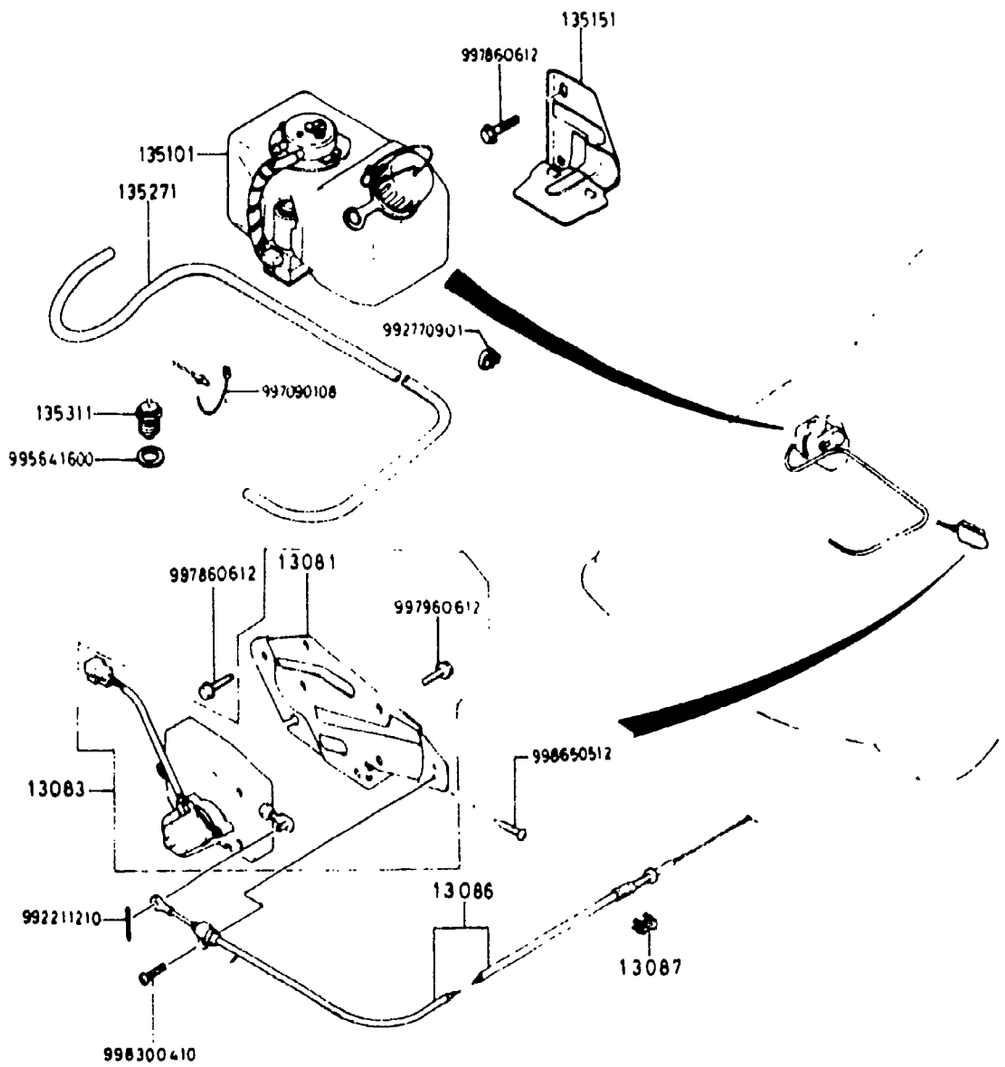


83 MODEL

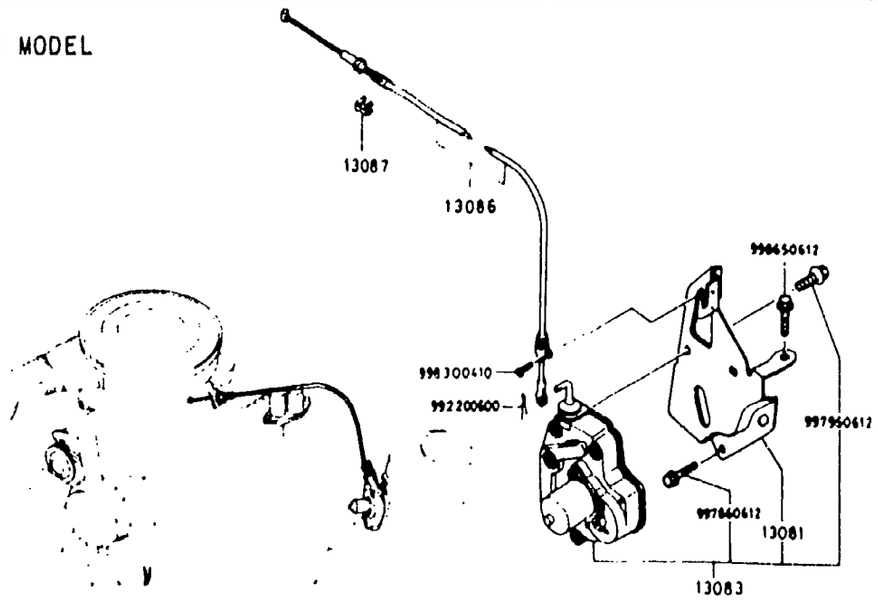

ITEM NO.	D-CODE	DESCRIPTION	PART NO.	QTY	MODEL/DESCRIPTION	REMARKS
	13 081	BRACKET	8871-13-085B	1	'81 & '82 MODELS	
			N229-13-081	1	'83 MODEL	
	13 083	MOTOR	8341-13-085	1	'81 & '82 MODELS	
			N229-13-085	1	'83 MODEL	
	13 086	WIRE	8871-13-086B	1	'81 & '82 MODELS	
			N225-13-086A	1	'83 MODEL	
	13 087	SPRING	8871-13-087A	2		
	13 5101	TANK, STARTING FLUID	1881-13-510G	1		
	13 5151	BRACKET, TANK	1757-13-515A	1	FED.	
	13 5271	HOSE	8871-13-527	1	FED.	
	13 5311	THERMO UNIT	8712-13-531	1	FED.	

1359A-1 CARBURETOR, REPAIR KIT, GASKET SET & SCREW SET

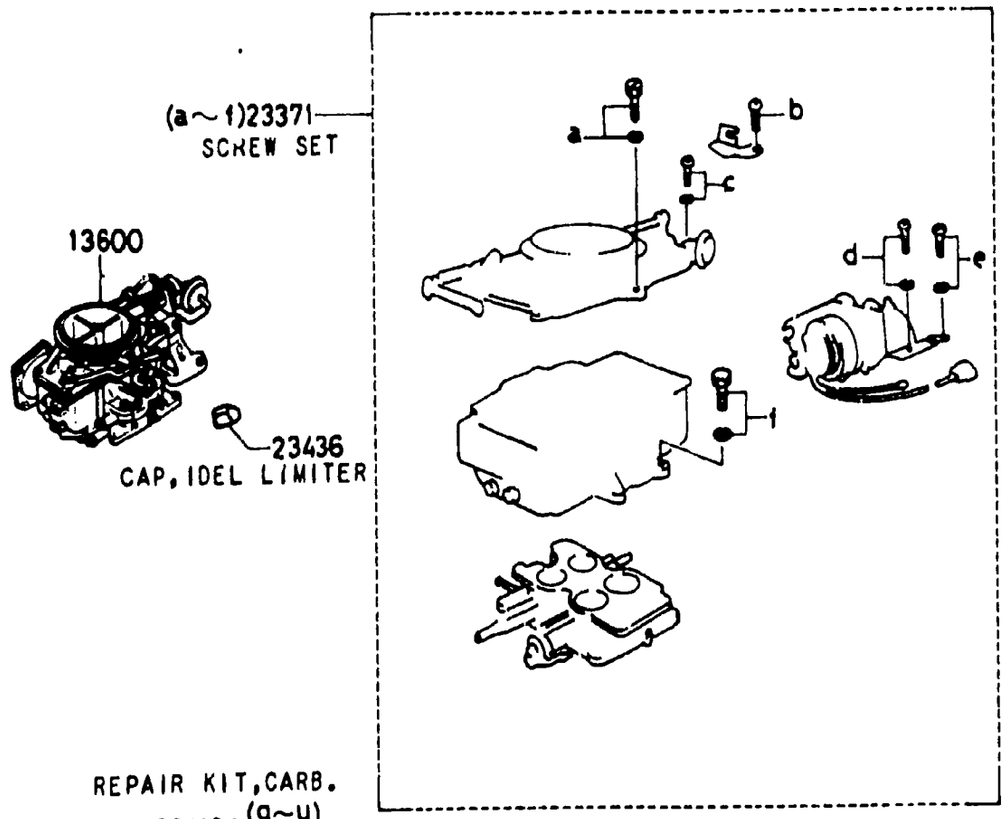


ITEM NO.	D-CODE	DESCRIPTION	PART NO.	QTY	MODEL/DESCRIPTION	REMARKS
	13 600	CARBURETOR	N201-13-200A	1	'81 & '82 MODELS M/T CAL.	
			N233-13-200A	1	'83 MODEL M/T CAL.	
			N202-13-200A	1	'81 & '82 MODELS A/T CAL.	
			N234-13-200A	1	'83 MODEL A/T CAL.	
			N203-13-200A	1	'81 & '82 MODELS M/T FED.	
			N231-13-200A	1	'83 MODEL M/T FED.	
			N204-13-200A	1	'81 & '82 MODELS A/T FED.	
			N232-13-200A	1	'83 MODEL A/T FED.	
	23 371	SCREW SET	N201-23-652	1		
			N201-99-131	1		
	23 410A	REPAIR KIT, CARBURETOR	N201-99-131	1		
	23 436	CAP, IDLE LIMITER	N201-13-205	1		
	23 510	GASKET SET	N201-23-510	1		
		CHAMBER SET, DIAPHRAGM	N249-23-350	1		

SECTION INDEX -- ENGINE


STARTING LOCATION	SECT. NO.	SECTION NAME
1 - C 3	1000A	SHORT ENGINE BLOCK & GASKET SETS
1 - D 3	1030A	ROTOR HOUSING
1 - E 3	1040A	OIL PAN & REAR HOUSING
1 - G 3	1100A	ECCENTRIC SHAFT & FLYWHEEL
1 - H 3	1110A	ROTOR & RELATED
1 - I 3	1300A	INTAKE MANIFOLD
1 - J 3	1310A	EXHAUST MANIFOLD
1 - K 3	1320A	FUEL SYSTEM
1 - L 3	1330A	AIR CLEANER
1 - M 3	1350A	STARTING ASSIST SYSTEM
1 - N 3	1359A	CARBURETOR, REPAIR KIT, GASKET SET & SCREW SET
1 - C 4	1360A	CARBURETOR COMPONENTS
1 - E 4	1371A	EMISSION CONTROLS (AIR PUMP & CONTROL VALVE)
1 - F 4	1380A	EMISSION CONTROLS (EXHAUST SIDE) ('81 & '82 MODELS)
1 - H 4	1380AA	EMISSION CONTROLS (EXHAUST SIDE) ('83 MODEL)
1 - I 4	1400A	OIL PUMP & FILTER ('81 & '82 MODELS)
1 - J 4	1400AA	OIL PUMP & FILTER ('83 MODEL)
1 - K 4	1500A	COOLING SYSTEM ('81 & '82 MODELS)
1 - M 4	1500AA	COOLING SYSTEM ('83 MODEL)
1 - N 4	1580A	COMPRESSOR BRACKET, PULLEY & BELT (A/C)
1 - C 5	1600A	CLUTCH (MANUAL)
1 - D 5	1700A	TRANSMISSION CASE (MANUAL)
1 - E 5	1710A	TRANSMISSION GEAR (MANUAL)
1 - G 5	1720A	CHANGE CONTROLS (MANUAL)
1 - H 5	1800A	ELECTRICAL SYSTEM (ENGINE)
1 - I 5	1820A	DISTRIBUTOR
1 - J 5	1830A	ALTERNATOR
1 - K 5	1840A	STARTER
1 - M 5	1850A	BATTERY & CABLES
1 - N 5	1910A	CONVERTER, OIL PUMP & PIPING (AUTOMATIC TRANSMISSSION)
1 - C 6	1920A	CASE & MAIN CONTROLS (AUTOMATIC TRANSMISSION)
1 - E 6	1930A	CLUTCH & PLANETARY GEAR (AUTOMATIC TRANSMISSION)
1 - G 6	1940A	LOW, REVERSE & GOVERNOR (AUTOMATIC TRANSMISSION)
1 - H 6	1950A	MANUAL LINKAGE (AUTOMATIC TRANSMISSION)

1360A-1 CARBURETOR COMPONENTS

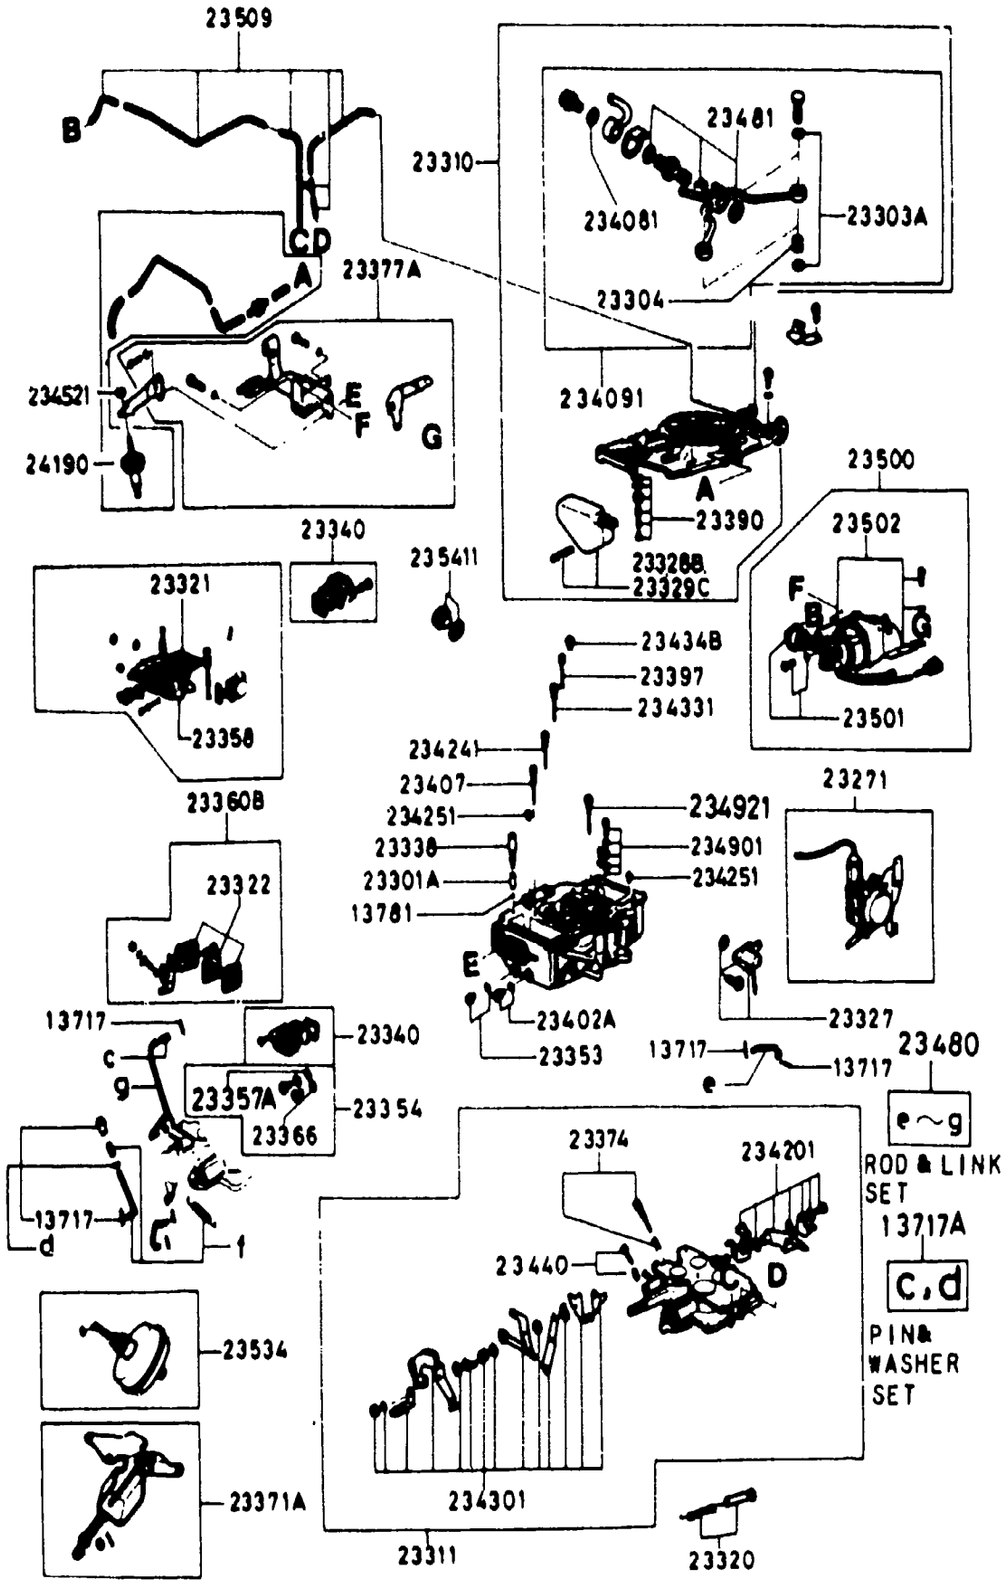


ITEM NO.	D-CODE	DESCRIPTION	PART NO.	QTY	MODEL/DESCRIPTION	REMARKS
	13 717	PIN, COTTER	1663-23-530	7		
	13 717A	PIN & WASHER SET	8871-23-530	1		
	13 781	BALL, STEEL	0107-13-781	1		
	23 271	CHAMBER SET, DIAPHRAGM	N201-23-350	1		
	23 301A	WEIGHT, PUMP	3743-23-488	1		
	23 303A	GASKET	0730-23-318	4		
	23 304	STRAINER	8871-23-401	2		
	23 310	HORN, AIR	N201-23-310	1	'81 & '82 MODELS	
			N232-23-310	1	'83 MODEL	
	23 311	CHAMBER, THROTTLE	N201-23-330	1	'81 & '82 MODELS M/T CAL.	
			N203-23-330	1	'81 & '82 MODELS M/T FED.	
			N231-23-330	1	'83 MODEL M/T	
			N202-23-330	1	'81 & '82 MODELS A/T	
			N232-23-330	1	'83 MODEL A/T	
	23 320	SPRING SET, RETURN	N201-23-380	1		
	23 321	GASKET, FLOAT CHAMBER	N201-23-327	1		
	23 322	DIAPHRAGM, CARBURETOR	N201-23-361	1		
	23 327	SOLENOID	8871-23-411	1		
	23 328B	FLOAT SET, FRONT	N201-23-328	1		
	23 329C	FLOAT SET, REAR	N201-23-329	1		
	23 338	PLUG, CHECK BALL	8826-23-338	1		
	23 340	COVER SET, LEVER GAUGE	3743-23-340	2		
	23 353	JET SET, MAIN 1ST	N202-23-421	2	A/T	
			1955-23-421	2	M/T	
	23 354	PLUG SET	8980-23-354	2		
	23 357A	CLAMP, MAIN JET PLUG	8980-23-357	1	'82 MODEL	
	23 358	GASKET, FLANGE	8341-23-349	1		
	23 360B	PUMP SET, ACCELERATOR	N201-23-360	1		
	23 366	WASHER	0305-23-356	2		
	23 371A	HOLDER SET, RETURN	N201-23-371	1		
	23 374	SCREW SET, IDLE ADJUST	N201-23-460	1		
	23 377A	BRACKET SET	N201-23-370	1	'81 & '82 MODELS M/T	
			N231-23-370	1	'83 MODEL M/T	
			N202-23-370	1	'81 & '82 MODELS A/T	
			N232-23-370	1	'83 MODEL A/T	
	23 390	VALVE SET, FLOAT	N201-23-390	2		
	23 397	JET, STEP	N201-23-426	2		
	23 402A	JET SET, MAIN 2ND	0222-23-355B	2		

1360A-2 CARBURETOR COMPONENTS

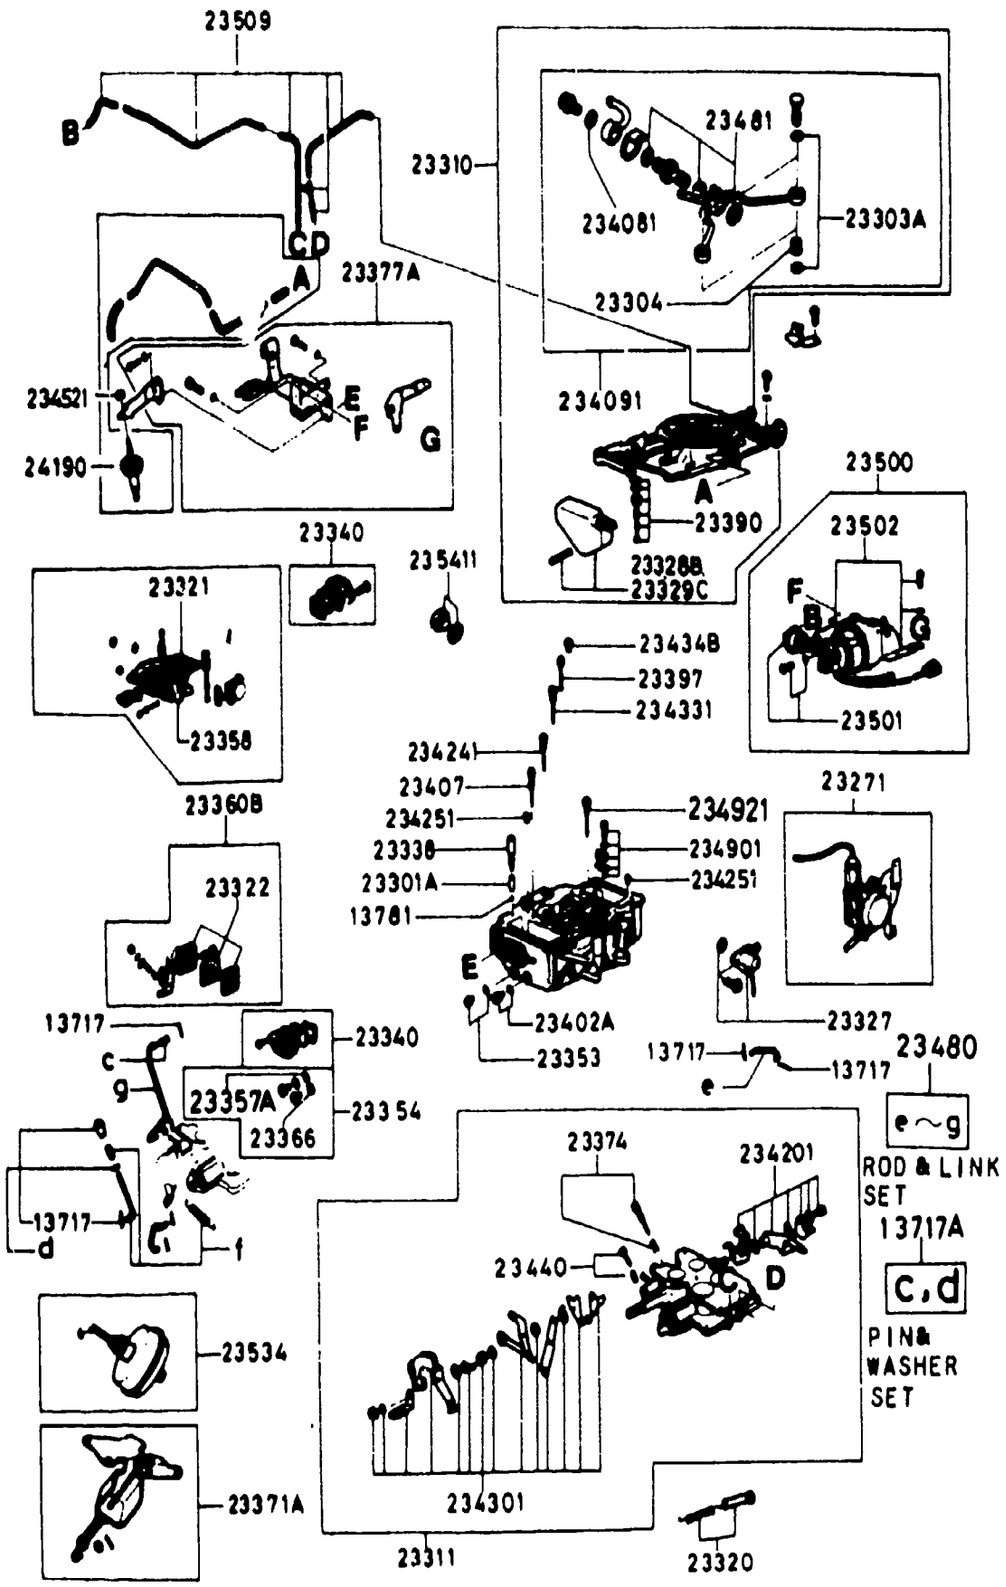


ITEM NO.	D-CODE	DESCRIPTION	PART NO.	QTY	MODEL/DESCRIPTION	REMARKS
	23 407	JET SET, SLOW	3743-23-425	2		
	23 4081	WASHER	0823-23-402A	1		
	23 4091	CONNECTOR SET, FUEL	8871-23-409A	1		
	23 4201	LEVER SET, FRONT	1480-23-420	1	'81 & '82 MODELS	
			N231-23-420	1	'83 MODEL	
	23 4241	JET, AIR BLEED 1ST	N201-23-423	2	M/T	
			N202-23-423	2	A/T	
	23 4251	JET, SLOW AIR BLEED	0603-23-512	2	M/T	
			8021-23-351	2	A/T	
	23 4301	LEVER SET, REAR	N201-23-430	1	'81 & '82 MODELS M/T	
			N231-23-430		'83 MODEL M/T	
			N202-23-430	1	'81 & '82 MODELS A/T	
			N232-23-430	1	'83 MODEL A/T	
	23 4331	JET, AIR BLEED 2ND	8871-23-424	2		
	23 434B	JET, STEP AIR BLEED	8649-23-434	2		
	23 440	SCREW SET, THROTTLE ADIUST	N201-23-440	1		
	23 4521	NUT, HEXAGON	2090-23-452	1	M/T	
	23 480	ROD & LINK SET	N201-23-480	1		
	23 481	GASKET	0823-23-394	3		
	23 4901	NOZZLE SET, ACCELERATOR	N201-23-490	1		
	23 4921	JET, AIR BLEED	N201-23-492	1		
	23 500	CHOKE SET, SEMI AUTOMATIC	N201-23-500A	1		
	23 501	HOLDER, BI-METAL	N201-23-501	1		
	23 502	BI-METAL SET	N201-23-502A	1		
	23 509	PIPE SET, VACUUM	N201-23-509	1		
	23 534	CHOKE SET, RETURN	N201-23-503	1		
	23 5411	PLUG	2183-23-508	1	CAL.	
			1570-23-507	1	FED.	
	24 190	DASH POT	8341-13-215	1	M/T	

1371A-1 EMISSION CONTROLS (AIR PUMP & CONTROL VALVE)

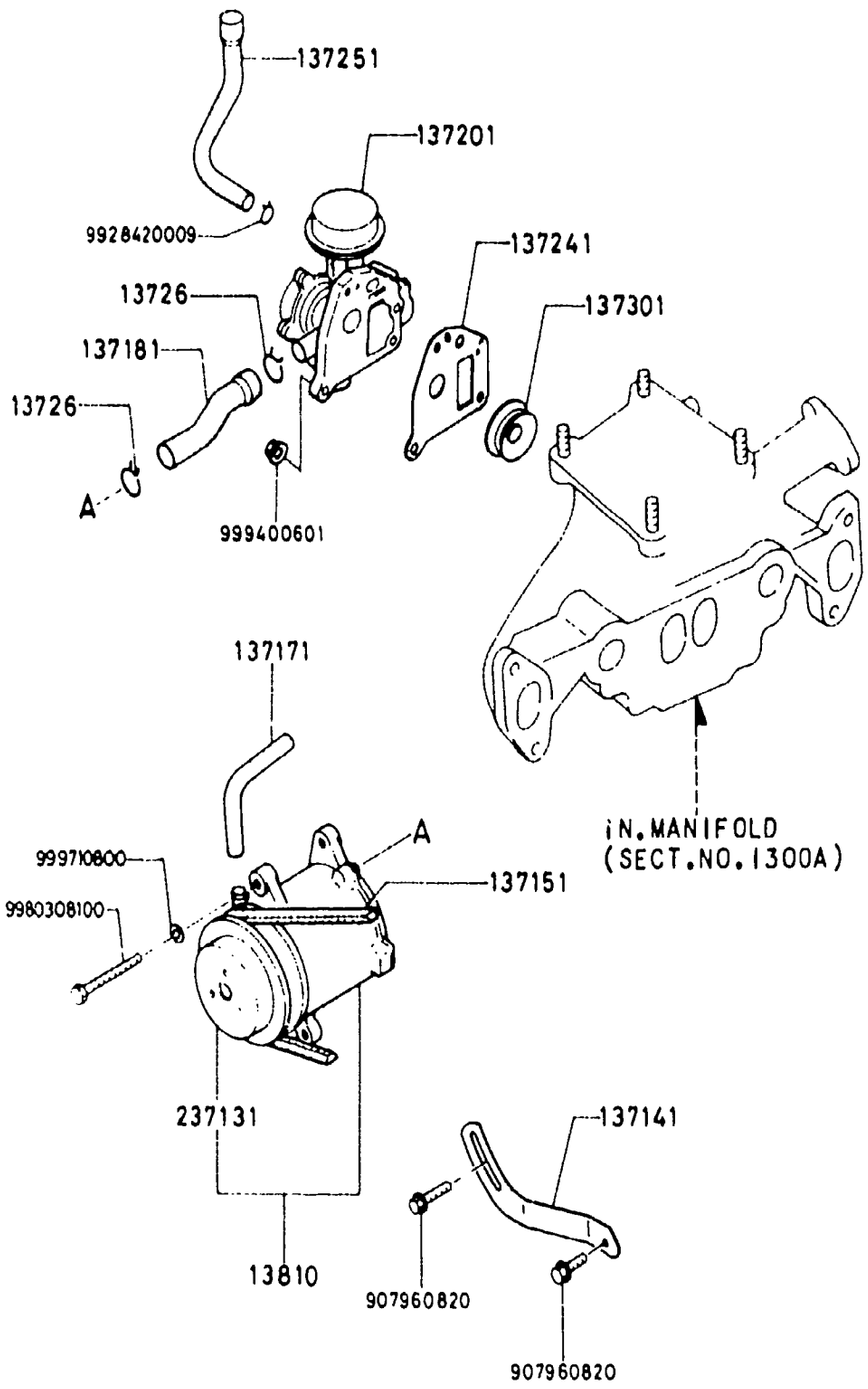


ITEM NO.	D-CODE	DESCRIPTION	PART NO.	QTY	MODEL/DESCRIPTION	REMARKS
	137141	STRAP, AIR PUMP	1757-13-714	1		
	137151	V-BELT	1757-13-715	1		
	137171	HOSE, AIR	1757-13-717	1		
	137181	HOSE, AIR	1480-13-718A	1		
	137201	VALVE, AIR CONTROL	N201-13-720	1	CAL.	
			N203-13-720	1	'81 & '82 MODELS FED.	
			N231-13-720	1	'83 MODEL FED.	
	137241	GASKET, AIR CONTROL VALVE	N201-13-724	1		
	137251	HOSE, AIR	N201-13-725	1		
	13726	CLIP, AIR HOSE	1480-13-726	2		
	137301	VALVE, CHECK	1480-13-730	1		
	13810	PUMP, AIR	1757-13-710B	1		
	237131	PULLEY, AIR PUMP	1757-23-713A	1		

1380A-1 EMISSION CONTROLS (EXHAUST SIDE) ('81 & '82 MODELS)

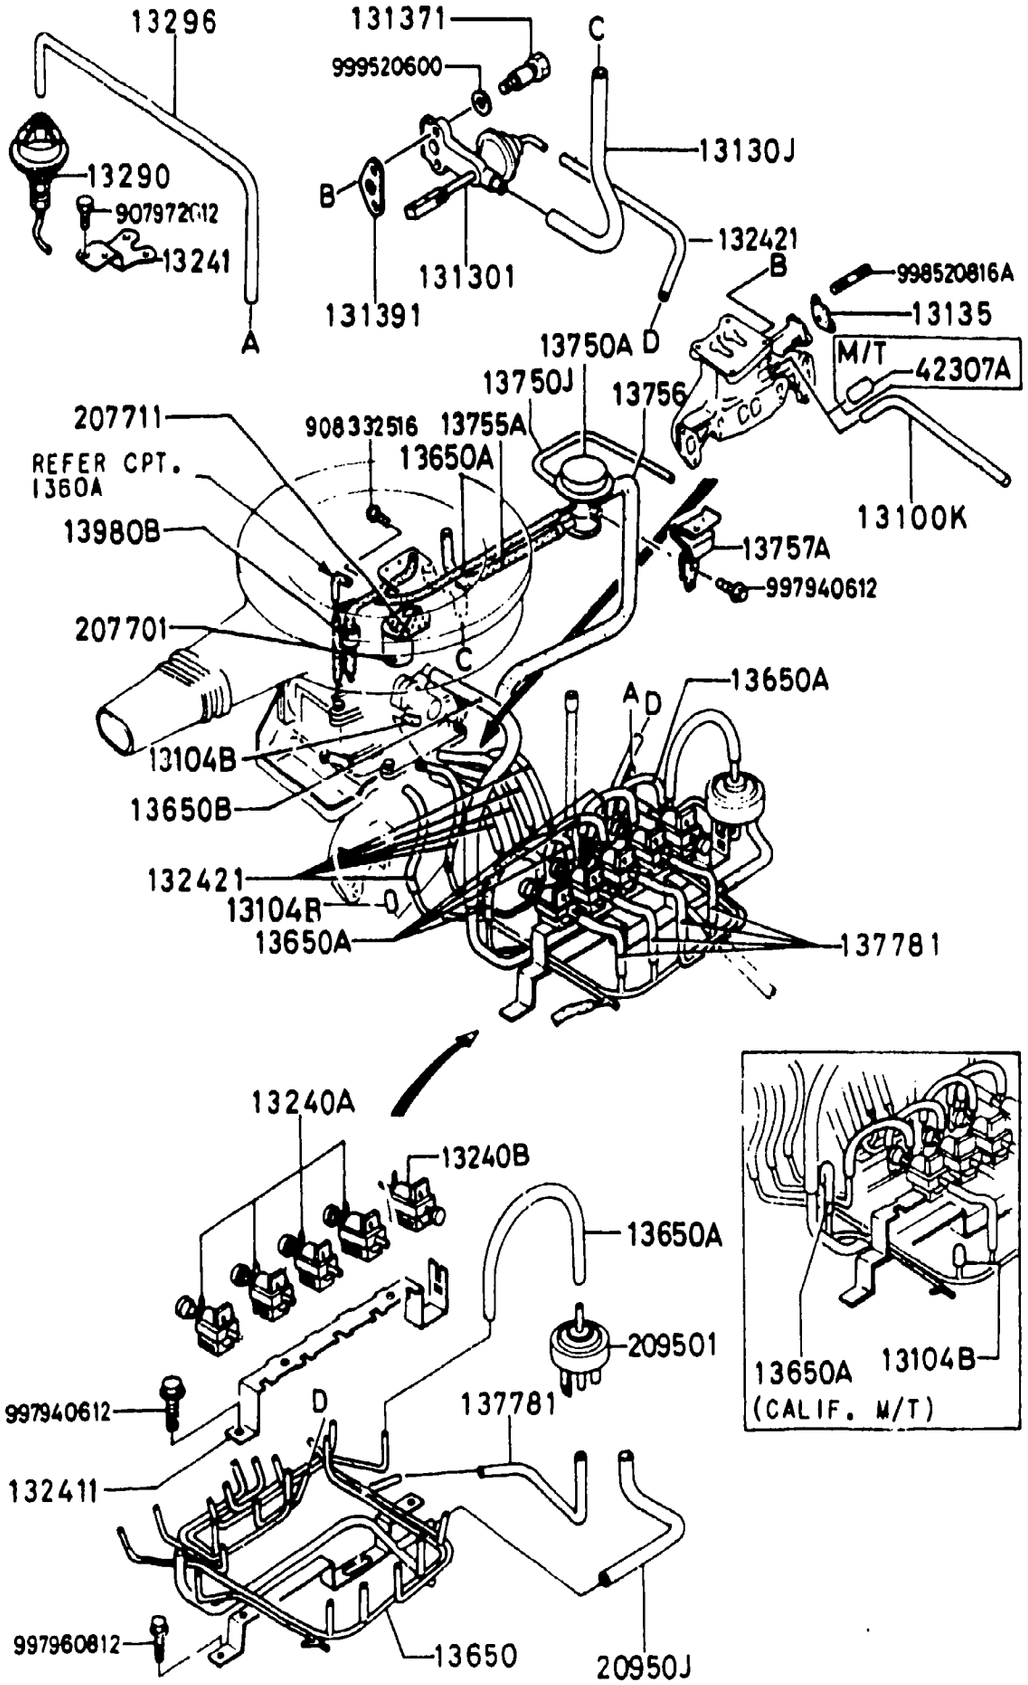


ITEM NO.	D-CODE	DESCRIPTION	PART NO.	QTY	MODEL/DESCRIPTION	REMARKS
	13 100K	HOSE, VACUUM	9935-10-6999		A/T BULK QTY.	
	13 104B	CAP	1010-13-104	1	M/T CAL.	
				3	FED.	
					A/T CAL.	
	13 1301	DIAPHRAGM, SHUTTER VALVE	1480-13-130A	1		
	13 130J	HOSE, AIR	1480-13-727A	1		
	13 135	GASKET	N201-13-135	1	CAL.	
			N203-13-135	1	FED.	
	13 1371	BOLT, REAMER	1480-13-137A	2		
	13 1391	GASKET, SHUTTER VALVE	1480-13-139B	1		
	13 240A	VALVE, THREE-WAY	1481-13-240A	3	M/T CAL.	
				4	FED.	
					A/T CAL.	
	13 240B	VALVE, THREE-WAY	1482-13-240A	1		
	13 241	BRACKET, ACTUATOR	8871-13-291A	1		
	13 2411	BRACKET	1480-13-241A	1		
	13 2421	HOSE, VACUUM	9935-10-4999		BULK QTY.	
			9935-10-1999		M/T CAL. A/T CAL. FED.	
	13 290	ACTUATOR	3648-13-290	1		
	13 296	HOSE, AIR	8871-13-296B	1		
	13 650	PIPE, VACUUM	N201-13-650A	1		
	13 650A	HOSE, AIR	9935-10-4095	6		
	13 650B	HOSE, AIR	9935-10-8999		BULK QTY.	
	13 750A	VALVE, ANTI-AFTERBURN	N201-13-750	1		
	13 750J	TUBE, VACUUM	9935-10-4999		BULK QTY.	
	13 755A	HOSE, AIR	N201-13-755	1		
	13 756	HOSE, AIR	N201-13-756	1		
	13 757A	BRACKET	N201-13-757A	1		
	13 7781	TUBE, VACUUM	9935-10-4999		BULK QTY.	
					M/T CAL. A/T CAL. FED.	
	13 980B	VALVE, DELAY	N201-13-980A	1		
	20 7701	VALVE, ALTITUDE COMPENSATOR	N201-20-770A	1		
		<A>	N249-20-770	1		
	20 7711	GASKET	N201-20-771	1		
	20 9501	VALVE, PURGE	1480-20-950A	1		
	20 950J	HOSE, AIR	9935-10-8999		BULK QTY.	
	42 307A	CAP	0223-42-307	1	M/T	

1380A-2 EMISSION CONTROLS (EXHAUST SIDE) ('81 & '82 MODELS)

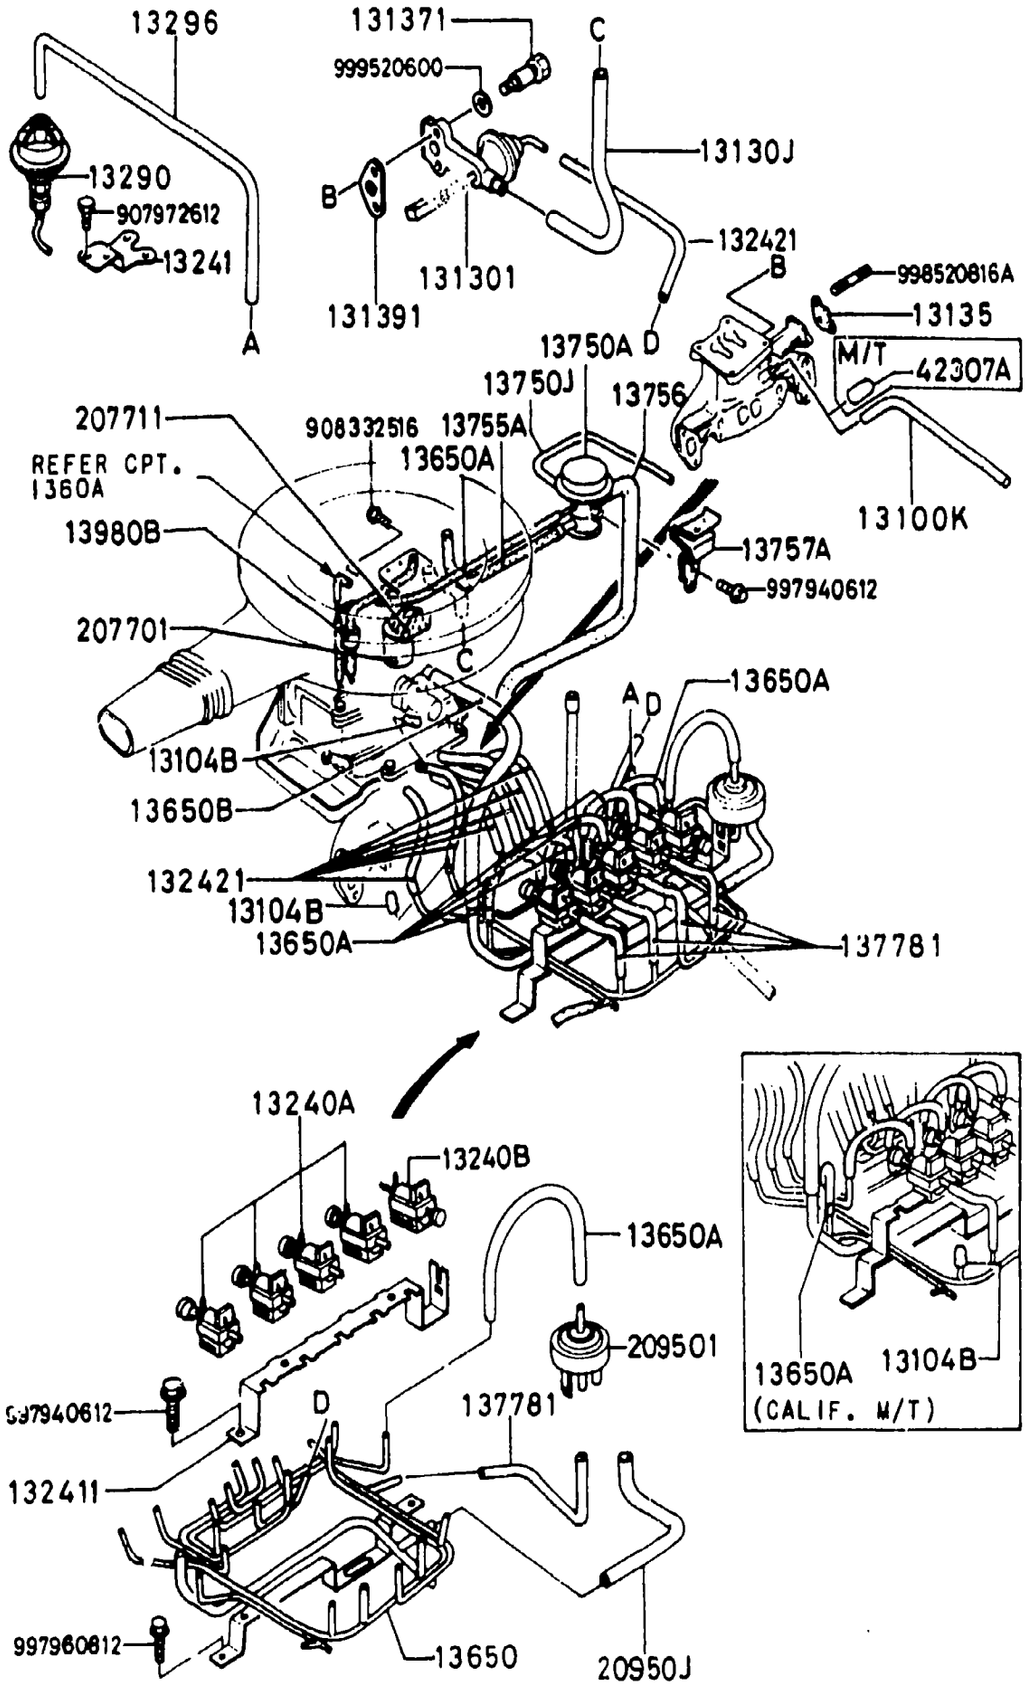


ITEM NO.	D-CODE	DESCRIPTION	PART NO.	QTY	MODEL/DESCRIPTION	REMARKS
		REFER TO RECALL CAMPAIGN NOS. 23702/2370C FOR EMISSION CONTROL INFO.				

1380AA-1 EMISSION CONTROLS (EXHAUST SIDE) ('83 MODEL)

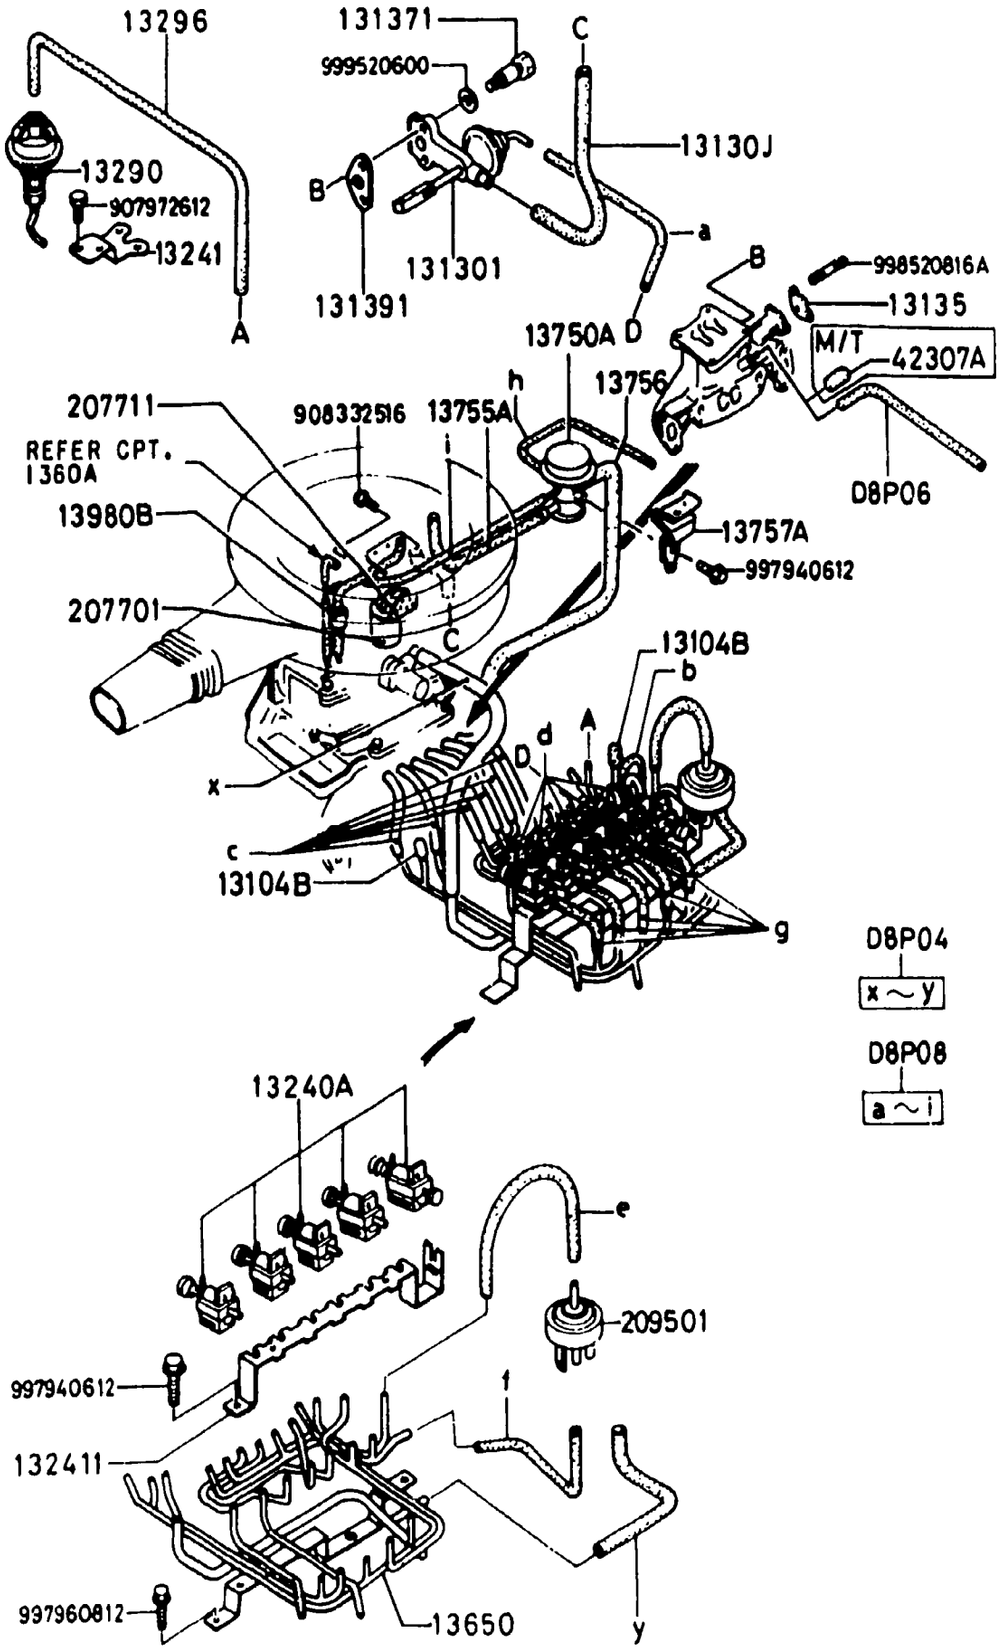


ITEM NO.	D-CODE	DESCRIPTION	PART NO.	QTY	MODEL/DESCRIPTION	REMARKS
	13 104B	CAP	1010-13-104	2		
	13 1301	DIAPHRAGM, SHUTTER VALVE	1480-13-130A	1		
	13 130J	HOSE, AIR	1480-13-727A	1		
	13 135	GASKET	N201-13-135	1	CAL.	
			N203-13-135	1	FED.	
	13 1371	BOLT, REAMER	1480-13-137A	2		
	13 1391	GASKET, SHUTTER VALVE	1480-13-139B	1		
	13 240A	VALVE, THREE-WAY	1481-13-240A	5		
	13 241	BRACKET, ACTUATOR	8871-13-291A	1		
	13 2411	BRACKET	N225-13-241A	1		
	13 290	ACTUATOR	3648-13-290	1		
	13 296	HOSE, AIR	8871-13-296B	1		
	13 650	PIPE, VACUUM	N231-13-650C		BULK QTY.	
	13 750A	VALVE, ANTI-AFTERBURN	N201-13-750	1		
	13 755A	HOSE, AIR	N201-13-755	1		
	13 756	HOSE, AIR	N201-13-756	1		
	13 757A	BRACKET	N201-13-757A	1		
	13 980B	VALVE, DELAY	N231-13-980	1		
	20 7701	VALVE, ALTITUDE COMPENSATOR	N201-20-770A	1		
	20 7711	GASKET	N201-20-771	1		
	20 9501	VALVE, PURGE	1480-20-950A	1		
	42 307A	CAP	0223-42-307	1	M/T	
		REFER TO RECALL CAMPAIGN NOS. 23702/2370C FOR EMISSION CONTROL INFO.				
	D8 P04	HOSE, AIR	9935-10-4999		BULK QTY.	
			9935-10-4095	9		
	D8 P06	HOSE, AIR	9935-10-6999		BULK QTY. A/T	
	D8 P08	HOSE, AIR	9935-10-8999		BULK QTY.	

1400A-1 OIL PUMP & FILTER ('81 & '82 MODELS)

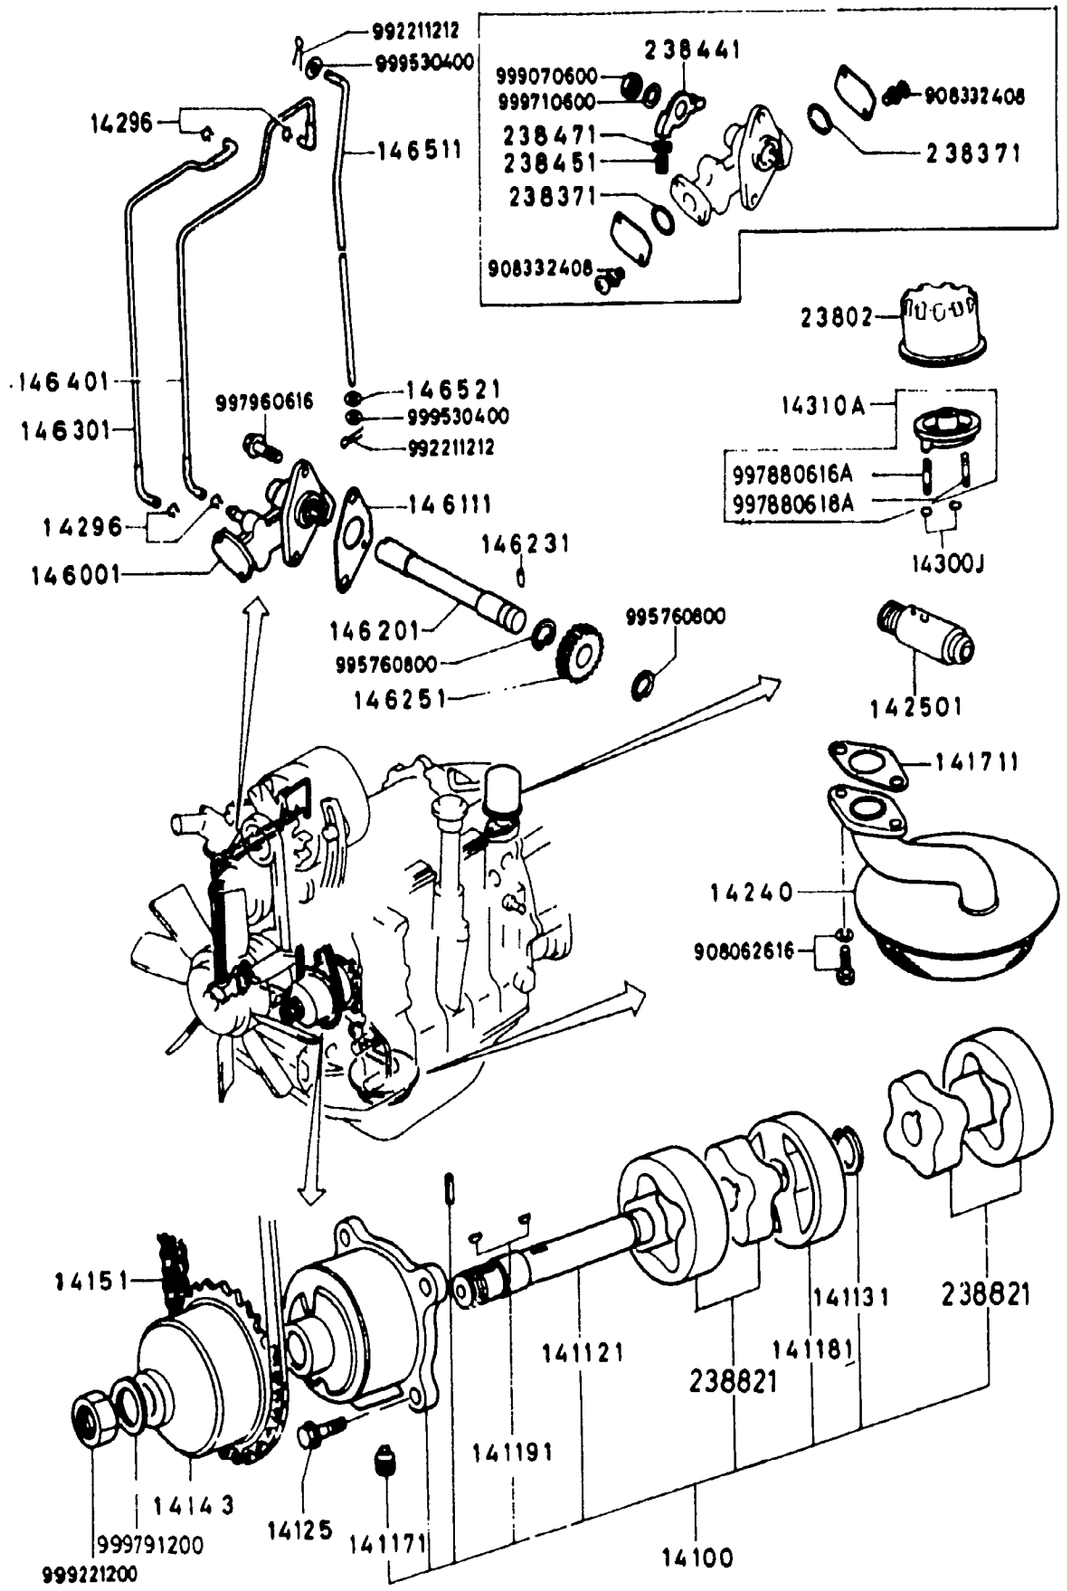


ITEM NO.	D-CODE	DESCRIPTION		PART NO.	QTY	MODEL/DESCRIPTION	REMARKS
	14 100	PUMP, OIL		8501-14-100	1		
	14 1121	SHAFT, OIL PUMP		1757-14-112	1		
	14 1131	RING, SNAP		0810-14-113	1		
	14 1171	BOLT, LOCK		0839-14-117	1		
	14 1181	PLATE, MIDDLE		8501-14-118	1		
	14 1191	KEY		0839-14-119B	3		
	14 125	BOLT, SET		8553-14-125	4		
	14 143	WHEEL, SPROCKET		0839-14-141A	1		
	14 151	CHAIN, OIL PUMP		0839-14-142	1		
	14 1711	GASKET, OIL STRAINER		0810-14-171A	1		
	14 240	STRAINER, OIL		8871-14-160	1		
	14 2501	REGULATOR, PRESSURE		3648-14-250	1		
	14 296	CLIP, OIL TUBE		0730-14-296	4		
	14 300J	O-RING		9954-10-1601	2		
	14 310A	BODY, OIL FILTER		8341-14-310	1		
	14 6001	PUMP, METERING OIL		1757-14-600	1		
	14 6111	GASKET, METERING OIL		1757-14-611	1		
	14 6201	SHAFT, DRIVEN GEAR		0820-14-620A	1		
	14 6231	PIN, DRIVEN GEAR		0813-14-623	1		
	14 6251	GEAR, DRIVEN		0820-14-625A	1		
	14 6301	TUBE, METERING OIL		8871-14-660B	1		
	14 6401	TUBE, METERING OIL		8871-14-670B	1		
	14 6511	ROD, CONNECTING		8871-14-651	1		
	14 6521	SHIM, ADJUST		1757-14-652	1	(T=1.0)	
	23 802	CARTRIDGE, OIL FILTER		B6Y1-14-302	1		
			<AN>	N3Y6-14-302	1		
	23 8371	O-RING		0730-23-837	2		
	23 8441	LEVER, CONTROL		1757-23-844	1		
	23 8451	SCREW, ADJUST		0820-23-845A	1		
	23 8471	NUT		0820-23-847A	1		
	23 8821	ROTOR SET, OIL PUMP		8501-14-110	2		

1400AA-1 OIL PUMP & FILTER ('83 MODEL)

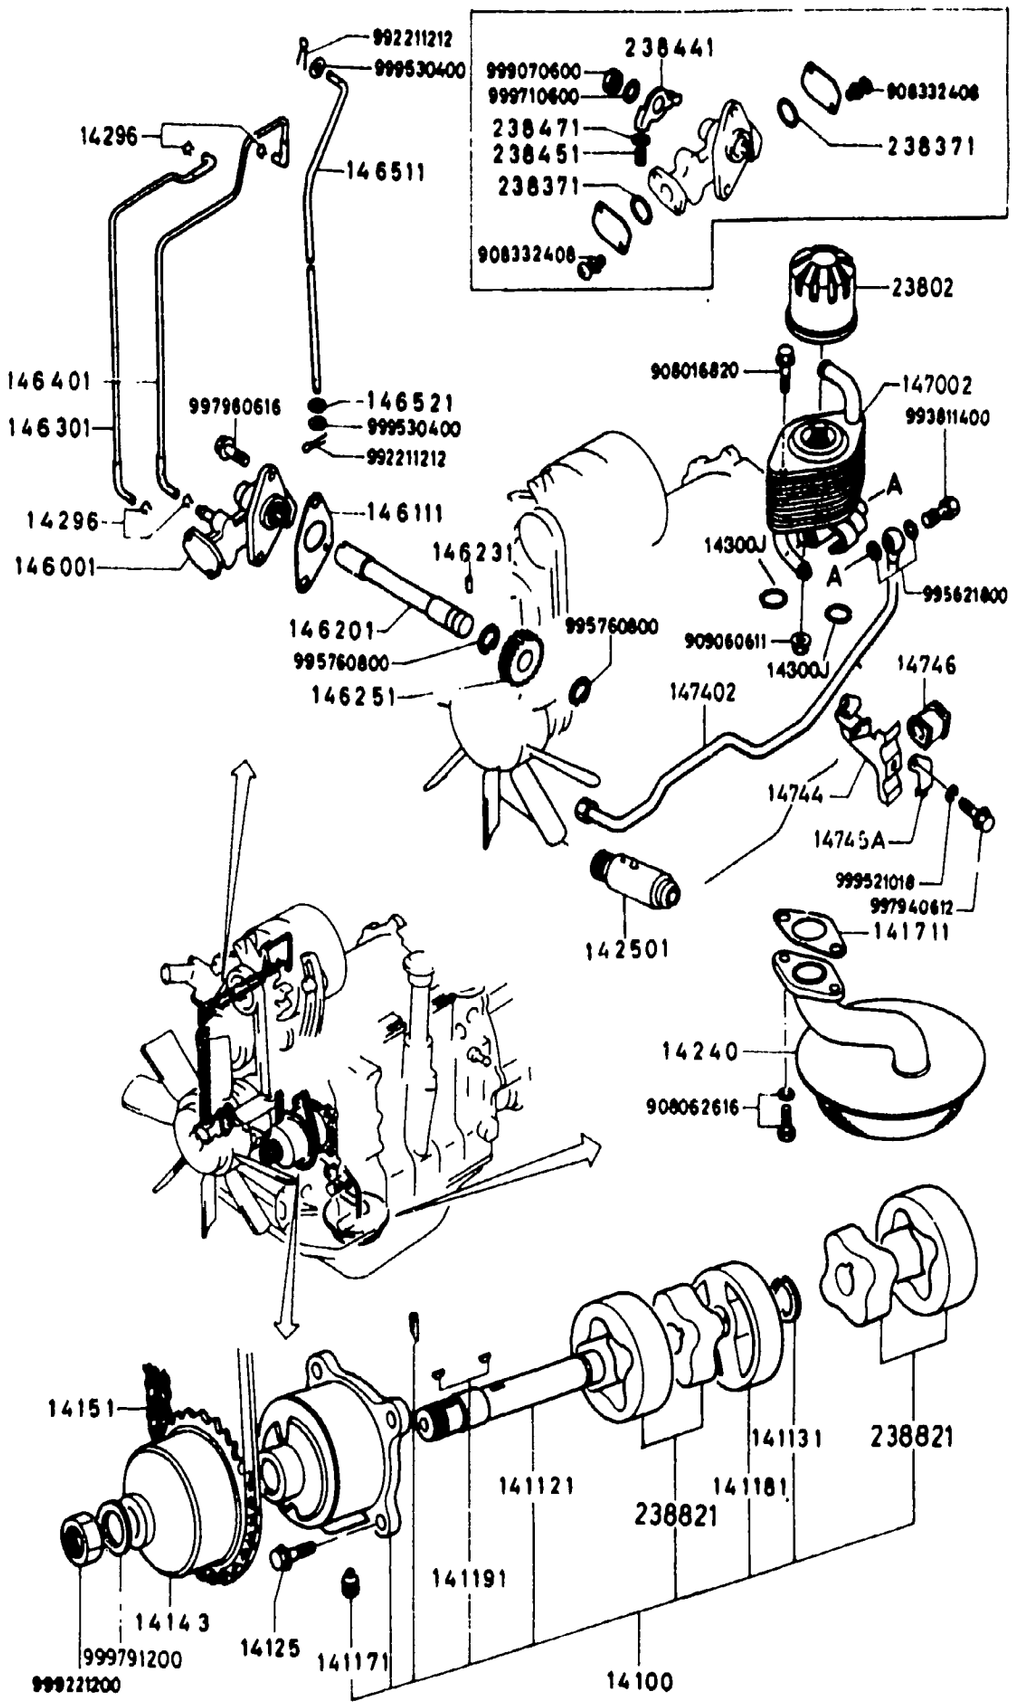


ITEM NO.	D-CODE	DESCRIPTION	PART NO.	QTY	MODEL/DESCRIPTION	REMARKS
	14 100	PUMP, OIL	8553-14-100	1		
	14 1121	SHAFT, OIL PUMP	8553-14-112	1		
	14 1131	RING, SNAP	0810-14-113	1		
	14 1171	BOLT, LOCK	0839-14-117	1		
	14 1181	PLATE, MIDDLE	8553-14-118	1		
	14 1191	KEY	0839-14-119B	3		
	14 125	BOLT, SET	8553-14-125	4		
	14 143	WHEEL, SPROCKET	0839-14-141A	1		
	14 151	CHAIN, OIL PUMP	0839-14-142	1		
	14 1711	GASKET, OIL STRAINER	0810-14-171A	1		
	14 240	STRAINER, OIL	8871-14-160	1		
	14 2501	REGULATOR, PRESSURE	3648-14-250	1		
	14 296	CLIP, OIL TUBE	0730-14-296	4		
	14 300J	O-RING	9954-10-1601	2		
	14 6001	PUMP, METERING OIL	1757-14-600	1		
	14 6111	GASKET, METERING OIL	1757-14-611	1		
	14 6201	SHAFT, DRIVEN GEAR	0820-14-620A	1		
	14 6231	PIN, DRIVEN GEAR	0813-14-623	1		
	14 6251	GEAR, DRIVEN	0820-14-625A	1		
	14 6301	TUBE, METERING OIL	8871-14-660B	1		
	14 6401	TUBE, METERING OIL	8871-14-670B	1		
	14 6511	ROD, CONNECTING	N225-14-651	1		
	14 6521	SHIM, ADJUST	1757-14-652	1	(T=1.0)	
	14 7002	COOLER, OIL	N231-14-700C	1		
	14 7402	PIPE, OIL COOLER	N231-14-720B	1		
	14 744	BRACKET, OIL PIPE	N231-14-744B	1		
	14 745A	CLIP, OIL PIPE	N231-14-745B	1		
	14 746	PROTECTOR	N231-14-746	1		
	23 802	CARTRIDGE, OIL FILTER	N3Y6-14-302	1		
		REFER TO PARTS BULL. NOS. T-1-7 & T-1-8 FOR MORE INFO.				
	23 8371	O-RING	0730-23-837	2		
	23 8441	LEVER, CONTROL	1757-23-844	1		
	23 8451	SCREW, ADJUST	0820-23-845A	1		
	23 8471	NUT	0820-23-847A	1		
	23 8821	ROTOR SET, OIL PUMP	8553-14-110	2		

1500A-1 COOLING SYSTEM ('81 & '82 MODELS)

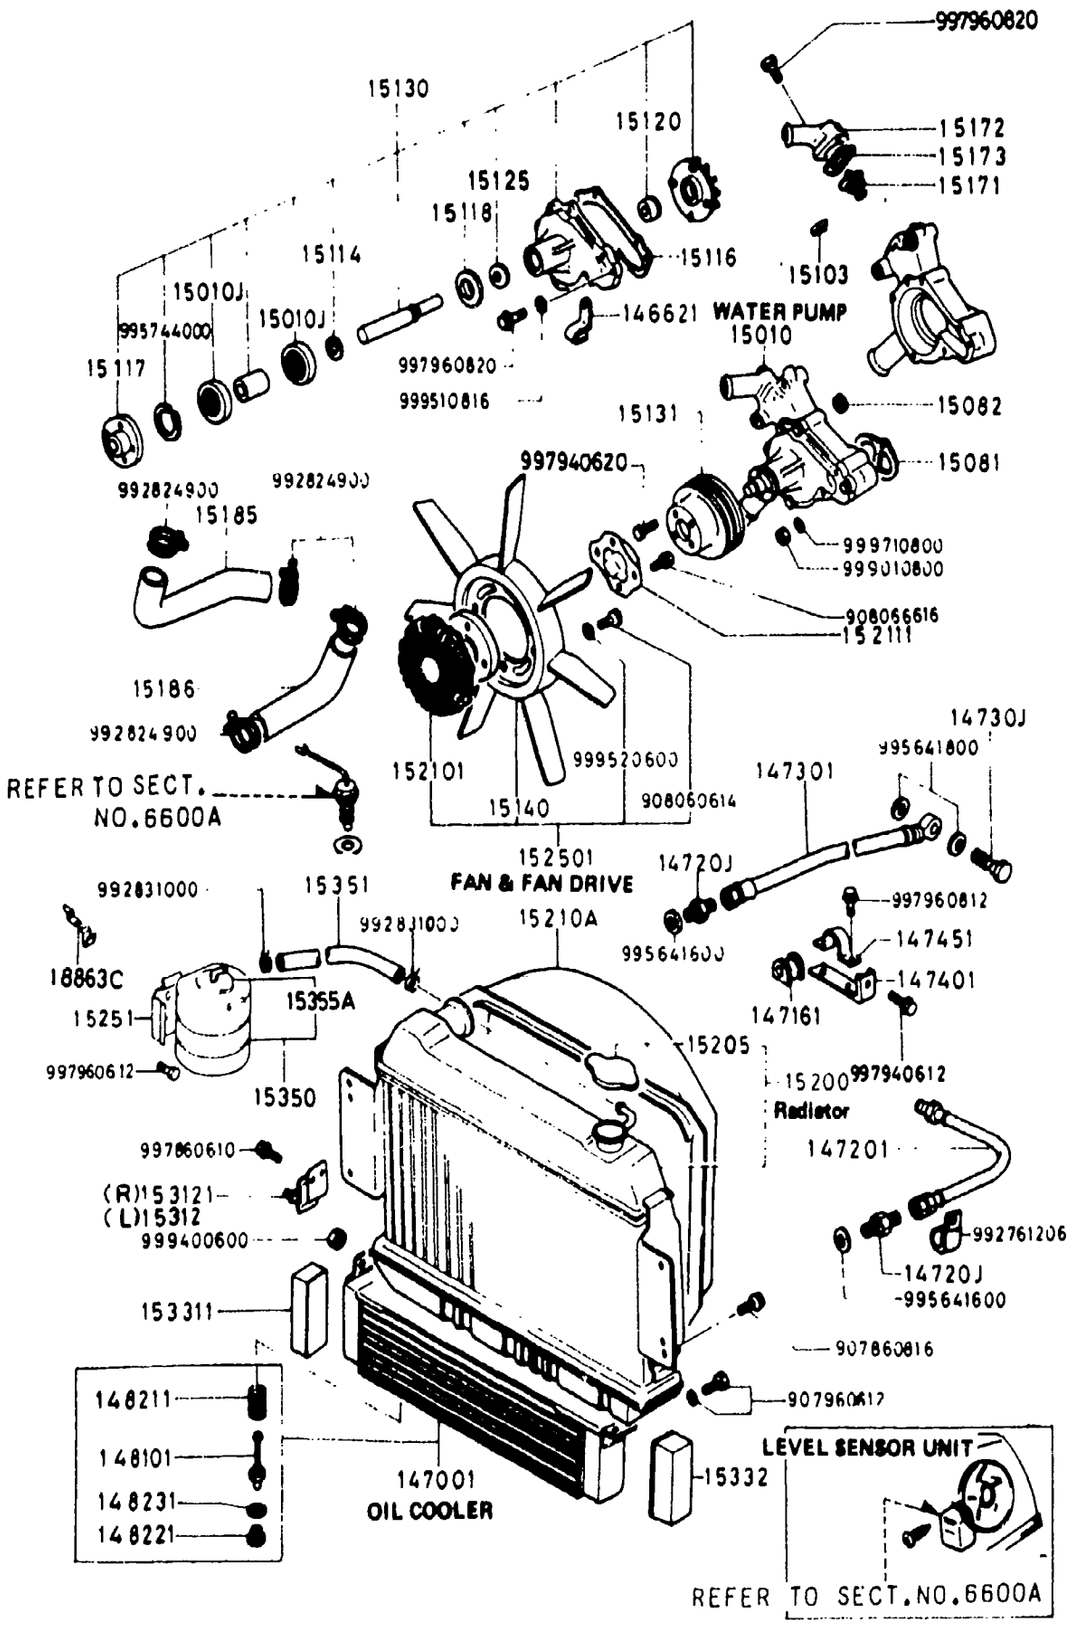


ITEM NO.	D-CODE	DESCRIPTION	PART NO.	QTY	MODEL/DESCRIPTION	REMARKS
	14 6621	CLIP	3565-14-662A	1		
	14 7001	COOLER, OIL	8871-14-700A	1		
	14 7161	PROTECTOR, OIL HOSE	0813-14-716	1		
	14 7201	HOSE, OIL	1011-14-720	1		
	14 720J	JOINT, UNION	9938-41-200F	2		
	14 7301	HOSE, OIL	8871-14-730	1		
	14 730J	CONNECTOR	9938-11-400	1		
	14 7401	BRACKET, OIL HOSE	8871-14-742	1		
	14 7451	CLIP, AIR HOSE	0839-14-745A	1		
	14 8101	PELLET, THERMO	8871-14-810	1		
	14 8211	SPRING, PELLET	1757-14-821	1		
	14 8221	NUT, STOPPER	1757-14-822	1		
	14 8231	GASKET	9956-42-200	1		
	15 010	PUMP, WATER	1757-23-920G	1		
	15 010J	BEARING, BALL	8871-15-121A	2		
	15 081	GASKET	1757-15-105A	1		
	15 082	GASKET	1757-15-106	2		
	15 103	SPACER	8872-15-103	1		
	15 114	RING, SNAP	1757-15-114	1		
	15 116	GASKET, WATER PUMP	1757-15-132	1		
	15 117	BOSS, WATER PUMP PULLEY	1757-23-927	1		
	15 118	PLATE, DUST SEAL	1757-15-118	1		
	15 120	SEAL, WATER	1757-15-120A	1		
	15 125	PLATE, WATER BAFFLE	0118-15-125	1		FB331 ..500001-618134
			N201-15-125A	1	'82 MODEL	FB331 ..618135-
	15 130	COVER, WATER PUMP	N232-99-153A	1		
	15 131	PULLEY	1757-15-151B	1		
	15 140	FAN, COOLING	3648-15-200A	1		
	15 171	THERMOSTAT	8553-99-152	1		
	15 172	COVER, THERMOSTAT	8872-15-170A	1		
	15 173	GASKET	1757-15-173	1		
	15 185	HOSE, WATER-UPPER	8871-15-511	1		
	15 186	HOSE, WATER-LOWER	8871-15-521	1		
	15 200	RADIATOR	N201-15-310B	1	M/T	
			N202-15-310B	1	A/T	
	15 205	CAP, RADIATOR	8871-15-205	1		
	15 2101	FAN DRIVE	N201-15-210B	1		
	15 210A	COWLING, RADIATOR	8871-15-401A	1		
	15 2111	SPACER, PULLEY	8872-15-211	1		
	15 2501	FAN & FAN DRIVE	N201-15-250B	1		

1500A-2 COOLING SYSTEM ('81 & '82 MODELS)

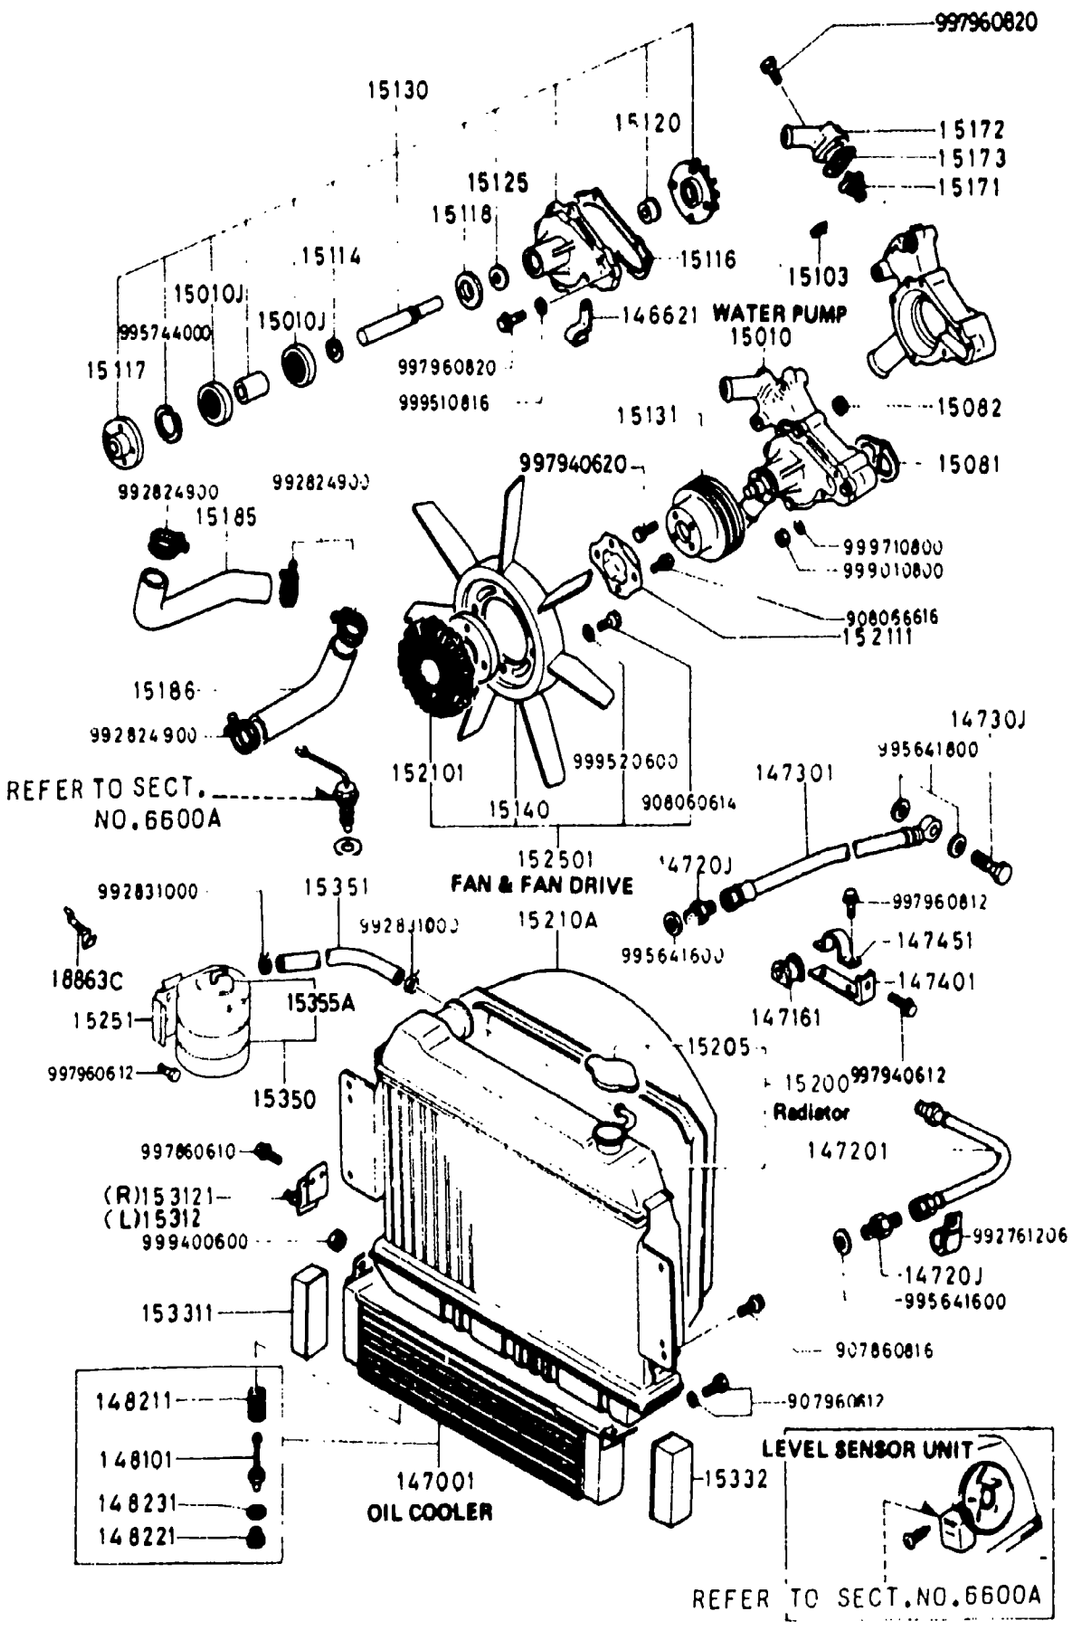


ITEM NO.	D-CODE	DESCRIPTION	PART NO.	QTY	MODEL/DESCRIPTION	REMARKS
	15 251	BRACKET, SUB TANK	FA01-56-374	1		
	15 312	RUBBER, INSULATION	8871-15-312	1		
	15 3121	RUBBER, INSULATION	1128-15-312A	1		
	15 3311	SEAL, AIR	8871-15-331	1		
	15 332	SEAL, AIR	8871-15-332	1		
	15 350	TANK, SUB	1052-15-350B	1		
	15 351	HOSE, WATER	8871-15-351A	1		
	15 355A	CAP, SUB TANK	1052-15-355A	1		
	18 863C	CLIP	8156-18-863B	1		

1500AA-1 COOLING SYSTEM ('83 MODEL)

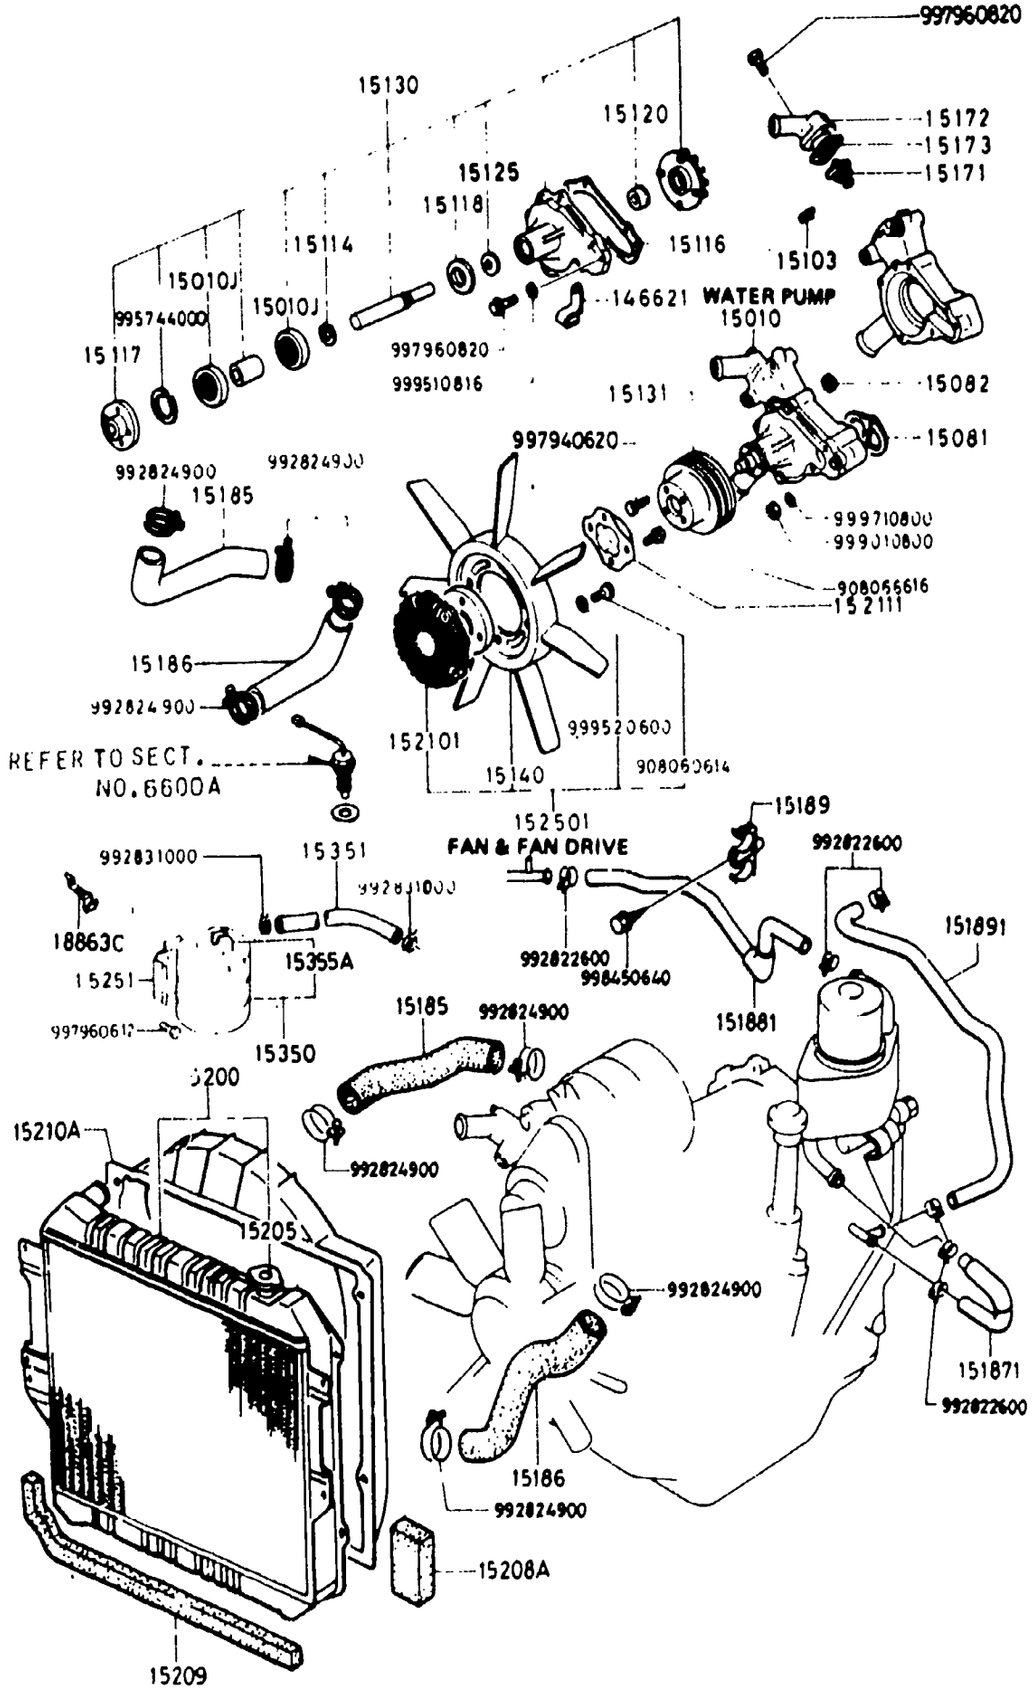

ITEM NO.	D-CODE	DESCRIPTION	PART NO.	QTY	MODEL/DESCRIPTION	REMARKS
	14 6621	CLIP	3565-14-662A	1		
	15 010	PUMP, WATER	8872-15-0101	1		
	15 010J	BEARING, BALL	8871-15-121A	2		
	15 081	GASKET	1757-15-105A	1		
	15 082	GASKET	1757-15-106	2		
	15 103	SPACER	8872-15-103	1		
	15 114	RING, SNAP	1757-15-114	1		
	15 115	SPACER, BEARING	1757-15-115B	1		
	15 116	GASKET, WATER PUMP	1757-15-132	1		
	15 117	BOSS, WATER PUMP PULLEY	1757-15-152B	1		
	15 118	PLATE, DUST SEAL	1757-15-118A	1		
	15 120	SEAL, WATER	1757-15-120A	1		
	15 125	PLATE, WATER BAFFLE	N201-15-125A	1		
	15 130	COVER, WATER PUMP	N232-99-153A	1		
	15 131	PULLEY	1757-15-151B	1		
	15 140	FAN, COOLING	3648-15-200A	1		
	15 171	THERMOSTAT	8553-99-152	1		
	15 172	COVER, THERMOSTAT	8872-15-170A	1		
	15 173	GASKET	1757-15-173	1		
	15 185	HOSE, WATER-UPPER	N231-15-511	1		
	15 186	HOSE, WATER-LOWER	N231-15-521C	1		
	15 1871	HOSE, WATER-COOLER	N231-15-530A	1		
	15 1881	HOSE, WATER-COOLER	N231-15-540B	1		
	15 189	CLAMP, HOSE	N231-15-545A	1		
	15 1891	HOSE, WATER-HEATER	N231-15-550	1		
	15 200	RADIATOR	N249-15-310	1	M/T	
			N232-15-310A	1	A/T	
	15 205	CAP, RADIATOR	8871-15-205	1	M/T	
			SE01-15-205	1	A/T	
	15 208A	SEAL, RADIATOR LOW	N231-15-331A	1		
	15 209	SEAL, RADIATOR SIDE	N231-15-332A	1		
	15 2101	FAN DRIVE	N201-15-210B	1		
	15 210A	COWLING, RADIATOR	N231-15-401B	1		
	15 2111	SPACER, PULLEY	8872-15-211	1		
	15 2501	FAN & FAN DRIVE	N201-15-250B	1		
	15 251	BRACKET, SUB TANK	FA01-56-374	1		
	15 350	TANK, SUB	1052-15-350B	1		
	15 351	HOSE, WATER	8871-15-351A	1		
	15 355A	CAP, SUB TANK	1052-15-355A	1		
	18 863C	CLIP	8156-18-863B	1		


1580A-1 COMPRESSOR BRACKET, PULLEY & BELT (A/C)

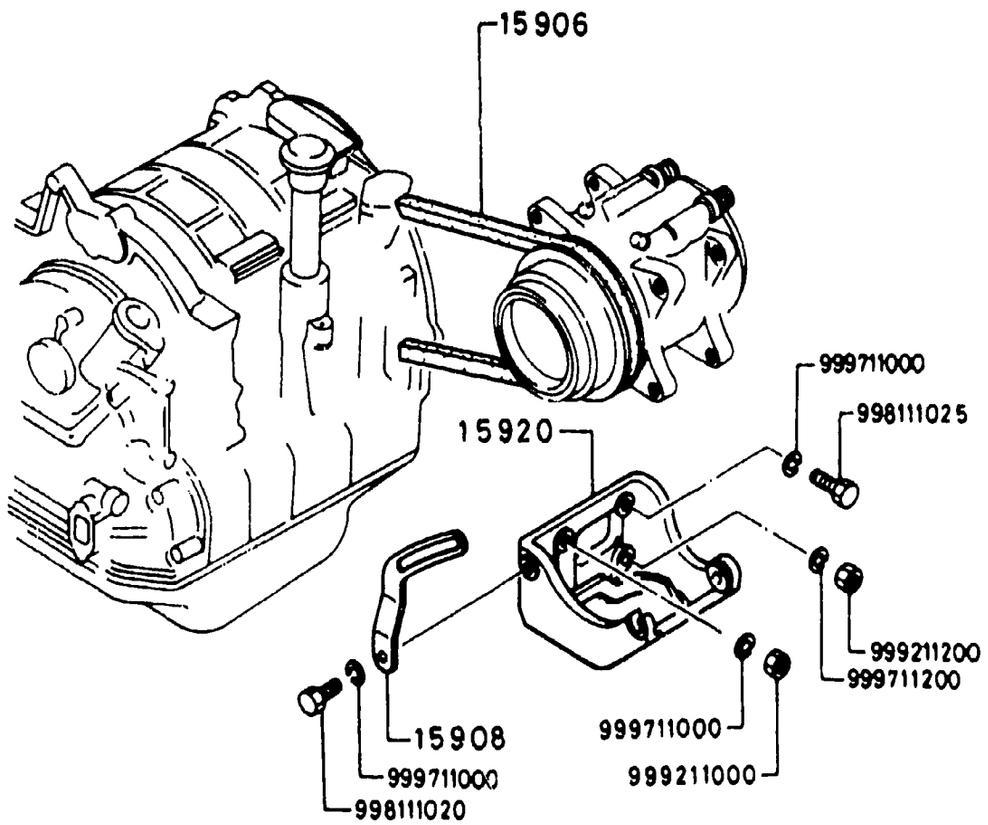

ITEM NO.	D-CODE	DESCRIPTION	PART NO.	QTY	MODEL/DESCRIPTION	REMARKS
	15 906	V-BELT	0000-68-110-00	1		
	15 908	STRAP	8562-15-908	1		
	15 920	BRACKET, COMPRESSOR	8562-15-921	1		


SECTION INDEX -- ENGINE


STARTING LOCATION	SECT NO.	SECTION NAME
1 - C 3	1000A	SHORT ENGINE BLOCK & GASKET SETS
1 - D 3	1030A	ROTOR HOUSING
1 - E 3	1040A	OIL PAN & REAR HOUSING
1 - G 3	1100A	ECCENTRIC SHAFT & FLYWHEEL
1 - H 3	1110A	ROTOR & RELATED
1 - I 3	1300A	INTAKE MANIFOLD
1 - J 3	1310A	EXHAUST MANIFOLD
1 - K 3	1320A	FUEL SYSTEM
1 - L 3	1330A	AIR CLEANER
1 - M 3	1350A	STARTING ASSIST SYSTEM
1 - N 3	1359A	CARBURETOR, REPAIR KIT, GASKET SET & SCREW SET
1 - C 4	1360A	CARBURETOR COMPONENTS
1 - E 4	1371A	EMISSION CONTROLS (AIR PUMP & CONTROL VALVE)
1 - F 4	1380A	EMISSION CONTROLS (EXHAUST SIDE) ('81 & '82 MODELS)
1 - H 4	1380AA	EMISSION CONTROLS (EXHAUST SIDE) ('83 MODEL)
1 - I 4	1400A	OIL PUMP & FILTER ('81 & '82 MODELS)
1 - J 4	1400AA	OIL PUMP & FILTER ('83 MODEL)
1 - K 4	1500A	COOLING SYSTEM ('81 & '82 MODELS)
1 - M 4	1500AA	COOLING SYSTEM ('83 MODEL)
1 - N 4	1580A	COMPRESSOR BRACKET, PULLEY & BELT (A/C)
1 - C 5	1600A	CLUTCH (MANUAL)
1 - D 5	1700A	TRANSMISSION CASE (MANUAL)
1 - E 5	1710A	TRANSMISSION GEAR (MANUAL)
1 - G 5	1720A	CHANGE CONTROLS (MANUAL)
1 - H 5	1800A	ELECTRICAL SYSTEM (ENGINE)
1 - I 5	1820A	DISTRIBUTOR
1 - J 5	1830A	ALTERNATOR
1 - K 5	1840A	STARTER
1 - M 5	1850A	BATTERY & CABLES
1 - N 5	1910A	CONVERTER, OIL PUMP & PIPING (AUTOMATIC TRANSMISSSION)
1 - C 6	1920A	CASE & MAIN CONTROLS (AUTOMATIC TRANSMISSION)
1 - E 6	1930A	CLUTCH & PLANETARY GEAR (AUTOMATIC TRANSMISSION)
1 - G 6	1940A	LOW, REVERSE & GOVERNOR (AUTOMATIC TRANSMISSION)
1 - H 6	1950A	MANUAL LINKAGE (AUTOMATIC TRANSMISSION)

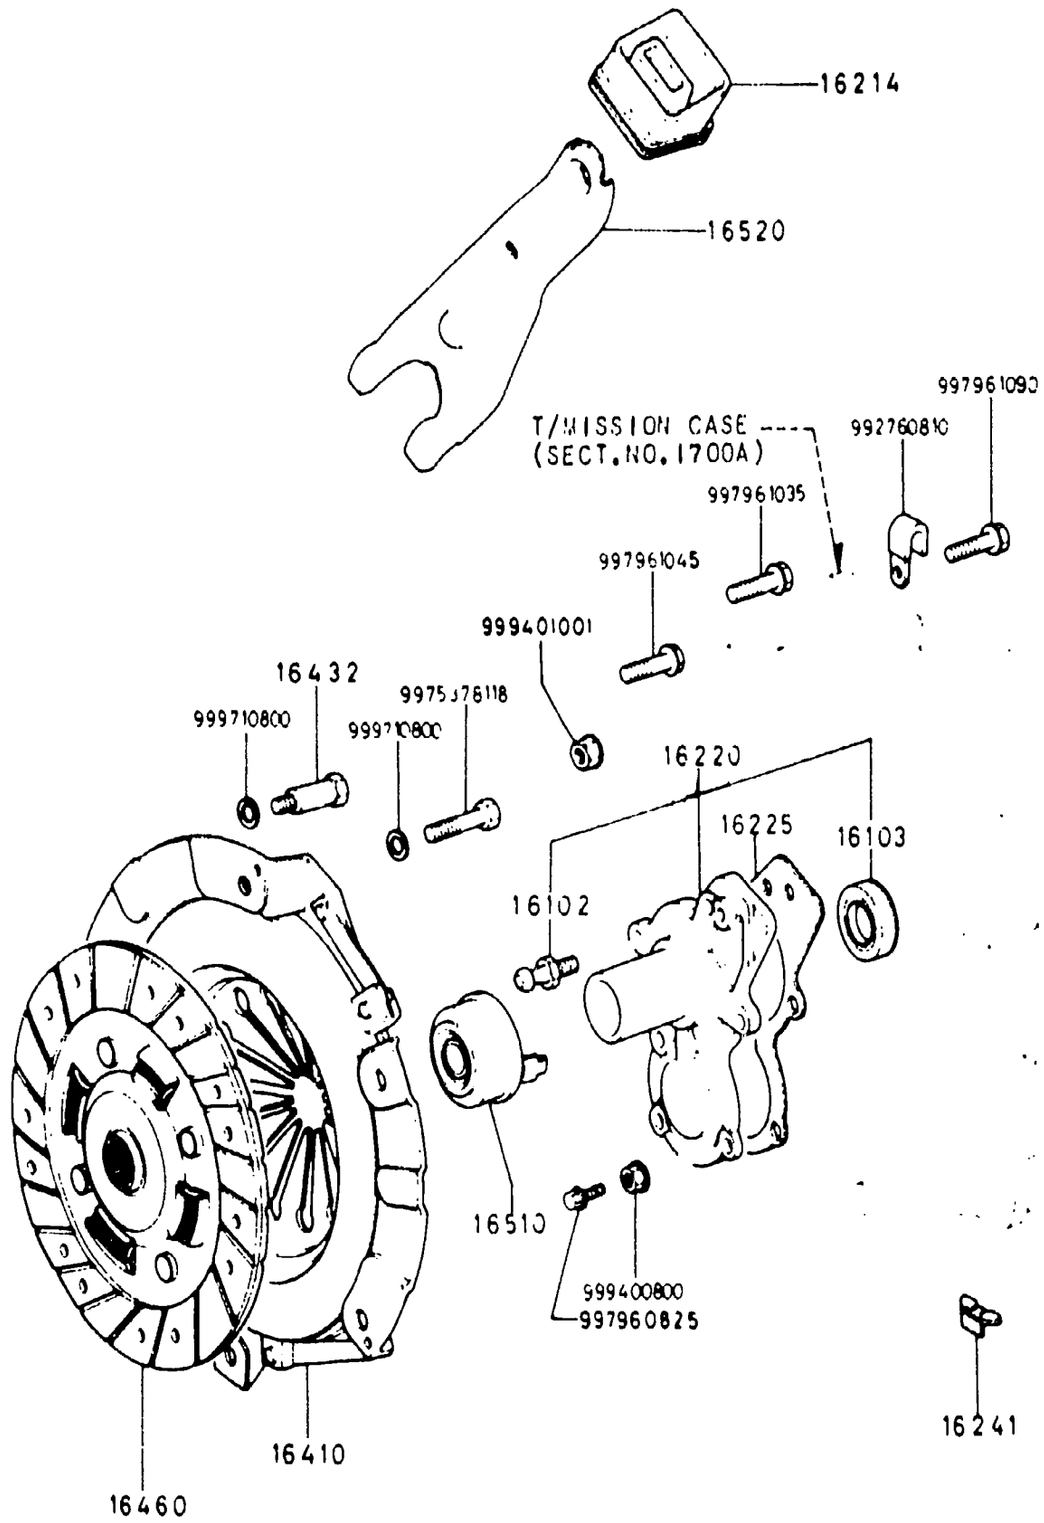

ITEM NO.	D-CODE	DESCRIPTION	PART NO.	QTY	MODEL/DESCRIPTION	REMARKS
	16 102	PIN, PIVOT	0603-16-102B	1		
	16 103	SEAL, OIL	0603-16-103	1		
	16 214	COVER, DUST	3975-16-214A	1		
	16 220	COVER, FRONT	8540-16-220A	1	'81 MODEL	
			8540-16-220D	1	'82 & '83 MODELS	
	16 225	GASKET, FRONT COVER	8540-16-225	1		
	16 241	PLUG, BLIND	8540-16-241A	1		
	16 410	COVER, CLUTCH	1769-16-410A	1	'81 & '82 MODELS	
			N203-16-410A	1	'83 MODEL	
	16 432	BOLT, REAMER	0839-16-432	2	'81 & '82 MODELS	
	16 460	DISC, CLUTCH	0862-16-460F	1	'81 & '82 MODELS	
			N203-16-460B	1	'83 MODEL	
	16 510	COLLAR, CLUTCH RELEASE	H606-16-510A	1		
	16 520	FORK, CLUTCH RELEASE	8540-16-520A	1		


1700A-1 TRANSMISSION CASE (MANUAL)

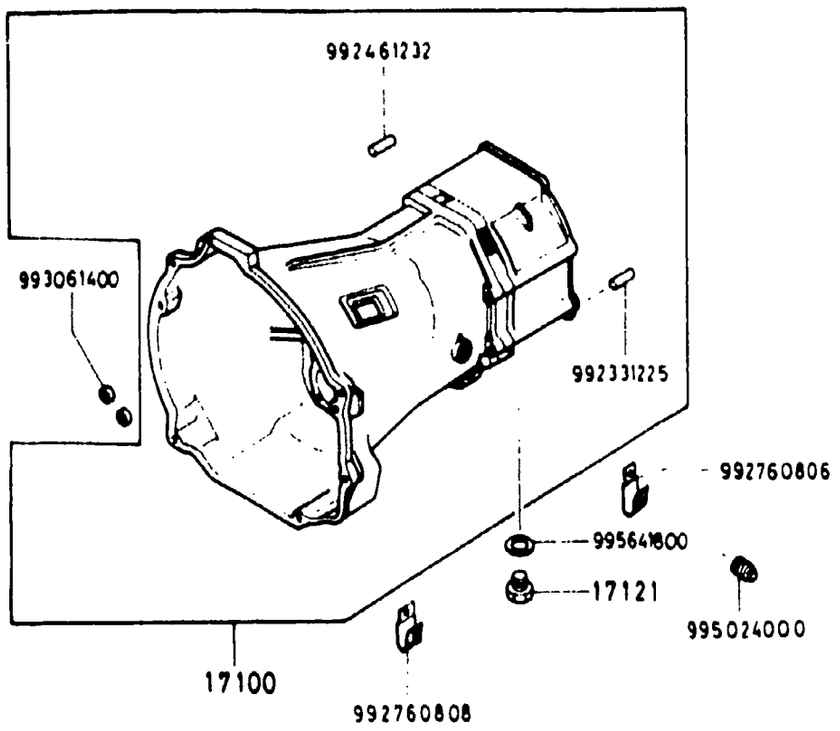

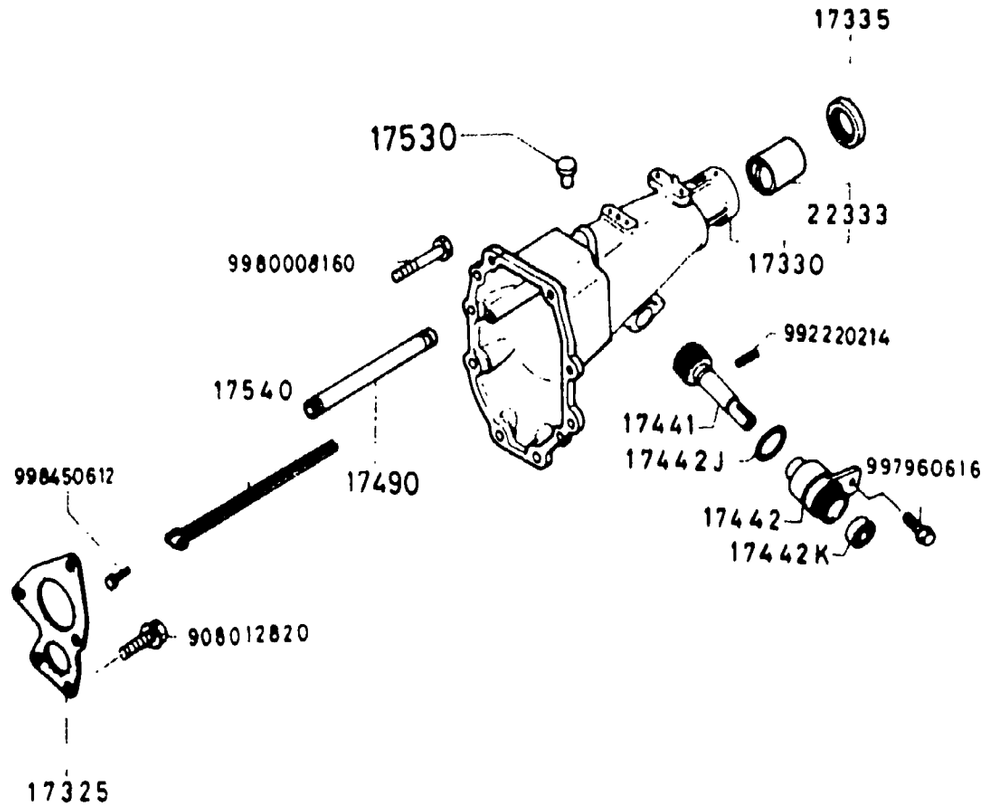

ITEM NO.	D-CODE	DESCRIPTION	PART NO.	QTY	MODEL/DESCRIPTION	REMARKS
	17 100	CASE, TRANSMISSION	M503-17-100A	1		
	17 121	PLUG, MAGNET DRAIN	0810-17-121	1		
	17 325	COVER, BEARING	8086-17-326	1		
	17 330	HOUSING, EXTENSION	M501-17-330B	1	'81 MODEL	
	17 335	SEAL, OIL	0437-17-335A	1		
	17 441	GEAR, DRIVEN	8057-17-441C	1		
	17 442	SLEEVE, SPEEDOMETER	1011-17 442A	1		
	17 442J	O-RING	1011-17-443	1		
	17 442K	SEAL, OIL	9958-60-8166	1		
	17 490	COVER	M501-17-490B	1		
	17 530	BREATHER, AIR	0884-17-530	1		
	17 540	PASS, OIL	M501-17-550A	1		
	22 333	BUSHING	0398-22-333	1		


1710A-1 TRANSMISSION GEAR (MANUAL)

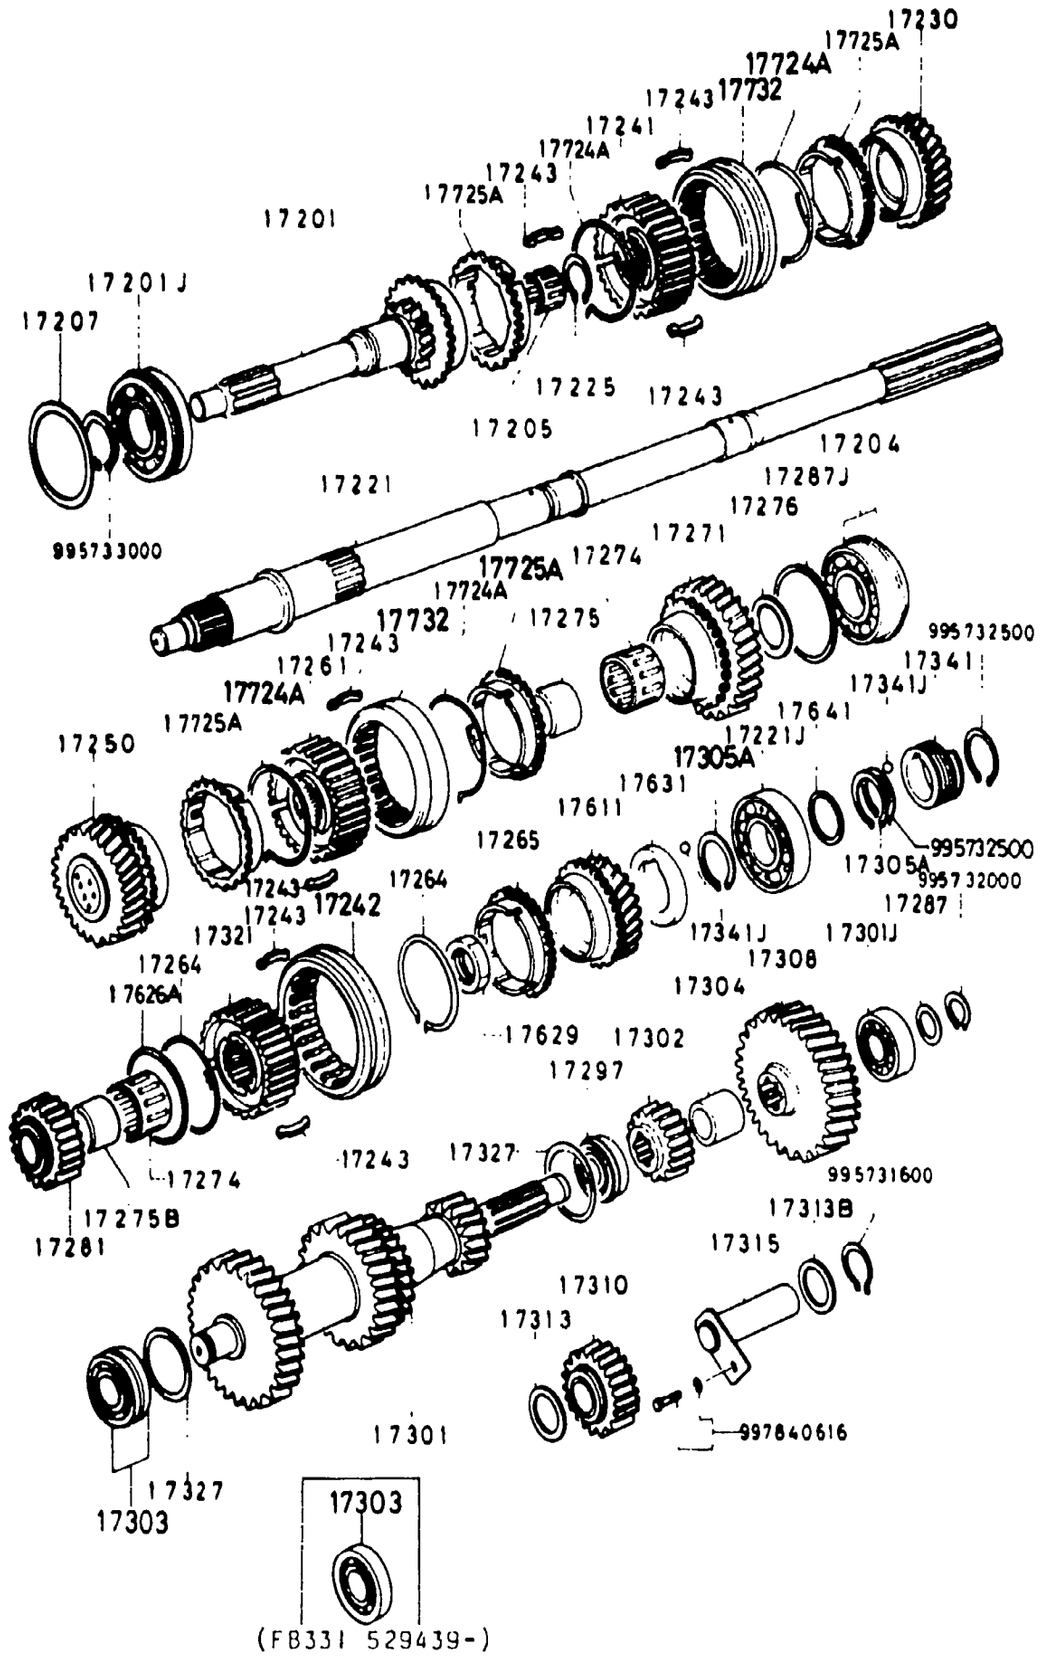

(FB331 529439-)


ITEM NO.	D-CODE	DESCRIPTION	PART NO.	QTY	MODEL/DESCRIPTION	REMARKS
	17 201	GEAR, MAIN DRIVE	M501-17-201A	1		
	17 201J	BEARING, BALL	M502-17-295C	1		
	17 204	BEARING, BALL	M502-17-298A	1		
	17 205	BEARING, ROLLER	0249-17-210B	1		
	17 207	SHIM, ADJUST	9996-36-315	1	(T=0.15)	
			9996-36-330	1	(T=0.3)	
	17 221	SHAFT, MAIN	M502-17-221	1		
	17 221J	BEARING, BALL	M503-17-204	1		
	17 225	RING, SNAP	0317-17-225	1		
	17 230	GEAR, 3RD	M501-17-231	1		
	17 241	HUB, CLUTCH	M508-17-261A	1		
	17 242	SLEEVE, CLUTCH HUB	F401-17-242A	1		
	17 243	KEY, SYNCHRONIZER	F401-17-243A	9		
	17 250	GEAR, 2ND	M501-17-251	1		
	17 261	HUB, CLUTCH	M509-17-261A	1		
	17 264	SPRING, SYNCHRONIZER KEY	F401-17-264A	2		
		<A>	F402-17-264	2		
	17 265	RING, SYNCHRONIZER	F401-17-265A	1		
	17 271	GEAR, 1ST	M501-17-271	1		
	17 274	BEARING, NEEDLE	4069-17-283A	2		
	17 275	RACE, INNER	8540-17-275A	1		
	17 275B	RACE, INNER	4069-17-284E	1		
	17 276	WASHER, THRUST	0259-17-276	2	(T=2.2)	
			0259-17-277	2	(T=2.7)	
			0259-17-274A	2	(T=3.0)	
			0259-17-278	2	(T=3.2)	
			0259-17-279	2	(T=3.7)	
	17 281	GEAR, REVERSE	M501-17-281B	1		
	17 287	SHIM, ADJUST	0419-17-288	1	(T=2.1)	
			0419-17-291	1	(T=2.2)	
			0419-17-292	1	(T=2.3)	
			0419-17-293	1	(T=2.4)	
	17 287J	SHIM, ADJUST	9996-36-310	2	(T=0.1)	
			9996-36-330	2	(T=0.3) '81 & '82 MODELS	
				1	'83 MODEL	
	17 297	BEARING, BALL	0821-17-297	1		
	17 301	GEAR, COUNTER SHAFT	M501-17-301B	1		
	17 301J	BEARING, BALL	M502-17-299A	1		
	17 302	GEAR, COUNTER REVERSE	8086-17-302C	1		
	17 303	BEARING, BALL	8086-17-297	1	'81 MODEL	FB331 ..500001-529438

1710A-2 TRANSMISSION GEAR (MANUAL)

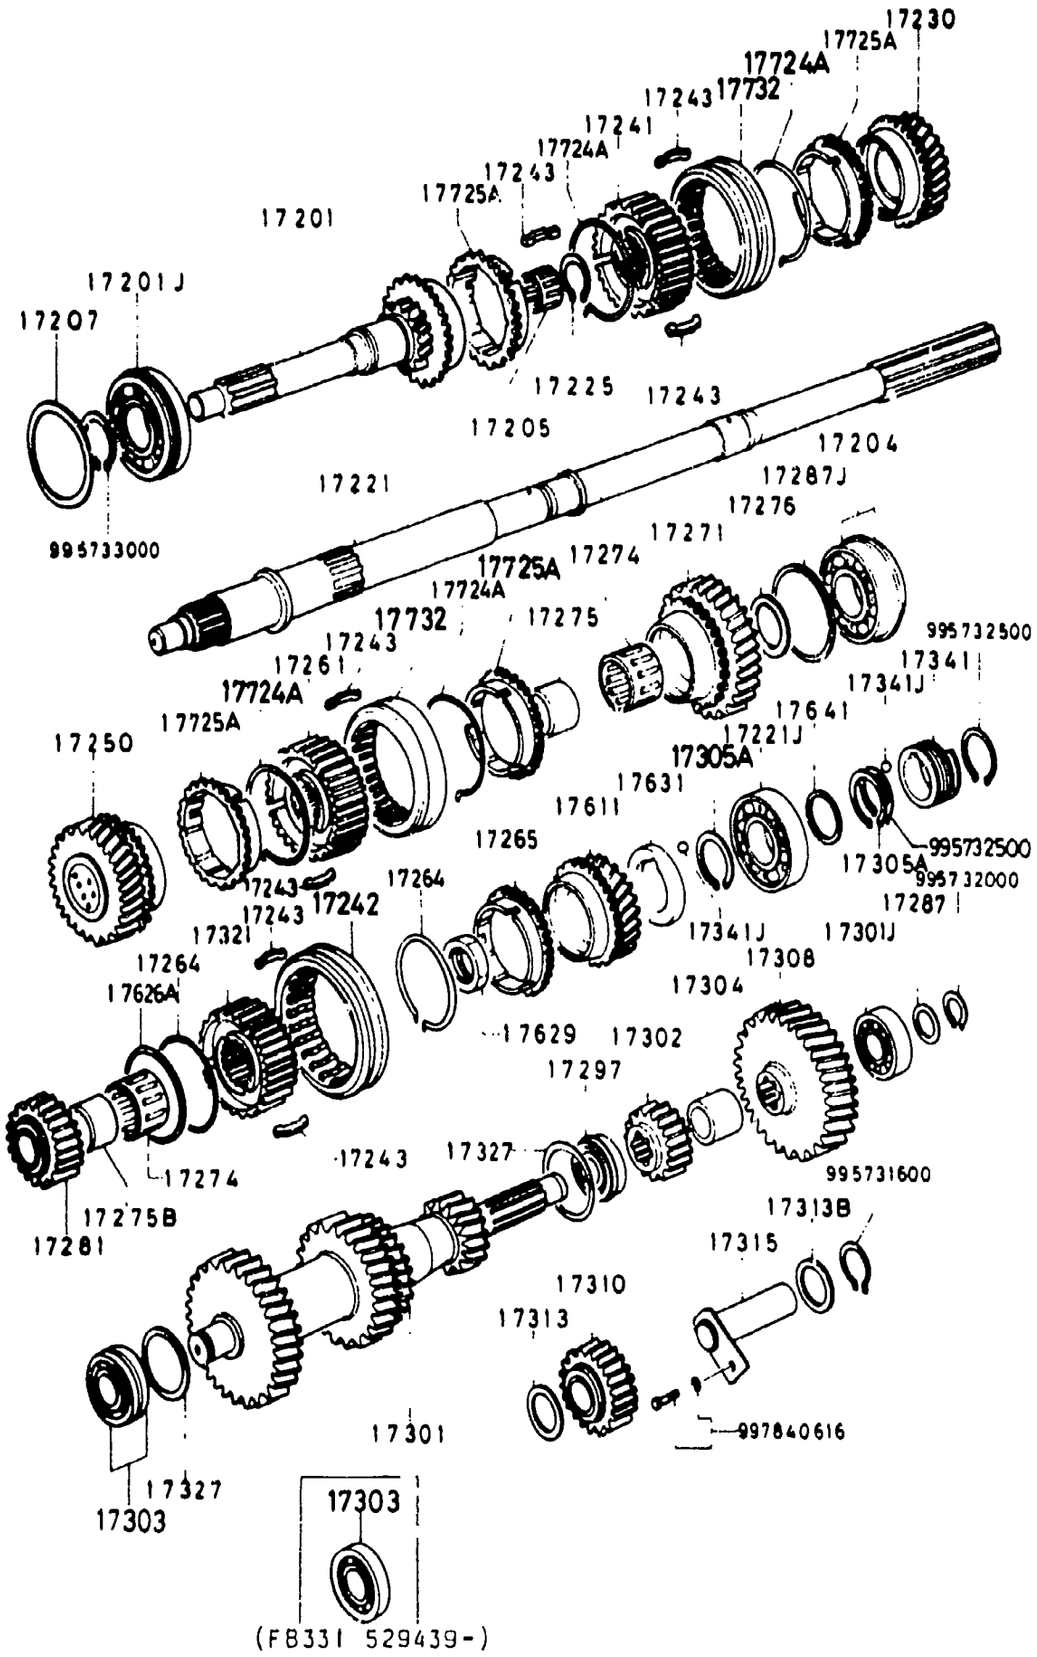


ITEM NO.	D-CODE	DESCRIPTION	PART NO.	QTY	MODEL/DESCRIPTION	REMARKS
	17 303 (CONT'D)		M502-17-297A	1	'82 & '83 MODELS	FB331 ..529439-
	17 304	SPACER	8086-17-304A	1		
		<A>	M504-17-304	1		
	17 305A	RING, RETAINING	0839-17-305B	2		
	17 308	GEAR, COUNTER	M501-17-308A	1		
	17 310	GEAR, REVERSE IDLE	8086-17-310B	1		
		<A>	8086-17-310C	1		
	17 313	WASHER, THRUST	M501-17-313	1		
	17 313B	WASHER, THRUST	4077-17-314A	1	(T=2.8)	
			4077-17-316	1	(T=2.6)	
			4077-17-315A	1	(T=3.0)	
	17 315	SHAFT, REVERSE IDLE GEAR	8086-17-140A	1		
	17 321	HUB, CLUTCH	M510-17-261	1		
	17 327	SHIM, ADJUST	0305-17-327	2	(T=0.1)	
			0305-17-328	1	(T=0.3)	
	17 341	GEAR, DRIVE	3728-17-341A	1		
	17 341J	BALL, STEEL	9961-11-500	2	'81 & '82 MODELS	
	17 611	GEAR, OVER TOP	M501-17-611B	1		
	17 626A	RING, RETAINING	3648-17-626	1		
	17 629	NUT, LOCK	8601-17-629	1		
	17 631	WASHER, THRUST LOCK	0884-17-632A	1	(T=6.2)	
			0884-17-633A	1	(T=6.4)	
			0884-17-634A	1	(T=6.5)	
			0884-17-635A	1	(T=6.6)	
	17 641	WASHER, ADJUST	0862-17-641A	1	(T=1.9)	
			0862-17-642A	1	(T=2.0)	
			0862-17-643A	1	(T=2.1)	
			0862-17-644A	1	(T=2.2)	
	17 724A	SPRING, SYNCHRONIZER KEY	W501-17-724	4		
	17 725A	RING, SYNCHRONIZER	W501-17-725A	4	'81 MODEL	FB331 ..500001-503735
			M501-17-245	4		FB331 ..503736-
	17 732	SLEEVE, CLUTCH HUB	W501-17-732A	2		

1720A-1 CHANGE CONTROLS (MANUAL)

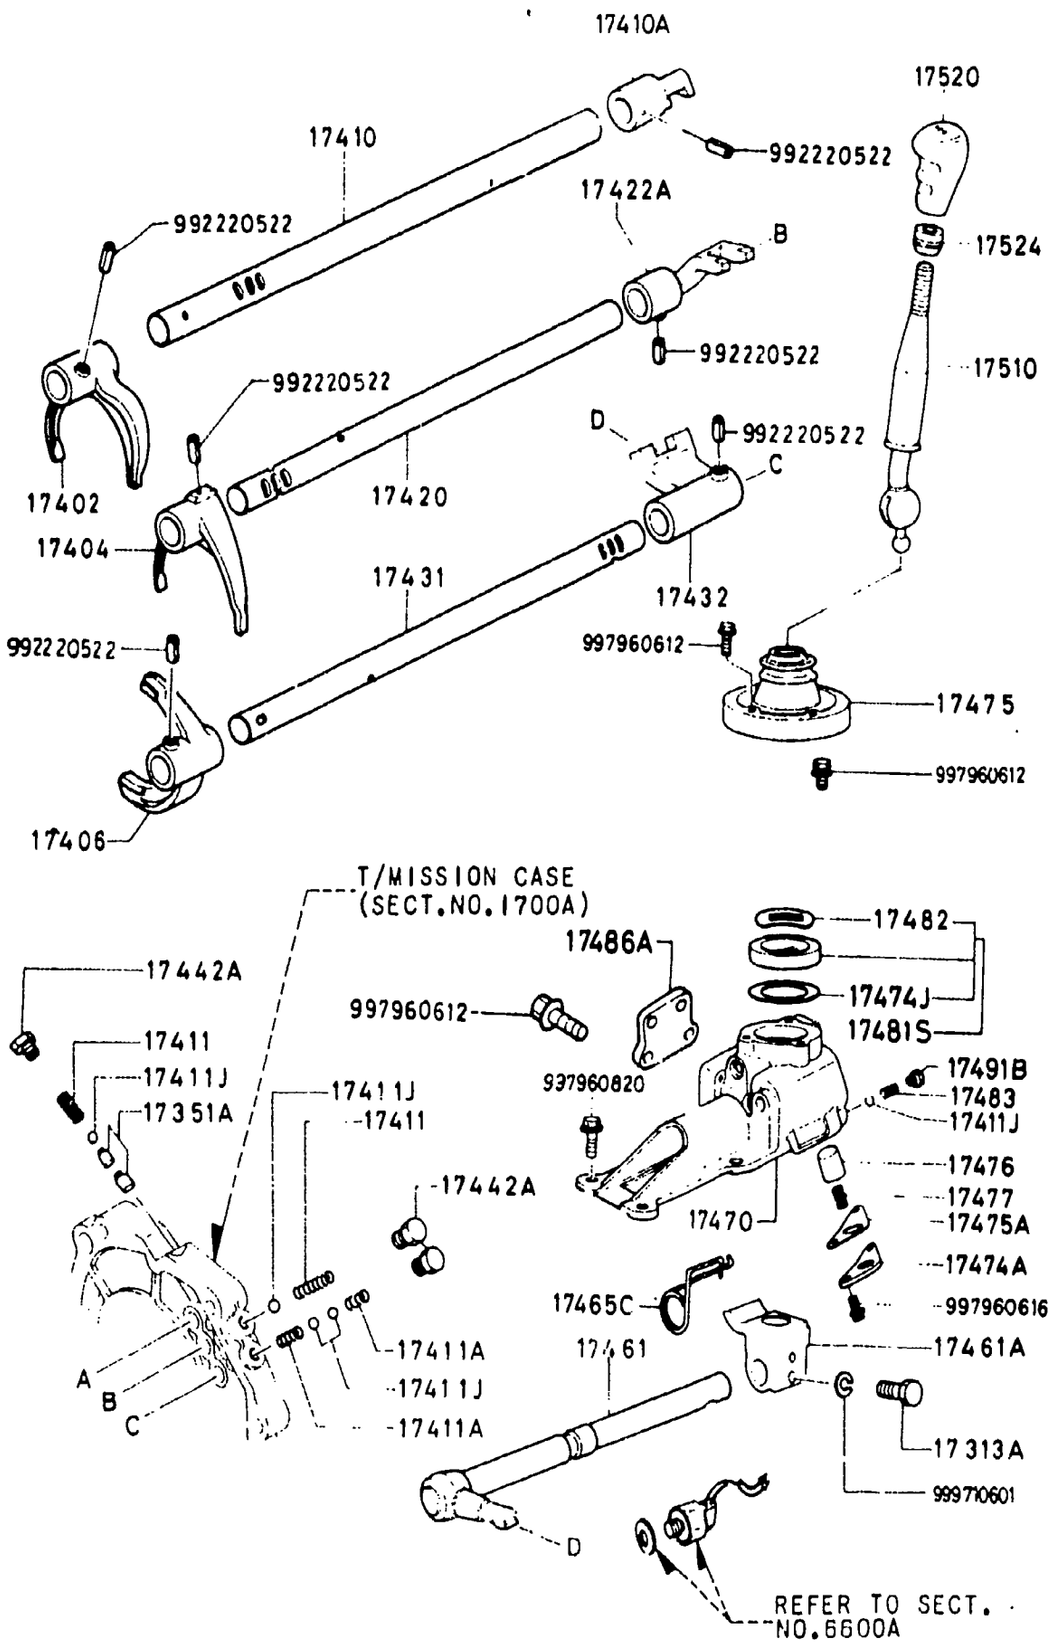


ITEM NO	D-CODE	DESCRIPTION	PART NO.	QTY	MODEL/DESCRIPTION	REMARKS
	17 313A	SCREW SET	0118-17-313B	1		
	17 351A	PIN, INTER LOCK	0114-17-351	2		
	17 402	FORK, SHIFT (1ST & 2ND)	M501-17-402B	1		
	17 404	FORK, SHIFT (3RD & 4TH)	M501-17-404B	1		
	17 406	FORK, SHIFT	M501-17-406A	1	(OVER TOP & REVERSE)	
	17 410	ROD, SHIFT (1ST & 2ND)	M503-17-411	1		
	17 410A	END, SHIFT ROD (1ST & 2ND)	M501-17-412	1		
	17 411	SPRING	0103-17-411	2		
	17 411A	SPRING	0014-17-411	2		
	17 411J	BALL, STEEL	9961-12-500	5	'81 & '82 MODELS	
	17 420	ROD, SHIFT (3RD & 4TH)	M502-17-421A	1		
		<AN>	M503-17-421	1		
	17 422	END, SHIFT ROD (3RD & 4TH)	M501-17-422	1		
	17 431	ROD, SHIFT	M505-17-431A	1	(OVER TOP & REVERSE)	
	17 432	END, SHIFT	M501-17-432	1	(OVER TOP & REVERSE)	
	17 442A	PLUG, CAP	9951-01-000	3	'81 & '82 MODELS	
	17 461	LEVER, CONTROL	M501-17-450	1		
	17 461A	END, CONTROL ROD	M501-17-461A	1		
	17 465C	SPRING, SELECT	M501-17-465B	1		
	17 470	CASE, CHANGE CONTROL	M501-17-470A	1		
	17 474A	CAP, SPRING	M501-17-474	1		
	17 474J	SHIM, ADJUST	9996-33-130	1	'83 MODEL	
	17 475	BOOT, DUST	M501-17-480A	1		
	17 475A	GASKET, SPRING CAP	M501-17-475	1		
	17 476	SPINDLE, SELECT LOCK	M502-17-476A	1		
	17 477	SPRING	M501-17-477	1		
	17 481S	BUSHING SET, CHANGE	0305-99-178	1	'81 & '82 MODELS	
			M503-99-178	1	'83 MODEL	
	17 482	WASHER, WAVE	0303-17-482	1	'81 & '82 MODELS	
			M503-17-482A	1	'83 MODEL	
	17 483	SPRING	0824-17-483	1		
	17 486A	COVER, BLIND	M501-17-486A	1		
	17 491B	CAP, SPRING	0183-17-491	1		
	17 510	LEVER, CHANGE	M501-17-510E	1		
	17 520	KNOB, CHANGE LEVER	M501-17-520	1		
		BLACK	00			
	17 524	NUT, LOCK	M501-17-524	1		

1800A-1 ELECTRICAL SYSTEM (ENGINE)

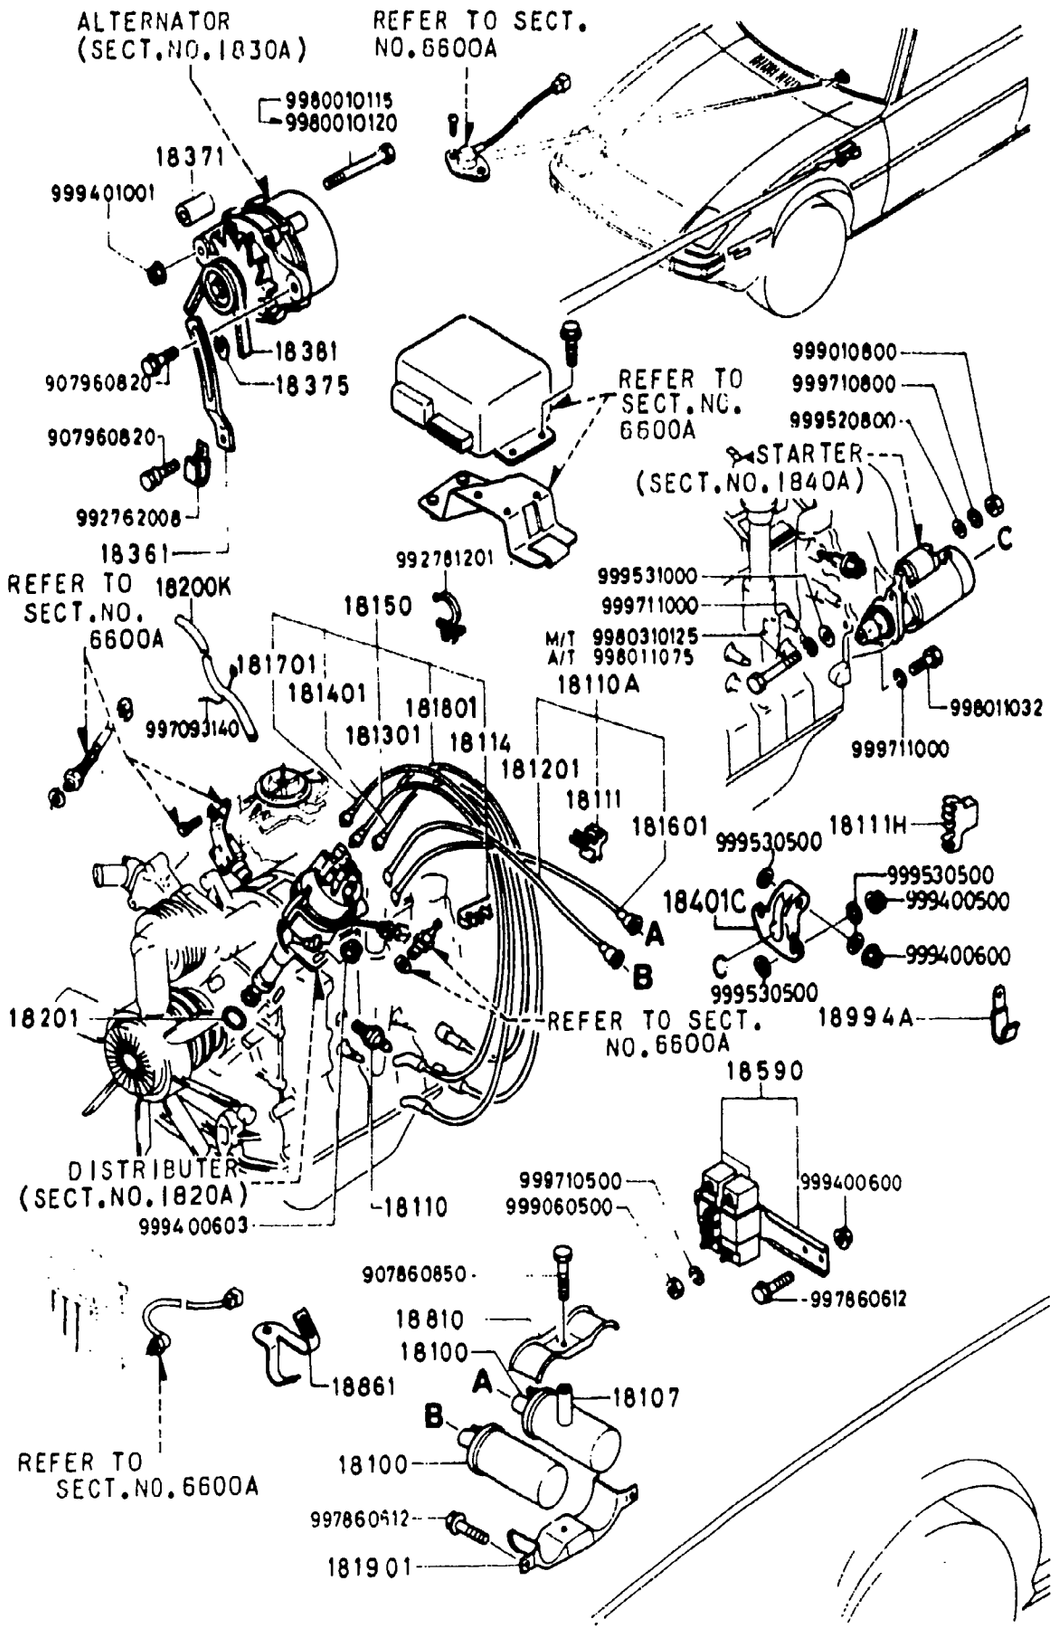


ITEM NO.	D-CODE	DESCRIPTION	PART NO.	QTY	MODEL/DESCRIPTION	REMARKS
	18 100	COIL, IGNITION	1480-18-100	2	(HANSHIN MAKE)	
			8245-18-100	2	(MITSUBISHI MAKE)	
	18 107	PIPE	8245-18-107	1		
	18 110	PLUG, SPARK	N201-18-600	4	(BR8EQ-11⁴ NGK)	
			8AF2-18-110A-BP		(BLISTER PACK)	
			N201-18-600	4	(W25EDR-1⁴ DENSO)	
	18 110A	WIRE, HIGH TENSION	8248-18-110	1		
			0000-18-097B	1	HIGH TENSION WIRE SET	
	18 111	SUPPORTER	3648-18-111A	1		
	18 111H	SUPPORTER	8871-18-111B	1		
	18 114	SUPPORTER	0820-18-114	1		
	18 1201	WIRE, HIGH TENSION	8248-18-120	1		
	18 1301	WIRE, HIGH TENSION	1480-18-130B	1		
	18 1401	WIRE, HIGH TENSION	0000-18-097B	1		
	18 150	WIRE, HIGH TENSION	0000-18-097B	1		
	18 1601	WIRE, HIGH TENSION	1480-18-160A	1		
	18 1701	WIRE, HIGH TENSION	1480-18-170B	1		
	18 1801	WIRE, HIGH TENSION	8871-18-180A	1		
	18 1901	BRACKET, IGNITION COIL	8871-18-810A	1		
	18 200K	TUBE, VACUUM	9935-10-4999		BULK QTY.	
	18 201	O-RING	9954-10-3501	1		
	18 361	STRAP, ALTERNATOR	1881-18-361A	1		
	18 371	BRACKET, ALTERNATOR	1757-18-311	1		
	18 375	SHIM	0222-18-375	1	(T=0.3)	
			0222-18-376	1	(T=0.5)	
			0222-18-377	1	(T=0.7)	
	18 381	V-BELT	8311-18-381A	1		
	18 401C	BRACKET, STARTER	N202-18-401	1		
	18 590	BRACKET, RESISTOR	8871-18-195A	1		
	18 810	BRACKET, IGNITION	8871-18-106C	1		
	18 861	CLIP	8341-18-861A	1		
	18 994A	CLIP, ENGINE HARNESS	1820-18-994	1		

1820A-1 DISTRIBUTOR

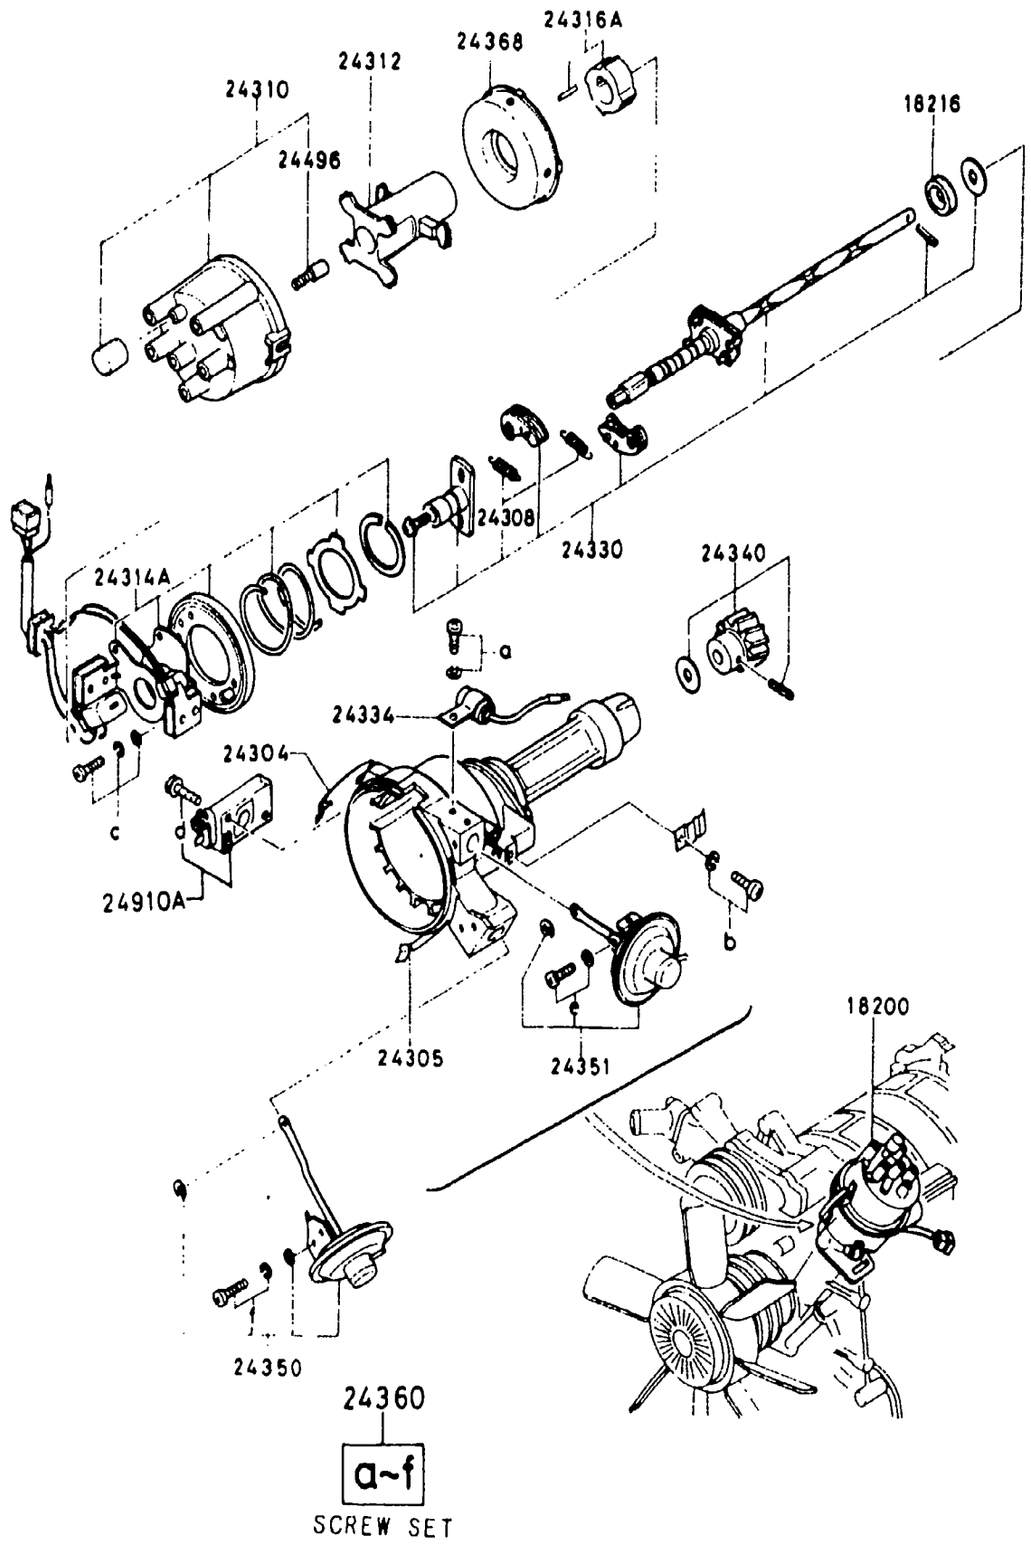


ITEM NO.	D-CODE	DESCRIPTION	PART NO.	QTY	MODEL/DESCRIPTION	REMARKS
	18 200	DISTRIBUTOR	N201-18-200	1	'81 & '82 MODELS	
			N249-18-200A	1	'83 MODEL	
	18 216	SEAL, OIL	0107-18-216A	1		
	24 304	CLAMP	8245-24-304	1		
	24 305	CLAMP	8245-24-305	1		
	24 308	SPRING SET	1480-24-308	1		
	24 310	CAP	8245-24-310B	1		
	24 312	ROTOR	8245-24-303A	1		
		CAP & ROTOR	8AF1-24-310A-BP	1	(BLISTER PACK)	
	24 314A	PICK-UP SET	8248-24-314	1		
		<A>	N236-24-314	1		
	24 316A	ROTOR SET, SIGNAL	8248-24-316	1		
	24 330	GOVERNOR SET	N201-24-330	1		
	24 334	CONDENSER	1757-24-334	1		
	24 340	COUPLING SET	3648-24-340	1		
	24 350	VACUUM SET	1480-24-350	1		
		<A>	1480-24-350A	1		
	24 351	VACUUM SET	N201-24-351	1	'81 & '82 MODELS	
			N231-24-351	1	'83 MODEL	
	24 360	SCREW SET	8248-24-360	1		
	24 368	COVER	8245-24-368A	1		
	24 496	CONTACT	1757-24-302	1		
	24 910A	IGNITER SET	E301-24-910	2		

1830A-1 ALTERNATOR

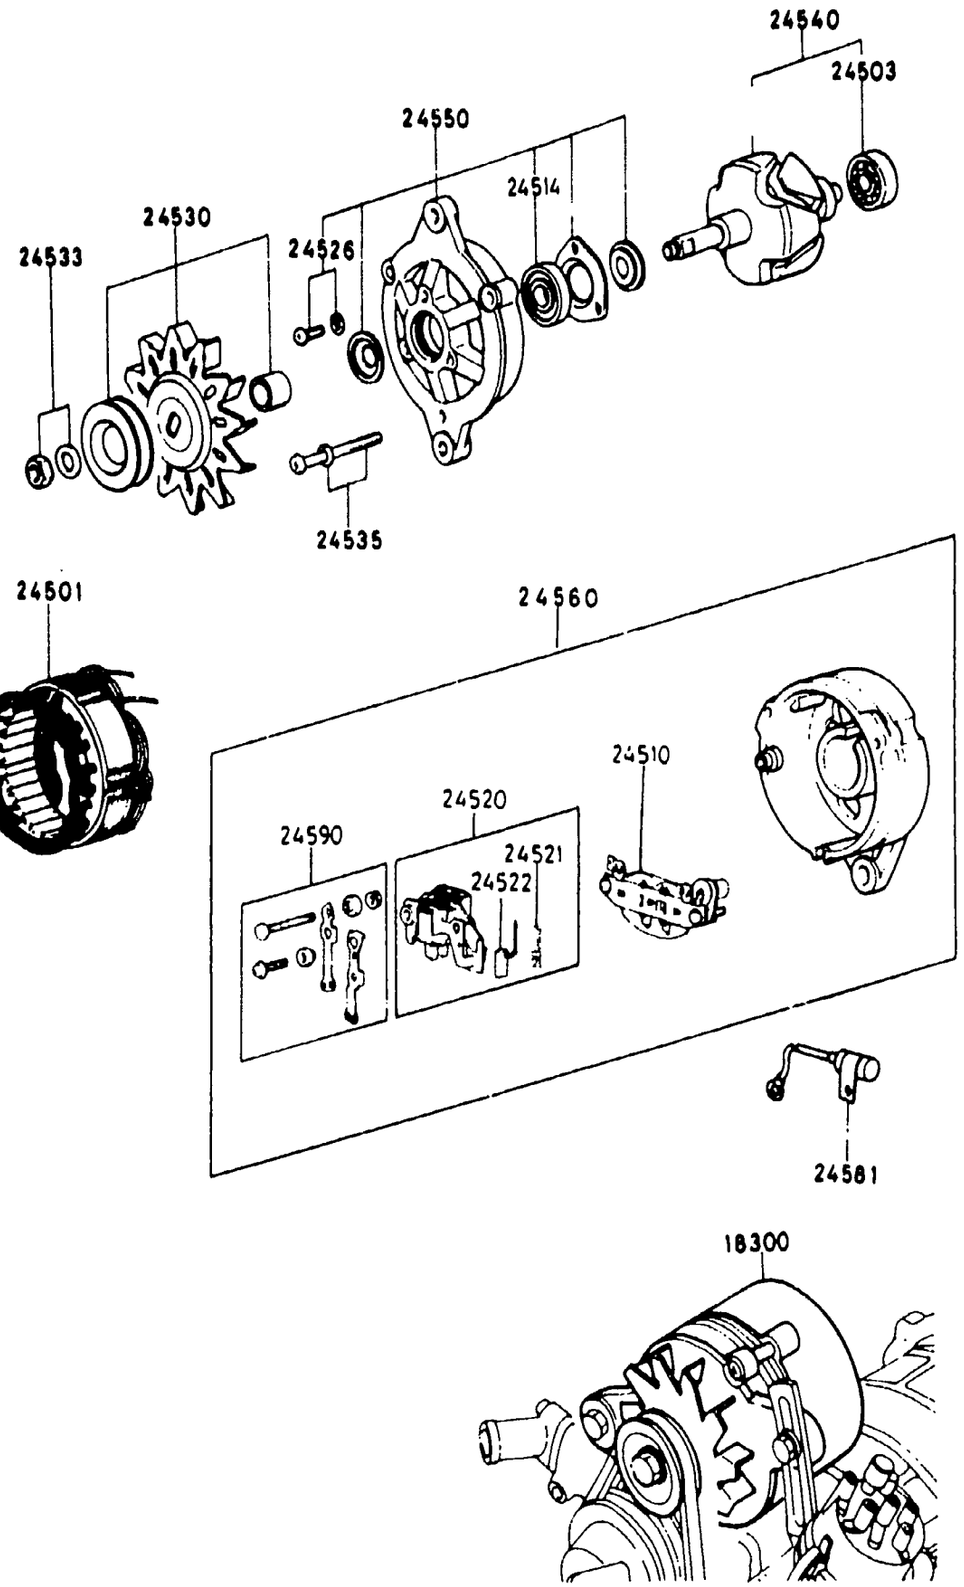


ITEM NO.	D-CODE	DESCRIPTION	PART NO.	QTY	MODEL/DESCRIPTION	REMARKS
	18 300	ALTERNATOR	N221-18-300R	1	(REMANUFACTURED)	
		REFER TO PARTS BULL. NOS. R-1 & R-5 FOR MORE INFO.				
	24 501	STATOR	8173-24-501A	1	'81 MODEL	
			N221-24-501	1	'82 & '83 MODELS	
	24 503	BEARING, BALL	0820-24-503	1		
	24 510	RECTIFIER	8173-24-510A	1	'81 MODEL	
			N221-24-510	1	'82 & '83 MODELS	
	24 514	BEARING, BALL	0114-18-327	1	'81 MODEL	
			9960-62-202	1	'82 & '83 MODELS	
	24 520	REGULATOR	8173-24-520	1	'81 MODEL	
			N221-24-520	1	'82 & '83 MODELS	
	24 521	SPRING, BRUSH	8173-24-521	2		
	24 522	BRUSH	8173-24-522	2		
	24 526	SCREW SET	1757-24-526	1		
	24 530	PULLEY	1011-24-530	1	'81 MODEL	
			N221-24-530	1	'82 & '83 MODELS	
	24 533	NUT, SET	8028-24-533	1		
	24 535	SCREW SET	8028-24-535	1		
	24 540	ROTOR	8086-24-540A	1	'81 MODEL	
			N221-24-540	1	'82 & '83 MODELS	
	24 550	BRACKET, FRONT	8173-24-550	1	'81 MODEL	
			N221-24-550	1	'82 & '83 MODELS	
	24 560	BRACKET, REAR	8173-24-560	1	'81 MODEL	
			N221-24-560	1	'82 & '83 MODELS	
	24 581	CONDENSER	8086-24-581	1	'81 MODEL	
	24 590	TERMINAL SET	4130-24-590	1	'81 MODEL	
			GE01-24-590	1	'82 & '83 MODELS	

1840A-1 STARTER

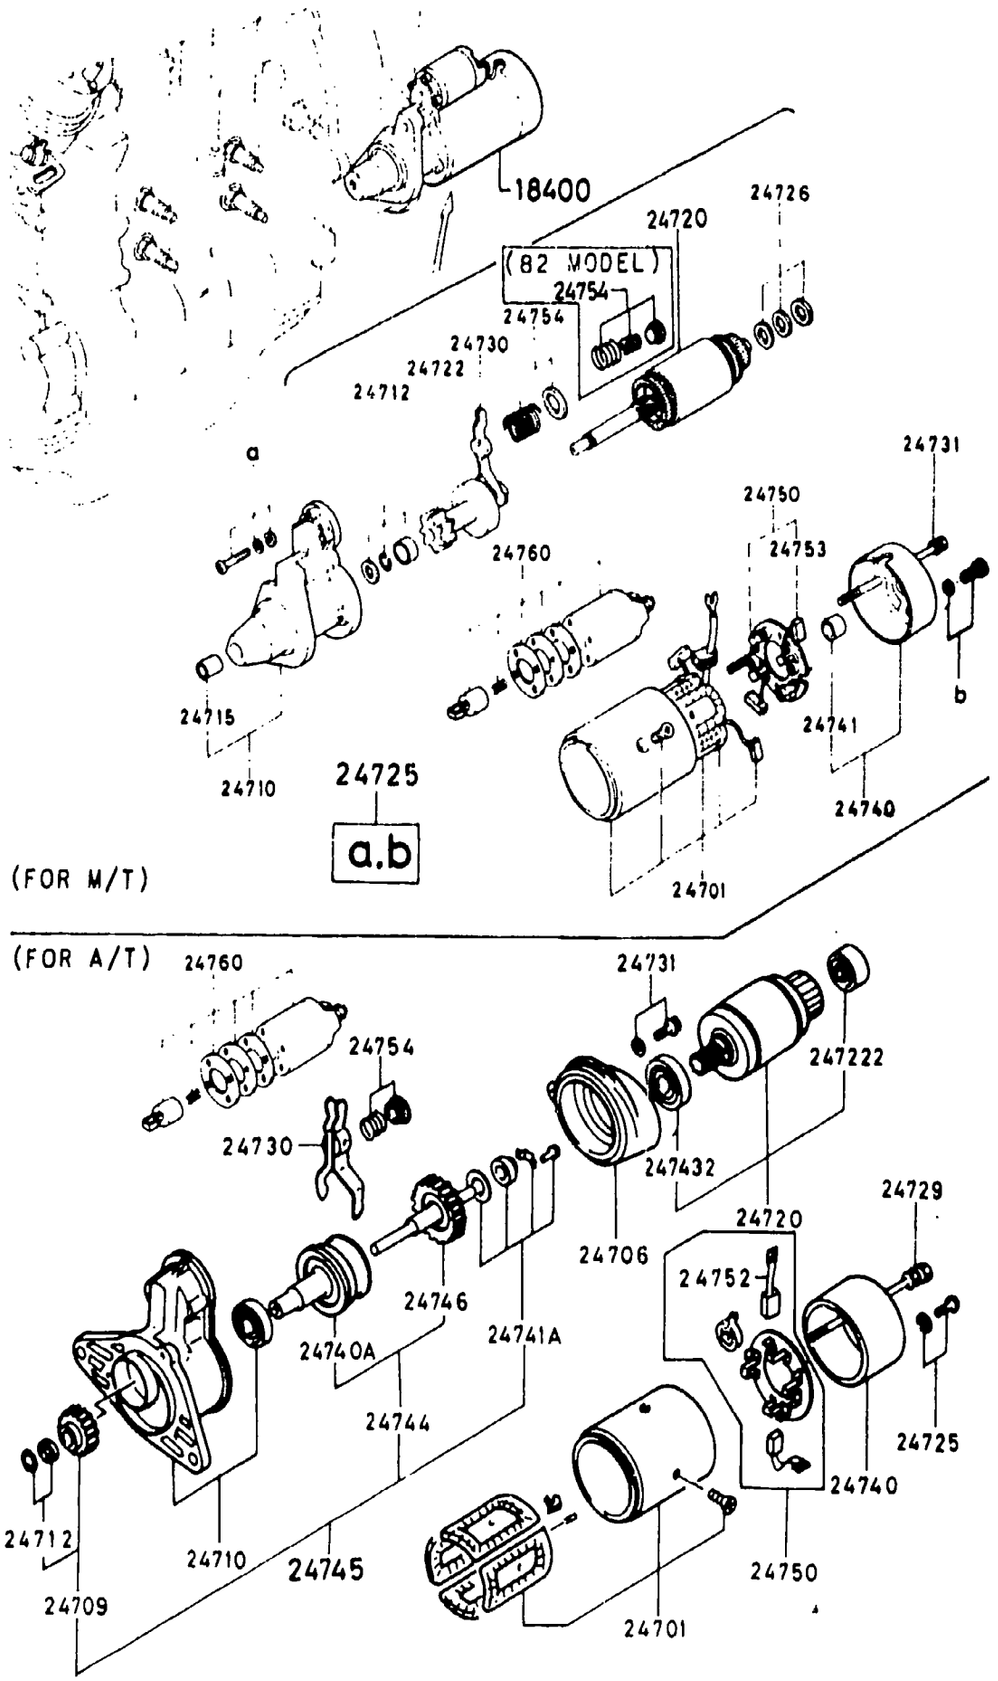


ITEM NO.	D-CODE	DESCRIPTION	PART NO.	QTY	MODEL/DESCRIPTION	REMARKS
	18 400	STARTER	N221-18-400R	1	M/T (REMANUFACTURED)	
		REFER TO PARTS BULL. NOS. R-1 & R-5 FOR MORE INFO.				
			N202-18-400R	1	A/T (REMANUFACTURED)	
	24 701	YOKE	N221-24-701	1	M/T	
			N202-24-730	1	A/T	
	24 706	BRACKET, CENTER	N202-24-721	1	A/T	
	24 709	PINION	N202-24-709	1	A/T	
	24 710	BRACKET, FRONT	1757-24-710C	1	M/T '81 & '82 MODELS THRU OCT. '81 PROD.	FB331 ..500001-622565
			N221-24-710	1	M/T '82 & '83 MODELS THRU NOV. '81 PROD.	EB331 ..622566-
			N202-24-710A	1	A/T	
	24 712	STOPPER SET	N202-24-712	1	A/T	
			0426-24-712A	1	M/T	
	24 715	SLEEVE, BEARING	0426-24-715A	1	M/T '81 & '82 MODELS THRU OCT. '81 PROD.	FB331 ..500001-622565
			N221-24-715	1	M/T '82 & '83 MODELS FROM NOV. '81 PROD.	FB331 ..622566-
	24 720	ARMATURE	3648-24-705	1	M/T '81 & '82 MODELS	FB331 ..500001-622565
			N221-24-705	1	'82 & '83 MODELS M/T	FB331 ..622566-
			N202-24-705	1	A/T	
	24 722	CLUTCH, OVER RUNNING	3648-24-709	1	'81 & '82 MODELS M/T THRU OCT. '81 PROD.	FB331 ..500001-622565
			N221-24-709	1	'82 & '83 MODELS M/T FROM NOV. '81 PROD.	FB331 ..622566-
	24 7222	BEARING	N202-24-722	1	A/T	
	24 725	SCREW SET	8872-24-725	1	'81 MODEL M/T	FB331 ..500001-523691
			0426-24-725	1	M/T	FB331 ..523692-
			N202-24-728	1	A/T	
	24 726	WASHER SET	0426-24-726	1	M/T	
	24 729	BOLT	N202-24-729	2	'81 & '82 MODELS A/T	FB331 ..500001-610655
			N202-24-729A	1	'82 & '83 MODELS A/T	FB331 ..610656-
	24 730	LEVER	0222-24-730	1	'81 MODEL M/T THRU MAR. '81 PROD.	FB331 ..500001-523691
			E301-24-730	1	'81 & '82 MODELS M/T MAR. '81 THRU OCT. '81 PROD.	FB331 ..523692-622565

1840A-2 STARTER

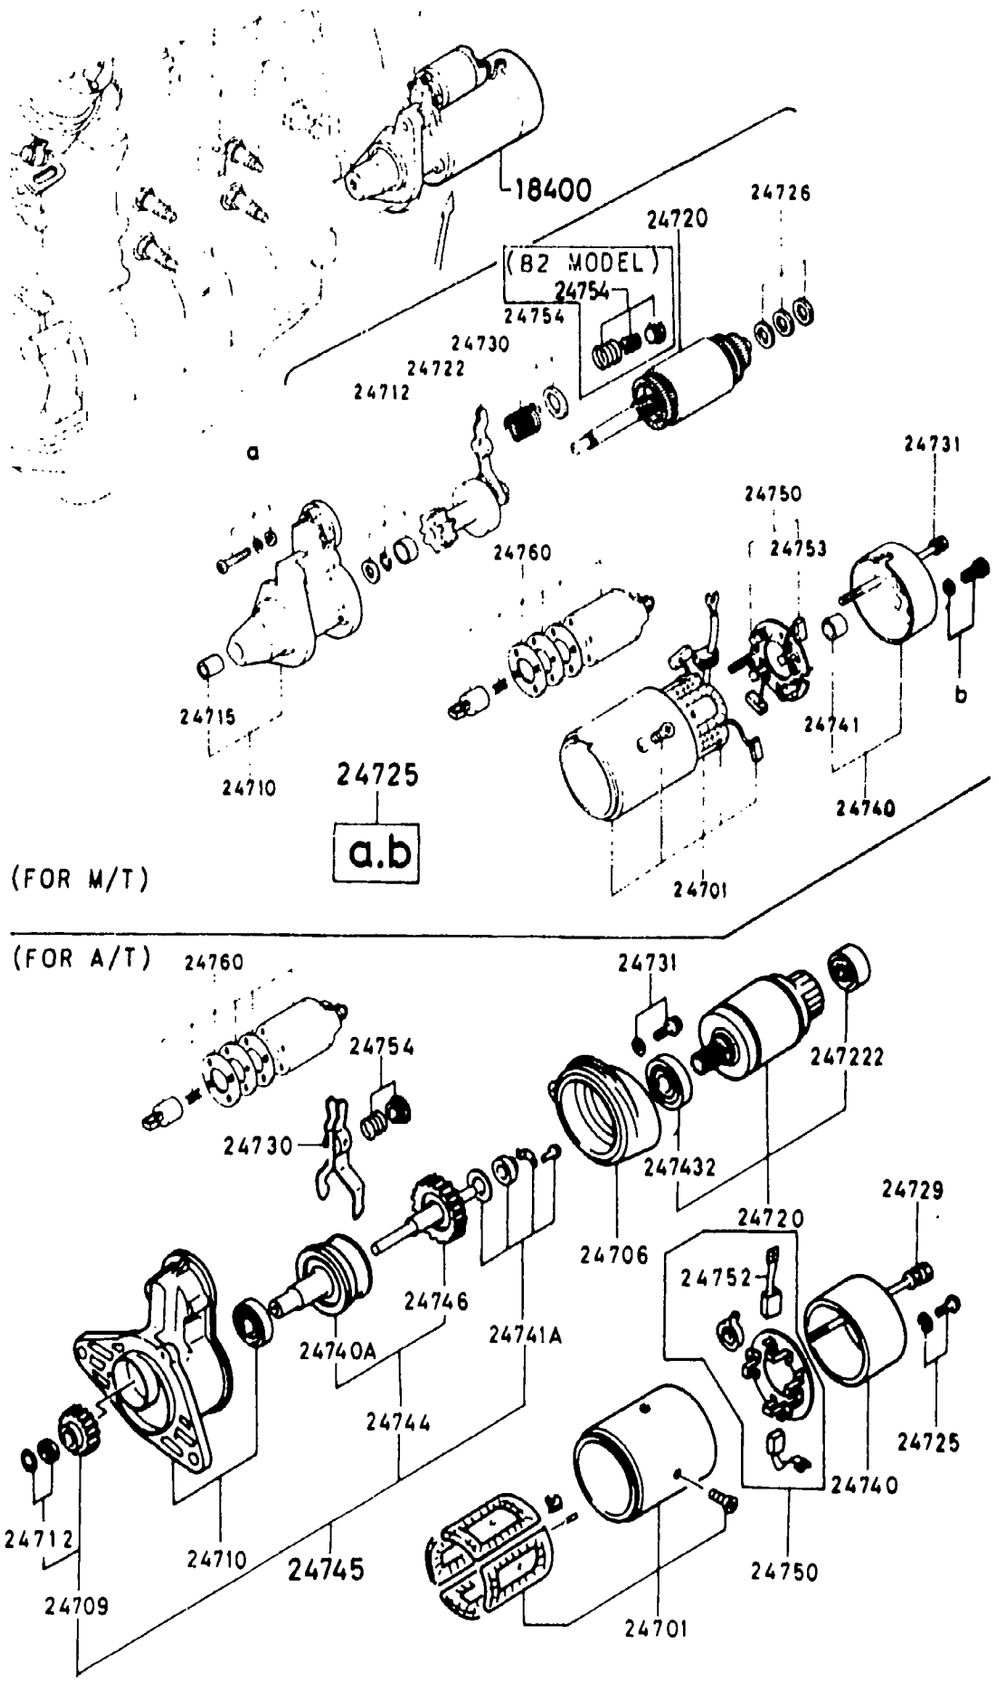


ITEM NO.	D-CODE	DESCRIPTION	PART NO.	QTY	MODEL/DESCRIPTION	REMARKS
	24 730 (CONT'D)		N221-24-730	1	'82 & '83 MODELS M/T FROM NOV. '81 PROD.	FB331 ..622566-
			N202-24-716	1	A/T	
	24 731	BOLT SET	0426-24-731	1	'81 & '82 MODELS M/T THRU OCT. '81 PROD.	FB331 ..500001-622565
			1030-24-731A	1	'82 & '83 MODELS M/T FROM NOV. '81 PROD.	FB331 ..622566-
			N202-24-731	1	A/T	
	24 740	BRACKET, REAR	0222-24-740	1	M/T	
			N202-24-720	1	A/T	
	24 740A	SHAFT	N202-24-740	1	A/T	
	24 741	SLEEVE, BEARING	0222-24-741	1	M/T	
	24 741A	COVER SET	N202-24-741	1	A/T	
	24 7432	BEARING	N202-24-743	1	A/T	
	24 744	GEAR SET	N202-24-744	1	A/T	
	24 745	SHAFT, CLUTCH	N202-24-745	1	A/T	
	24 746	GEAR	N202-24-746	1	A/T	
	24 750	HOLDER, BRUSH	1758-24-750	1	'81 & '82 MODELS M/T THRU OCT. '81 PROD.	FB331 ..500001-622565
			E301-24-750	1	'82 & '83 MODELS M/T FROM NOV. '81 PROD.	FB331 ..622566-
			N202-24-750	1	A/T	
	24 752	SPRING, BRUSH	0222-24-752A	4	A/T	
	24 753	BRUSH, YOKE	0222-24-753	2	'81 & '82 MODELS M/T	FB331 ..500001-622565
			E301-24-753	2	'82 & '83 MODELS M/T	FB331 ..622566-
	24 754	SPRING SET	N226-24-754	1	'82 & '83 MODELS M/T	FB331 ..622566-
			0426-24-754	1	A/T	
	24 760	SWITCH	1757-24-760	1	'81 & '82 MODELS M/T THRU OCT. '81 PROD.	FB331 ..500001-622565
			N226-24-760	1	'82 & '83 MODELS M/T FROM NOV. '81 PROD.	FB331 ..622566-
			8872-24-736	1	A/T	

1850A-1 BATTERY & CABLES

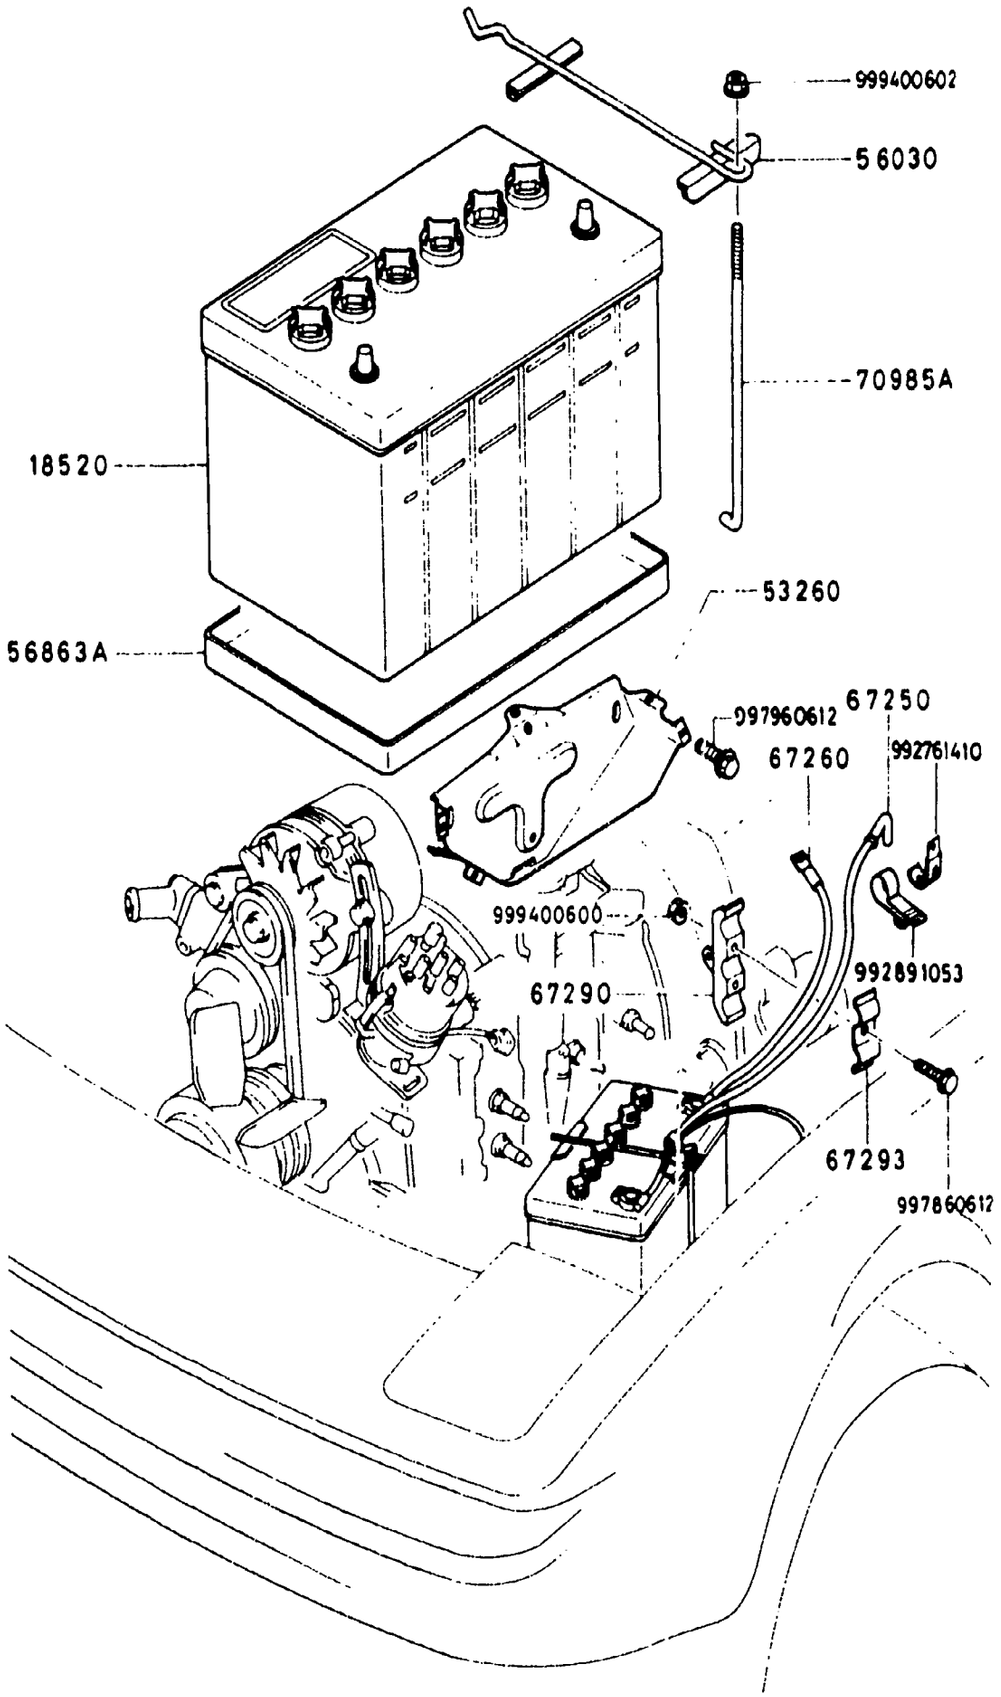

ITEM NO.	D-CODE	DESCRIPTION	PART NO.	QTY	MODEL/DESCRIPTION	REMARKS
	18 520	BATTERY	0000-80-124K	1		
		REFER TO ACC. BULL. NO. XG-4 FOR MORE BATTERY INFO.				
	53 260	CARRIER, BATTERY	8871-54-260B	1		
	56 030	CLAMP, BATTERY	8871-56-030A	1		
	56 863A	TRAY, BATTERY	2113-54-295	1		
	67 250	CABLE POSITIVE-BATTERY	8871-67-250A	1	M/T	
			8872-67-250B	1	A/T	
	67 260	CABLE, GROUND-BATTERY	8871-67-260A	1		
	67 290	CLIP, CABLE	1011-67-291A	1		
	67 293	CLIP, CABLE	1011-67-293	1		
	70 985A	BOLT, CLAMP	0613-65-857A	1		

1910A-1 CONVERTER, OIL PUMP & PIPING (AUTOMATIC TRANSMISSSION)

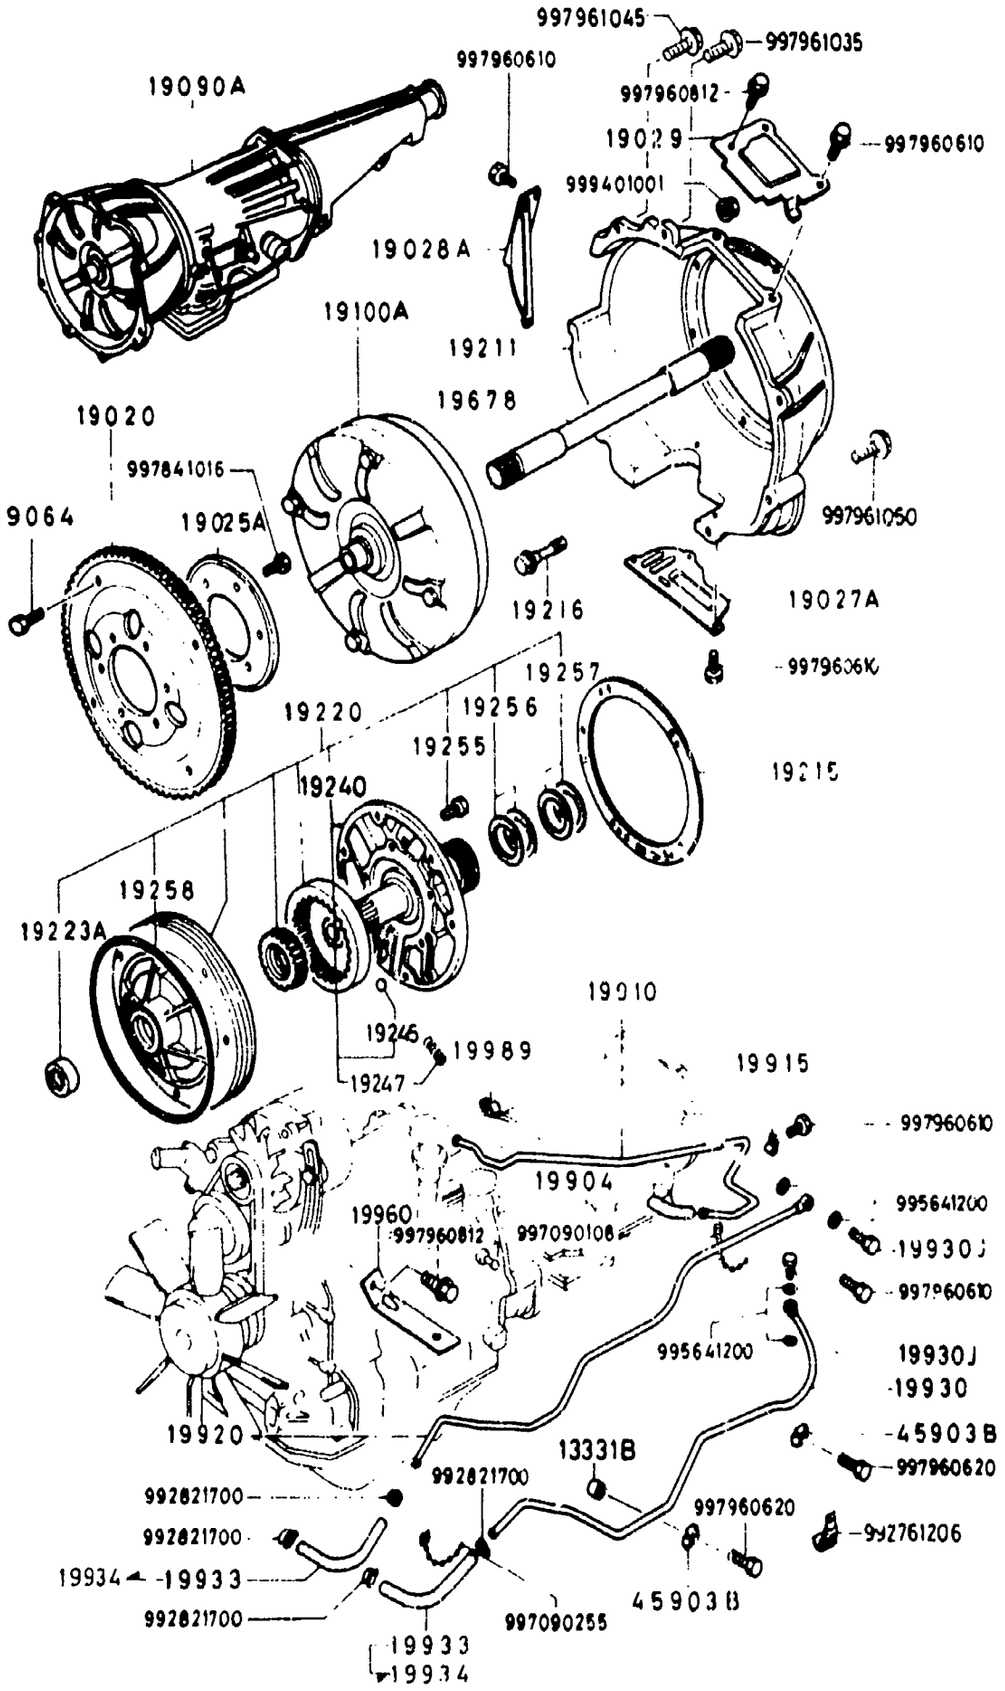


ITEM NO.	D-CODE	DESCRIPTION	PART NO.	QTY	MODEL/DESCRIPTION	REMARKS
	13 331B	SPACER, OIL PIPE	2850-13-331	1		
	19 020	PLATE, DRIVE	1758-19-020B	1		
	19 025A	ADAPTER	0842-19-025	1		
	19 027A	COVER, UNDER	1908-19-027	1		
	19 028A	COVER, SIDE	0454-19-028A	1		
	19 029	COVER, TOP	1758-19-028	1	'81 & '82 MODELS	
			AT09-19-028B	1	'83 MODEL	
	19 064	BOLT	3649-19-064A	4		
	19 090A	TRANSMISSION, COMPLETE	8872-19-090B	1	'81 & '82 MODELS	
			AT09-19-090	1	'83 MODEL	
	19 100A	CONVERTER, TORQUE	1758-19-100	1		
	19 211	HOUSING, CONVERTER	1758-19-211C	1		
	19 215	GASKET, OIL PUMP	BU01-21-253	1		
	19 216	BOLT	0338-19-216	6		
	19 220	PUMP, OIL	1758-19-220	1		
	19 223A	SEAL, OIL	0338-19-223A	1		
	19 240	COVER	1758-19-240	1		
	19 245	BALL	0338-19-245A	2		
	19 247	SPRING	0338-19-247	1		
	19 255	BOLT	0338-19-255	5		
	19 256	RING, SEAL	BU01-19-256	2		
	19 257	RING, SEAL	BU01-19-257	2		
	19 258	SEAL, CUT RING	0338-19-258	1		
	19 678	SHAFT, INPUT	0338-19-678	1		
	19 904	HOSE, VACUUM	0338-19-904A	1		
	19 910	PIPE, VACUUM	8872-19-911	1		
	19 915	CLIP	0842-19-915A	1		
	19 920	PIPE, OIL	8872-19-920	1	'81 & '82 MODELS	
			AT09-19-920A	1	'83 MODEL	
	19 930	PIPE, OIL	8872-19-930A	1	'81 & '82 MODELS	
			AT09-19-930A	1	'83 MODEL	
	19 930J	BOLT, CONNECTOR	9938-10-800	2		
	19 933	HOSE, OIL	1840-19-933	2	'81 & '82 MODELS	
	19 934	HOSE OIL	AT11-19-934A	2	'83 MODEL	
	19 960	BRACKET	AT09-19-961	1	'83 MODEL	
	19 989	CLIP	2579-19-989	1		
	45 903B	CLIP	8173-45-903	3		

SECTION INDEX -- ENGINE


STARTING LOCATION	SECT. NO.	SECTION NAME
1 - C 3	1000A	SHORT ENGINE BLOCK & GASKET SETS
1 - D 3	1030A	ROTOR HOUSING
1 - E 3	1040A	OIL PAN & REAR HOUSING
1 - G 3	1100A	ECCENTRIC SHAFT & FLYWHEEL
1 - H 3	1110A	ROTOR & RELATED
1 - I 3	1300A	INTAKE MANIFOLD
1 - J 3	1310A	EXHAUST MANIFOLD
1 - K 3	1320A	FUEL SYSTEM
1 - L 3	1330A	AIR CLEANER
1 - M 3	1350A	STARTING ASSIST SYSTEM
1 - N 3	1359A	CARBURETOR, REPAIR KIT, GASKET SET & SCREW SET
1 - C 4	1360A	CARBURETOR COMPONENTS
1 - E 4	1371A	EMISSION CONTROLS (AIR PUMP & CONTROL VALVE)
1 - F 4	1380A	EMISSION CONTROLS (EXHAUST SIDE) ('81 & '82 MODELS)
1 - H 4	1380AA	EMISSION CONTROLS (EXHAUST SIDE) ('83 MODEL)
1 - I 4	1400A	OIL PUMP & FILTER ('81 & '82 MODELS)
1 - J 4	1400AA	OIL PUMP & FILTER ('83 MODEL)
1 - K 4	1500A	COOLING SYSTEM ('81 & '82 MODELS)
1 - M 4	1500AA	COOLING SYSTEM ('83 MODEL)
1 - N 4	1580A	COMPRESSOR BRACKET, PULLEY & BELT (A/C)
1 - C 5	1600A	CLUTCH (MANUAL)
1 - D 5	1700A	TRANSMISSION CASE (MANUAL)
1 - E 5	1710A	TRANSMISSION GEAR (MANUAL)
1 - G 5	1720A	CHANGE CONTROLS (MANUAL)
1 - H 5	1800A	ELECTRICAL SYSTEM (ENGINE)
1 - I 5	1820A	DISTRIBUTOR
1 - J 5	1830A	ALTERNATOR
1 - K 5	1840A	STARTER
1 - M 5	1850A	BATTERY & CABLES
1 - N 5	1910A	CONVERTER, OIL PUMP & PIPING (AUTOMATIC TRANSMISSSION)
1 - C 6	1920A	CASE & MAIN CONTROLS (AUTOMATIC TRANSMISSION)
1 - E 6	1930A	CLUTCH & PLANETARY GEAR (AUTOMATIC TRANSMISSION)
1 - G 6	1940A	LOW, REVERSE & GOVERNOR (AUTOMATIC TRANSMISSION)
1 - H 6	1950A	MANUAL LINKAGE (AUTOMATIC TRANSMISSION)

1920A-1 CASE & MAIN CONTROLS (AUTOMATIC TRANSMISSION)

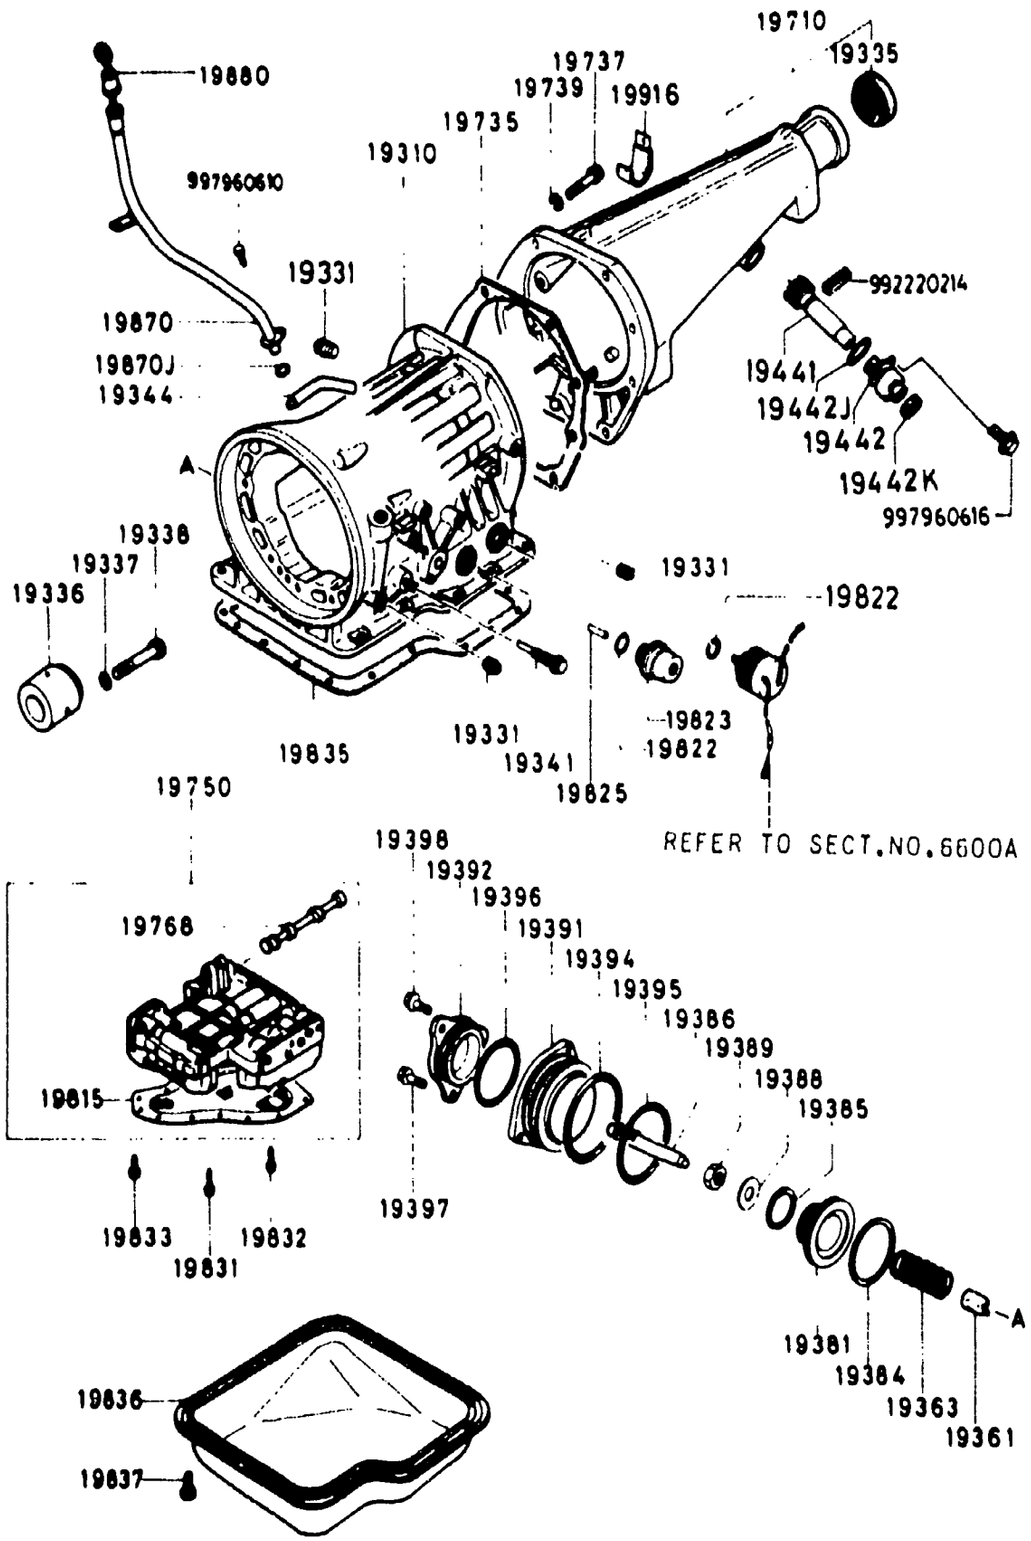


ITEM NO.	D-CODE	DESCRIPTION	PART NO.	QTY	MODEL/DESCRIPTION	REMARKS
	19 310	CASE, TRANSMISSION	1758-19-310C	1	'81 & '82 MODELS	
			AT09-19-310	1	'83 MODEL	
	19 331	PLUG, SQUARE HEAD	0338-19-331A	2		
	19 335	SEAL, OIL	0437-17-335A	1		
	19 336	RACE, INNER	0338-19-336	1		
	19 337	WASHER, PLAIN	0338-19-337	8		
	19 338	BOLT	0338-19-338	8		
	19 341	BOLT, ANCHOR END	1758-19-341	1		
	19 344	BREATHER, AIR	0378-19-344	1		
	19 361	STRUT, BAND	0338-19-361B	1		
	19 363	SPRING, PISTON RETURN	0338-19-363	1		
	19 381	PISTON, BAND SERVO	0842-19-381	1		
	19 384	SEAL, PISTON	0338-19-384	1		
	19 385	SEAL, PISTON	0842-19-385	1		
	19 386	STEM, PISTON	1758-19-386	1		
	19 388	WASHER, PLAIN	0338-19-388A	1		
	19 389	NUT	0338-19-389	1		
	19 391	RETAINER, SERVO	1758-19-391A	1		
	19 392	COVER, SERVO	1758-19-392A	1		
	19 394	SEAL, LEATHER CUT	0842-19-394	1		
	19 395	O-RING	0338-19-395	1		
	19 396	O-RING	1758-19-394A	1		
	19 397	BOLT	0338-19-398	3		
	19 398	BOLT	1758-19-397	3		
	19 441	GEAR, DRIVEN	8562-17-441A	1	'81 MODEL	FB331 ..500001-500075
			8057-17-441C	1		FB331 ..500076-
	19 442	SLEEVE, SPEEDO GEAR	1011-17-442A	1		
	19 442J	O-RING	1011-17-443	1		
	19 442K	SEAL, OIL	9958-60-8166	1		
	19 710	HOUSING, EXTENSION	1840-19-710	1		
	19 735	GASKET, EXTENSION	0338-19-735	1		
	19 737	BOLT	0338-19-737	8		
	19 739	WASHER, PLAIN	0338-19-739	8		
	19 750	VALVE, CONTROL	8872-19-750C	1		
	19 768	VALVE, MANUAL	0338-19-768	1		
	19 815	STRAINER, OIL	1758-19-815	1		
	19 822	SEAL, O-RING	0338-19-822	2		
	19 823	DIAPHRAGM, VACUUM	BT07-19-823	1		
	19 825	ROD, DIAPHRAGM	0338-19-828	1	(L=29.0)	
		<AN>	FT01-19-824	1		

1920A-2 CASE & MAIN CONTROLS (AUTOMATIC TRANSMISSION)

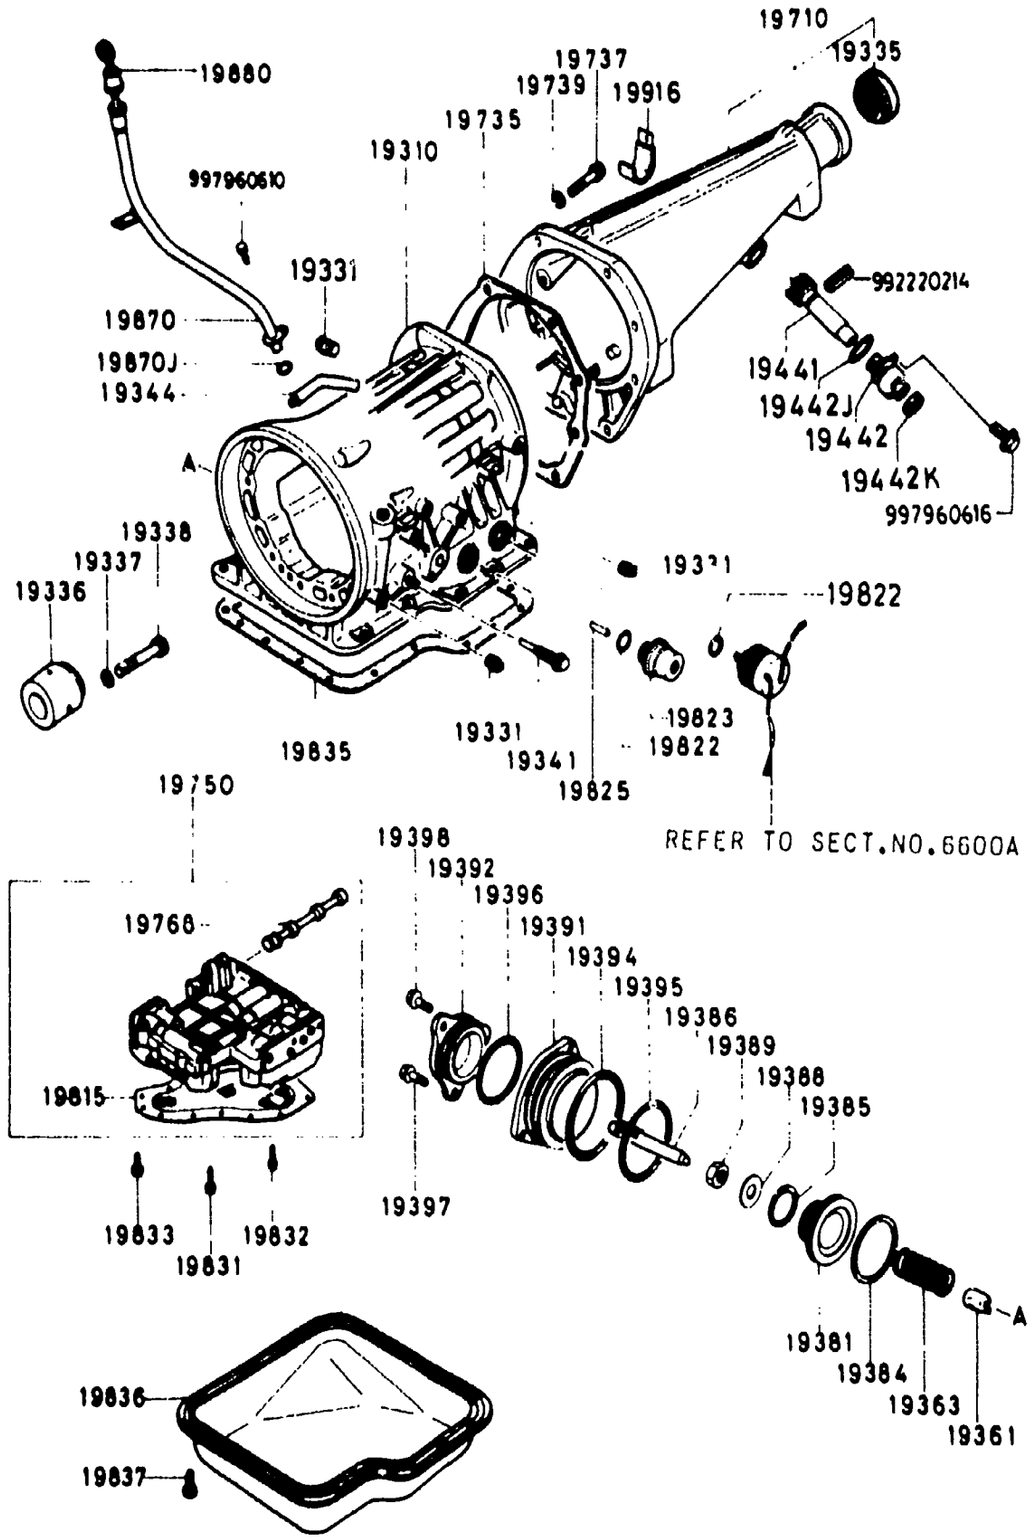

ITEM NO.	D-CODE	DESCRIPTION	PART NO.	QTY	MODEL/DESCRIPTION	REMARKS
	19 825 (CONT'D)		0338-19-829	1	(L=29.5)	
			0338-19-825	1	(L=30.0)	
			0338-19-827	1	(L=30.5)	
			0338-19-826	1	(L=31.0)	
	19 831	BOLT, CONTROL VALVE	0338-19-831	4		
	19 832	BOLT, CONTROL VALVE	0338-19-832	2		
	19 833	BOLT, CONTROL VALVE	0338-19-833	3		
	19 835	GASKET, OIL PAN	1758-19-835	1		
	19 836	PAN, OIL	1758-19-836	1		
	19 837	BOLT, OIL PAN	0338-19-837	17		
	19 870	TUBE, OIL LEVEL	8872-19-870A	1		
	19 870J	O-RING	9954-10-1601	1		
	19 880	DIPSTICK	8872-19-880	1		
	19 916	CLIP	3876-19-916	2		

1930A-1 CLUTCH & PLANETARY GEAR (AUTOMATIC TRANSMISSION)

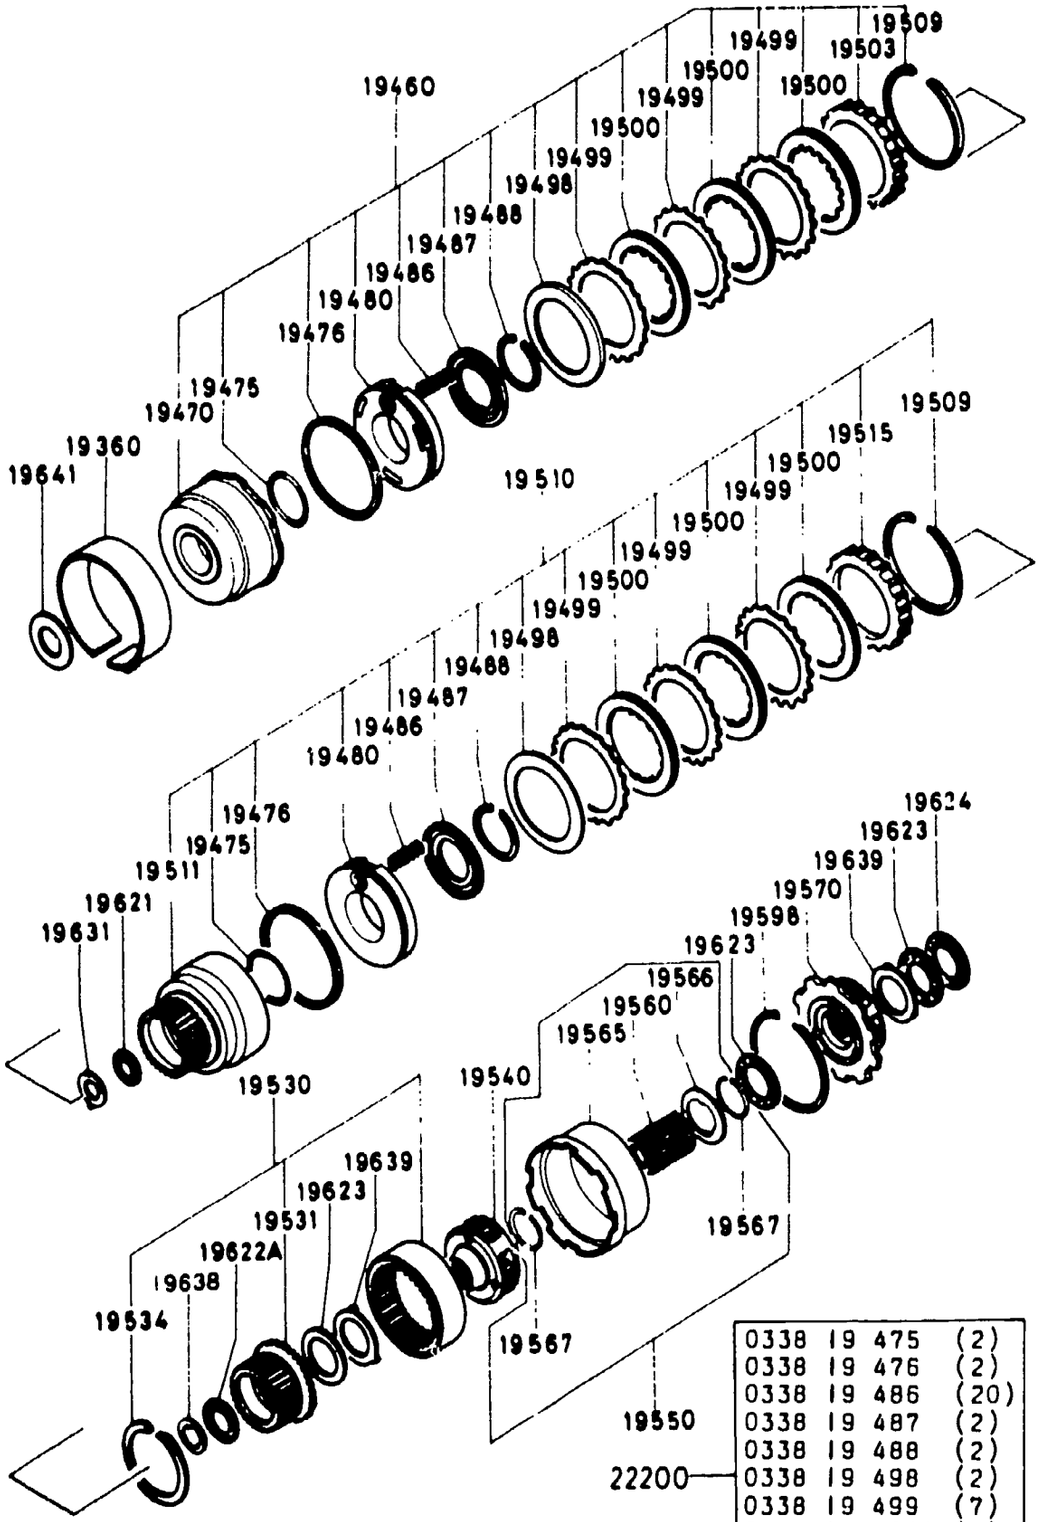


0338 19 475	(2)
0338 19 476	(2)
0338 19 486	(20)
0338 19 487	(2)
0338 19 488	(2)
0338 19 498	(2)
0338 19 499	(7)
0338 19 500A	(7)
0338 19 509	(2)
0338 19 621	(1)
0338 19 656	(1)

CLUTCH REPAIR KIT

ITEM NO.	D-CODE	DESCRIPTION	PART NO.	QTY	MODEL/DESCRIPTION	REMARKS
	19 360	BAND, BRAKE	0338-19-360B	1		
	19 460	CLUTCH, FRONT	3959-19-460A	1		
	19 470	DRUM, CLUTCH	3959-19-470A	1		
	19 475	SEAL, O-RING	0338-19-475	2		
	19 476	SEAL, LEATHER CUT	0338-19-476	2		
	19 480	PISTON, CLUTCH	0338-19-480	2		
	19 486	SPRING, PISTON RETURN	0338-19-486	20		
	19 487	RETAINER, SPRING	0338-19-487	2		
	19 488	RING, SNAP	0338-19-488	2		
	19 498	PLATE, DISHED	0338-19-498	2		
		<AN>	BU17-19-498	2		
	19 499	PLATE, DRIVEN	0338-19-499	7		
	19 500	PLATE, DRIVE	BU17-19-500A	7		
	19 503	PLATE, RETAINING	3959-19-503	1	(T=5.0)	
			3959-19-504	1	(T=5.2)	
			3959-19-505	1	(T=5.4)	
			3959-19-506	1	(T=5.6)	
			3959-19-507	1	(T=5.8)	
			3959-19-508	1	(T=6.0)	
			3959-19-509	1	(T=6.2)	
	19 509	RING, SNAP	0338-19-509	2		
	19 510	CLUTCH, REAR	0338-19-510	1		
	19 511	DRUM, REAR CLUTCH	0338-19-511	1		
	19 515	PLATE, RETAINING	0338-19-515	1		
	19 530	HUB, REAR CLUTCH	0338-19-530	1		
	19 531	HUB, REAR CLUTCH	0338-19-531	1		
	19 534	RING, SNAP	0338-19-534	1		
	19 540	CARRIER, FRONT	0338-19-540	1		
	19 550	GEAR, SHELL & SUN	0338-19-550	1		
	19 560	GEAR, SUN	0338-19-560	1		
	19 565	SHELL, CONNECTING	0338-19-565	1		
	19 566	RACE, SHELL BEARING	0338-19-566	1		
	19 567	RING, SNAP	0338-19-567	1		
	19 570	CARRIER, REAR	0338-19-570	1		
	19 598	RING, SNAP	0338-19-598	1		
	19 621	BEARING, NEEDLE	0338-19-621	1		
	19 622A	BEARING, NEEDLE	0338-19-622	2		
	19 623	BEARING, NEEDLE	0338-19-623A	3		
	19 624	BEARING, NEEDLE	0338-19-624	1		
	19 631	RACE, BEARING PUMP COVER	0338-19-631	1	(T=1.2)	

1930A-2 CLUTCH & PLANETARY GF (AUTOMATIC TRANSMIS

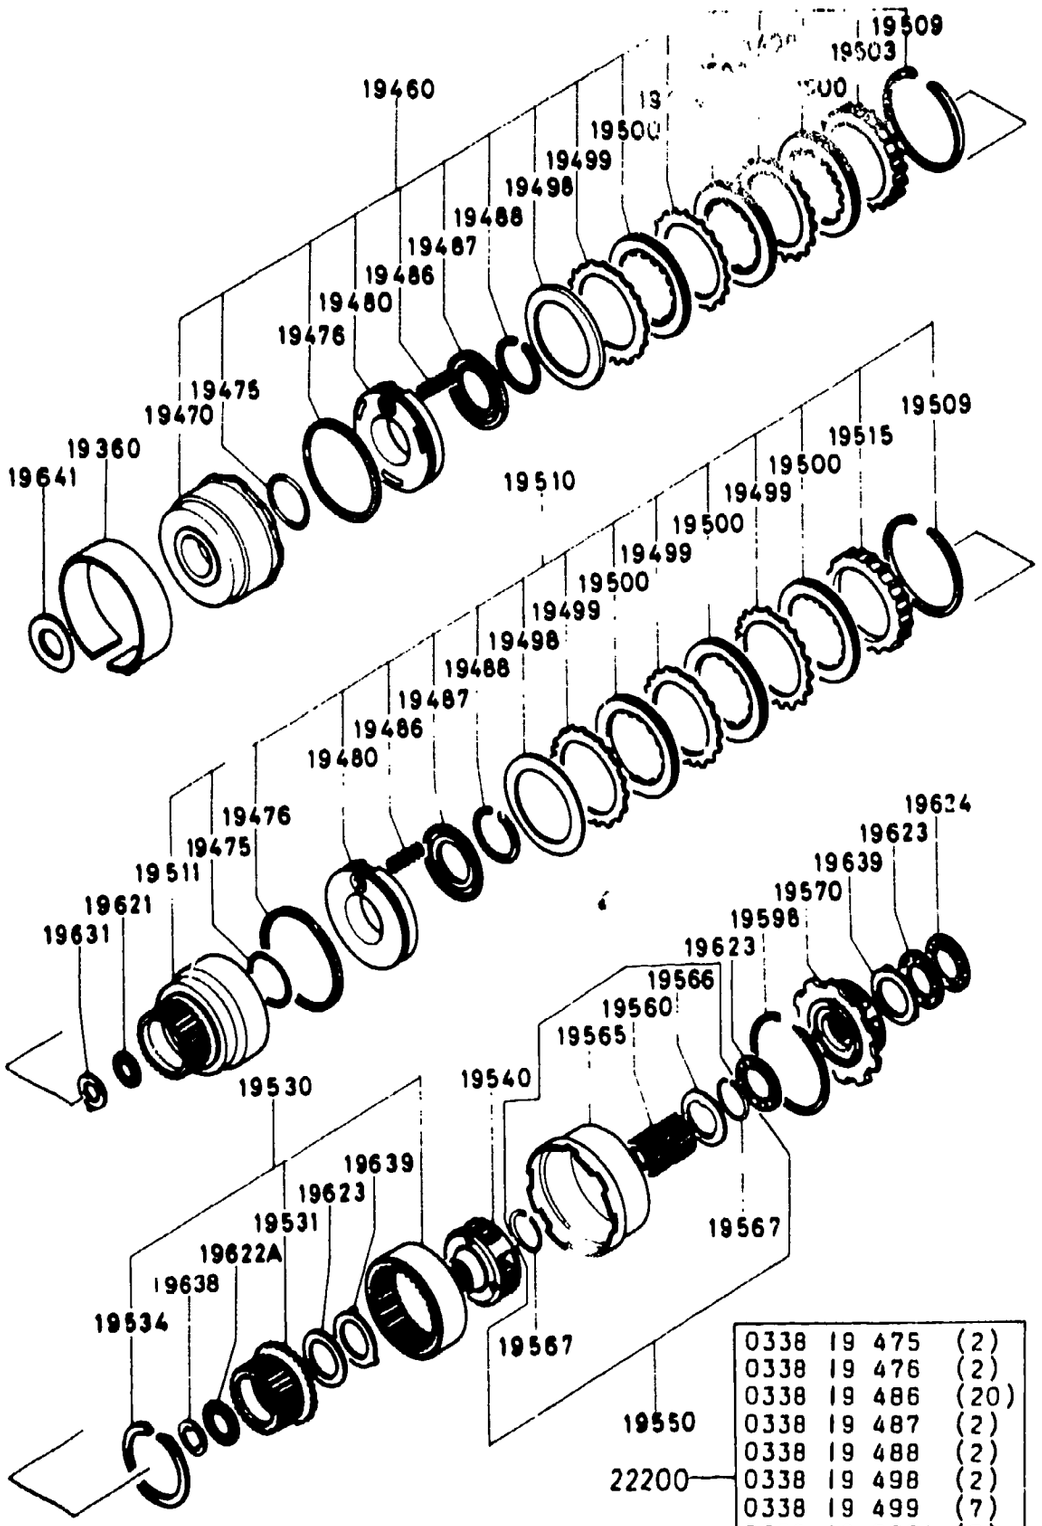


0338	19	475	(2)
0338	19	476	(2)
0338	19	486	(20)
0338	19	487	(2)
0338	19	488	(2)
0338	19	498	(2)
0338	19	499	(7)
0338	19	500A	(7)
0338	19	509	(2)
0338	19	621	(1)
0338	19	656	(1)

CLUTCH REPAIR KIT


ITEM NO.	D-CODE	DESCRIPTION	PART NO.	QTY	MODEL/DESCRIPTION	REMARKS
	19 631 (CONT'D)		0338-19-632	1	(T=1.4)	
			0338-19-633	1	(T=1.6)	
			0338-19-634	1	(T=1.8)	
			0338-19-635	1	(T=2.0)	
			0338-19-636	1	(T=2.2)	
	19 638	RACE, BEARING REAR CLUTCH	0436-19-656	2		
	19 639	RACE, BEARING	0338-19-639	2		
	19 641	WASHER, FRONT CLUTCH	0338-19-648	1	(T=1.3)	
			0338-19-646	1	(T=1.5)	
			0338-19-647	1	(T=1.7)	
			0338-19-641	1	(T=1.9)	
			0338-19-642	1	(T=2.1)	
			0338-19-643	1	(T=2.3)	
			0338-19-644	1	(T=2.5)	
			0338-19-645	1	(T=2.7)	
	22 200	REPAIR KIT, CLUTCH	0397-22-200	1	'81 & '82 MODELS	

1940A-1 LOW, REVERSE & GOVERNOR (AUTOMATIC TRANSMISSION)

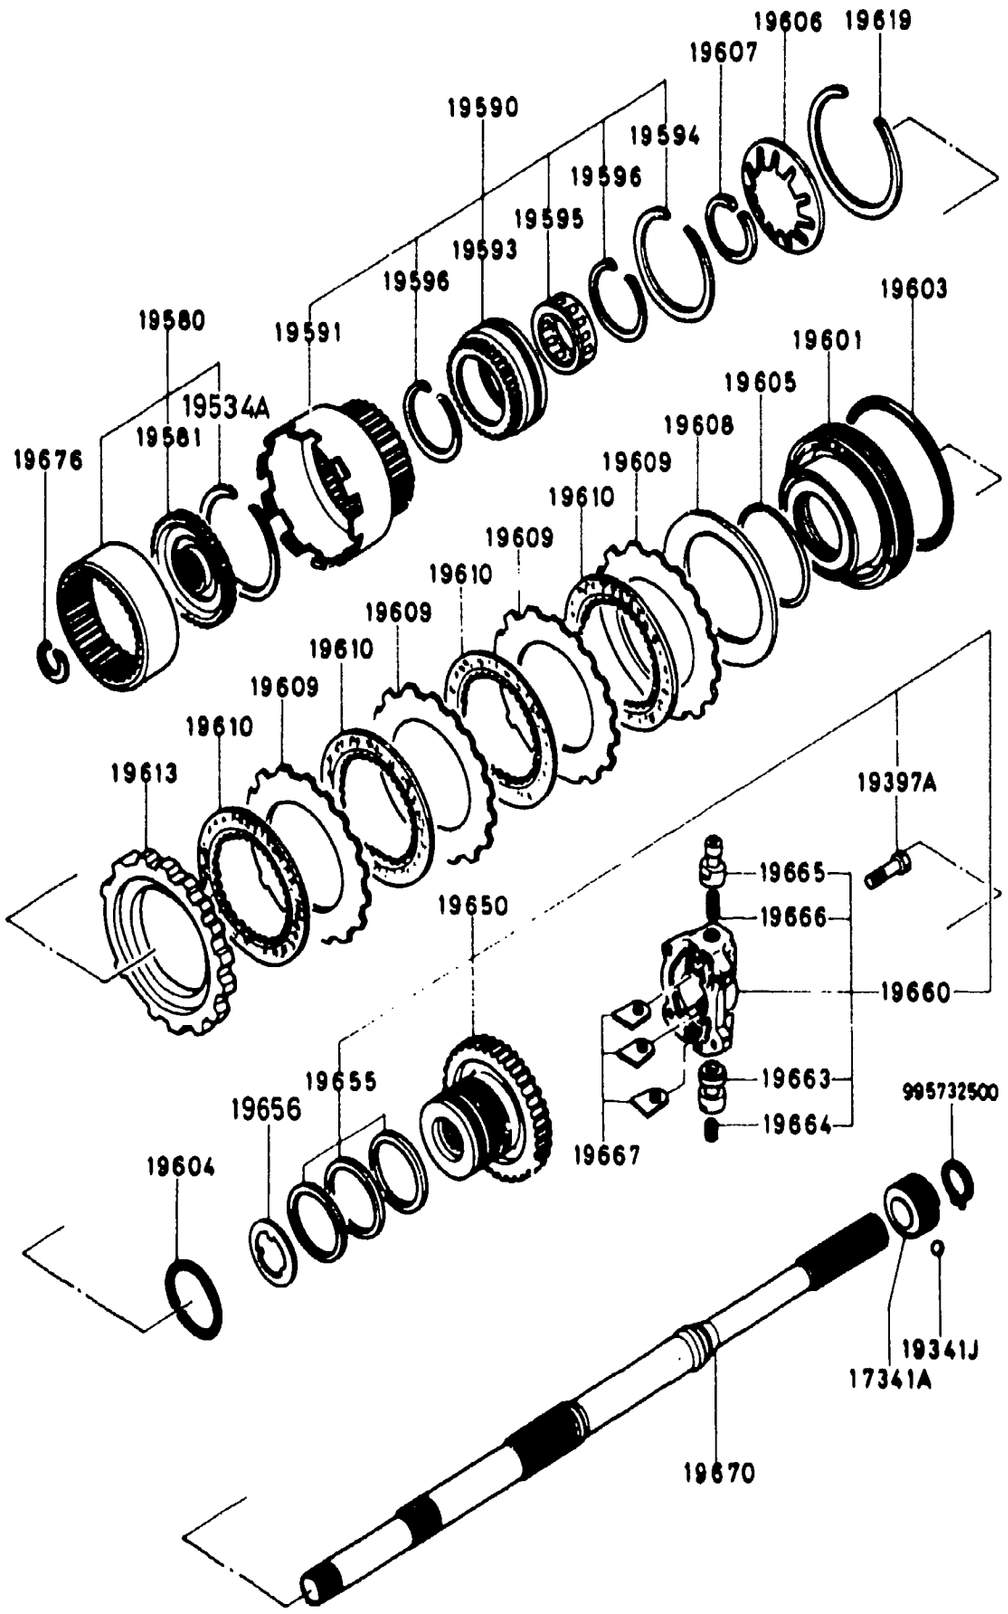

ITEM NO.	D-CODE	DESCRIPTION	PART NO.	QTY	MODEL/DESCRIPTION	REMARKS
	17 341A	GEAR, SPEEDOMETER	3728-17-341A	1		
	19 341J	BALL, STEEL	9961-11-500	1	'81 & '82 MODELS	
	19 397A	BOLT	0338-19-398	4		
	19 534A	RING, SNAP	0338-19-534	1		
	19 580	FLANGE	0338-19-580	1		
	19 581	FLANGE, DRIVE	0338-19-581	1		
	19 590	DRUM, CONNECTING	0338-19-590	1		
	19 591	DRUM, CONNECTING	0338-19-591	1		
	19 593	RACE, OUTER	0338-19-593	1		
	19 594	RING, SNAP	0338-19-594	1		
	19 595	CLUTCH, ONE-WAY	0338-19-595	1		
	19 596	RING, SNAP	0338-19-596	2		
	19 601	PISTON, LOW & REVERSE	BT08-19-600	1		
	19 603	SEAL, PISTON	0338-19-603	1		
	19 604	SEAL, O-RING	0338-19-604	1		
	19 605	RING, THRUST SPRING	0338-19-605	1		
	19 606	SPRING, PISTON	0338-19-606	1		
	19 607	RING, SNAP	0338-19-607	1		
	19 608	PLATE, DISHED	0338-19-608	1		
	19 609	PLATE, DRIVEN	0338-19-609	4		
	19 610	PLATE, DRIVE	0338-19-610A	4		
	19 613	PLATE, RETAINING	1758-19-613	1	(T=7.8)	
			1758-19-614	1	(T=8.0)	
			1758-19-615	1	(T=8.2)	
			1758-19-616	1	(T=8.4)	
			1758-19-617	1	(T=8.6)	
			1758-19-618	1	(T=8.8)	
	19 619	RING, SNAP	0338-19-619	1		
	19 650	DISTRIBUTOR, OIL	0842-19-650	1		
	19 655	RING, SEAL	0338-19-655	3		
	19 656	RACE, BEARING	0436-19-656	2	'81 & '82 MODELS	
	19 660	GOVERNOR	0842-19-660	1		
	19 663	VALVE	0338-19-663	1		
	19 664	SPRING	0338-19-664	1		
	19 665	VALVE	0842-19-665	1		
	19 666	SPRING, GOVERNOR	0338-19-666	1		
	19 667	PLATE, RETAINER	0338-19-667	3		
	19 670	SHAFT	0338-19-670A	1		
	19 676	RING	0338-19-676	1		

1950A-1 MANUAL LINKAGE (AUTOMATIC TRANSMISSION)

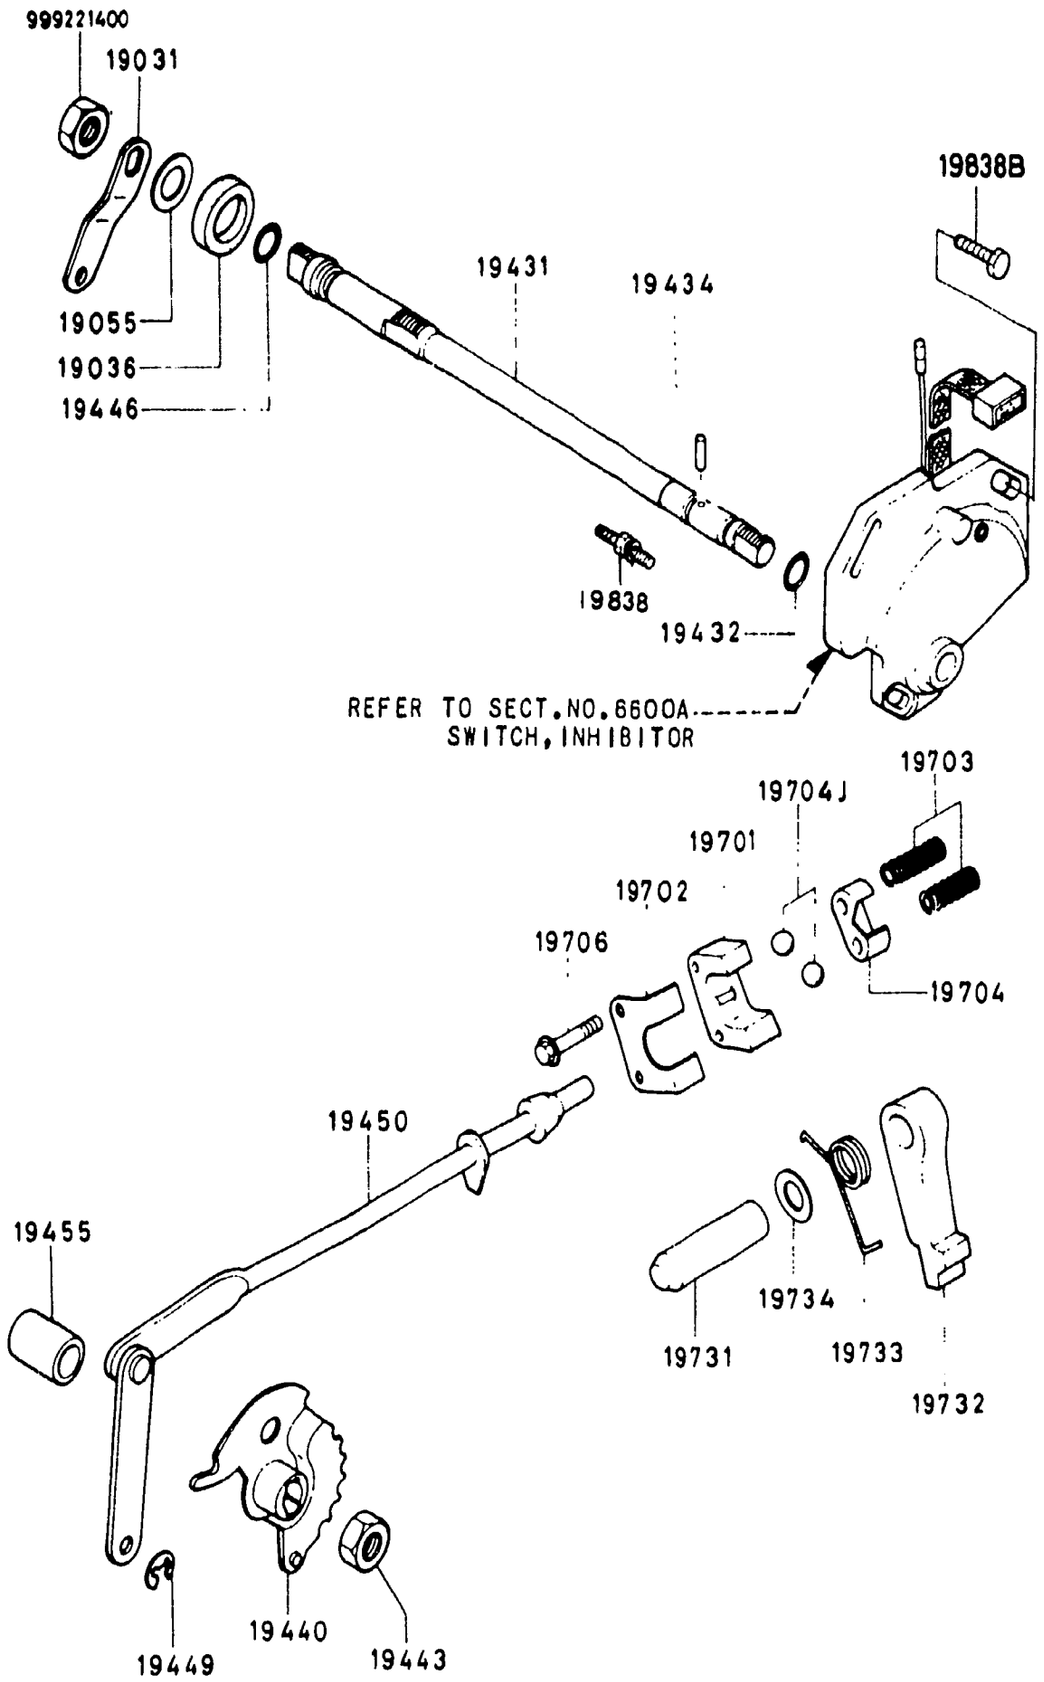

ITEM NO.	D-CODE	DESCRIPTION	PART NO.	QTY	MODEL/DESCRIPTION	REMARKS
	19 031	LEVER, SELECT	8872-19-031	1		
	19 036	SEAL, DUST	1758-19-036A	1		
	19 055	WASHER	1758-19-055	1		
	19 431	SHAFT, MANUAL	1758-19-431A	1		
	19 432	O-RING	9954-10-0901	1	'81 & '82 MODELS	
				2	'83 MODEL	
	19 434	PIN	1758-19-434	1		
	19 440	PLATE, MANUAL	1758-19-440A	1		
	19 443	NUT, SHAFT	1758-19-443	1		
	19 446	O-RING	9954-10-1201	1		
	19 449	RING, SNAP	0338-19-449	1		
	19 450	ROD, PARKING	1758-19-450	1		
	19 455	SLEEVE	1758-19-455A	1		
	19 701	SUPPORTER, ACTUATOR	0338-19-701A	1		
	19 702	PLATE, RETAINING	0338-19-702A	1		
	19 703	SPRING, BALL PARK	0338-19-703	2		
	19 704	RETAINER	0338-19-704	1		
	19 704J	BALL, STEEL	9961-12-750	2	'81 & '82 MODELS	
	19 706	BOLT	0338-19-706	2		
	19 731	SHAFT, PARKING PAWL	0338-19-731	1		
	19 732	PAWL, PARKING	0338-19-732	1		
	19 733	SPRING, PAWL RETURN	0338-19-733C	1		
	19 734	SPACER, DOWEL	0338-19-734A	1		
	19 838	BOLT	8872-19-838A	1		
	19 838B	BOLT	1758-19-838	2		

ENGINE

CHASSIS

ENGINE

CHASSIS

ENGINE

CHASSIS

ENGINE

CHASSIS

ENGINE

CHASSIS

ENGINE

CHASSIS

ENGINE

CHASSIS

ENGINE

CHASSIS

ENGINE

CHASSIS

ENGINE

CHASSIS

ENGINE

CHASSIS

ENGINE

CHASSIS

ENGINE

CHASSIS


SECTION INDEX -- CHASSIS

STARTING LOCATION	SECT NO.	SECTION NAME
1 · C 8	2500A	PROPELLER SHAFT ('81 & '82 MODELS)
1 · D 8	2500AA	PROPELLER SHAFT ('83 MODEL)
1 · E 8	2600A	REAR AXLE
1 · F 8	2610A	REAR BRAKES (DRUM BRAKE) (S & GS)
1 · G 8	2610AA	REAR BRAKES (DISC BRAKE) (GSL)
1 · H 8	2700A	DIFFERENTIAL
1 · J 8	2800A	REAR SUSPENSION
1 · K 8	2810A	STABILIZER
1 · L 8	3200A	STEERING WHEEL
1 · M 8	3210A	STEERING GEAR & COLUMN
1 · N 8	3230A	STEERING LINKAGE
1 · C 9	3300A	FRONT AXLE & BRAKES
1 · D 9	3400A	FRONT SUSPENSION
1 · E 9	3410A	CROSS MEMBER & STABILIZER
1 · F 9	3700A	TIRE & JACK
1 · H 9	3900A	ENGINE & TRANSMISSION MOUNTINGS
1 · I 9	4000A	EXHAUST SYSTEM
1 · K 9	4140A	CLUTCH RELEASE & MASTER CYLINDER
1 · L 9	4160A	ACCELERATOR CONTROLS
1 · M 9	4200A	FUEL TANK
1 · N 9	4300A	CLUTCH & BRAKE
1 · C10	4340A	TANDEM MASTER CYLINDER & VACUUM POWER ASSIST SYSTEM
1 · D10	4360A	BRAKE PIPINGS (REAR DRUM BRAKE) (S, GS)
1 · E10	4360AA	BRAKE PIPINGS (REAR DISC BRAKE) (GSL)
1 · F10	4400A	PARKING BRAKE SYSTEM
1 · G10	4500A	FUEL PIPINGS
1 · H10	4600A	CHANGE CONTROLS (AUTOMATIC)

STARTING LOCATION	SECT. NO.	SECTION NAME


STARTING LOCATION	SECT. NO.	SECTION NAME

2500A-1 PROPELLER SHAFT ('81 & '82 MODELS)

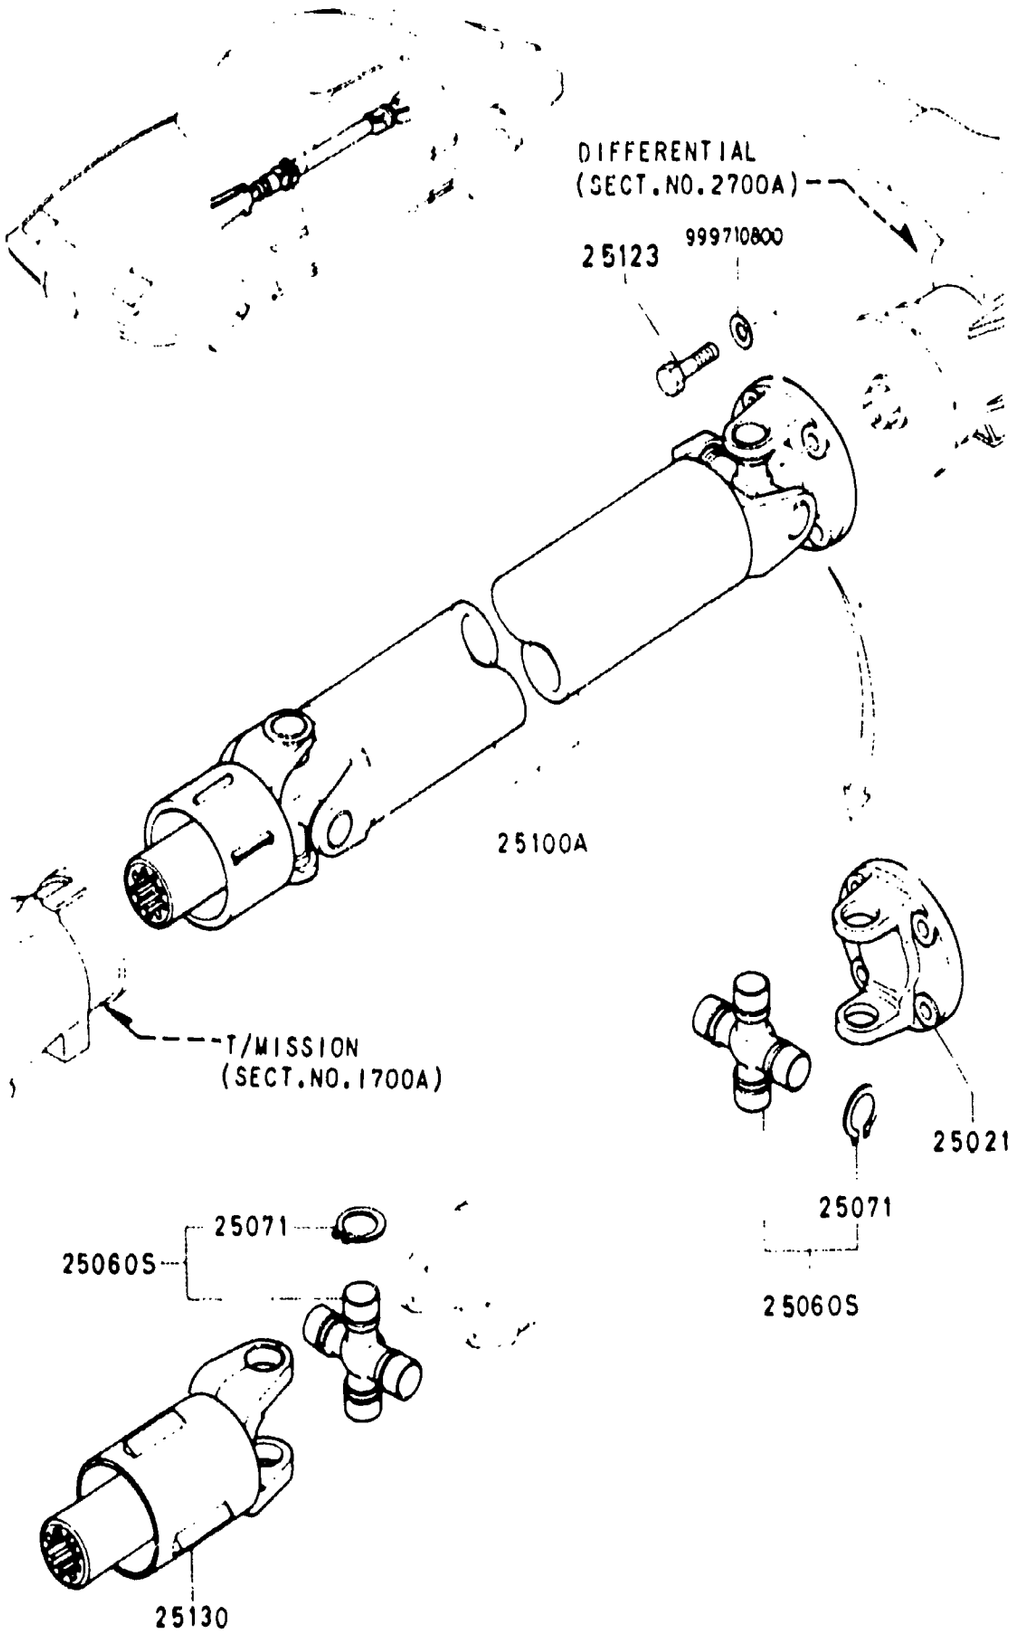


ITEM NO.	D-CODE	DESCRIPTION	PART NO.	QTY	MODEL/DESCRIPTION	REMARKS
	25 021	YOKE, UNIVERSAL JOINT	0259-25-021B	1		
	25 060S	JOINT SET, UNIVERSAL	8BB1-25-060	2		
	25 071	RING, SNAP	0259-25-071B	8	(T=1.22)	
			0259-25-072B	8	(T=1.24)	
			0259-25-073B	8	(T=1.26)	
			0259-25-074B	8	(T=1.28)	
			0259-25-075B	8	(T=1.30)	
			0259-25-076B	8	(T=1.32)	
			0259-25-077A	8	(T=1.34)	
		<A>	0259-25-077B	8		
			0259-25-078B	8	(T=1.36)	
			0259-25-079B	8	(T=1.38)	
	25 100A	SHAFT, PROPELLER	8871-25-100	1		
	25 123	BOLT	1393-25-123	4		
	25 130	YOKE	0425-25-130B	1		

2500AA-1 PROPELLER SHAFT ('83 MODEL)

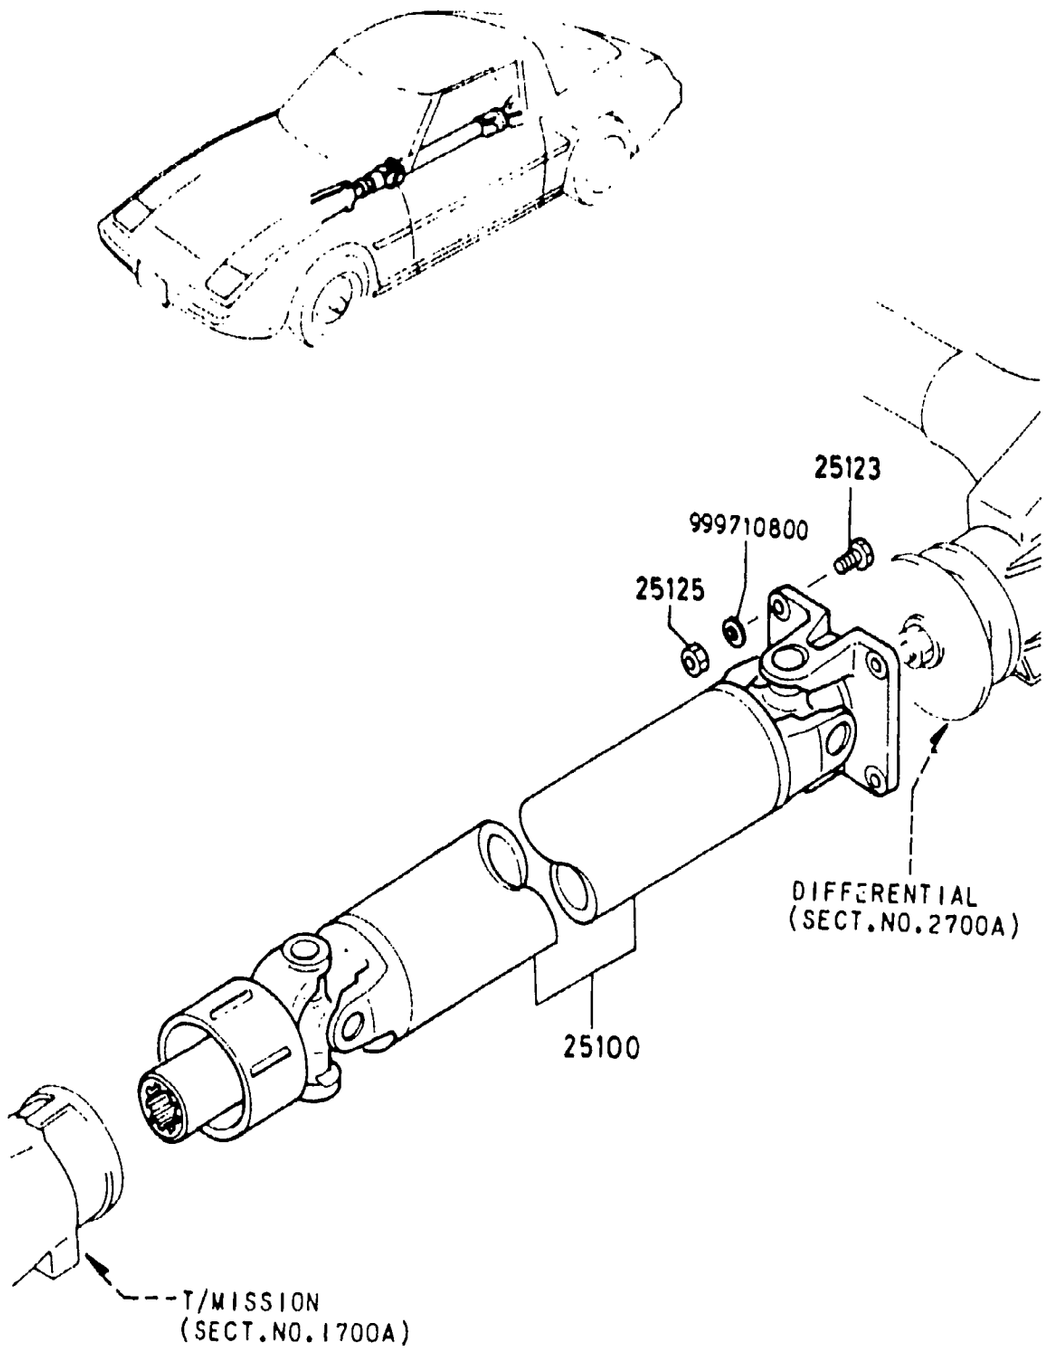


ITEM NO.	D-CODE	DESCRIPTION	PART NO.	QTY	MODEL/DESCRIPTION	REMARKS
	25 100A	SHAFT, PROPELLER	M026-25-100	1		
	25 123	BOLT	1456-25-123	4		
	25 125	NUT	1456-25-125	4		

2600A-1 REAR AXLE

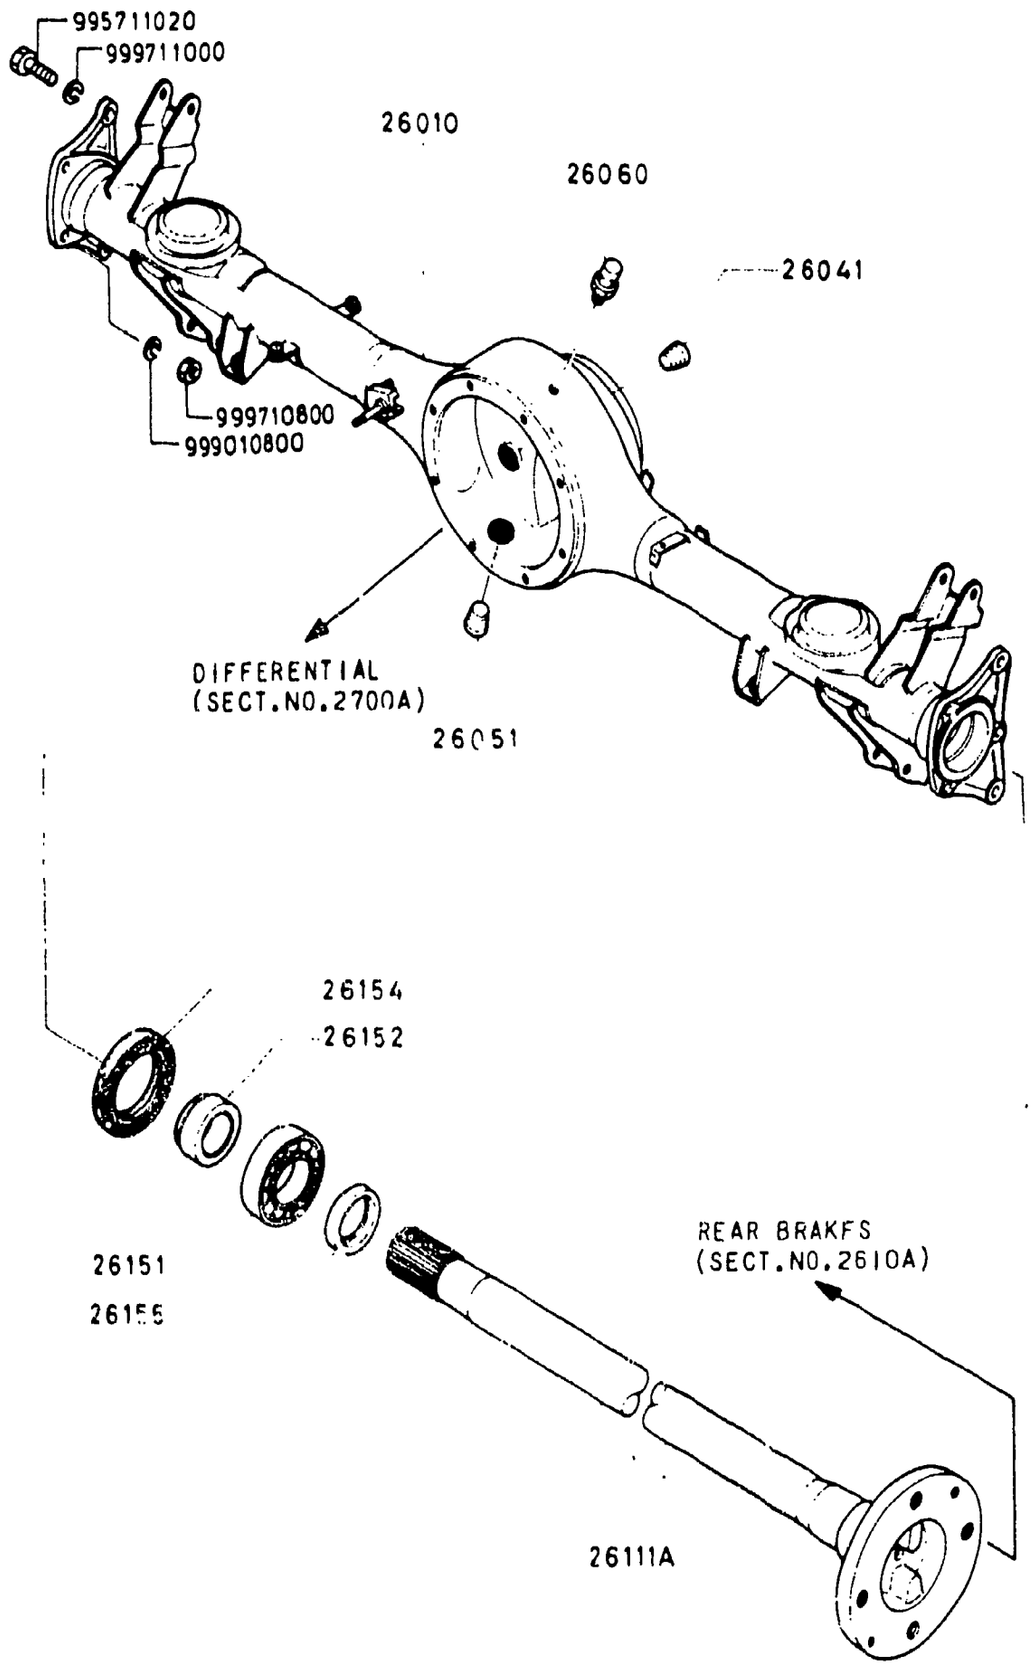


ITEM NO.	D-CODE	DESCRIPTION	PART NO.	QTY	MODEL/DESCRIPTION	REMARKS
	26 010	CASING, REAR AXLE	FA19-26-020B	1	4-WHL DISC GSL ONLY	
			8871-26-020D	1	S & GS MODELS	
	26 041	PLUG, OIL LEVEL	0259-26-041A	1		
	26 051	PLUG, MAGNET DRAIN	0259-26-051	1		
	26 060	BREATHER	0886-26-060	1		
	26 111A	SHAFT, REAR AXLE	FA01-26-111	2		
	26 151	BEARING	8871-26-151A	2		
	26 152	COLLAR, BEARING	8531-26-152	2		
	26 154	SEAL, OIL	0187-26-154	2		
	26 155	SPACER, BEARING	0259-26-155	2		

2610A-1 REAR BRAKES (DRUM BRAKE) (S & GS)

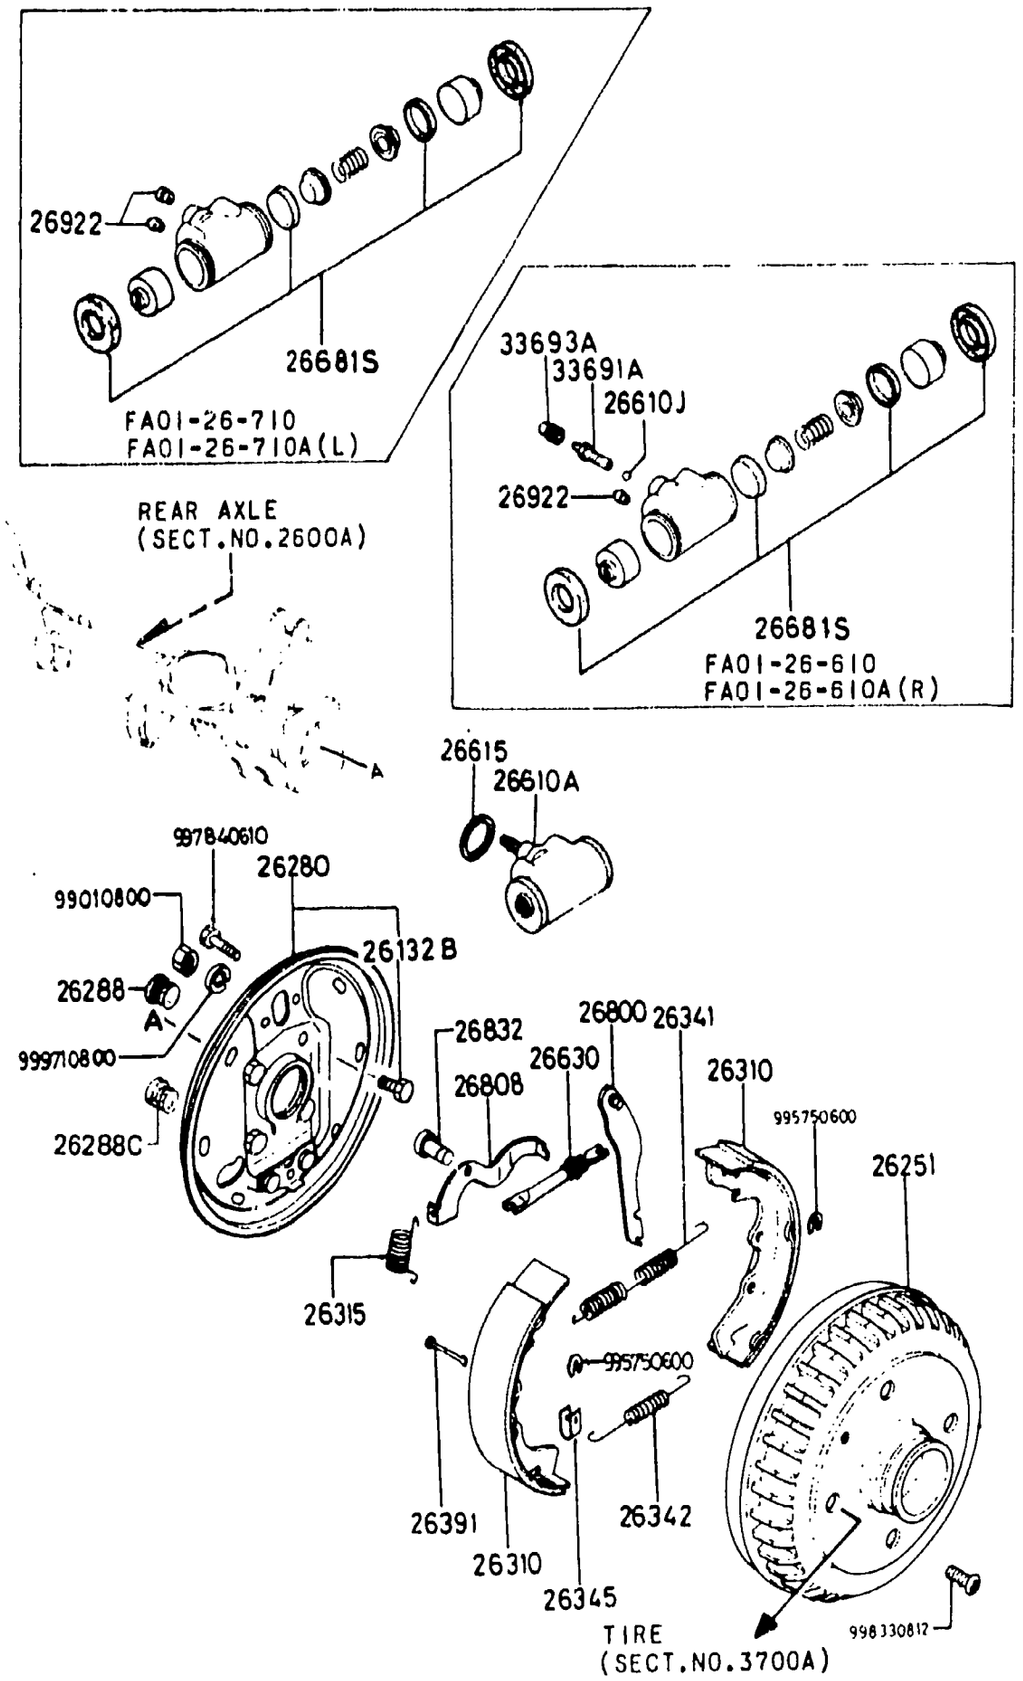


ITEM NO.	D-CODE	DESCRIPTION	PART NO.	QTY	MODEL/DESCRIPTION	REMARKS
	26 132B	BOLT	3728-26-132	8		
	26 251	DRUM, BRAKE	FA01-26-251	2		
	26 280	PLATE (R), BRAKE BACK	FA01-26-280	1		
		PLATE (L), BRAKE BACK	FA01-26-290	1		
	26 288	PLUG, BACK PLATE	0710-26-288	2		
	26 288C	PLUG	3648-26-288	2		
	26 310	SHOE, BRAKE	FA01-26-38Z	4		
	26 315	SPRING, BRAKE BACK	GA02-26-315	2		
	26 341	SPRING, RETURN-UPPER	FA01-26-341	2		
	26 342	SPRING, RETURN-LOWER	1011-26-342	2		
	26 345	SPRING, BRAKE SHOE	FA01-26-345	4		
	26 391	PIN, BRAKE SHOE	FA01-26-391	4		
	26 610A	CYLINDER (R), WHEEL	FA01-26-610A	1		
		CYLINDER (L), WHEEL	FA01-26-710A	1		
	26 610J	BALL, STEEL	9961-11-500	1		
	26 615	GASKET, WHEEL CYLINDER	1175-26-615	2		
	26 630	ADJUSTER (R)	FA01-26-630	1		
		ADJUSTER (L)	FA01-26-640	1		
	26 681S	BOOT SET	BB62-89-334	2		
	26 800	LEVER (R), OPERATING	FA01-26-800	1		
		LEVER (L), OPERATING	FA01-26-810	1		
	26 808	LEVER (R), PAWL	FA01-26-808	1		
		LEVER (L), PAWL	FA01-26-818	1		
	26 832	PIN (R)	FA01-26-832	1		
		PIN (L)	GA02-26-832	1		
	26 922	SHEET, TUBE	0613-26-922	3		
	33 691A	SCREW, BLEEDER	0259-33-691	2		
	33 693A	CAP, BLEEDER SCREW	0259-33-693	2		

2610AA-1 REAR BRAKES (DISC BRAKE) (GSL)

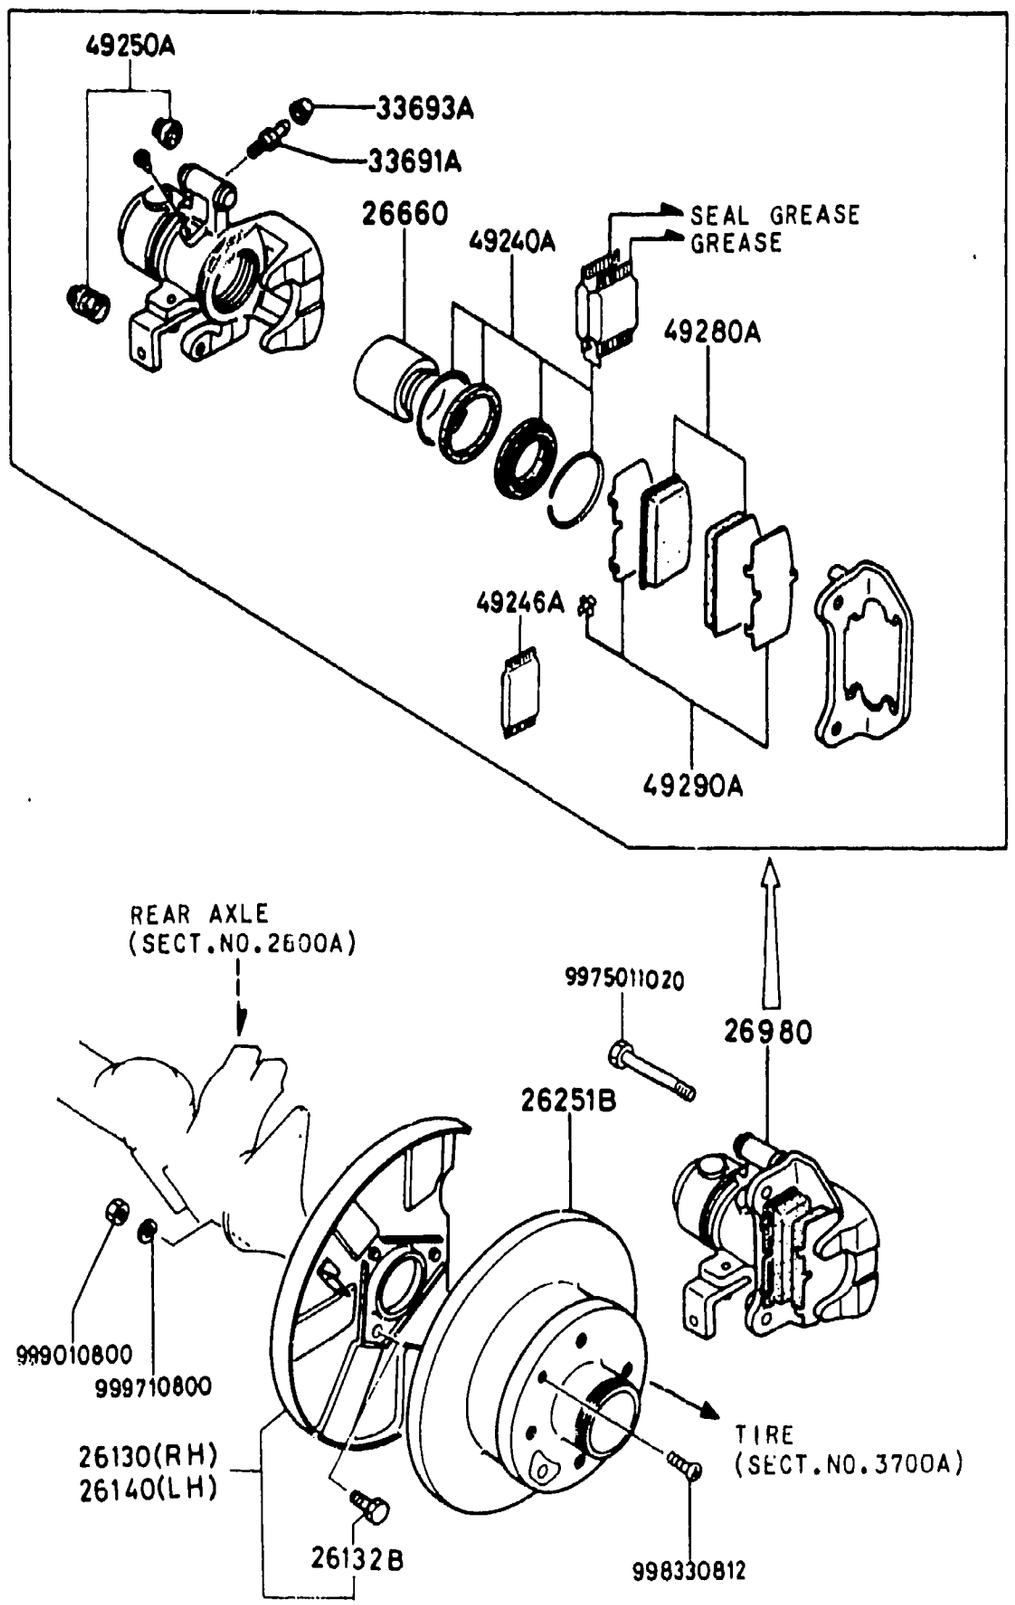


ITEM NO.	D-CODE	DESCRIPTION	PART NO.	QTY	MODEL/DESCRIPTION	REMARKS
	26 130	COVER, DUST (R)	FA18-26-130	1		
	26 132B	BOLT	3728-26-132	6		
	26 140	COVER, DUST (L)	FA18-26-140	1		
	26 251B	PLATE, DISC	FA18-26-251	2		
	26 6660	PISTON	FA18-26-660	2		
	26 980	BRAKE (R), DISC	FA18-26-980A	1		
		BRAKE (L), DISC	FA18-26-990A	1		
	33 691A	SCREW, BLEEDER	0233-33-691	2		
	33 693A	CAP, BLEEDER SCREW	0259-33-693	2		
	49 240A	SEAL, KIT	FA18-49-240	1		
	49 246A	GREASE	FA18-49-270	1		
	49 250A	BOOT KIT	FA18-49-250	1		
	49 280A	PAD, SUB SET	FA18-49-280A	1		
	49 290A	ATTACHMENT-PAD	FA18-49-290	1		

2700A-1 DIFFERENTIAL

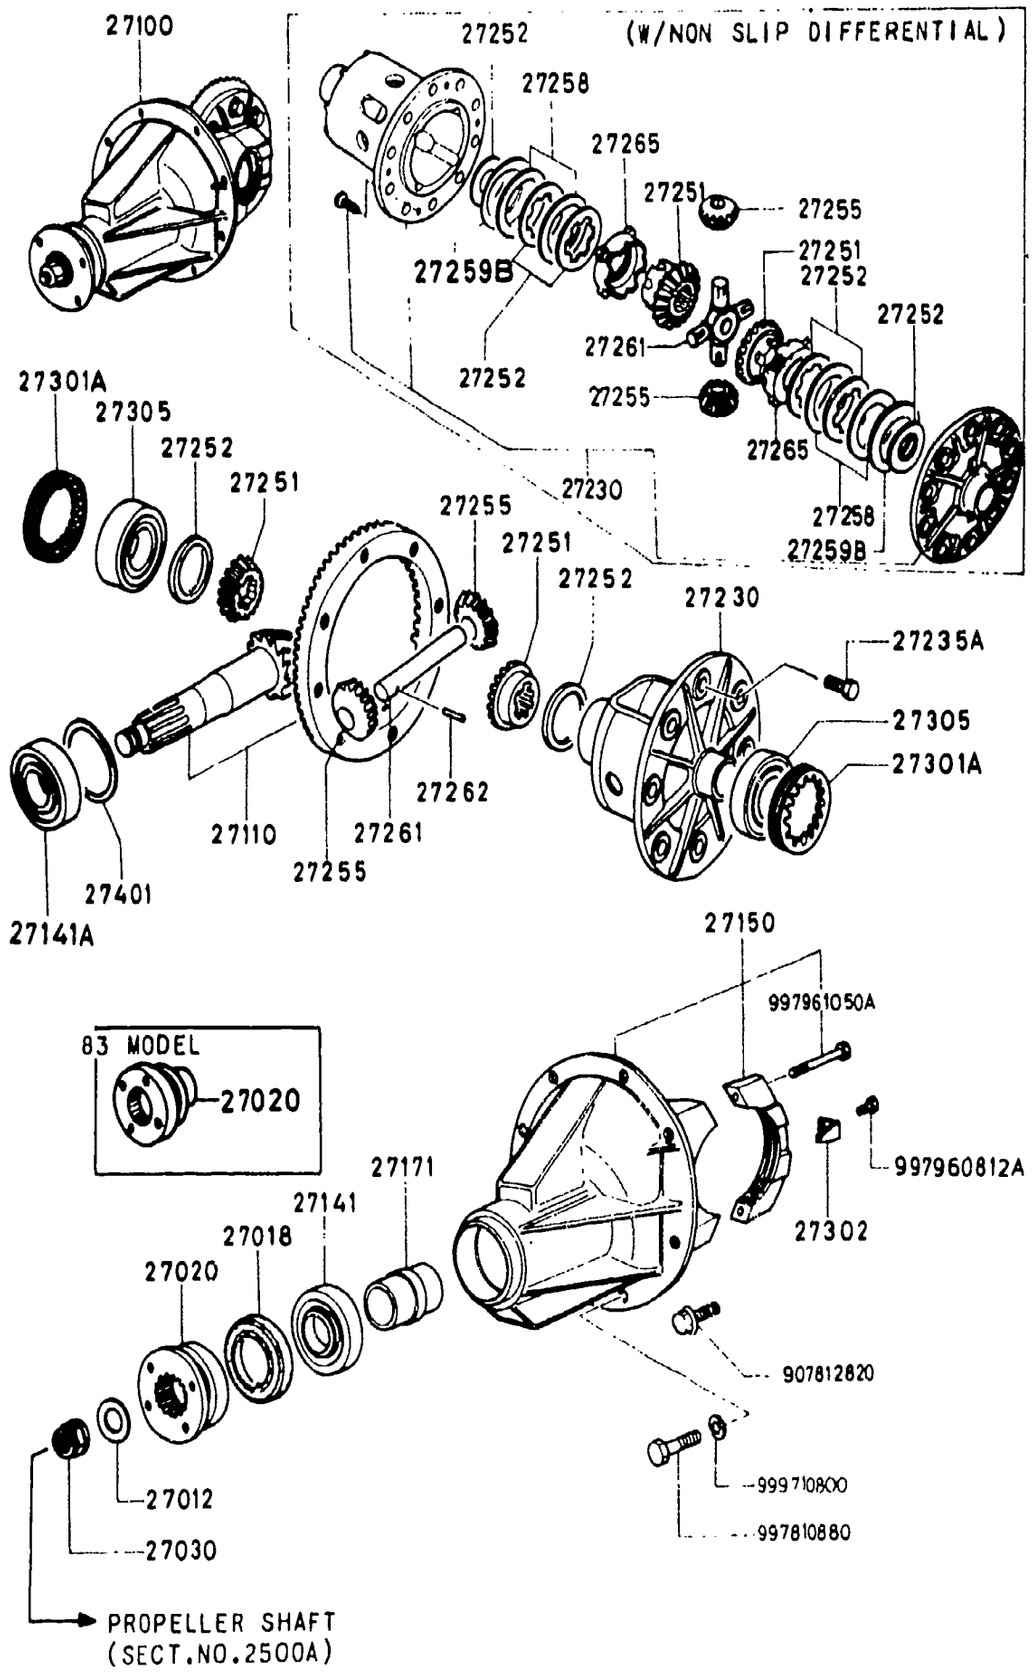


ITEM NO.	D-CODE	DESCRIPTION	PART NO.	QTY	MODEL/DESCRIPTION	REMARKS
	27 012	WASHER	0223-27-012	1		
	27 018	SEAL, OIL	0223-27-018	1	'81 & '82 MODELS	
			M005-27-165	1	'83 MODEL	
	27 020	FLANGE, COMPANION	0223-27-020C	1	'81 & '83 MODELS	
			M005-27-120D	1	'83 MODEL	
	27 030	NUT, LOCK	0223-27-030	1		
	27 100	DRIVE & DIFFERENTIAL	8051-27-100C	1	'81 & '82 S & GS MODELS	
			M019-27-100A	1	'83 MODEL S & GS MODELS	
			M030-27-100	1	'81 & '82 NON-SLIP DIFF. GSL MODELS	
			M092-27-100B	1	'83 NON-SLIP DIFF. GSL MODEL	
	27 110	GEAR SET, FINAL	8051-27-110D	1	(RATIO=3.909)	
	27 141	BEARING, PINION-FRONT	0755-27-210	1		
	27 141A	BEARING, PINION-REAR	0221-27-210	1		
	27 150	CARRIER, DIFFERENTIAL	0820-27-150C	1		
	27 171	PIECE, DISTANCE	0305-27-171	1		
	27 230	CASE	M020-27-230	1	GSL MODEL	
			0290-27-231B	1	S & GS MODELS	
		<A>	0290-27-231C	1		
	27 235A	BOLT, REAMER	8051-27-235	10	(D=10.0)	
			8051-27-236	10	(D=10.2)	
	27 251	GEAR, DIFFERENTIAL SIDE	M020-27-251	2	GSL MODEL	
			0820-27-251A	2	S & GS MODELS	
	27 252	WASHER	0290-27-252	2	(T=2.00) S & GS MODELS	
			0290-27-253	2	(T=2.10) S & GS MODELS	
			0290-27-254	2	(T=2.20) S & GS MODELS	
			0290-27-256	2	(T=2.05) S & GS MODELS	
			0290-27-259	2	(T=2.15) S & GS MODELS	
			M020-27-252	2	(T=1.60) GSL MODEL	
			M020-27-253	2	(T=1.80) GSL MODEL	
			M020-27-256	4	(T=2.00) GSL MODEL	
			M020-27-257	4	(T=2.10) GSL MODEL	

2700A-2 DIFFERENTIAL

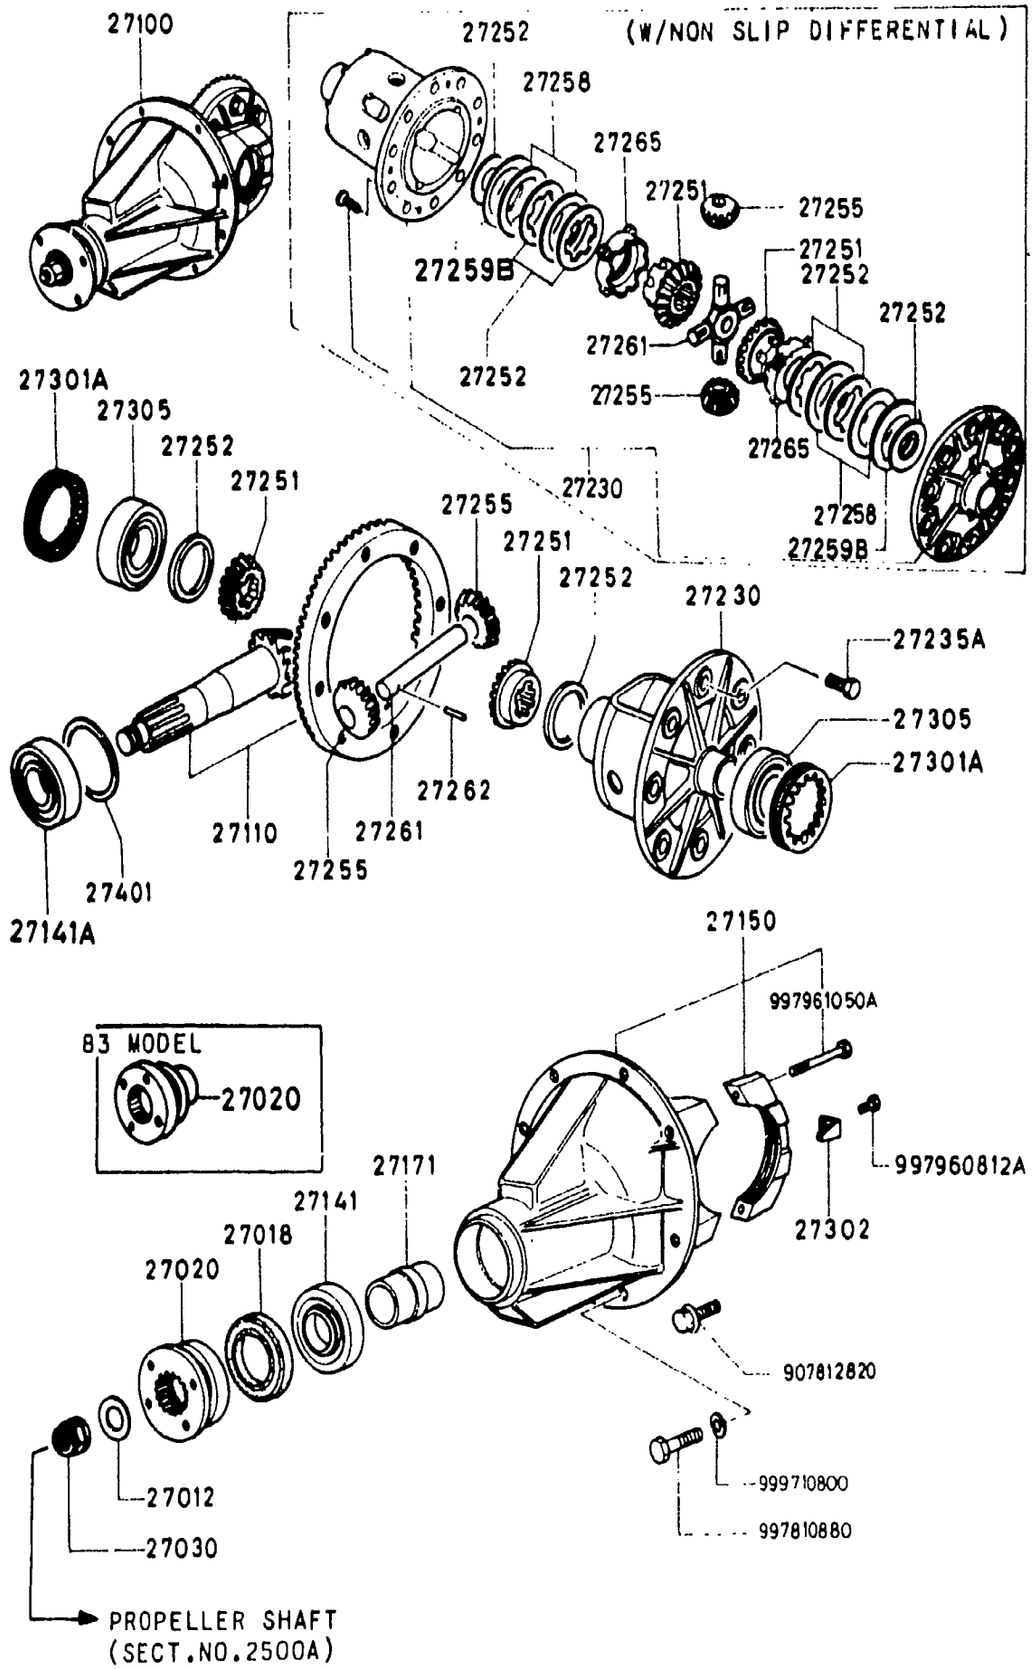


ITEM NO.	D-CODE	DESCRIPTION	PART NO.	QTY	MODEL/DESCRIPTION	REMARKS
	27 255	PINION, DIFFERENTIAL	0221-27-255C	2	S & GS MODELS	
			M020-27-255	4	GSL MODEL	
	27 258	PLATE, FRICTION	M020-27-258	4	GSL MODEL	
	27 259B	SPRING, CONICAL	M020-27-259	2	GSL MODEL	
	27 261	SHAFT, DIFFERENTIAL PINION	0305-27-261	1	S & GS MODELS	
		SHAFT, DIFFERENTIAL	M020-27-261	1	GSL MODEL	
	27 262	PIN	0114-27-262	1	S & GS MODELS	
	27 265	RING, PRESSURE	M020-27-265	2	GSL MODEL	
	27 301A	SCREW, ADJUST	0290-27-301	2		
	27 302	PLATE, LOCK	0290-27-302	2		
	27 305	BEARING	0221-27-350	2		
	27 401	SPACER	0223-27-401A	1	(T=3.08)	
			0223-27-402A	1	(T=3.11)	
			0223-27-403A	1	(T=3.14)	
			0223-27-404A	1	(T=3.17)	
			0223-27-405A	1	(T=3.20)	
			0223-27-406A	1	(T=3.23)	
			0223-27-407A	1	(T=3.26)	
			0223-27-408A	1	(T=3.29)	
			0223-27-409A	1	(T=3.32)	
			0223-27-411A	1	(T=3.35)	
			0223-27-412A	1	(T=3.38)	
			0223-27-413A	1	(T=3.41)	
			0223-27-414A	1	(T=3.44)	
			0223-27-415A	1	(T=3.47)	

2800A-1 REAR SUSPENSION

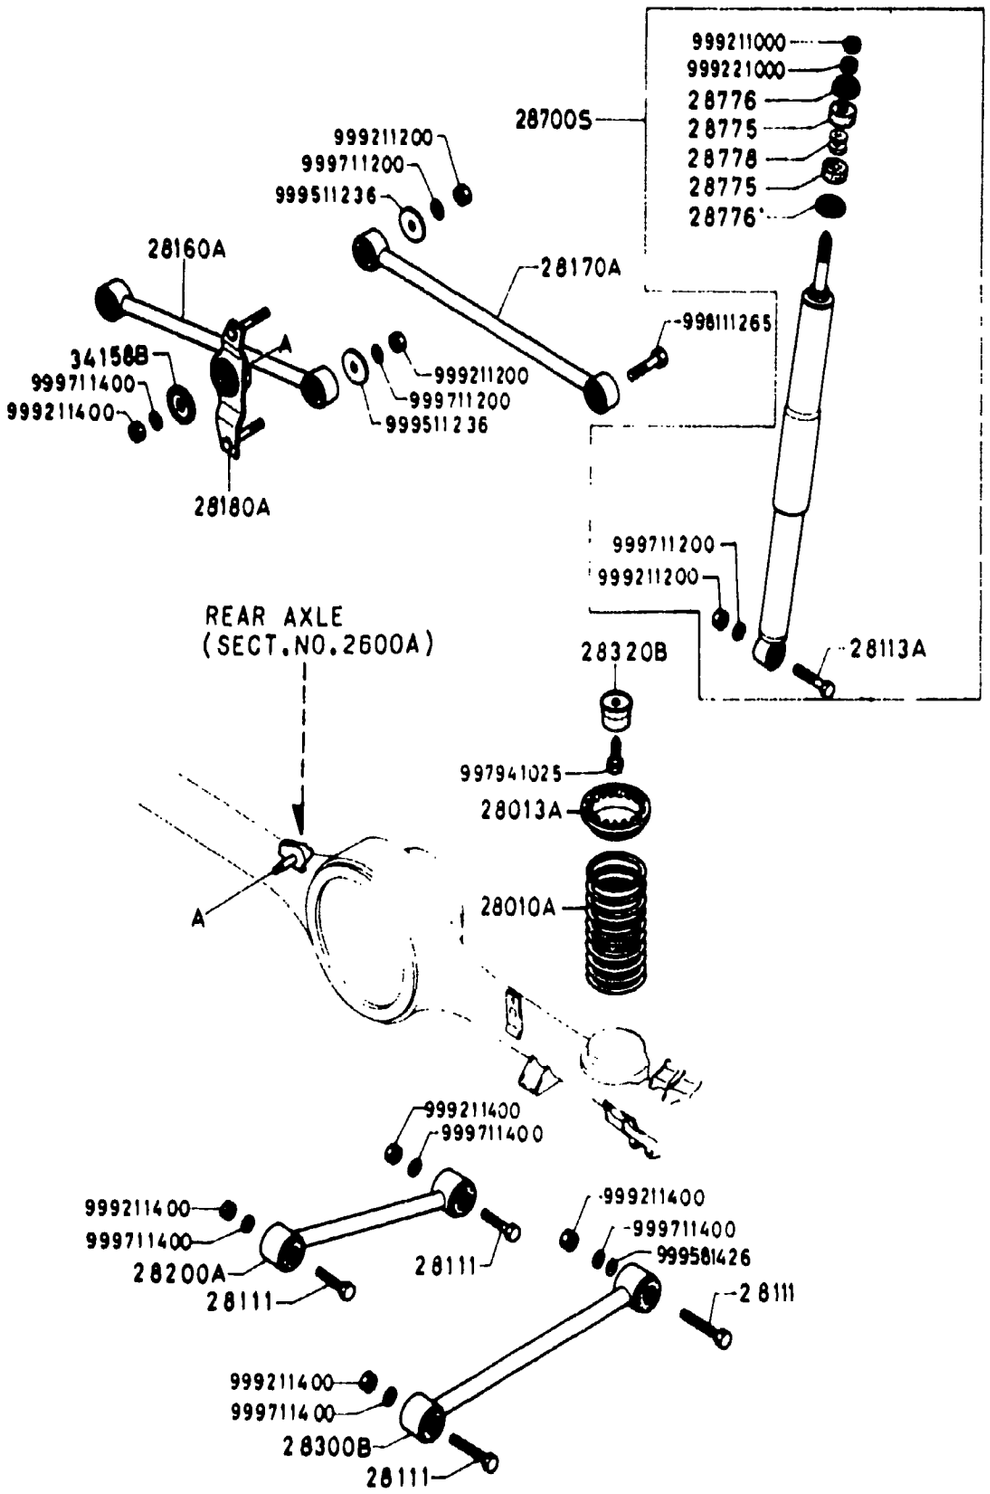

ITEM NO.	D-CODE	DESCRIPTION	PART NO.	QTY	MODEL/DESCRIPTION	REMARKS
	28 010A	SPRING, COIL	8871-28-011B	2		
	28 013A	SHEET, RUBBER	8871-28-013B	2		FB331 ..700001-700131
		<A>	8871-28-013C	2		FB331 ..700132-
	28 111	BOLT	0305-28-111B	8		
	28 113A	BOLT	1243-28-111	2		
	28 160A	LINK (R), WATT	8871-28-160	1		
	28 170A	LINK (L), WATT	8871-28-170	1		
	28 180A	BRACKET, WATT LINK	8871-28-180	1		
	28 200A	LINK	8871-28-200	2		
	28 300B	LINK, LOWER	8871-28-300A	2		
	28 320B	STOPPER, BUMP	8871-28-320	2		
	28 700S	DAMPER SET, REAR	FA01-99-281A	2		
	28 775	BUSHING, RUBBER	8871-28-775	4		
	28 776	RETAINER	0223-28-776	4		
	28 778	GROMMET	0259-28-778	2		
	34 158B	WASHER	0866-34-158	1		


2810A-1 STABILIZER

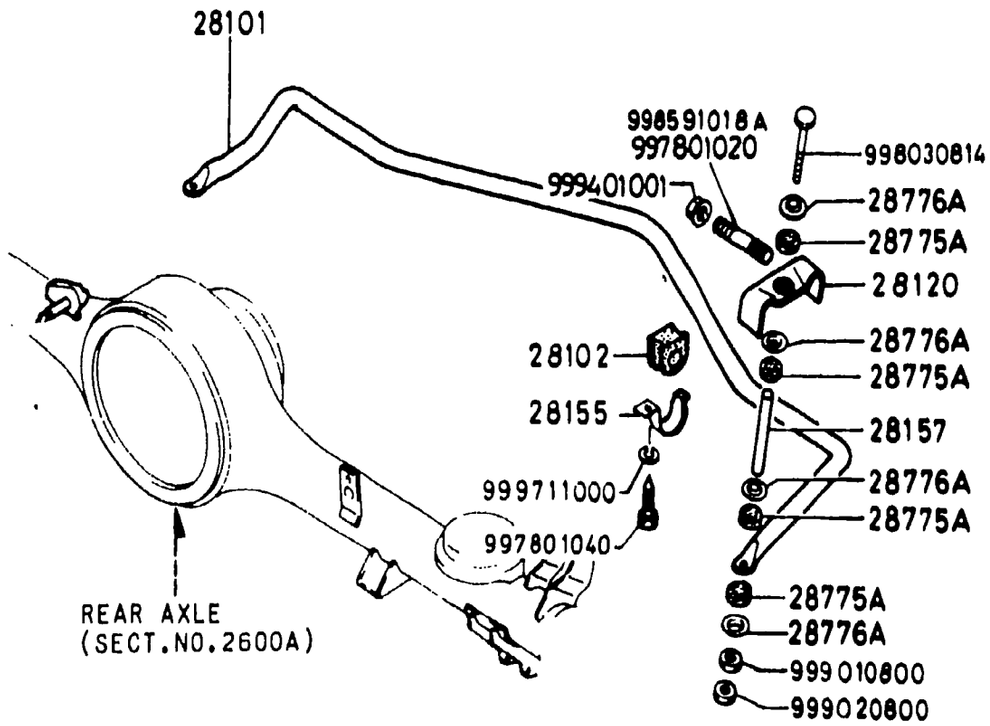


ITEM NO.	D-CODE	DESCRIPTION	PART NO.	QTY	MODEL/DESCRIPTION	REMARKS
	28 101	STABILIZER	8980-28-151	1	(16MM) (0.63 INCH) '81 MODEL THRU OCT. '80 PROD.	FB331 ..500001-510972
			8871-28-151A	1	(18MM) (0.71 INCH) '81 & '82 MODELS	
			FA01-28-151	1	(15MM) (0.59 INCH) '83 MODEL	FB331 ..501693-
	28 102	BUSHING, RUBBER	FA01-28-156	2	(FOR 15MM STABILIZER)	FB331 ..501693-
			8871-28-156	2	(FOR 18MM STABILIZER) '81 & '82 MODELS	
				2	(FOR 17MM STABILIZER) '83 MODEL	
			8980-28-156	2	(FOR 16MM STABILIZER) '81 MODEL	FB331 ..500001-510972
	28 120	BRACKET, CONTROL LINK	FA01-28-120A	2	'81 MODEL	FB331 ..507335-510972
			FA01-28-120B	2		FB331 ..510973-
			8871-28-120B	2	'81 MODEL	FB331 ..500001-507334
	28 155	BRACKET, STABILIZER SUPPORT	FA01-28-155	2		FB331 ..501693-
			8871-28-155	2	'81 MODEL	FB331 ..500001-510972
	28 157	SPACER, STABILIZER	8871-28-157	2		
	28 775A	BUSHING, RUBBER-STABILIZER	0710-28-775	8		
	28 776A	RETAINER, STABILIZER	0710-28-776	8		

3200A-1 STEERING WHEEL

S MODEL

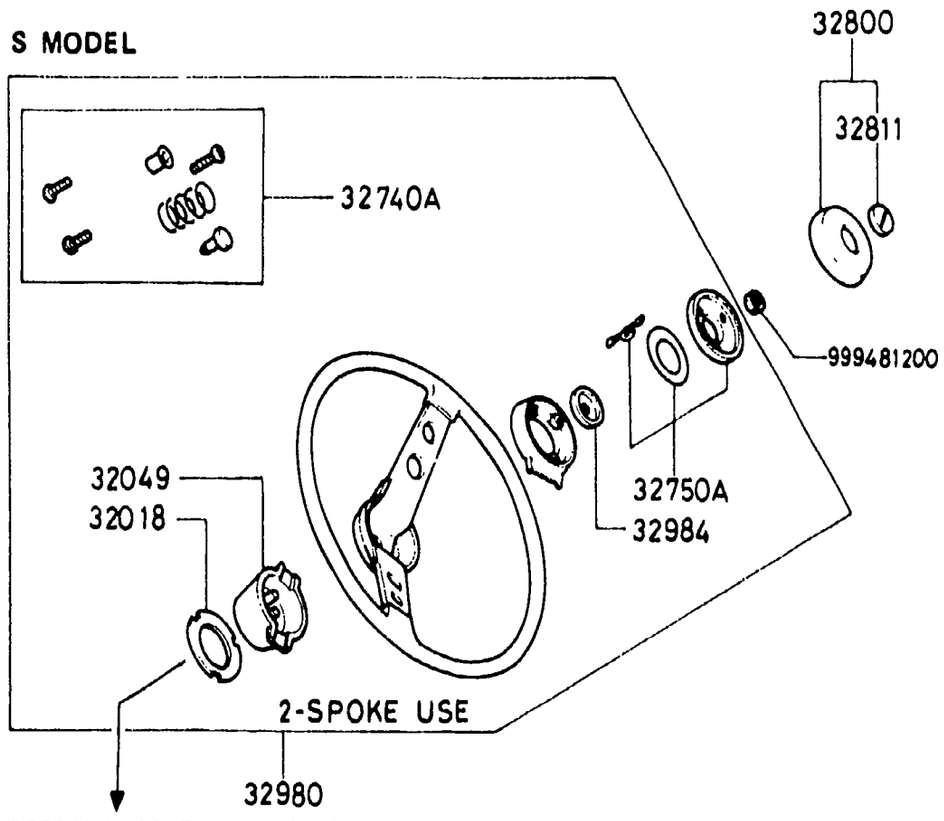


GS & GSL MODELS

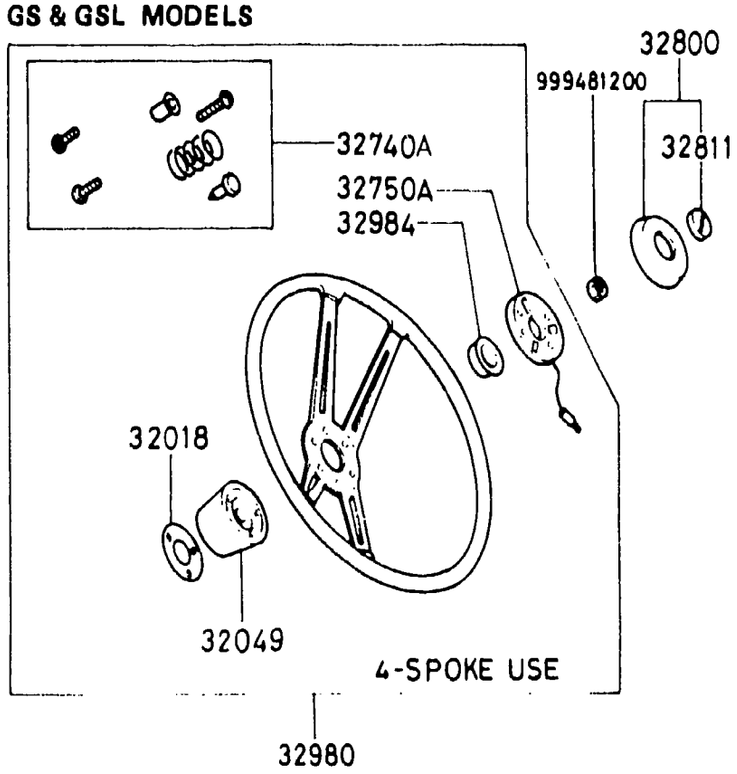


ITEM NO.	D-CODE	DESCRIPTION	PART NO.	QTY	MODEL/DESCRIPTION	REMARKS
	32 018	TERMINAL	8532-32-018	1	(2-SPOKE USE) S MODEL	
			UA47-32-018	1	(4-SPOKE USE) GS & GSL MODELS	
	32 049	COVER, WHEEL CORE	8532-32-049	1	(2-SPOKE USE) S MODEL	
		BLACK	00			
			8871-32-049C	1	(4-SPOKE USE) GS & GSL MODELS	
			00			
	32 740A	SET-SCREW	8532-32-740	1	(2-SPOKE USE) S MODEL	
			8871-32-740B	1	(4-SPOKE USE) GS & GSL MODELS	
	32 750A	SET-HORN	8532-32-750	1	(2-SPOKE USE) S MODEL	
			8871-32-750	1	(4-SPOKE USE) GS & GSL MODELS	
	32 800	CAP, HORN	8531-32-800	1	(2-SPOKE USE) S MODEL	
		BLACK	01			
			8871-32-800	1	(4-SPOKE USE) GS & GSL MODELS	
		BLACK	01			
	32 811	EMBLEM	8531-32-811	1		
	32 980	BOSS, STEERING WHEEL	8180-32-980B	1	(4-SPOKE, URETHNE) GS & GSL MODELS STANDARD	
		BLACK	00			
			8344 32-980B	1	(4-SPOKE, LEATHER) GS & GSL MODELS OPTIONAL	
		BLACK	00			
			8349-32-980	1	(2-SPOKE, URETHANE) S MODEL	
		BLACK	00			
	32 984	SET, CUP	8532-32-964	1	(2-SPOKE USE) S MODEL	
			8871-32-984	1	(4-SPOKE USE) GS & GSL MODELS	


3210A-1 STEERING GEAR & COLUMN

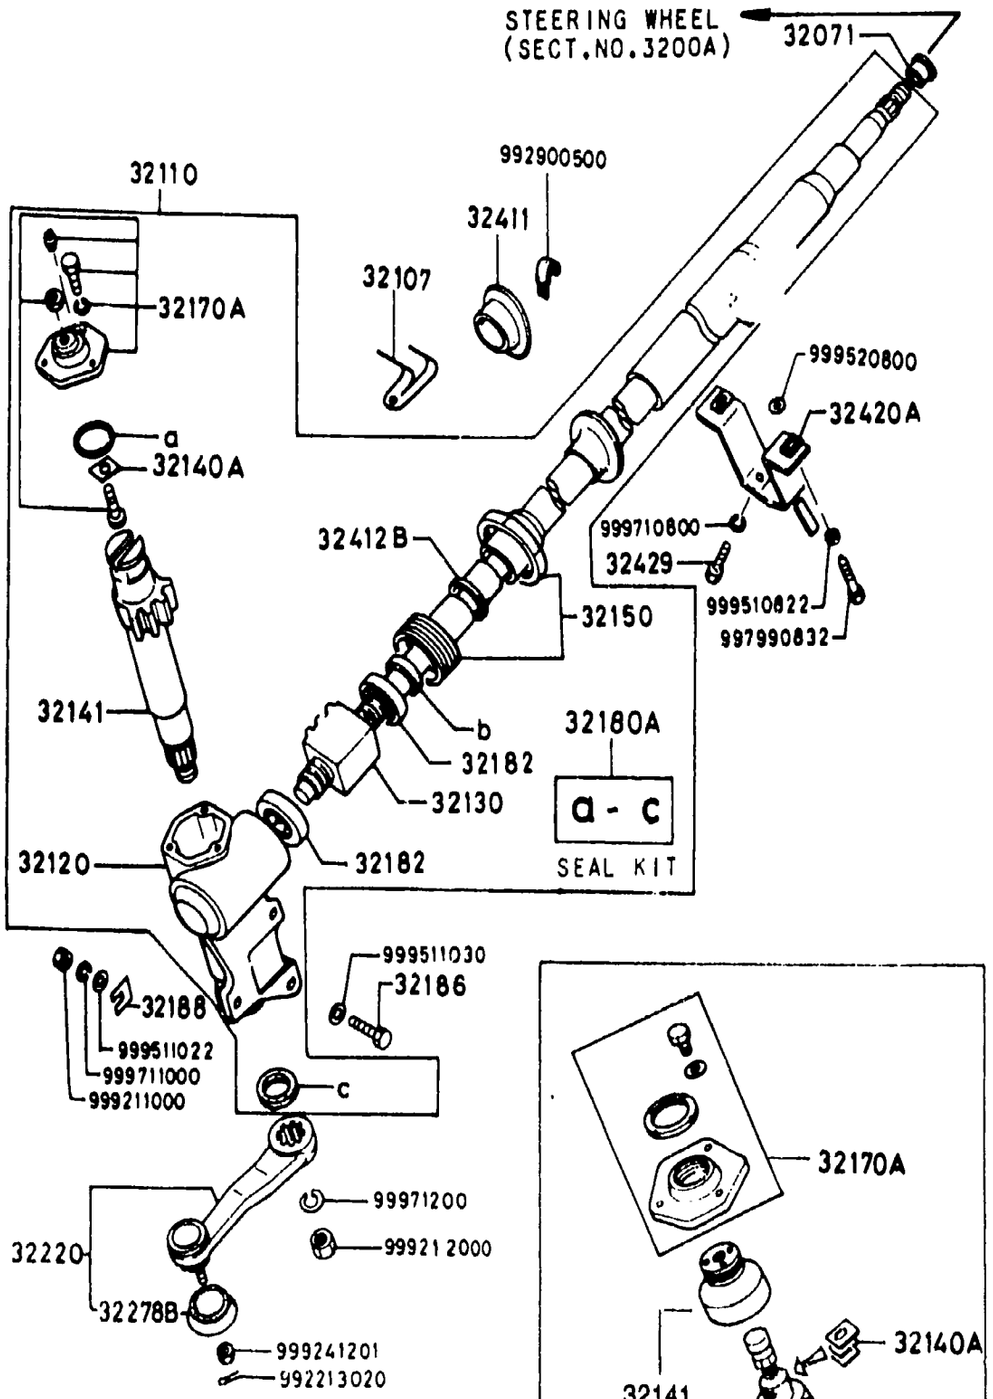

ITEM NO.	D-CODE	DESCRIPTION	PART NO.	QTY	MODEL/DESCRIPTION	REMARKS
	32 071	BUSHING	8182-32-071	1	'81 & '82 MODELS	FB331 ..500001-610823
			8182-32-071A	1	'82 MODEL	FB331 ..610824-652105
			1244-32-071A	1	'82 & '83 MODEL	FB331 ..652106-
	32 107	CLIP	8871-32-862	1		
	32 110	GEAR, STEERING	FA01-32-110	1	'81 MODEL	FB331 ..500001-525551
			FA24-32-110B	1	'81 & '82 MODELS	FB331 ..525552-
	32 120	HOUSING, GEAR	FA01-32-120	1	'81 MODEL	FB331 ..500001-525551
			FA24-32-120	1		FB331 ..525552-
	32 130	BALL NUT, WORM	FA01-32-130	1	'81 MODEL	FB331 ..500001-525551
			FA24-32-130	1		FB331 ..525552-
	32 140A	SHIM KIT, ADJUST	8180-32-140	1		
	32 141	SHAFT, SECTOR	FA01-32-141	1	'81 MODEL	FB331 ..500001-525551
			FA24-32-141A	1		FB331 ..525552-
	32 150	COVER KIT, END	FA01-32-150	1	'81 MODEL	FB331 ..500001-525551
			FA24-32-150	1		FB331 ..525552-
	32 170A	COVER KIT, SIDE	FA01-32-170	1	'81 MODEL	FB331 ..500001-525551
			FA24-32-170	1		FB331 ..525552-
	32 180A	SEAL KIT	8871-32-180	1		
	32 182	BEARING	8871-32-182	2		
	32 186	BOLT, GEAR HOUSING	8173-32-359	3		
	32 188	SHIM, ADJUST	0208-32-188	2		
	32 220	ARM, PITMAN	1757-32-220	1		
	32 278B	SEAL, DUST-PITMAN	8545-32-278	1		
	32 411	COVER, DUST	8871-32-411	1		
	32 412B	BUSHING	8871-32-412	1		
	32 420A	BRACKET, FIXING	FA01-32-420	1	'81 MODEL	FB331 ..500001-525551
			FA24-32-420	1		FB331 ..525552-
	32 429	BOLT	8871-32-429A	4		

3230A-1 STEERING LINKAGE

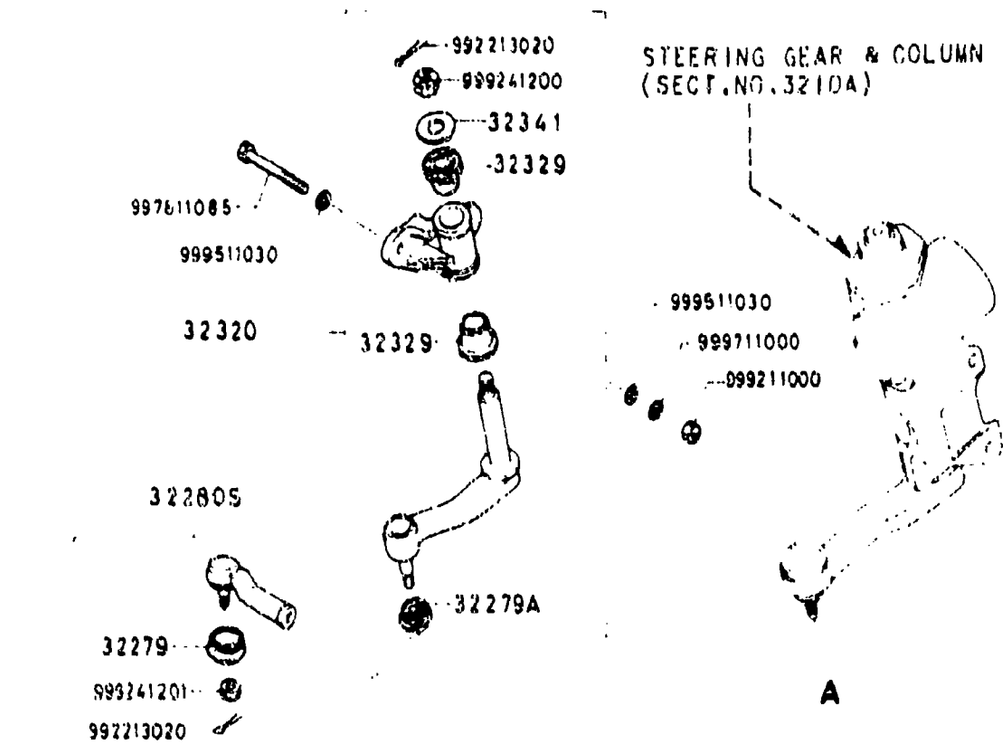

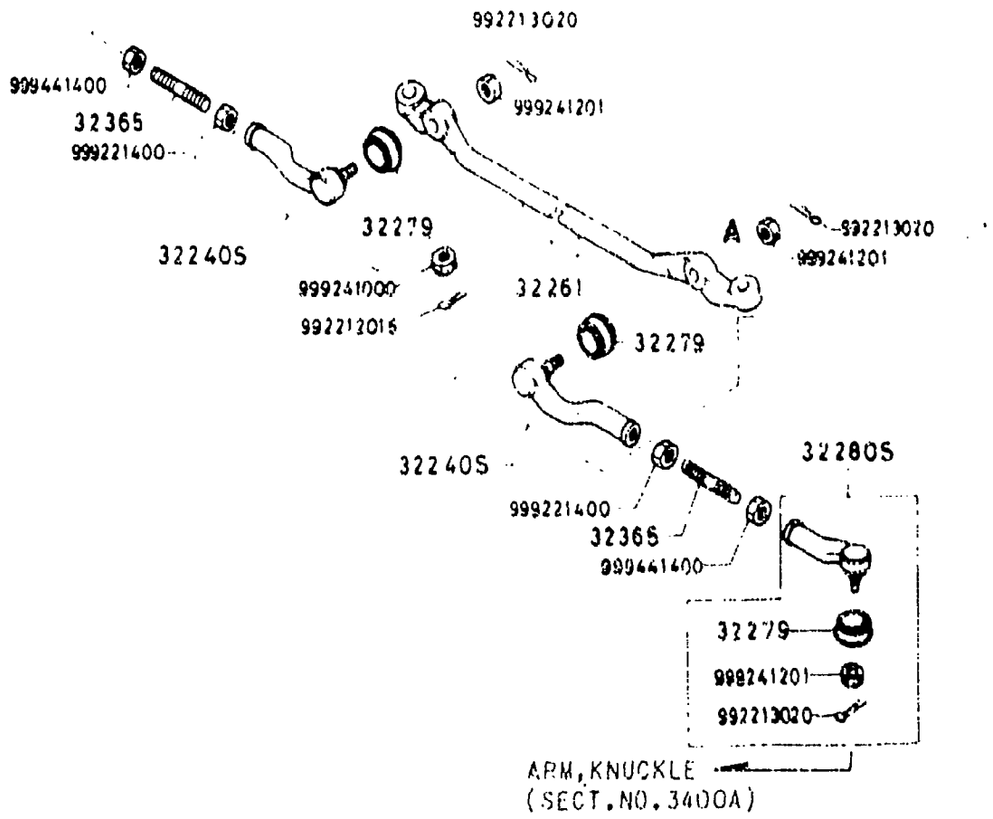


ITEM NO.	D-CODE	DESCRIPTION	PART NO	QTY	MODEL/DESCRIPTION	REMARKS
	32 240S	JOINT SET, BALL	8531-99-322A	2		
	32 261	LINKAGE, CENTER	8871-32-261	1		
	32 279	SEAL, DUST	8021-32-279	4		
	32 279A	SEAL, DUST	8531-32-279	1		
	32 280S	JOINT SET, BALL	3021-99-324	2		
	32 320	ARM, IDLER	8871-32-320A	1		
		REFER TO RECALL CAMPAIGN NO. 17510 FOR INFO REGARDING AFFECTED STATES				
	32 329	BUSHING	1524-32-329B	2		
	32 341	WASHER	0866-32-341	1		
	32 365	ROD, TIE	2113-32-365	2		

SECTION INDEX -- CHASSIS


STARTING LOCATION	SECT NO.	SECTION NAME
1 - C 8	2500A	PROPELLER SHAFT ('81 & '82 MODELS)
1 - D 8	2500AA	PROPELLER SHAFT ('83 MODEL)
1 - E 8	2600A	REAR AXLE
1 - F 8	2610A	REAR BRAKES (DRUM BRAKE) (S & GS)
1 - G 8	2610AA	REAR BRAKES (DISC BRAKE) (GSL)
1 - H 8	2700A	DIFFERENTIAL
1 - J 8	2800A	REAR SUSPENSION
1 - K 8	2810A	STABILIZER
1 - L 8	3200A	STEERING WHEEL
1 - M 8	3210A	STEERING GEAR & COLUMN
1 - N 8	3230A	STEERING LINKAGE
1 - C 9	3300A	FRONT AXLE & BRAKES
1 - D 9	3400A	FRONT SUSPENSION
1 - E 9	3410A	CROSS MEMBER & STABILIZER
1 - F 9	3700A	TIRE & JACK
1 - H 9	3900A	ENGINE & TRANSMISSION MOUNTINGS
1 - I 9	4000A	EXHAUST SYSTEM
1 - K 9	4140A	CLUTCH RELEASE & MASTER CYLINDER
1 - L 9	4160A	ACCELERATOR CONTROLS
1 - M 9	4200A	FUEL TANK
1 - N 9	4300A	CLUTCH & BRAKE
1 - C10	4340A	TANDEM MASTER CYLINDER & VACUUM POWER ASSIST SYSTEM
1 - D10	4360A	BRAKE PIPINGS (REAR DRUM BRAKE) (S, GS)
1 - E10	4360AA	BRAKE PIPINGS (REAR DISC BRAKE) (GSL)
1 - F10	4400A	PARKING BRAKE SYSTEM
1 - G10	4500A	FUEL PIPINGS
1 - H10	4600A	CHANGE CONTROLS (AUTOMATIC)

3300A-1 FRONT AXLE & BRAKES

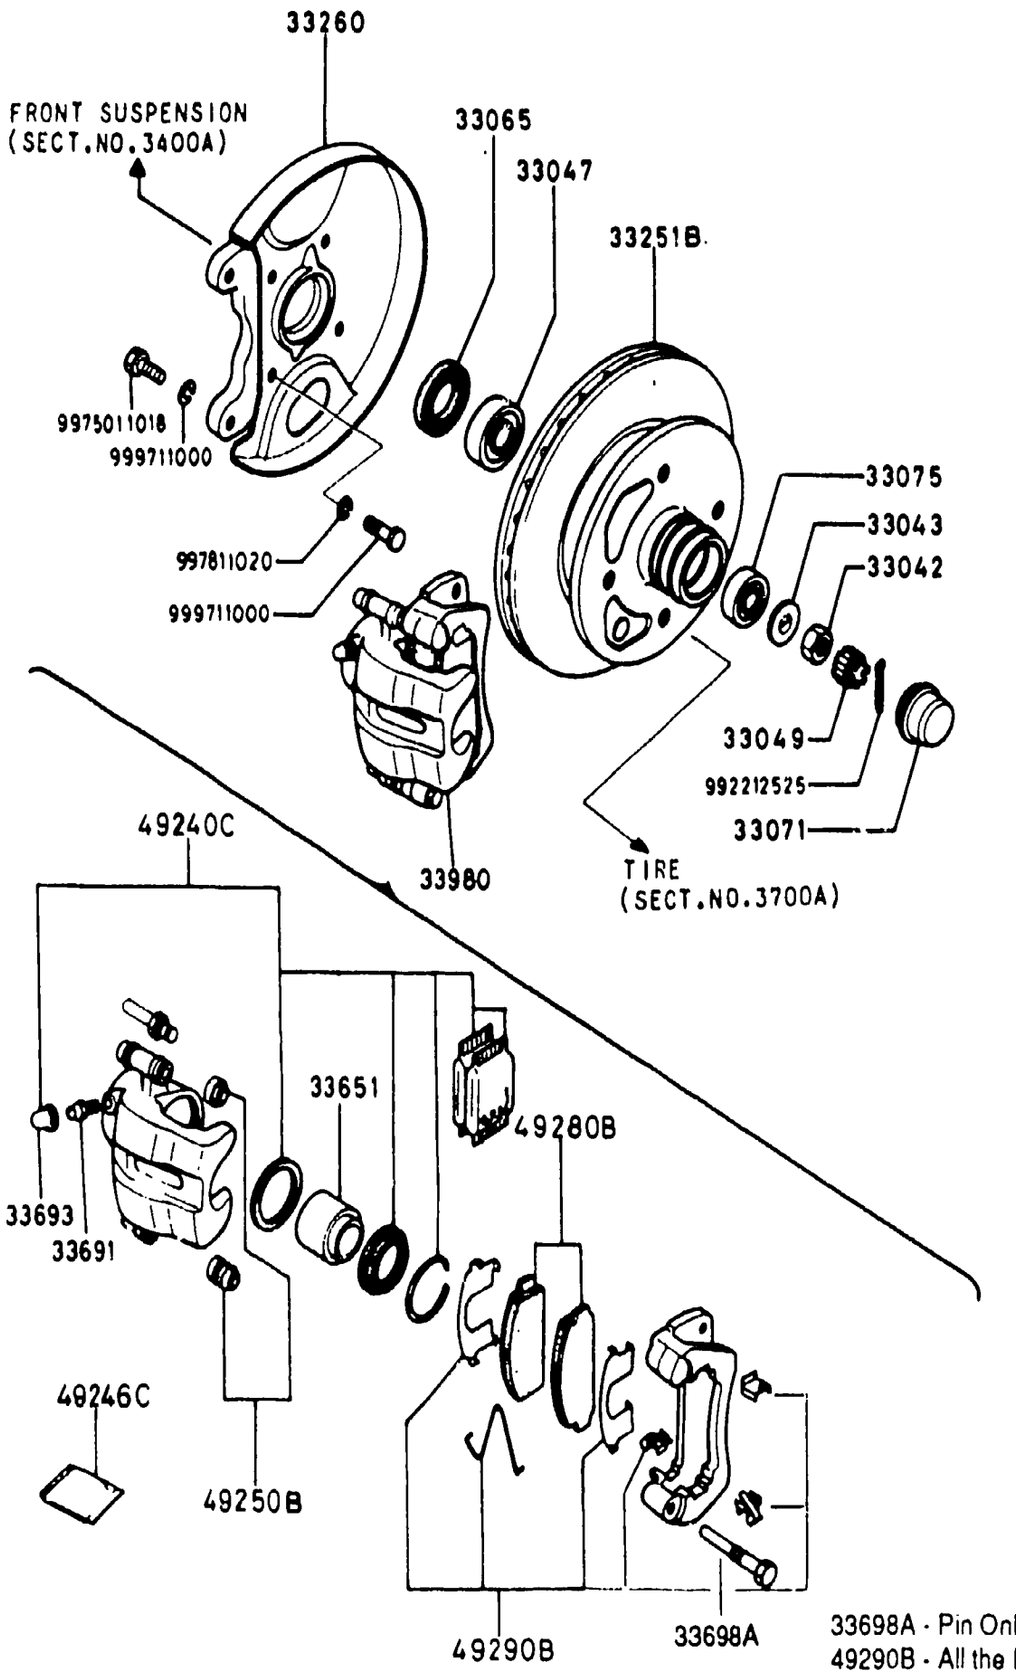


ITEM NO.	D-CODE	DESCRIPTION	PART NO.	QTY	MODEL/DESCRIPTION	REMARKS
	33 042	NUT	0259-33-042	2		
	33 043	WASHER, TAB	8531-33-043	2		
	33 047	BEARING, FRONT WHEEL	8545-33-047	2		
	33 049	COVER, SET	0259-33-049	2		
	33 065	SEAL, OIL	1312-33-065	2		
	33 071	CAP, HUB	0419-33-071	2		
	33 075	BEARING, FRONT WHEEL	B002-33-075	2		
	33 251B	PLATE, HUB/DISK	8871-33-251A	2		
	33 260	ADAPTER (R), MOUNTING	8871-33-260A	1		
		ADAPTER (L), MOUNTING	8871-33-270A	1		
	33 651	PISTON	8341-33-651	2		
		<A>	8341-33-651A	2		
	33 691	SCREW, BLEEDER	0233-33-691	2		
	33 693	CAP, RUBBER	0259-33-693	2		
	33 698A	PIN	8341-33-699	2		
	33 980	BRAKE (R), CALIPER	FA57-33-980	1		
		BRAKE (L), CALIPER	FA57-33-990	1		
	49 240C	SEAL KIT	8341-49-240	1		
	49 246C	GREASE	8341-49-270	1		
	49 250B	BOOT KIT	8341-49-250	1		
	49 280B	PAD, SUB SET	8871-49-280A	1		
	49 290B	ATTACHMENT-PAD	8341-49-290A	1		

3400A-1 FRONT SUSPENSION

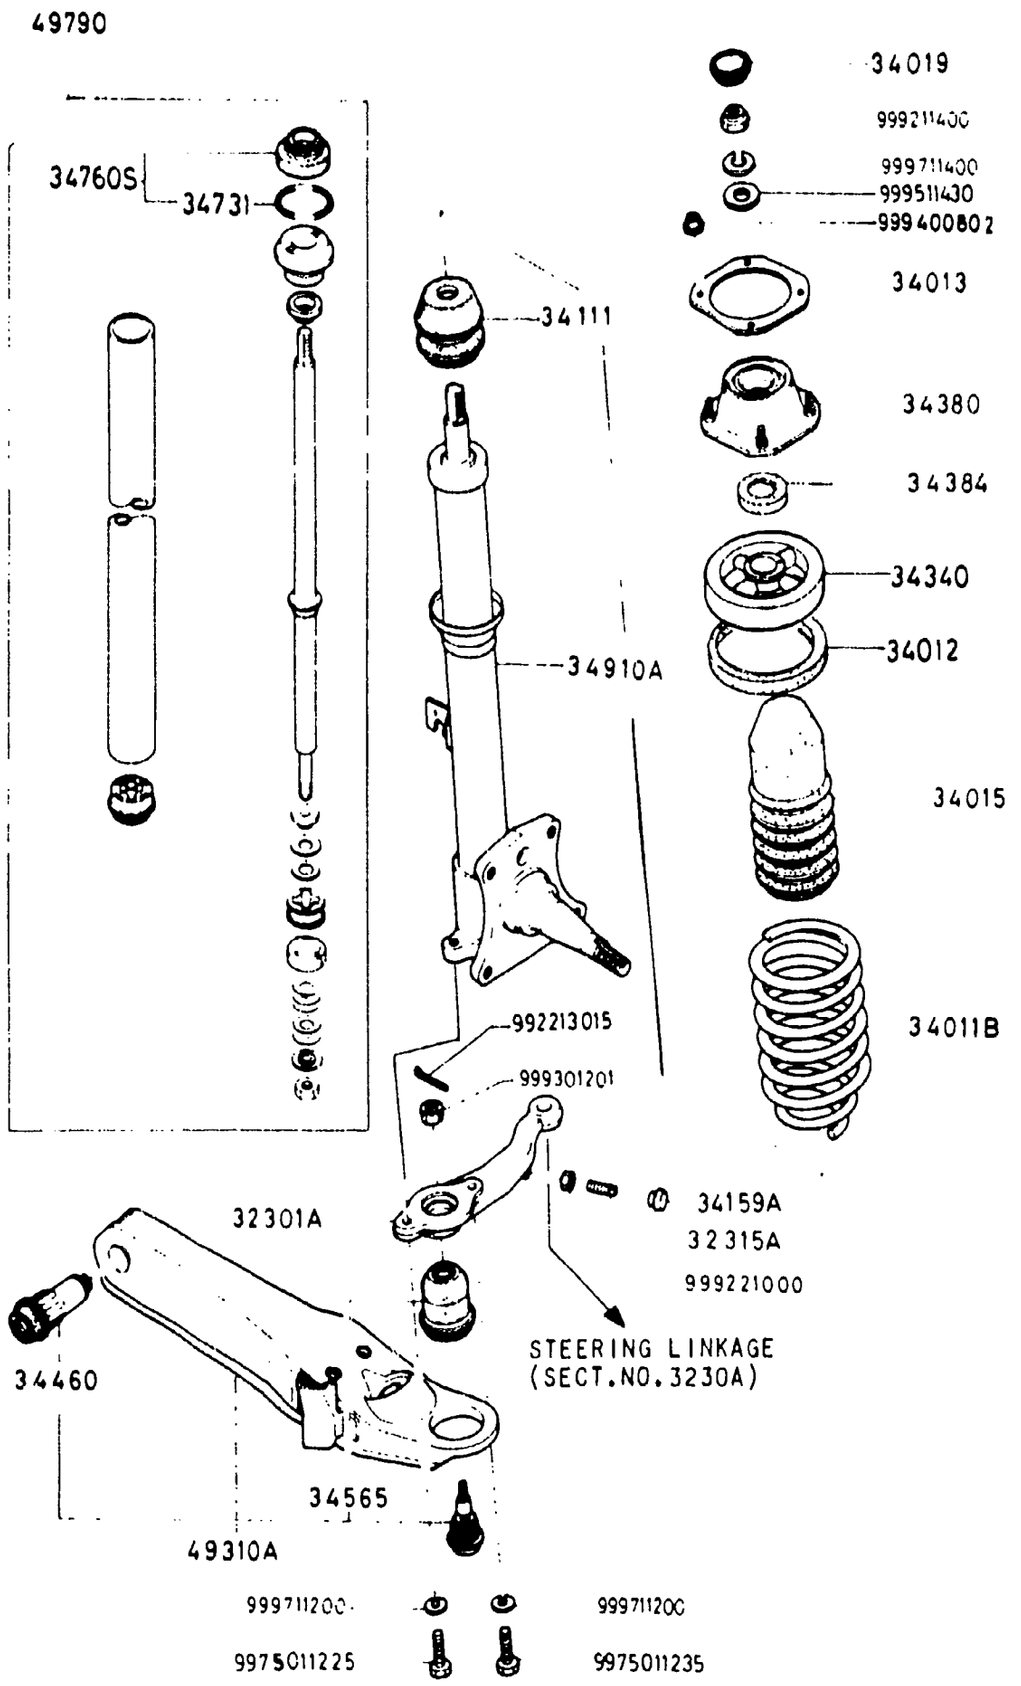


ITEM NO.	D-CODE	DESCRIPTION	PART NO.	QTY	MODEL/DESCRIPTION	REMARKS
	32 301A	ARM (R), KNUCKLE	8871-32-301C	1		
		ARM (L), KNUCKLE	8871-32-311C	1		
	32 315A	BOLT, STOPPER	0603-32-315	2		
	34 011B	SPRING (R), COIL	F001-34-011A	1		
		SPRING (L), COIL	FA01-34-011A	1		
	34 012	SHEET, RUBBER	FA01-34-012	2		
	34 013	PLATE, ADJUST	1011-34-013	2		
	34 015	COVER, DUST	FA01-34-015	2		
	34 019	CAP, DAMPER	1011-34-019	2		
	34 111	BUMPER, BOUND	8871-34-111A	2		
	34 159A	STOPPER, STEERING	1243-34-159	2		
	34 340	SHEET, SPRING-UPPER	FA01-34-340A	2		
	34 380	BLOCK, MOUNTING	FA01-34-390A	2		
	34 384	SPACER	FA01-34-384	2		
	34 460	BUSHING, ARM	8173-34-460B	2		
	34 565	SEAL, DUST	8531-34-565	2		
	34 731	O-RING	8171-34-731	2		
	34 760S	SF ı, DAMPER	8171-34-970	2		
	34 910A	D .IPER	FA01-34-910B	2		
	49 310A	ARM & BALL JOINT (R)	8871-49-310	1		
		ARM & BALL JOINT (L)	8871-49-320	1		
	49 790	DAMPER, SUB SET-FRONT	FA01-49-790	2		

3410A-1 CROSS MEMBER & STABILIZER

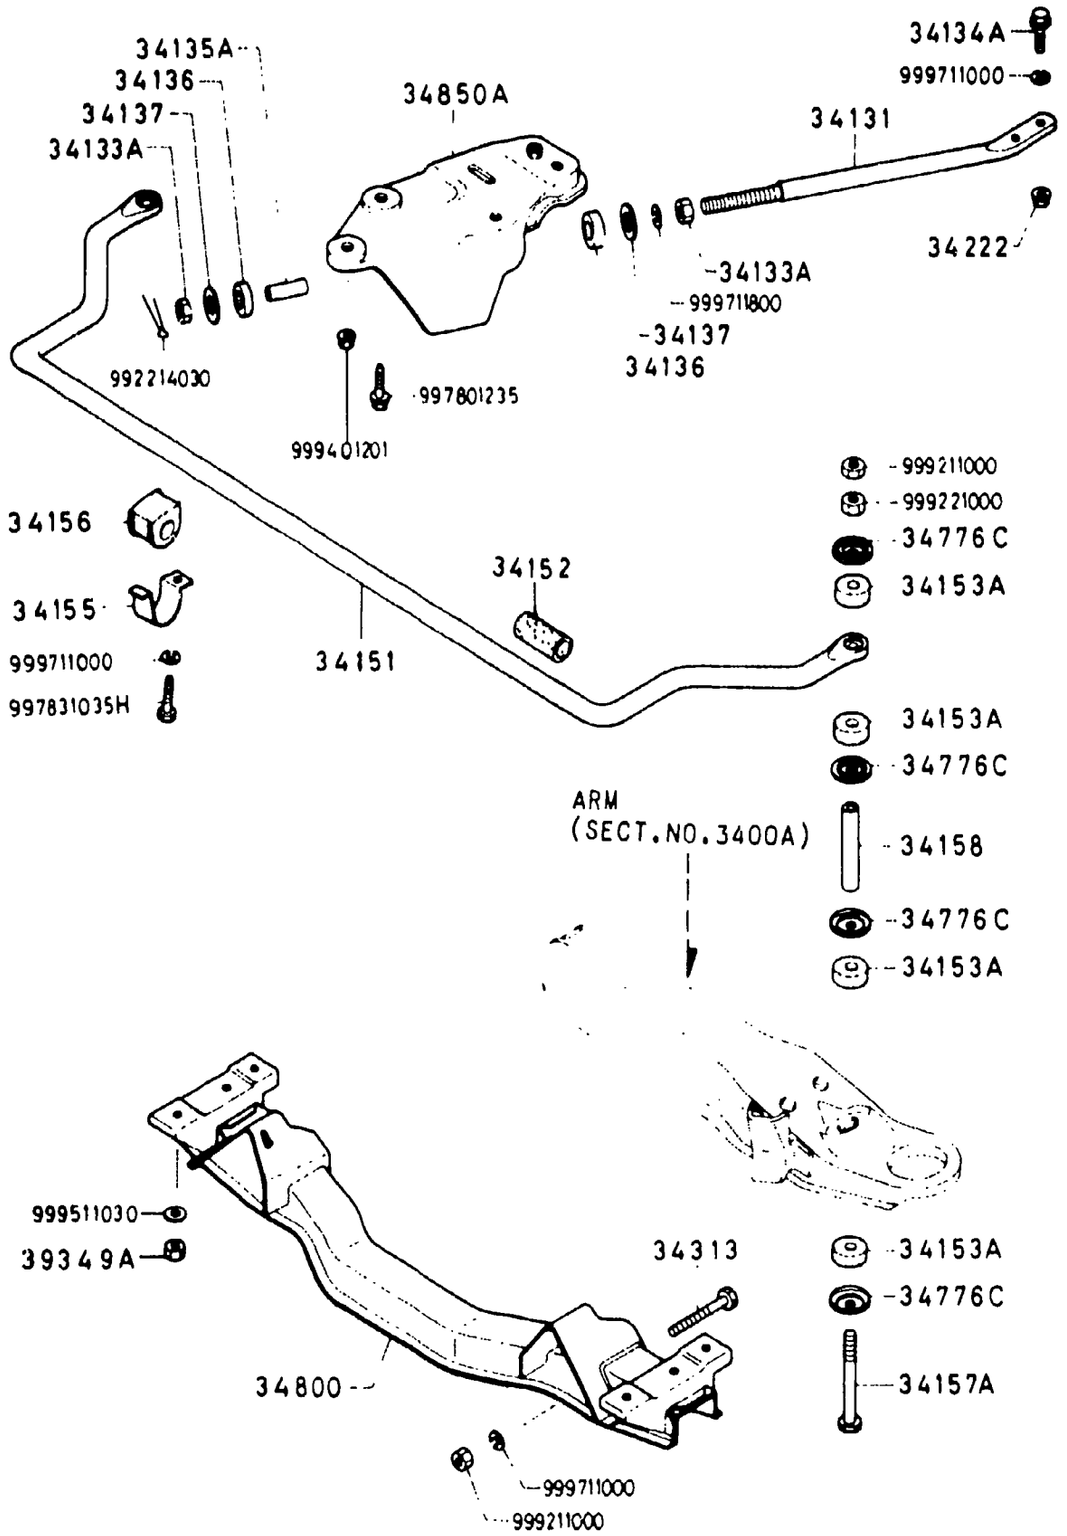


ITEM NO.	D-CODE	DESCRIPTION	PART NO.	QTY	MODEL/DESCRIPTION	REMARKS
	34 131	ROD, TENSION	8871-34-131A	2		
	34 133A	NUT, TENSION ROD	8871-34-133A	4		
	34 134A	BOLT, TENSION ROD	8871-34-134A	4		
	34 135A	SPACER	8871-34-135A	2		
	34 136	CUSHION	8871-34-136B	4		
	34 137	RETAINER	8871-34-137A	4		
	34 151	STABILIZER	8871-34-151	1		
	34 152	PROTECTOR	8871-34-152	2	'81 & '82 MODELS	
	34 153A	BUSHING, STABILIZER	1243-34-153	8		
	34 155	PLATE, STABILIZER	FA01-34-155	2		
	34 156	BUSHING	8871-34-156A	2		
	34 157A	BOLT, STABILIZER	0603-34-157A	2		
	34 158	SPACER, STABILIZER	0603-34-158	2		
	34 222	NUT	8871-34-222	4		
	34 313	BOLT, ARM	B001-28-114	2		
	34 776C	RETAINER	0223-28-776	8		
	34 800	MEMBER, CROSS	8871-34-800C	1		
	34 850A	BRACKET (R), TENSION ROD	8871-34-850D	1		
		BRACKET (L), TENSION ROD	8871-34-860D	1		
	39 349A	NUT, CROSS MEMBER	1391-39-349	4		

3700A-1 TIRE & JACK

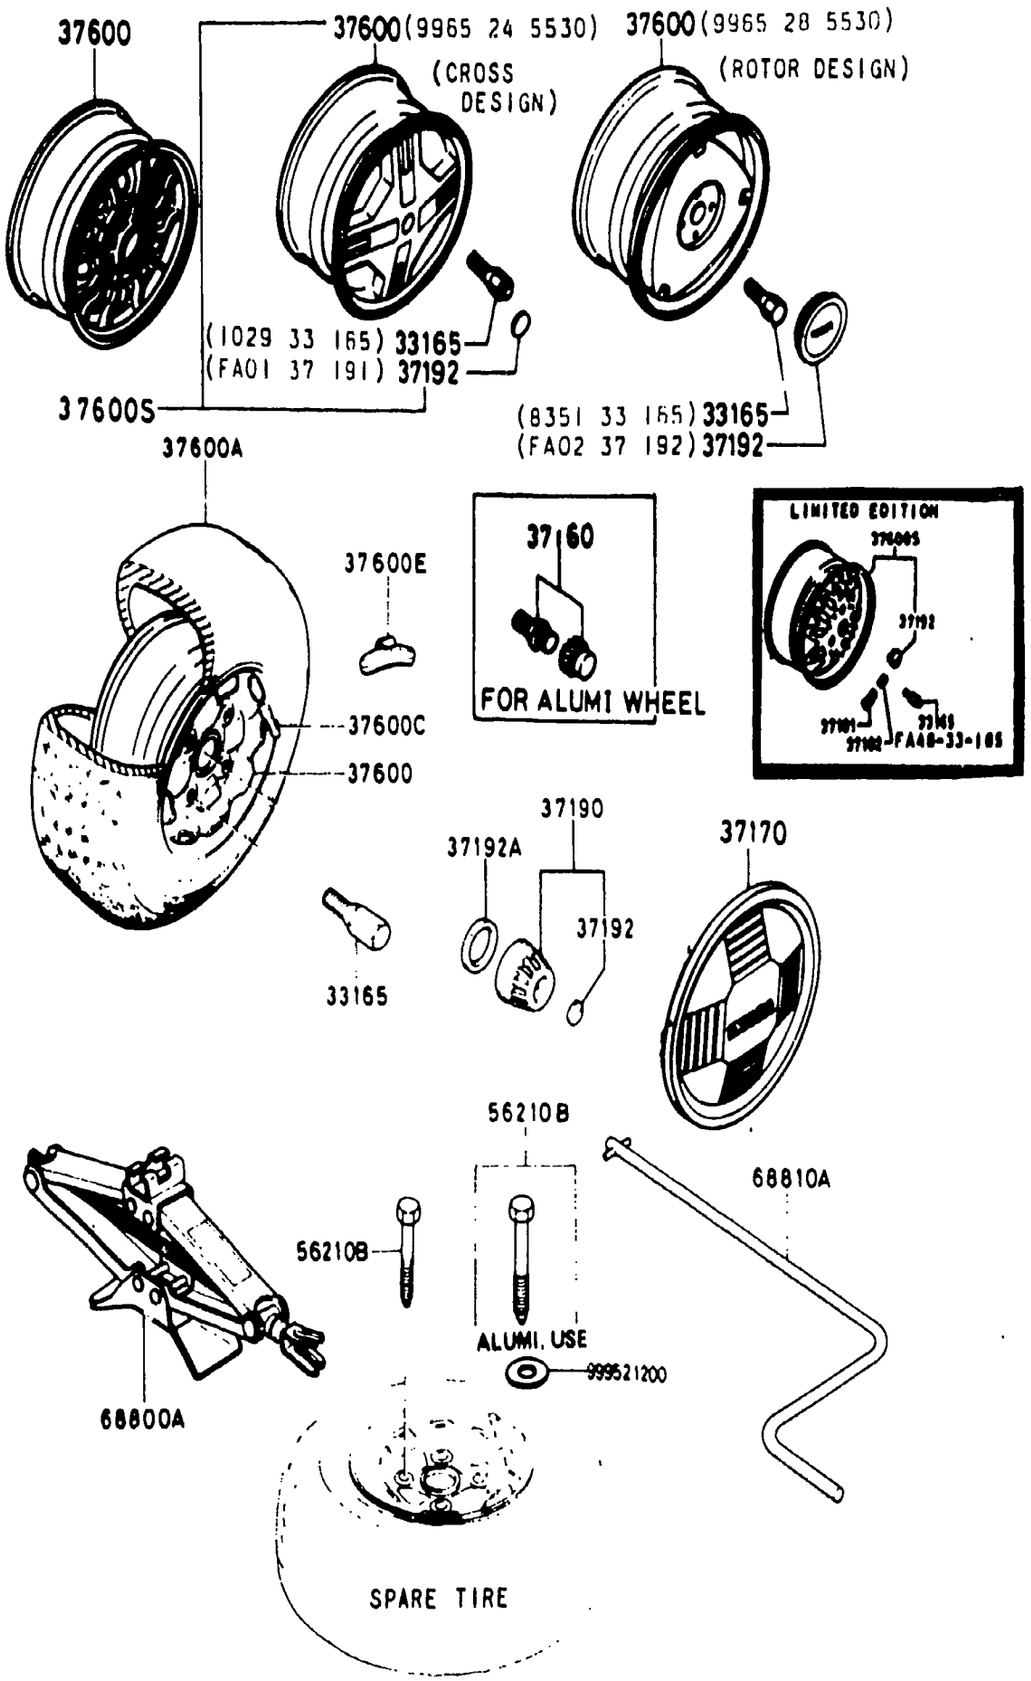


ITEM NO.	D-CODE	DESCRIPTION	PART NO.	QTY	MODEL/DESCRIPTION	REMARKS
	33 165	BOLT, WHEEL SET	1029-33-165	16	(PLATED)	
			8531-33-165	16	(PAINTED)	
			FA46-33-165P-01	16	'83 MODEL LIMITED EDITION GS	
	37 160	BOLT & KEY KIT, HUB	F001-86-260	1	(FOR ALUM. WHEEL) GS, GSL MODELS	
	37 170	CAP, WHEEL	G002-37-190	4	(FULL CAP) S MODEL	
	37 190	CAP, CENTER	8871-37-190	4	(FOR STD. WHEEL)	
	37 192	EMBLEM	FA01-37-191	4	(FOR ALUM. W/ CROSS DESIGN) '81 GSL '82 & '83 GS, GSL	
			8871-37-192	4	(FOR CENTER CAP)	
			GB23-37-190	4	'83 MODEL LIMITED EDITION GS	
	37 192A	RUBBER, SET	8531-37-193C	4	(FOR CENTER CAP)	
	37 600	WHEEL, DISC	9965-04-4050	1	(4-TX15)(MINI SPARE WHEEL)	
		REFER TO PARTS BULL. NO. T-2-1 FOR MORE INFO.				
			FA01-89-376	4	(ALUM. WHEEL)(CROSS DESIGN) '81 GSL '82 & '83 GS, GSL	
			9965-38-503	4	(5JX13WDC DESIGN)	
		SUNBEAM SILVER METALLIC	K3			
			FA46-89-376	4	(ALUM WHEEL) '83 MODEL LIMITED EDITION GS	
	37 600A	TIRE	0000-78-559	1	(FOR MINI SPARE WHEEL)	
		REFER TO ACC. BULL. NO. XE-1 FOR MORE INFO.				
			0000-78-648	4	(185/70HR-13, BLACK WALL)	
			0000-78-6485	4	(185/70HR-13, WHITE WALL)	
	37 600C	VALVE, AIR	9963-60-4130	5	(TR413)	
	37 600E	WEIGHT, BALANCING	9965-53-0010	5	(10G)	
			9965-53-0015	5	(15G)	
			9965-53-0020	5	(20G)	
			9965-53-0025	5	(25G)	
			9965-53-0030	5	(30G)	
			9965-53-0035	5	(35G)	
			9965-53-0040	5	(40G)	
			9965-53-0045	5	(45G)	

3700A-2 TIRE & JACK

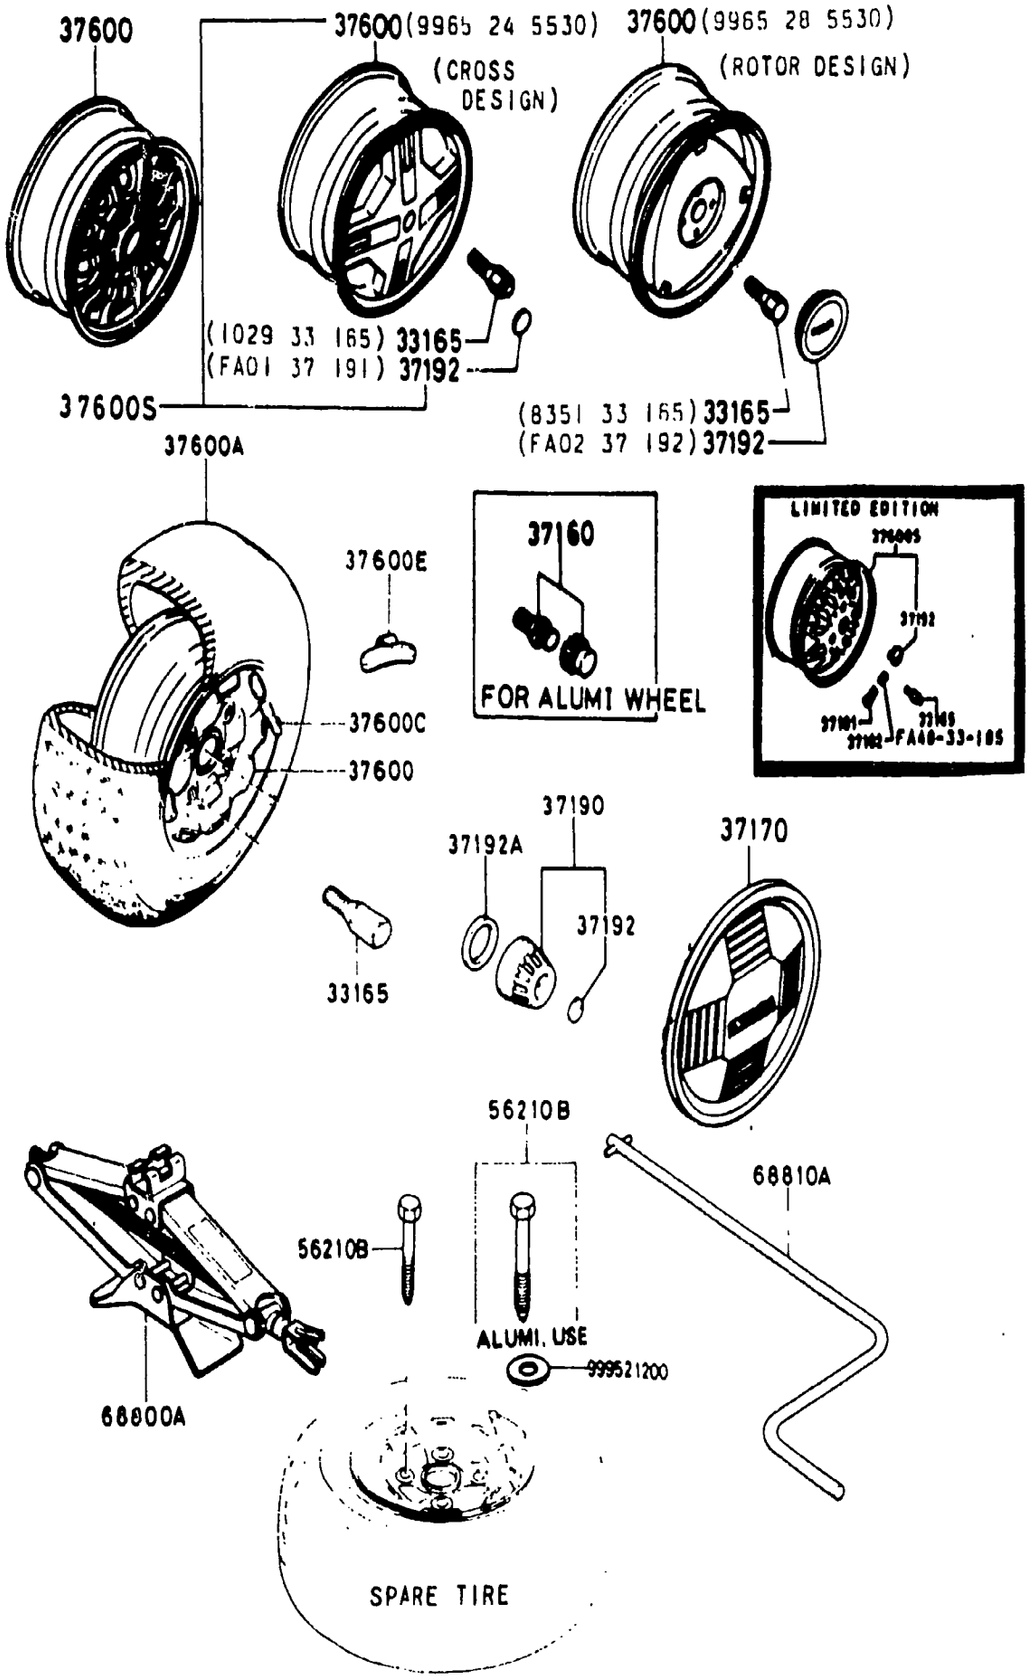


ITEM NO.	D-CODE	DESCRIPTION	PART NO.	QTY	MODEL/DESCRIPTION	REMARKS
	37 600E (CONT'D)		9965-53-0050	5	(50G)	
			9965-53-0060	5	(60G)	
			9965-59-0010	5	(10G FOR ALUM. WHEEL) '81 GSL '82 &'83 GS, GSL	
			9965-59-0015	5	(15G FOR ALUM. WHEEL) '81 GSL '82 & '83 GS, GSL	
			9965-59-0020	5	(20G FOR ALUM. WHEEL) '81 GSL '82 & '83 GS, GSL	
			9965-59-0025	5	(25G FPR ALUM. WHEEL) '81 GSL '82 & '83 GS, GSL	
			9965-59-0030	5	(30G FOR ALUM. WHEEL) '81 GSL '82 & '83 GS, GSL	
			9965-59-0035	5	(35G FOR ALUM. WHEEL) '81 GSL '82 & '83 GS, GSL	
			9965-59-0040	5	(40G FOR ALUM. WHEEL) '81 GSL '82 & '83 GS, GSL	
			9965-59-0045	5	(45G FOR ALUM. WHEEL) '81 GSL '82 & '83 GS, GSL	
			9965-59-0050	5	(50G FOR ALUM. WHEEL) '81 GSL '82 & '83 GS, GSL	
			9965-59-0060	5	(60G FOR ALUM. WHEEL) '81 GSL '82 & '83 GS, GSL	
	37 600S	WHEEL SET, DISC-ALUM.	FA01-89-376	1	(FOR ALUM. WHEEL) '81 GSL '82 & '83 GS, GSL	
	56 210B	CLAMP, SPARE TIRE	8531-56-961	1		
	68 800A	JACK	8871-37-790D	1		
	68 810A	HANDLE, JACK	0305-68-810A	1		

3900A-1 ENGINE & TRANSMISSION MOUNTINGS

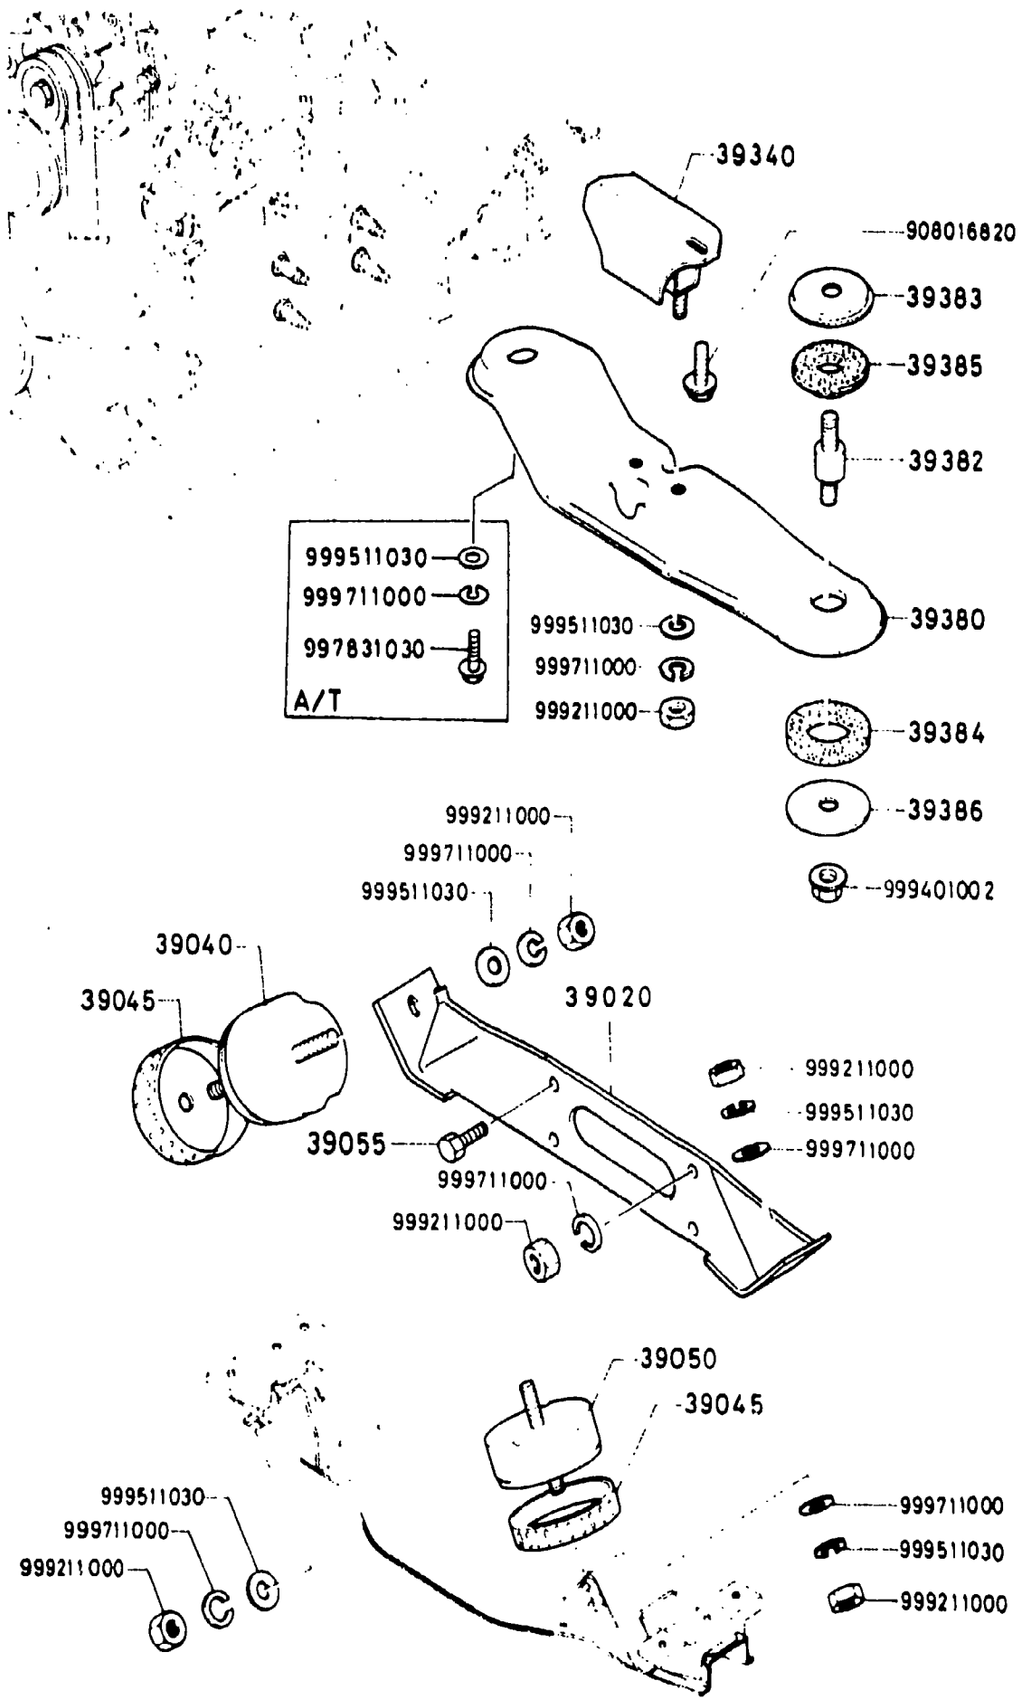

ITEM NO.	D-CODE	DESCRIPTION	PART NO.	QTY	MODEL/DESCRIPTION	REMARKS
	39 020	BRACKET, ENGINE MOUNTING	8871-39-021B	1		
	39 040	RUBBER (R), ENGINE MOUNTING	1668-39-040D	1		
	39 045	CASING, STOPPER	1668-39-045B	2		
	39 050	RUBBER (L), ENGINE MOUNTING	8545-39-040	1		
	39 055	BOLT	8788-39-055	4		
	39 340	RUBBER, TRANSMISSION MOUNTING	1011-39-340A	1		
	39 380	MEMBER, TRANSMISSION MOUNTING	1480-39-380A	1	M/T	
			1481-39-380B	1	A/T	
	39 382	STUD	1013-39-382A	2	'81 & '82 MODELS	FB331 ..500001-626754
			F001-39-372	2	'82 & '83 MODELS	FB331 ..626755-
	39 383	WASHER	0884-39-383A	2	M/T	
	39 384	INSULATOR, LOWER	0884-39-384	2	'81 & '82 MODELS	FB331 ..500001-626754
			8599-39-384A	2	'82 & '83 MODELS	FB331 ..626755-
	39 385	INSULATOR, UPPER	0884-39-385A	2	'81 & '82 MODELS	FB331 ..500001-626754
			F001-39-375	2	'82 & '83 MODELS	FB331 ..626755-
	39 386	WASHER	0884-39-386	2	'82 & '83 MODELS M/T	FB331 ..626755-


4000A-1 EXHAUST SYSTEM

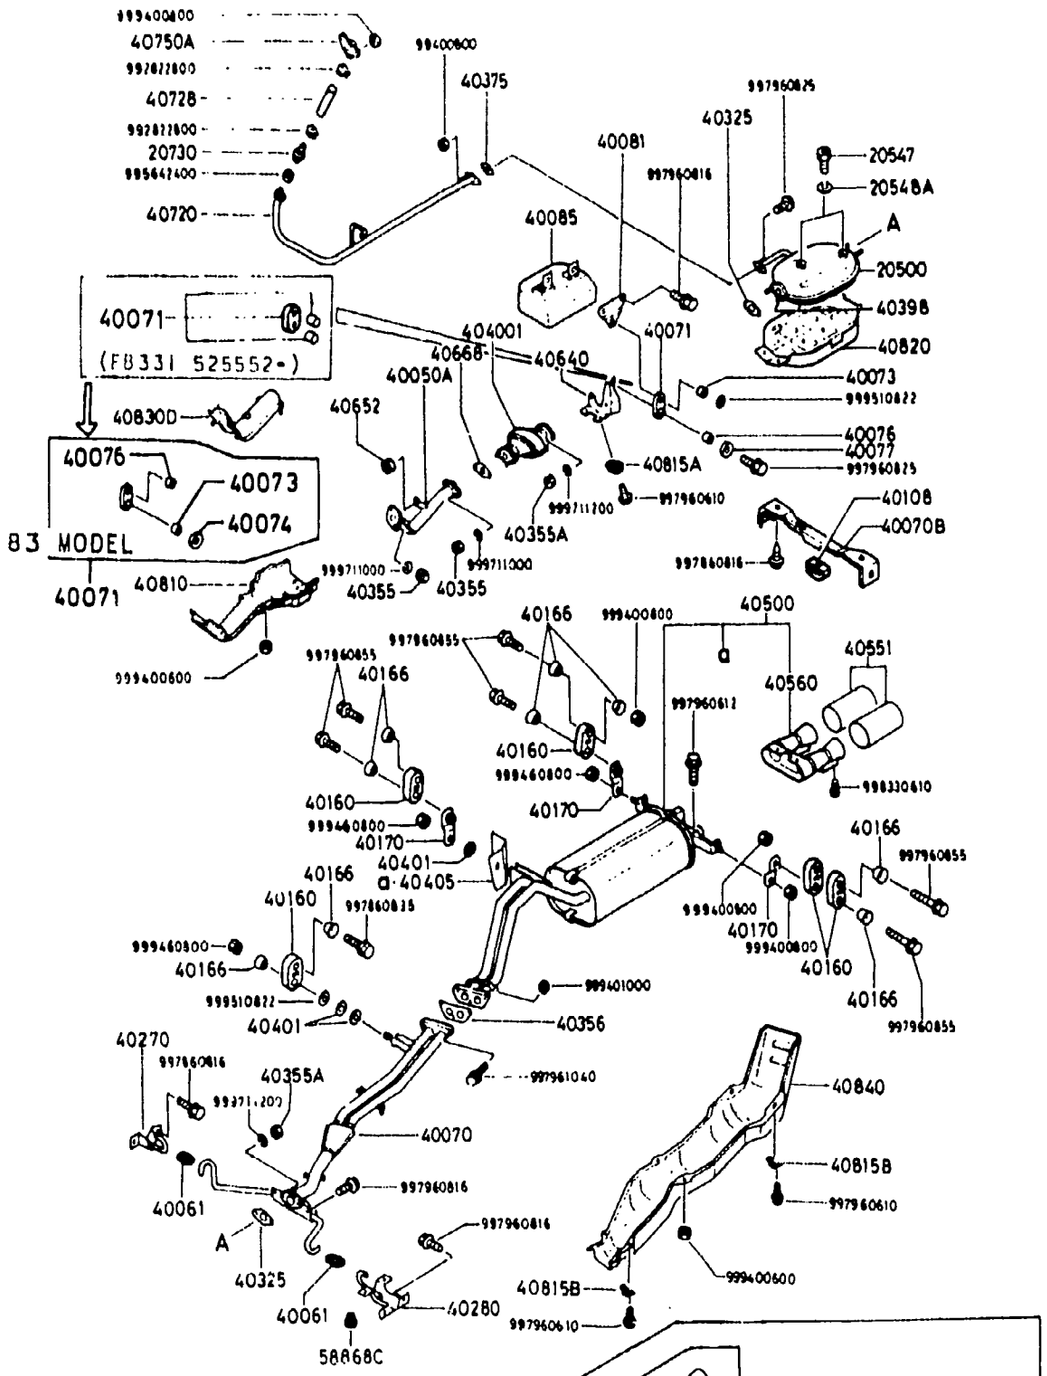

All sound modifying devices listed herein are certified to comply with the California Noise Regulation and Florida Noise Regulation when installed on Vehicles.

ITEM NO.	D-CODE	DESCRIPTION	PART NO.	QTY	MODEL/DESCRIPTION	REMARKS
	20 500	CONVERTER, CATALYTIC	N231-40-300	1	'81 & '82 MODELS	
				1	'83 MODEL	
	20 547	PLUG	1480-40-318A	2		
	20 548A	WASHER, LOCK	8021-20-548	2		
	20 730	VALVE, CHECK	N201-20-730	1	'81 & '82 MODELS	
	40 050A	PIPE, EXHAUST-FRONT	N201-40-310A	1		
	40 061	HANGER, SILENCER	1114-40-061	2		
	40 070	PIPE	1480-40-200	1	'81 & '82 MODELS	
			N231-40-200	1	'83 MODEL	
	40 070B	BRACKET	8871-40-010	1		
	40 071	PLATE	1480-40-070	1	'81 & '82 MODELS	
			N225-40-070B	1	'83 MODEL	
	40 073	SPACER	1480-40-073	1		
	40 074	SPACER	N225-40-074	1	'83 MODEL	
	40 076	SPACER	1480-40-076	1	'81 MODEL	FB331 ..500001-525551
			N225-40-076B	1	'83 MODEL	
	40 077	WASHER, PLAIN	1480-40-077	1		
	40 081	BRACKET	1480-40-080B	1		
	40 085	INSULATOR	1480-40-085A	1		
	40 108	RUBBER, STOP	1114-40-108B	1		
	40 160	HANGER, SILENCER	1114-40-160	5		
	40 166	WASHER	0820-40-166	9		
	40 170	PLATE	8871-40-180	3		
	40 270	HOOK	1480-40-270	1		
	40 280	HOOK	1480-40-280A	1		
	40 325	GASKET	1480-40-325	2		
	40 355	NUT, FLANGE	8134-40-355	4		
	40 355A	NUT	8118-40-355	4		
	40 356	GASKET	1480-40-356	1	'81 & '82 MODELS	
			8182-40-356	1	'83 MODEL	
	40 375	GASKET	1480-40-375	1		
	40 398	STUD	N326-40-353	4		
	40 4001	CONVERTER, MONOLITH	N201-40-400	1	'81 & '82 MODELS	
			N231-40-400	1	'83 MODEL	
	40 401	INSULATOR	8871-40-401	3		
	40 405	INSULATOR	8871-40-405A	1		
	40 500	SILENCER, MAIN	1480-40-500	1	'81 & '82 MODELS	
			N231-40-500	1	'83 MODEL	
	40 551	COVER	8871-40-551	2		
	40 560	FUNNEL	8871-40-560	1		


4000A-2 EXHAUST SYSTEM

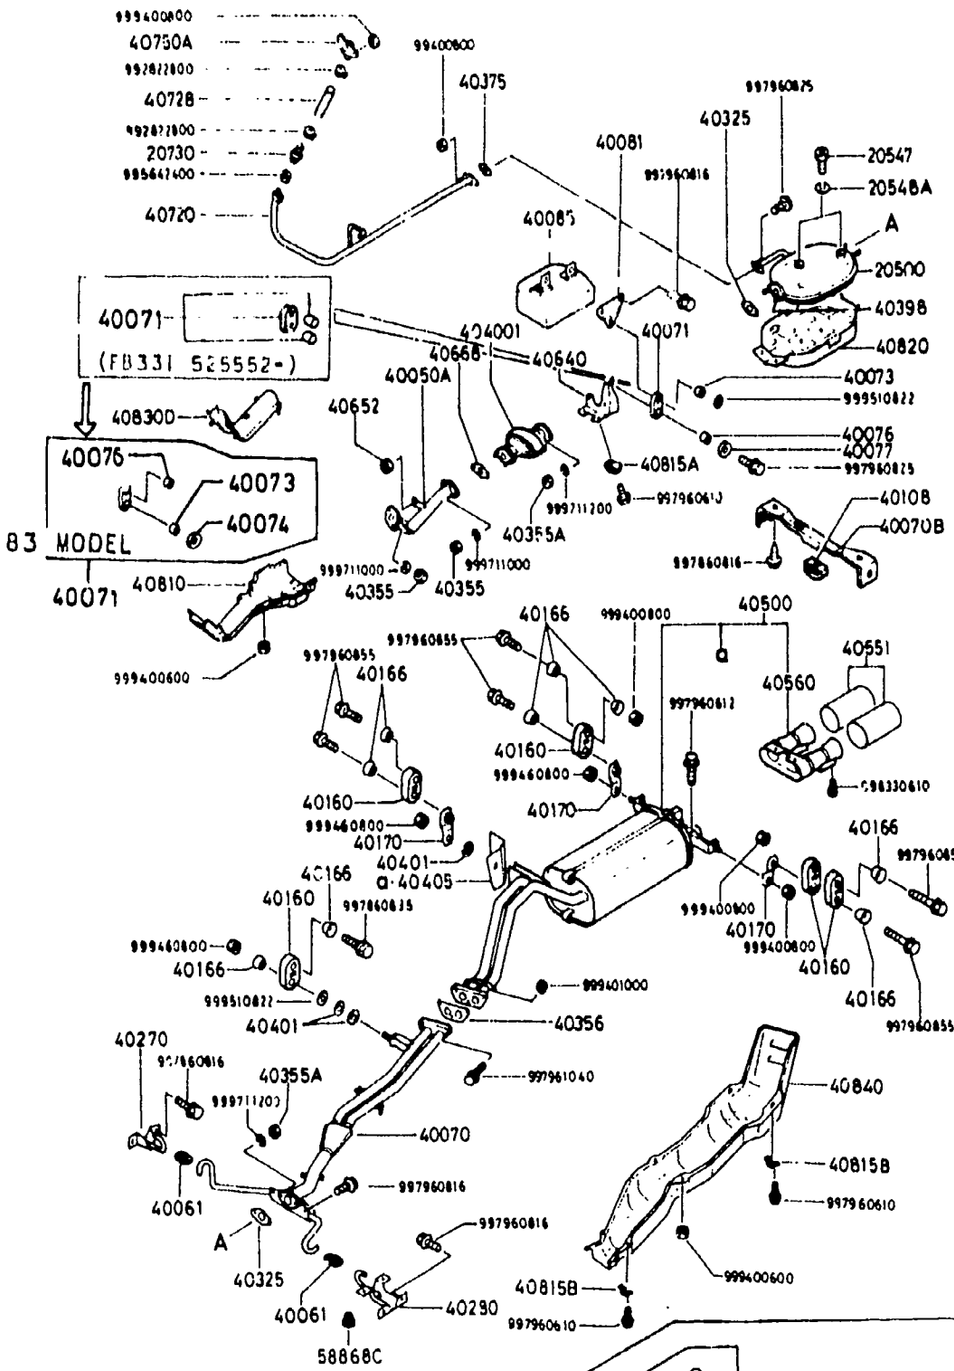

All sound modifying devices listed herein are certified to comply with the California Noise Regulation and Florida Noise Regulation when installed on Vehicles.


ITEM NO.	D-CODE	DESCRIPTION	PART NO.	QTY	MODEL/DESCRIPTION	REMARKS
	40 640	BRACKET	1480-40-640A	1		
	40 652	GUIDE	1480-40-652	1	'81 MODEL	
	40 668	GASKET	1480-13-621	1		
	40 720	PIPE, AIR	N201-40-740A	1		
	40 728	HOSE, AIR	1480-40-728	1		
	40 750A	PIPE, PRE-AIR	1480-40-750	1		
	40 810	PROTECTOR NO. 1	N201-40-811	1	'81 & '82 MODELS	
			N231-40-810	1	'83 MODEL	
	40 815A	WASHER	1480-40-815	2		
	40 815B	GUARD, PROTECTOR	8545-40-815	4		
	40 820	PROTECTOR NO. 2	1480-40-820	1		
	40 830D	PROTECTOR, UPPER	N201-40-830	1		
	40 840	PROTECTOR NO. 4	1480-40-841A	1	'81 & '82 MODELS	
			N229-40-841	1	'83 MODEL	
	58 868C	PLUG, SERVICE COVER	0559-58-868	1		
		REFER TO RECALL CAMPAIGN NOS. 23702/2370C FOR EMISSION CONTROL INFO.				

4140A-1 CLUTCH RELEASE & MASTER CYLINDER

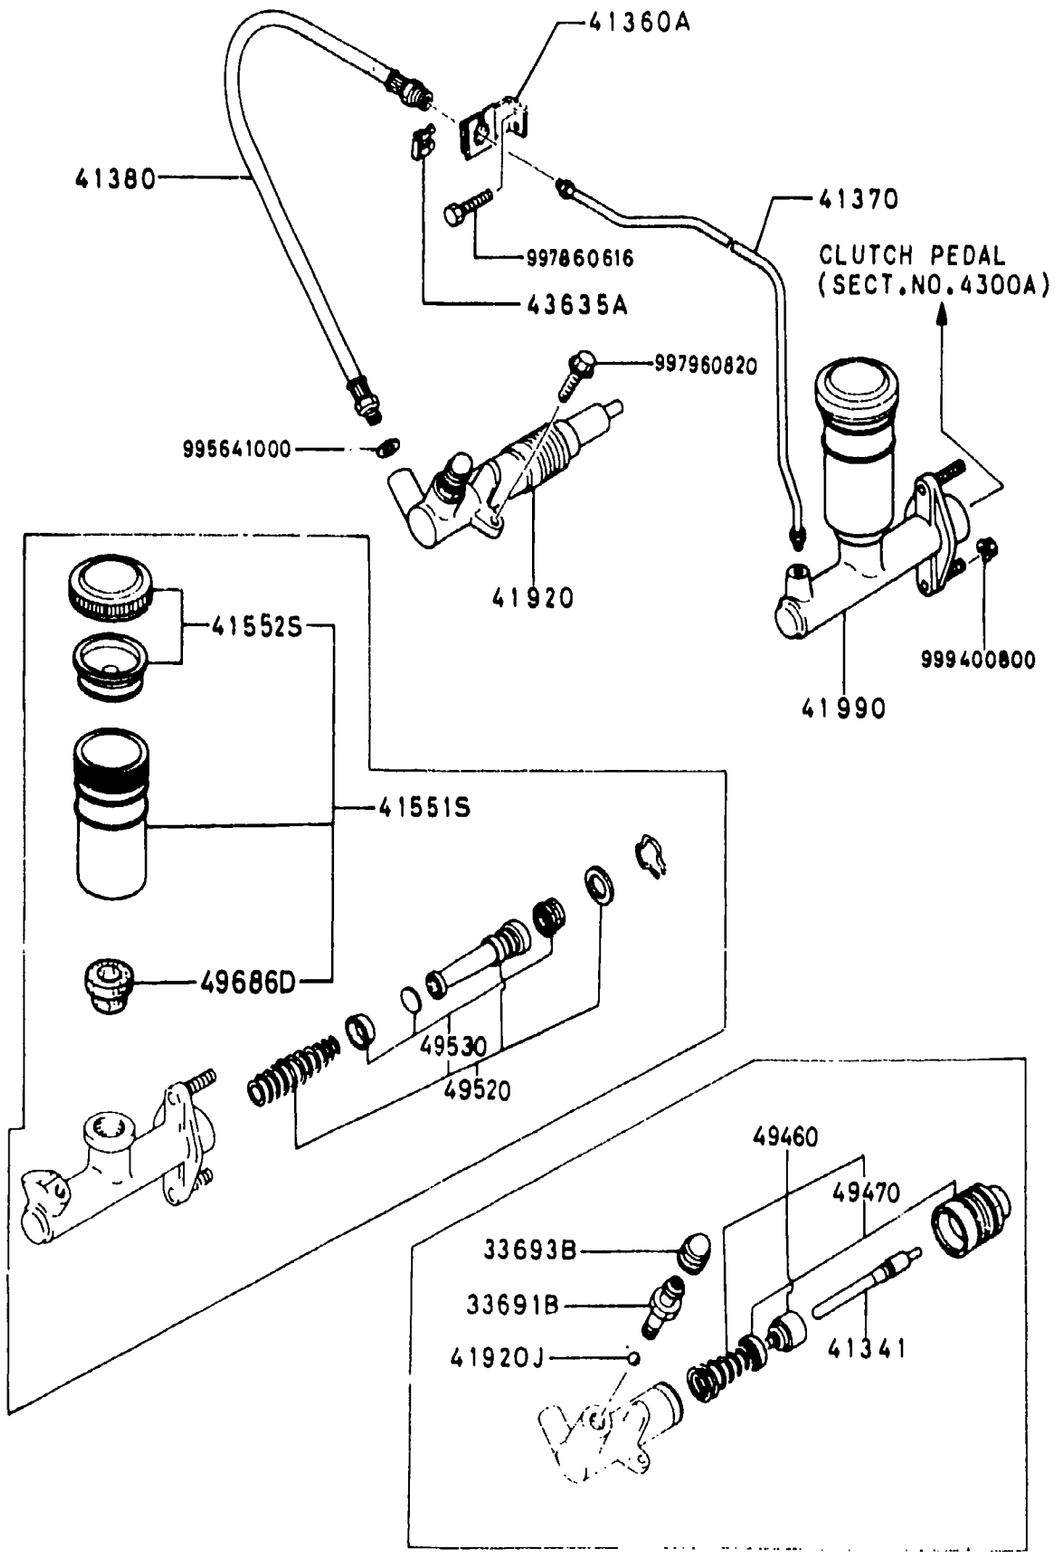


ITEM NO.	D-CODE	DESCRIPTION	PART NO.	QTY	MODEL/DESCRIPTION	REMARKS
	33 691B	SCREW, BLEEDER	0259-33-691	1		
	33 693B	CAP, BLEEDER	0259-33-693	1		
	41 341	ROD	H005-41-341	1		
	41 360A	HOLDER	8871-41-370	1		
	41 370	PIPE, CLUTCH	FA01-45-510	1		
	41 380	HOSE, FLEXIBLE	G011-41-380	1		
	41 551S	TANK SET, RESERVE	GA02-49-570	1		
		<A>	GA02-49-570B	1		
	41 552S	CAP SET, RESERVE TANK	GA02-49-580B	1		
	41 920	CYLINDER, CLUTCH RELEASE	FA01-41-920	1	'81 & '82 MODELS	
			FA42-41-920A	1	'83 MODEL	
	41 920J	BALL, STEEL	9961-11-500	1		
	41 990	CYLINDER, CLUTCH MASTER	G011-41-400	1		
	43 635A	CLIP, FLEXIBLE HOSE	0136-43-635	1		
	49 460	PARTS KIT, INNER	H005-49-460	1		
	49 470	SEALING KIT	G011-49-470	1		
	49 520	PARTS KIT, INNER	GA02-49-520A	1		
	49 530	SEALING KIT	GA02-49-530	1		
	49 686D	BUSHING, ELBOW JOINT	0305-49-686B	1		

4160A-1 ACCELERATOR CONTROLS

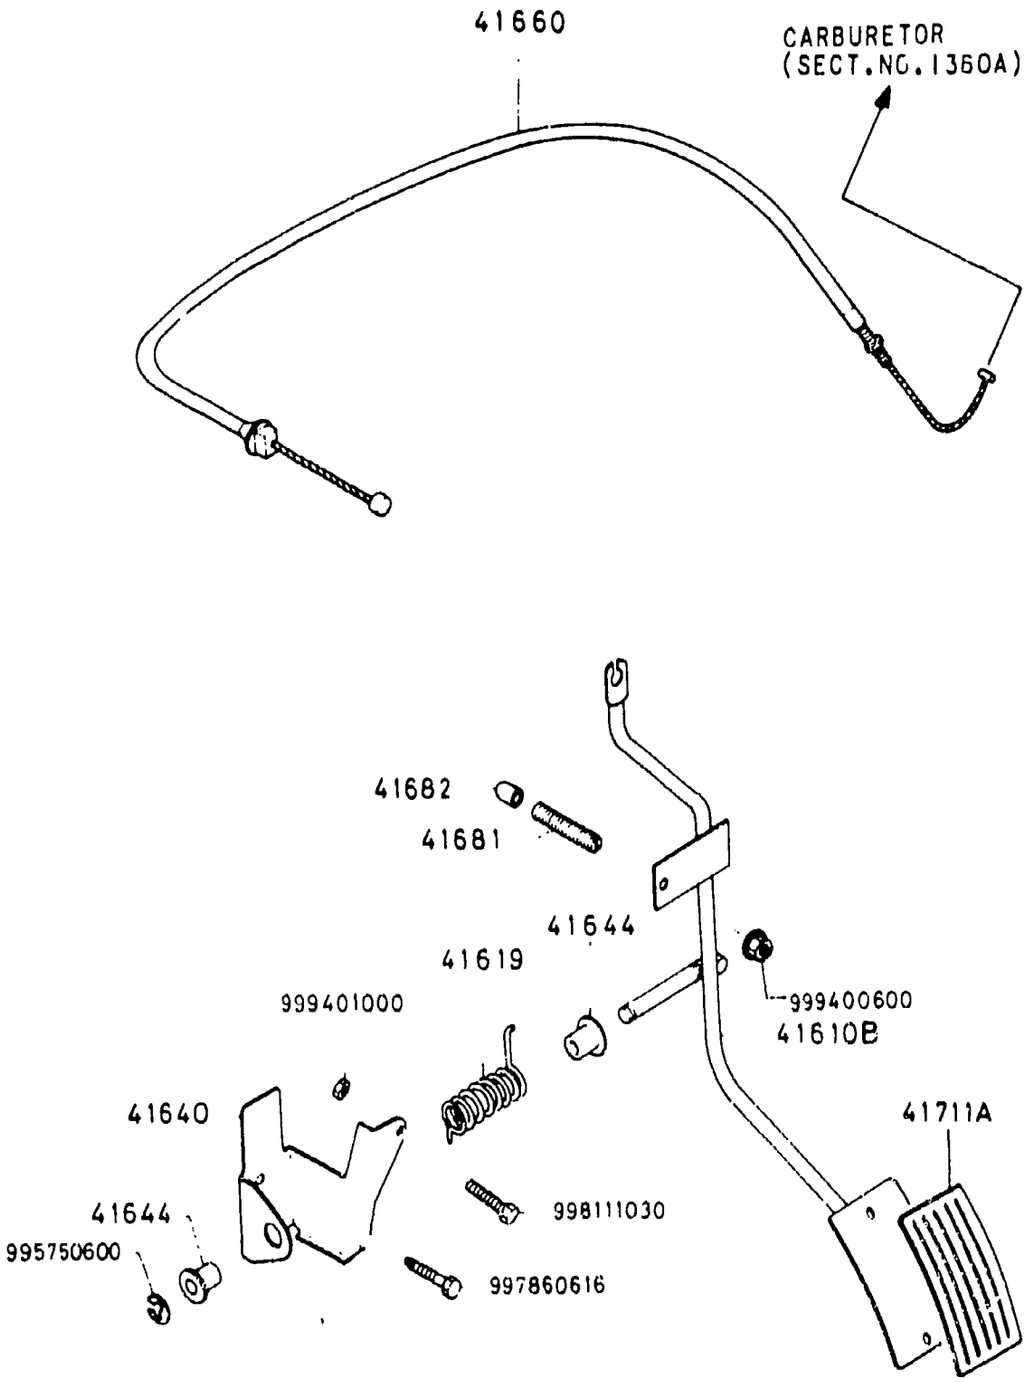


ITEM NO.	D-CODE	DESCRIPTION	PART NO.	QTY	MODEL/DESCRIPTION	REMARKS
	41 6108	PEDAL & ARM	FA01-41-610	1		
	41 619	SPRING, RETURN	8239-41-619	1		
	41 640	RETAINER, ROD	3597-41-650A	1		
	41 644	BUSHING	0259-41-644	2		
	41 660	WIRE, ACCELERATOR	FA01-41-660	1	'81 & '82 MODELS	
			FA42-41-660A	1	'83 MODEL	
	41 681	STOPPER	0118-41-681	1		
	41 682	RUBBER, STOP	0118-41-682	1		
	41 711A	PAD, ACCELERATOR	8871-41-711B	1		

4200A-1 FUEL TANK

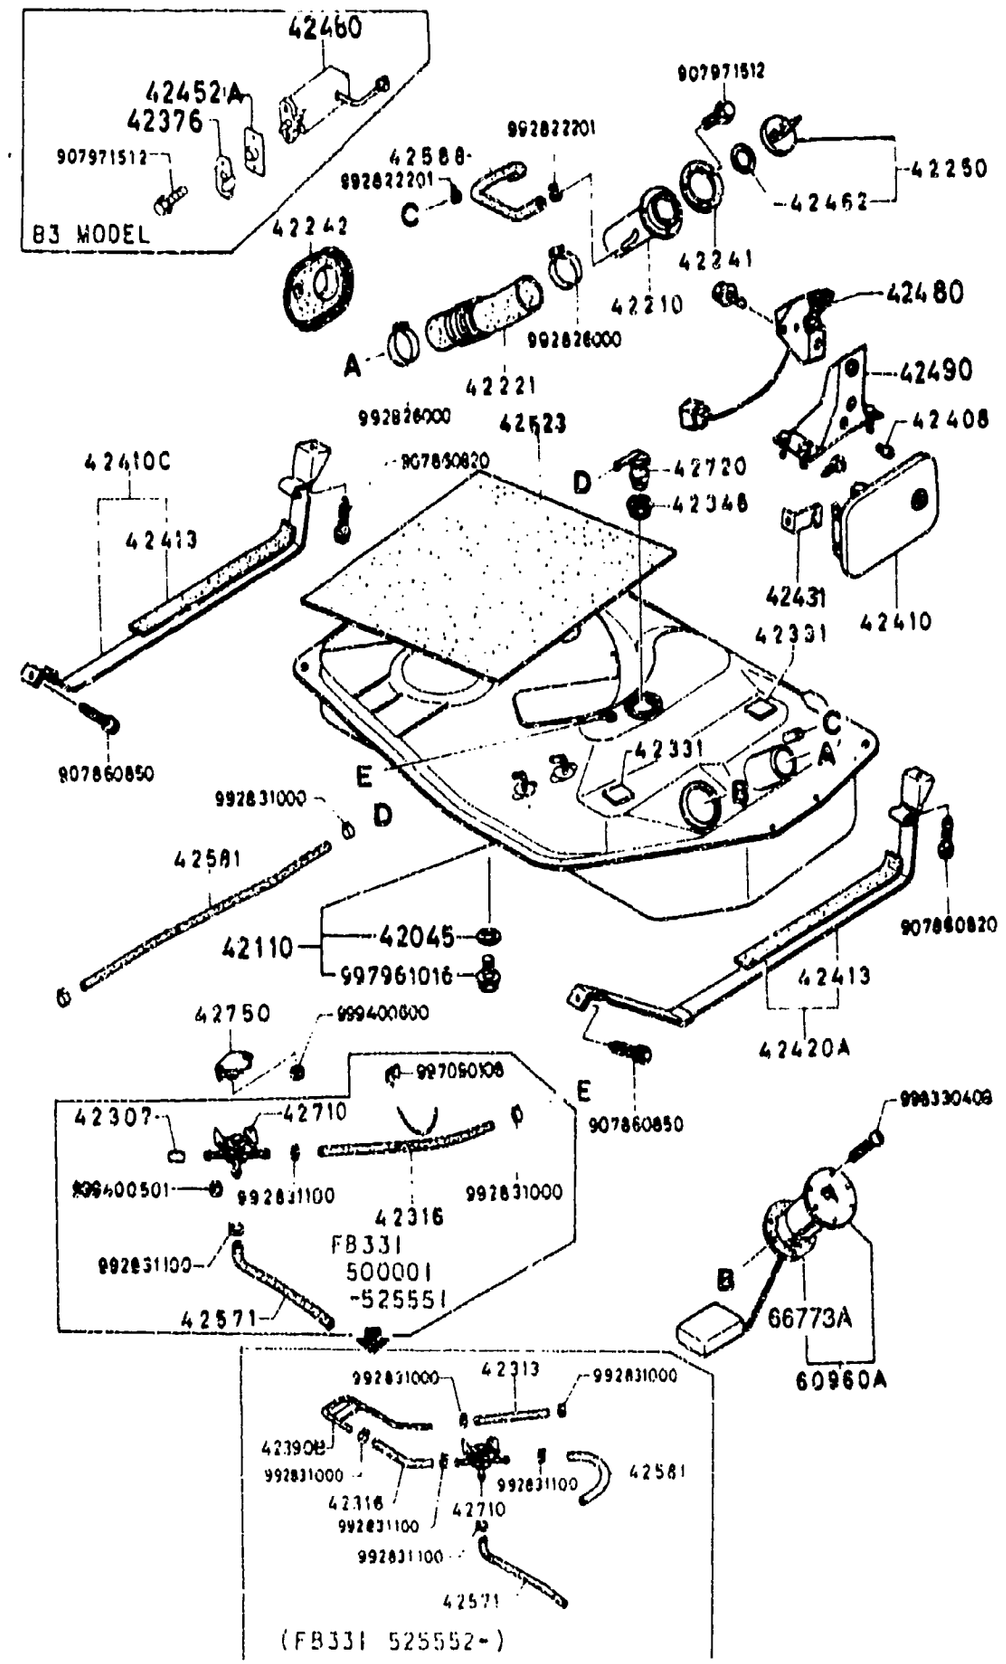

ITEM NO.	D-CODE	DESCRIPTION	PART NO.	QTY	MODEL/DESCRIPTION	REMARKS
	42 045	GASKET, DRAIN PLUG	0866-42-046	1	'83 MODEL	
	42 110	TANK, FUEL	FA01-42-110A	1	'81 MODEL	FB331 ..500001-525551
		REFER TO PARTS BULL. NO. T-2-4 FOR MORE INFO.				
		<C>	FA01-42-110B	1	'81 & '82 MODELS	FB331 ..525552-
			FA42-42-110	1	'83 MODEL	
	42 210	PIPE, FILLER	8871-42-210C	1		
	42 221	HOSE, FILLER	8344-42-241	1		
	42 241	GASKET, FILLER PIPE	0866-42-366B	1		
	42 242	RUBBER, SEAL	8871-42-242A	1		
	42 250	CAP, FILLER	8871-42-250B	1		
	42 307	CAP	0223-42-307	1	'81 MODEL	FB331 ..500001-525551
	42 313	TUBE, VENT	9935-10-6999		BULK QTY.	
	42 316	HOSE, VENT	9935-10-6999		BULK QTY.	
	42 331	SHEET	8531-42-761	2		
	42 348	GROMMET	3870-42-725	1	'81 MODEL	FB331 ..500001-525551
	42 376	PLATE, LOCK	H043-42-451A	1	'83 MODEL	
	42 390B	PIPE, BREATHER	8562-42-530	1		FB331 ..525552-
	42 408	STOPPER, FILLER LID	UA64-42-459	2	'81 MODEL	FB331 ..500001-500062
			0187-70-491	2		FB331 ..500063-
	42 410	LID, FUEL FILLER	8871-42-410A	1	'81 & '82 MODELS	
			FA54-42-410	1	'83 MODEL	
	42 410C	BAND (R), TANK FIXTURE	8871-42-710B	1		
	42 413	SHEET	8871-42-745	2		
	42 420A	BAND (L), TANK FIXTURE	8871-42-720A	1		
	42 431	SPRING LIFT, LID	FA01-42-431B	1		
	42 452A	GROMMET	H043-42-452B	1	'83 MODEL	
	42 462	GASKET, CAP	8871-42-365	1		
	42 480	OPENER, FILLER LID	FA01-42-480	1	'81 & '82 MODELS	
			F023-42-470B	1	'83 MODEL	
	42 490	BRACKET, OPENER	FA01-42-490	1	'81 & '82 MODELS	
	42 523	PAD, FUEL TANK	8871-72-761	1		
	42 571	HOSE, VENT	8871-42-571B	1		
	42 581	HOSE, BREATHER	FA01-42-581	1	'81 MODEL	FB331 500001-525551
			F001-42-581A	1		FB321 525552-
	42 588	HOSE, VENT	8344-42-245	1		
	42 710	VALVE, CHECK	8341-42-910A	1		
	42 720	VALVE, FUEL VAPORIZER	3870-42-720A	1	'81 MODEL	FB331 500001-525551
	42 750	BRACKET, CHECK VALVE	8871-42-920	1		
	60 960A	GAUGE, FUEL TANK	FA01-60-960A	1		
	66 773A	GAUGE, GASKET	8871-60-962A	1		

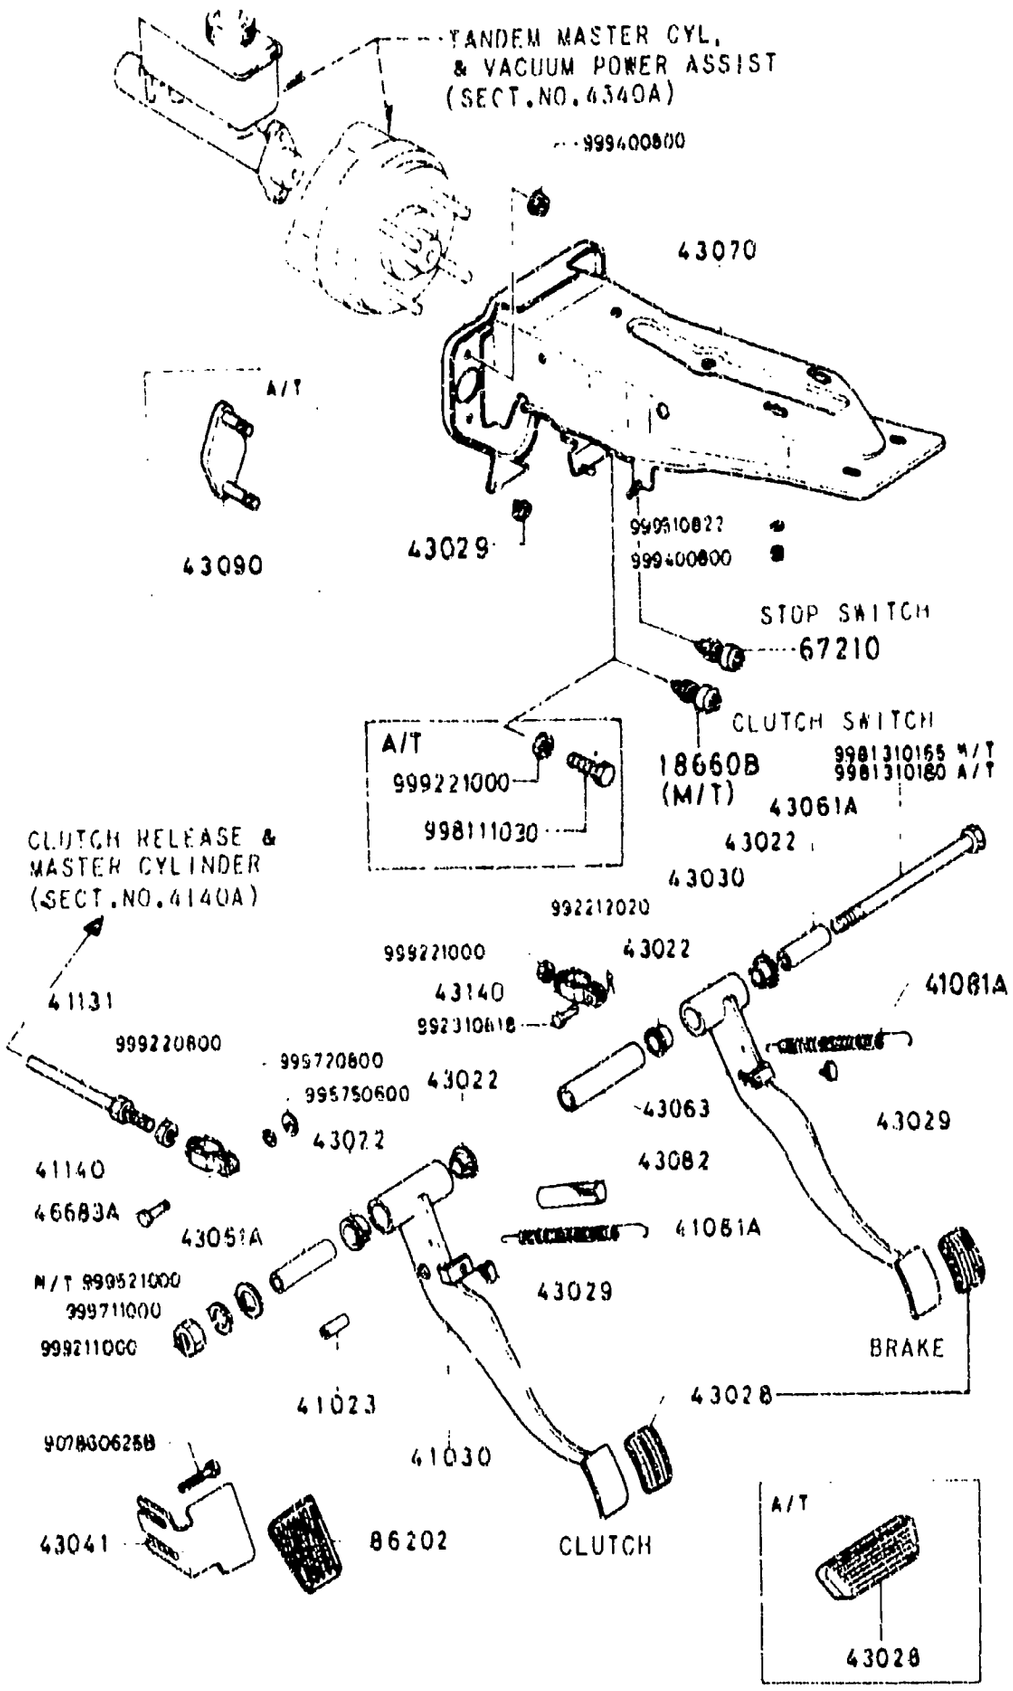


ITEM NO.	D-CODE	DESCRIPTION	PART NO.	QTY	MODEL/DESCRIPTION	REMARKS
	18 6608	SWITCH, CLUTCH	B001-66-490A	1	M T, GSL MODEL	
	41 023	BUSHING, CLUTCH PEDAL	0727-41-023	1	M T	
	41 030	PEDAL, CLUTCH	FA01-41-030	1	M T	
	41 081A	SPRING, RETURN	0088-41-352A	1	A T	
				2	M T	
	41 131	ROD PUSH	0727-41-131	1	M T	
	41 140	FORK, CLUTCH	0259-43-140	1	M T	
		<C>	1872-43-140	1	REQUIRES NUT 9994-01-000	
	43 022	BUSHING, PEDAL	1015-46-085	2	A T	
				4	M T	
	43 028	PAD, PEDAL	0225-43-028A	1	A T	
			8871-43-028A	2	M T	
	43 029	RUBBER, STOPPER	B001-43-029	2	A T	
				3	M T	
	43 030	PEDAL, BRAKE	FA01-43-030	1	(W/O CONTROL SWITCH) '81 MODEL M T S & GS	FB331 500001-521855
			FA02-43-303	1	(CONTROL SWITCH) M T, GSL	
			FA03-43-030	1	(W O CONTROL SWITCH) '81 MODEL A T S & GS	FB331 500001-521855
			FA05-43-030	1	(CONTROL SWITCH) A T, GSL	
	43 041	REST FOOT	FA01-43-041	1		
	43 061A	PIPE, PEDAL	0866-43-062	1	A T	
				2	M T	
	43 063	SPACER	FA16-43-063	1		
	43 070	BRACKET MASTER CYLINDER	FA01-43-070C	1		
	43 082	PROTECTOR, SPRING	1011-43-082A	1	M T	
	43 090	PLATE	8872-43-090	1	A T	
	43 140	FORK, BRAKE	1872-43-140	1	M T	
				1	A T	
	46 683A	PIN	0223-46 683	1	M T	
	67 210	SWITCH STOP	B001-66-490A	2		
	86 202	PAD, FOOT REST	FA01-43-042	1	GS & GSL MODELS	

SECTION INDEX -- CHASSIS


STARTING LOCATION	SECT. NO	SECTION NAME
1 · C 8	2500A	PROPELLER SHAFT ('81 & '82 MODELS)
1 · D 8	2500AA	PROPELLER SHAFT ('83 MODEL)
1 · E 8	2600A	REAR AXLE
1 · F 8	2610A	REAR BRAKES (DRUM BRAKE) (S & GS)
1 · G 8	2610AA	REAR BRAKES (DISC BRAKE) (GSL)
1 · H 8	2700A	DIFFERENTIAL
1 · J 8	2800A	REAR SUSPENSION
1 · K 8	2810A	STABILIZER
1 · L 8	3200A	STEERING WHEEL
1 · M 8	3210A	STEERING GEAR & COLUMN
1 · N 8	3230A	STEERING LINKAGE
1 · C 9	3300A	FRONT AXLE & BRAKES
1 · D 9	3400A	FRONT SUSPENSION
1 · E 9	3410A	CROSS MEMBER & STABILIZER
1 · F 9	3700A	TIRE & JACK
1 · H 9	3900A	ENGINE & TRANSMISSION MOUNTINGS
1 · I 9	4000A	EXHAUST SYSTEM
1 · K 9	4140A	CLUTCH RELEASE & MASTER CYLINDER
1 · · 9	4160A	ACCELERATOR CONTROLS
1 · M 9	4200A	FUEL TANK
1 · N 9	4300A	CLUTCH & BRAKE
1 · C10	4340A	TANDEM MASTER CYLINDER & VACUUM POWER ASSIST SYSTEM
1 · D10	4360A	BRAKE PIPINGS (REAR DRUM BRAKE) (S, GS)
1 · E10	4360AA	BRAKE PIPINGS (REAR DISC BRAKE) (GSL)
1 · F10	4400A	PARKING BRAKE SYSTEM
1 · G10	4500A	FUEL PIPINGS
1 · H10	4600A	CHANGE CONTROLS (AUTOMATIC)

4340A-1 TANDEM MASTER CYLINDER & VACUUM POWER ASSIST SYSTEM

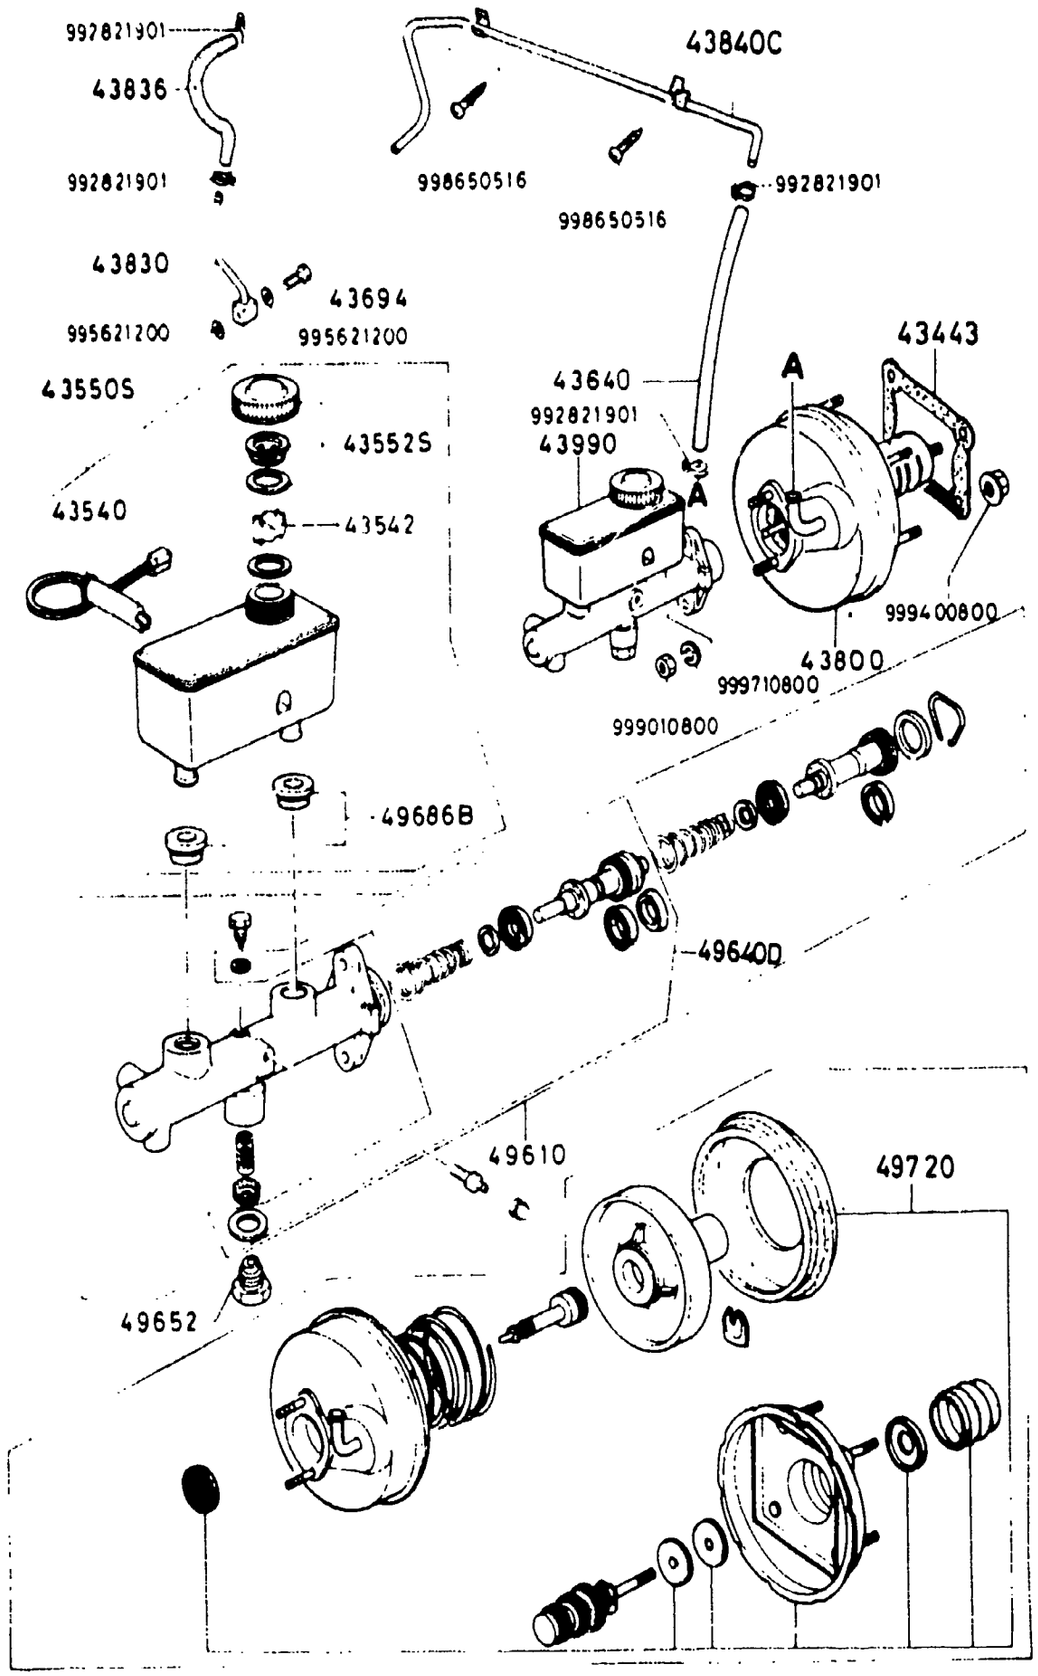


ITEM NO.	D-CODE	DESCRIPTION	PART NO.	QTY	MODEL/DESCRIPTION	REMARKS
	43 443	GASKET	H001-43-443	1	(USE W/ MASTER VACUUM)	FB331 ..642150-
	43 540	INDICATOR, LEVEL	3597-43-540	1		
	43 542	FLOAT	8531-43-542	1		
	43 550S	TANK SET, RESERVE	FA07-49-680	1		
	43 552S	CAP SET, RESERVE TANK	B093-49-580	1		
	43 640	HOSE, VACUUM	G001-43-640	1		
	43 694	BOLT, CONNECTOR	8573-43-694	1		
	43 800	VACUUM POWER ASSIST	FA16-43-800	1		
	43 830	PIPE, VACUUM	1480-43-830A	1		
	43 836	HOSE, VACUUM	8871-43-836	1		
	43 840C	PIPE, VACUUM	FA01-43-840	1		
	43 990	CYLINDER, TANDEM MASTER	FA07-43-400	1	S & GS MODELS	
			FA18-43-400	1	GSL MODEL	
	49 610	PARTS SET, BRAKE CYLINDER	G001-49-610	1	S & GS MODELS	
			FA18-49-610	1	GSL MODEL	
	49 640D	PARTS KIT, INNER	G001-49-640	1	S & GS MODELS	
			FA18-49-640	1	GSL MODEL	
	49 652	BOLT, JOINT	G001-49-652	1	S & GS MODELS	
	49 686B	BUSHING, ELBOW JOINT	0305-49-686B	2		
	49 720	REPAIR KIT	F001-49-720	1		

4360A-1 BRAKE PIPINGS (REAR DRUM BRAKE) (S, GS)

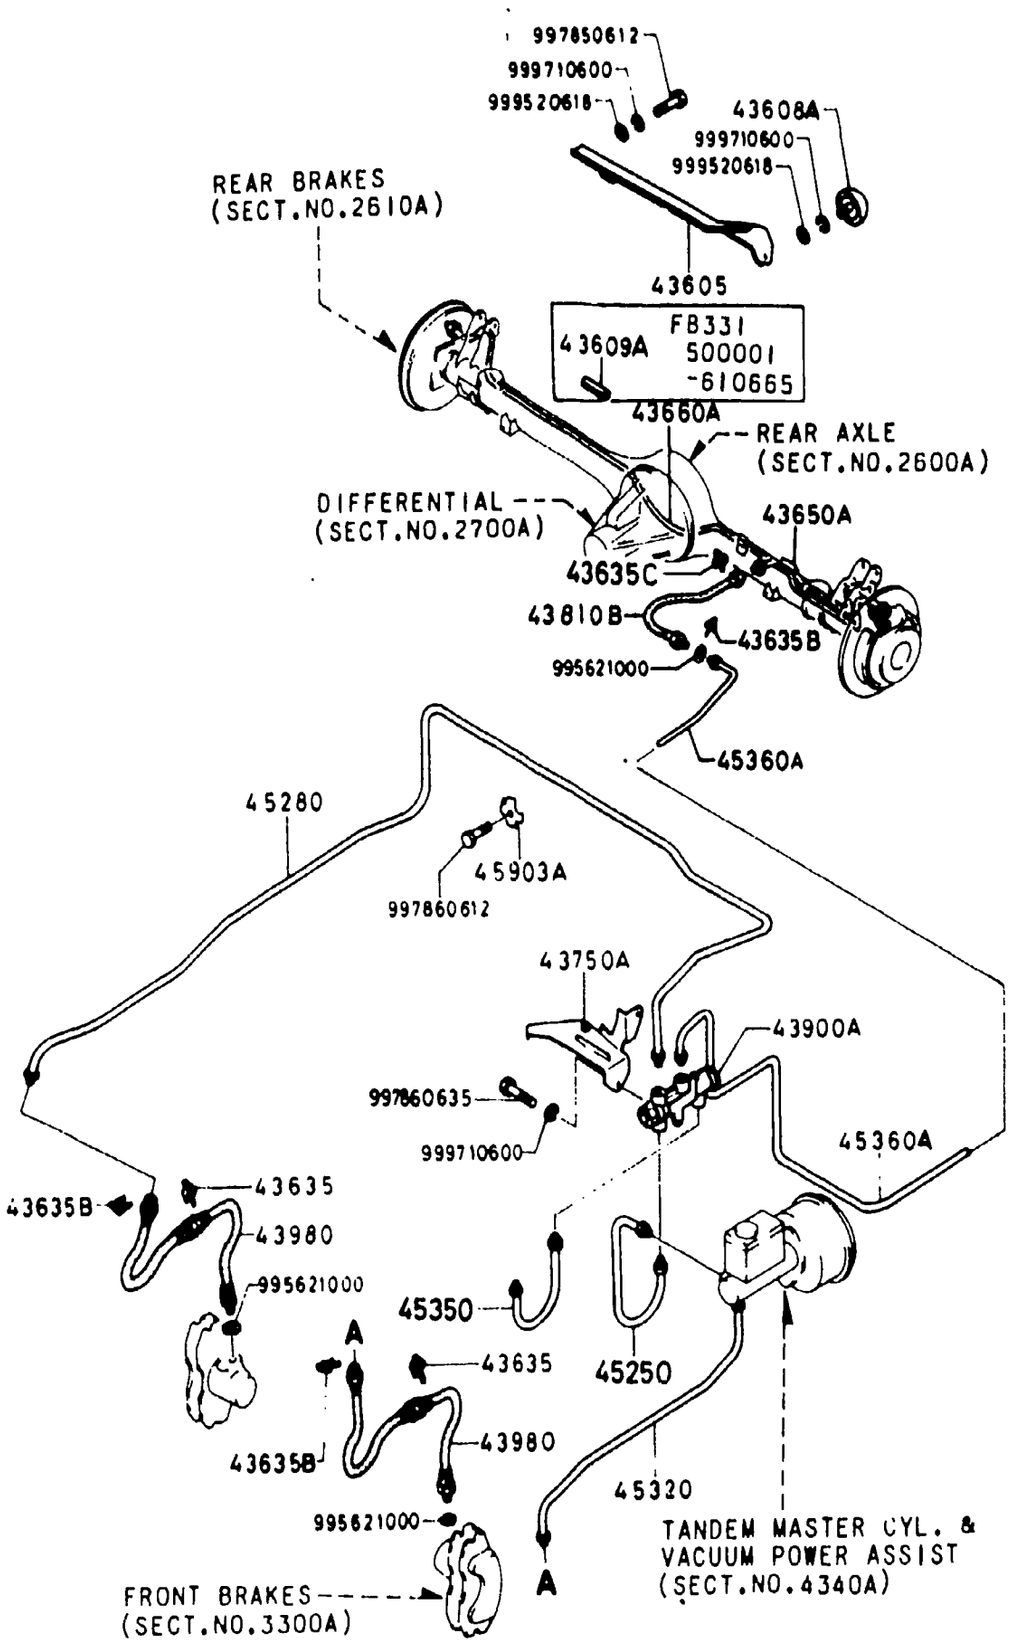


ITEM NO.	D-CODE	DESCRIPTION	PART NO.	QTY	MODEL/DESCRIPTION	REMARKS
	43 605	PROTECTOR, BRAKE PIPE	8871-43-785A	1		
	43 608A	SCREW, RUBBER	8871-43-608	1		
	43 609A	PROTECTOR, BRAKE PIPE	8595-43-609	7	'81 & '82 MODELS	FB331 ..500001-610655
	43 635	CLIP, FLEXIBLE HOSE	B001-43-635	2		
	43 635B	CLIP, FLEXIBLE HOSE	0136-43-635	3		
	43 635C	CLIP, HOSE	B001-43-635	2		
	43 650A	PIPE (L), BRAKE-REAR	FA07-43-650	1		
	43 660A	PIPE (R), BRAKE-REAR	FA07-43-660	1		
	43 750A	HOLDER, BRAKE PIPE VALVE	FA07-43-750	1		
	43 810B	HOSE NO. 1, FLEXIBLE	FA07-43-820	1		
	43 900A	VALVE, BRAKE PIPE	FA07-43-900	1		
	43 980	HOSE, FLEXIBLE	GA02-43-980	2		
	45 250	PIPE, BRAKE-FRONT	FA07-43-360	1		
	45 280	PIPE (R), BRAKE-FRONT	FA01-45-280	1	'81 & '82 MODELS	
			FA42-45-280	1	'83 MODEL	
	45 320	PIPE (L), BRAKE-FRONT	FA01-45-320	1		
	45 350	PIPE, BRAKE-REAR	FA07-43-370	1		
	45 360A	PIPE, BRAKE-REAR	FA54-45-360	1		
	45 903A	CLIP	8173-45-903	2		

4360AA-1 BRAKE PIPINGS (REAR DISC BRAKE) (GSL)

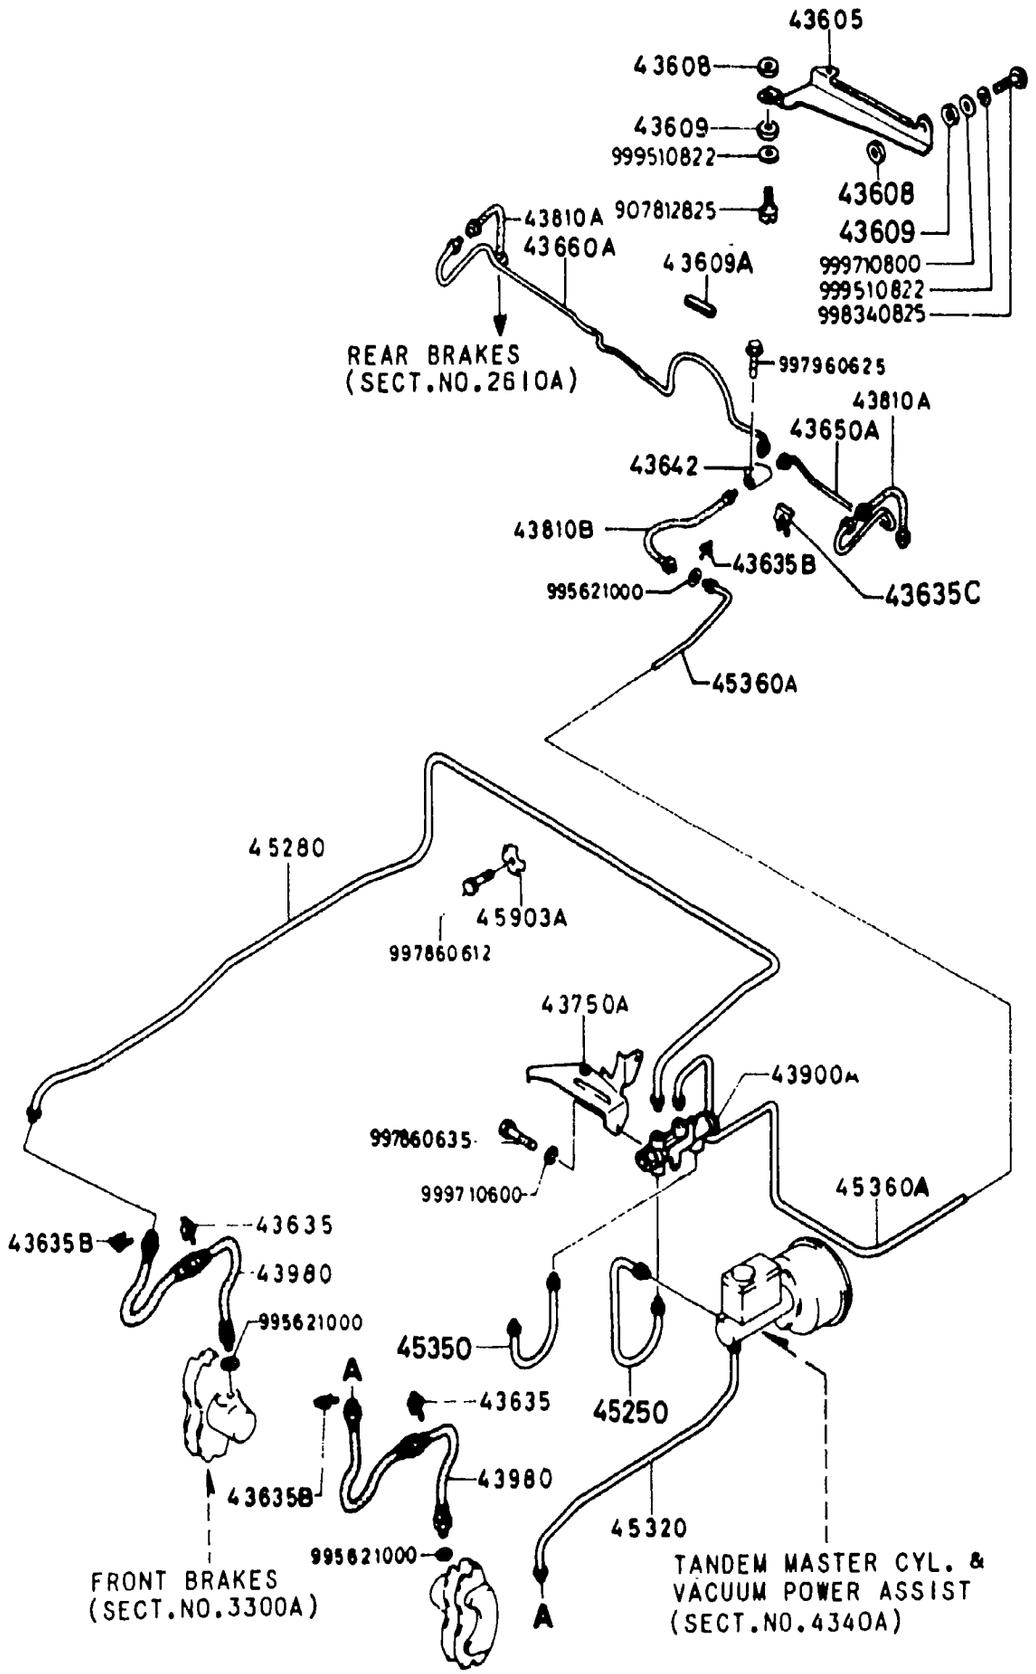


ITEM NO.	D-CODE	DESCRIPTION	PART NO.	QTY	MODEL/DESCRIPTION	REMARKS
	43 605	PROTECTOR, BRAKE PIPE	FA18-43-605A	1		
	43 608	SPACER	1114-43-608B	3		
	43 609	RUBBER, CUSHION	1114-43-609A	3		
	43 609A	PROTECTOR, BRAKE PIPE	8595-43-609	6	'81 & '82 MODELS	FB331 ..500001-610655
	43 635	CLIP, FLEXIBLE HOSE	0305-43-635	2		
	43 635B	CLIP, FLEXIBLE HOSE	0136-43-635	3		
	43 635C	CLIP, HOSE	0305-43-635	2		
	43 642	JOINT	FA18-43-642A	1		
	43 650A	PIPE (L), BRAKE-REAR	FA18-43-650	1		
	43 660A	PIPE (R), BRAKE-REAR	FA18-43-660	1		
	43 750A	HOLDER, BRAKE PIPE VALVE	FA07-43-750	1		
	43 810A	HOSE NO. 1, FLEXIBLE	FA18-43-810	2		
	43 810B	HOSE NO 1, FLEXIBLE	FA18-43-820A	1		
	43 900A	VALVE, BRAKE PIPE	FA07-43-900	1	'81 & '82 MODELS	
			FA48-43-900	1	'83 MODEL	
	43 980	HOSE, FLEXIBLE	GA02-43-980	2		
	45 250	PIPE, BRAKE-FRONT	FA07-43-360	1		
	45 280	PIPE (R), BRAKE-FRONT	FA01-45-280	1	'81 & '82 MODELS	
			FA42-45-280	1	'83 MODEL	
	45 320	PIPE (L), BRAKE-FRONT	FA01-45-320	1		
	45 350	PIPE, BRAKE-REAR	FA07-43-370	1		
	45 360A	PIPE, BRAKE-REAR	FA54-45-360	1		
	45 903A	CLIP	8173-45-903	2		

4400A-1 PARKING BRAKE SYSTEM

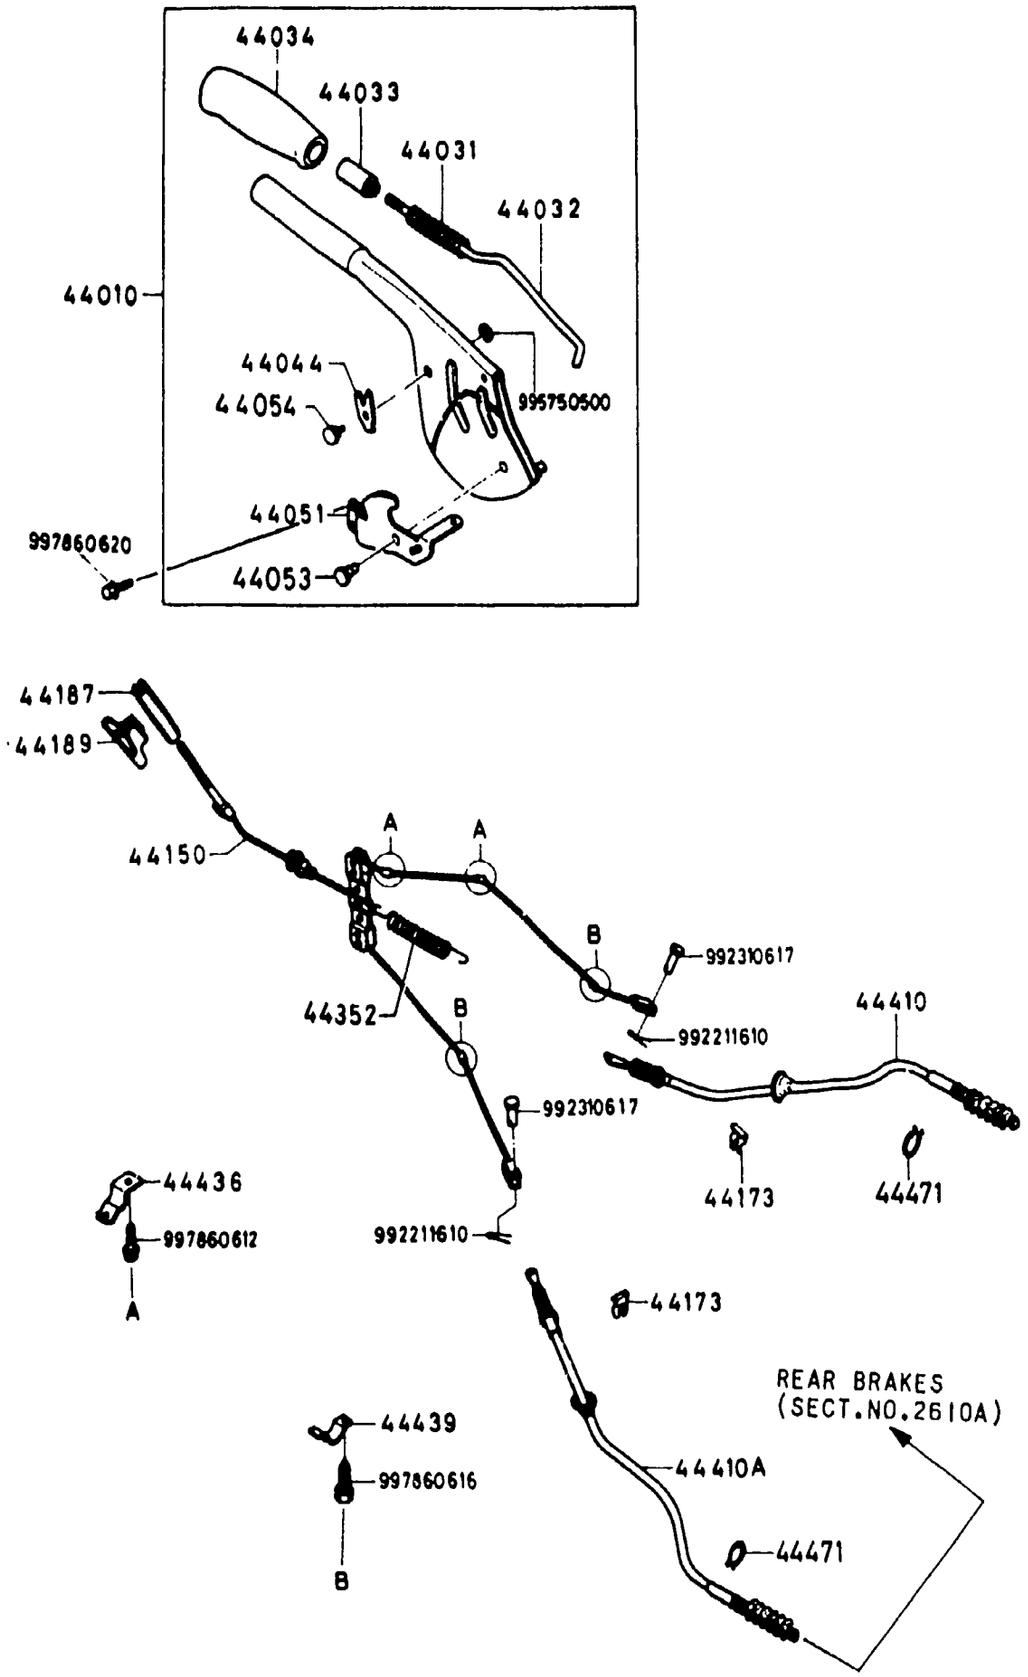


ITEM NO.	D-CODE	DESCRIPTION	PART NO.	QTY	MODEL/DESCRIPTION	REMARKS
	44 010	LEVER, PARKING BRAKE	FA01-44-010B	1		
		BLACK	00			
	44 031	SPRING	FA54-44-031	1		
	44 032	ROD, RELEASE	FA01-44-032	1		
	44 033	BUTTON, RELEASE	0221-44-033	1		
		BLACK	00			
	44 034	CAP	FA01-44-034A	1		
		BLACK	00			
	44 044	RATCHET	1243-44-044A	1		
	44 051	SECTOR	FA01-44-051	1		
	44 053	BOLT, HAND BRAKE LEVER	B001-44-053	1		
	44 054	PIN	B001-44-054	1		
	44 150	CABLE, FRONT PARKING BRAKE	1480-44-150A	1		
	44 173	CLIP	0118-44-375	2		
	44 187	SCREW	0866-44-187A	1		
	44 189	CLIP	0866-44-189	1		
	44 352	SPRING, RETURN	0613-41-308	1		
	44 410	CABLE (R), REAR PARKING BRAKE	FA16-44-410B	1	4-WHL DISK GSL MODEL	
			FA54-44-410A	1	S & GS MODELS	
	44 410A	CABLE (L), REAR PARKING BRAKE	FA16-44-420A	1	GSL MODEL	
			FA54-44-420A	1	S & GS MODELS	
	44 436	CLIP	8871-44-439	2		
	44 439	CLIP, CABLE	1011-44-439	2		
	44 471	CLIP	0305-44-471	2	S & GS MODELS	

4500A-1 FUEL PIPINGS

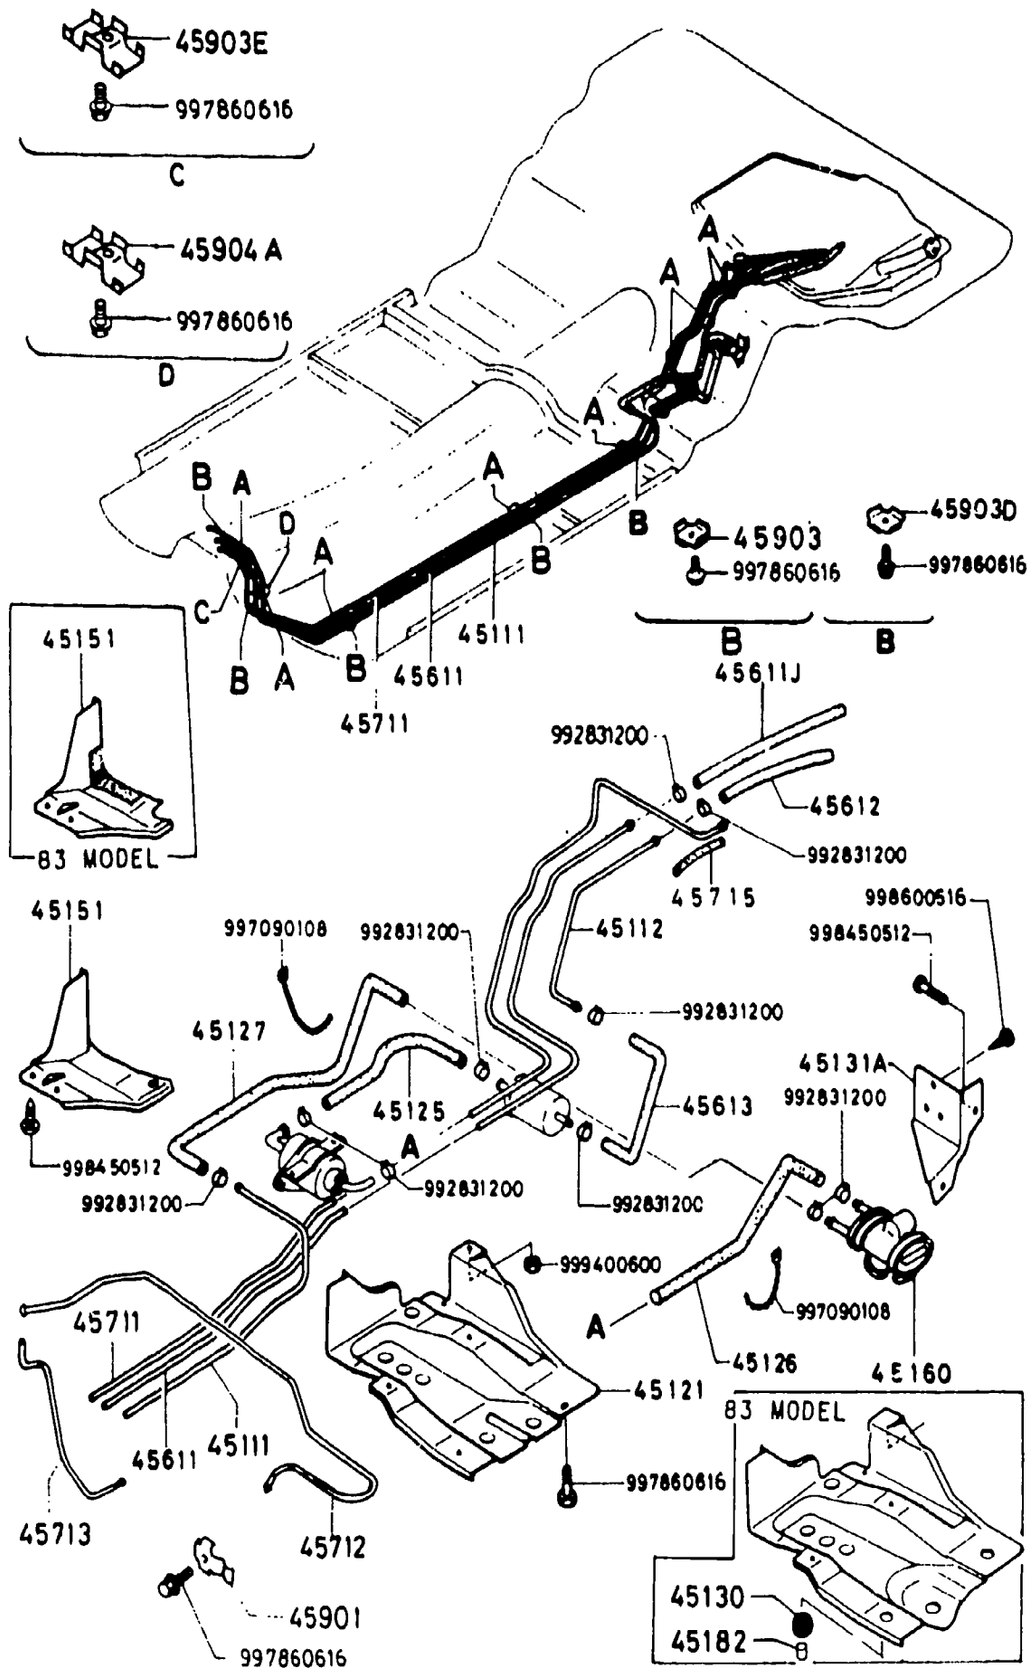

ITEM NO.	D-CODE	DESCRIPTION	PART NO.	QTY	MODEL/DESCRIPTION	REMARKS
	45 111	PIPE, FUEL MAIN	FA01-45-111B	1	'81 & '82 MODELS	
			FA42-45-111A	1	'83 MODEL	
	45 112	PIPE, FUEL MAIN	FA01-45-112	1		
	45 121	BRACKET, FUEL PUMP	8871-45-160	1	'81 & '82 MODELS	
			FA23-45-160A	1	'83 MODEL	
	45 125	HOSE, FUEL	9935-80-8999		BULK QTY.	
	45 126	HOSE, FUEL	8344-45-125	1	'81 & '82 MODELS	
			FA42-45-125	1	'83 MODEL	
	45 127	HOSE, FUEL MAIN	8344-45-126	1	'81 & '82 MODELS	
			FA42-45-126A	1	'83 MODEL	
	45 130	RUBBER, PUMP MOUNTING	FA23-45-181	3	'83 MODEL	
	45 131A	BRACKET, CUT VALVE	8871-45-131A	1		
	45 151	PROTECTOR, FUEL PUMP	8871-45-151A	1	'81 & '82 MODELS	
			FA23-45-190A	1	'83 MODEL	
	45 160	VALVE-FUEL CUT	3919-45-170A	1		
	45 182	SPACER, MOUNTING RUBBER	FA23-45-182	3	'83 MODEL	
	45 611	PIPE, FUEL RETURN	FA01-45-611A	1	'81 & '82 MODELS	
			FA42-45-611B	1	'83 MODEL	
	45 611J	HOSE, FUEL RETURN	9935-80-6999		BULK QTY.	
	45 612	HOSE, FUEL	9935-80-8999		BULK QTY.	
	45 613	HOSE, FUEL	8344-45-123	1		
	45 711	PIPE, EVAPORATION	FA01-45-711	1	'81 & '82 MODELS	
			FA42-45-711C	1	'83 MODEL	
	45 712	PIPE, EVAPORATION	FA01-45-712	1	'81 MODEL	
			FA30-45-712	1	'82 MODEL	
			FA42-45-712B	1	'83 MODEL	
	45 713	PIPE, EVAPORATION DRAIN	FA01-45-713	1	'81 MODEL	FB331 ..500001- -29438
	45 715	PROTECTOR, PIPE	8871-45-715	1		
	45 901	CLIP, PIPE	8173-45-901A	2	'81 & '82 MODELS	
				1	'83 MODEL	
	45 903	CLIP, PIPE	8173-45-903	10	'81 MODEL	
				9	'82 MODEL	
				8	'83 MODEL	
	45 903D	CLIP, PIPE	8171-45-903A	6	'81 & '82 MODELS	
				7	'83 MODEL	
	45 903E	CLIP	FA42-45-903	1	'83 MODEL	
	45 904A	CLIP, PIPE	FA42-45-904	1	'83 MODEL	

4600A-1 CHANGE CONTROLS (AUTOMATIC)

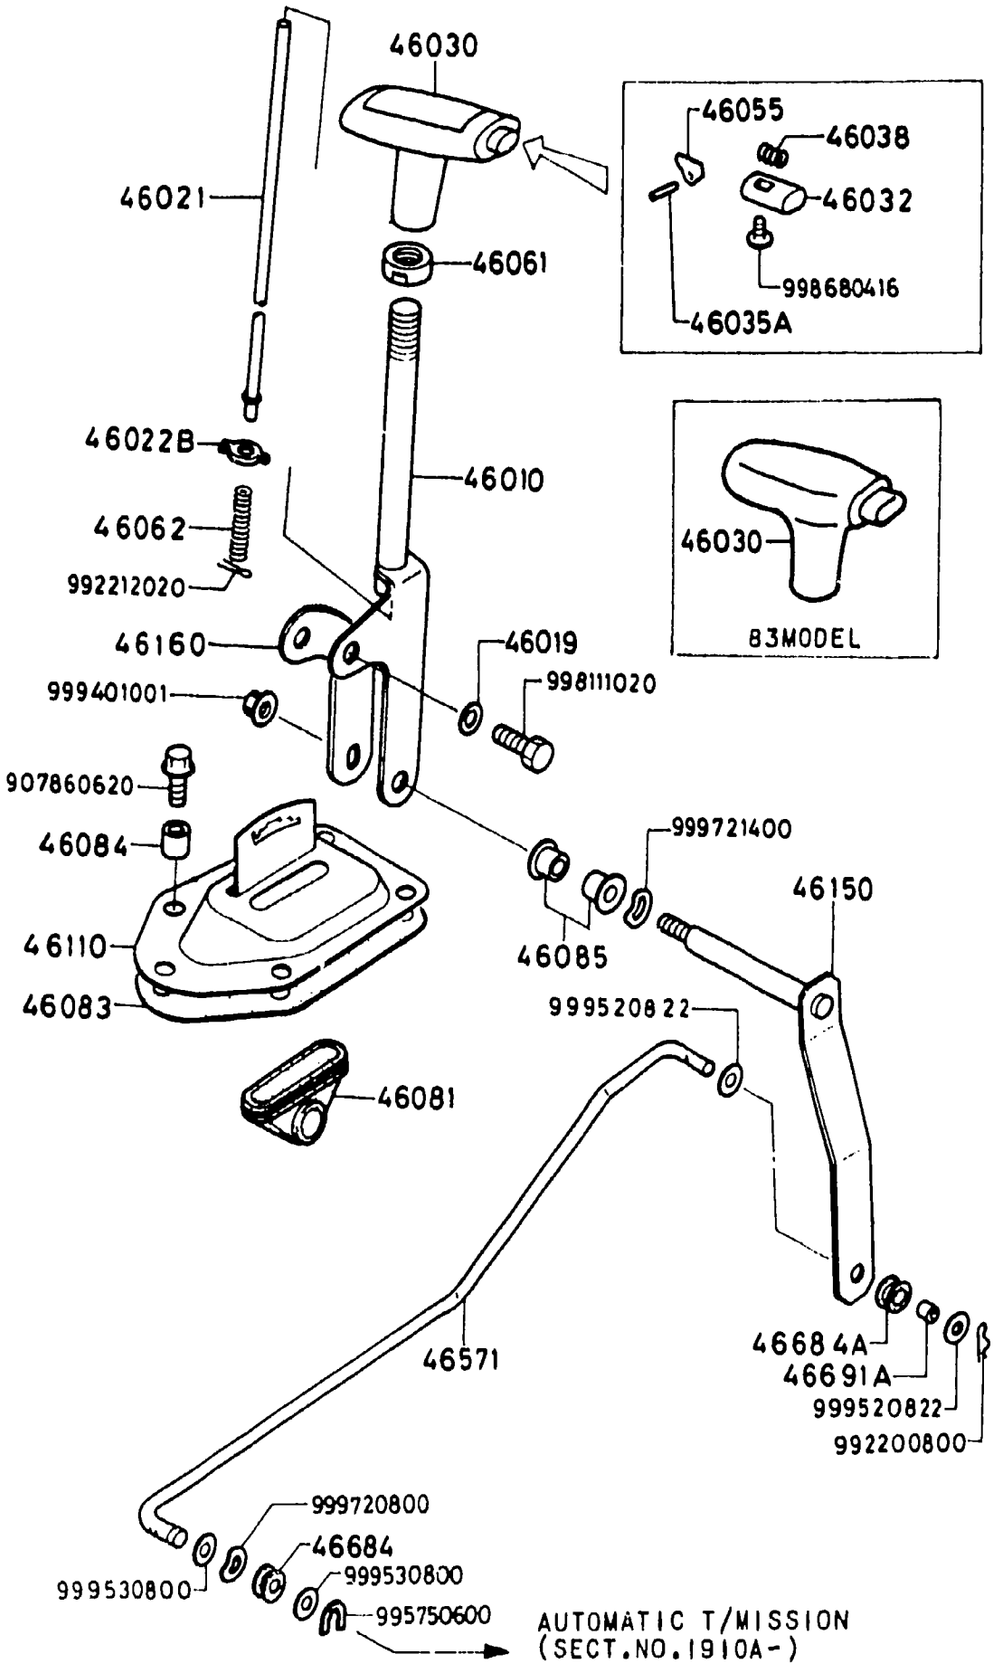

ITEM NO.	D-CODE	DESCRIPTION	PART NO.	QTY	MODEL/DESCRIPTION	REMARKS
	46 010	LEVER, SELECT	1481-46-010	1		
	46 019	WASHER, PLAIN	1481-46-019	1		
	46 021	ROD	8872-46-021A	1	'81 & '82 MODELS	
			F025-46-021	1	'83 MODEL	
	46 022B	PIN, GUIDE	8174-46-022	1		
	46 030	KNOB, CHANGE LEVER	8872-46-030C	1	'81 & '82 MODEL	
		BLACK	00			
			HA19-46-030A	1	'83 MODEL	
		BLACK	00			
	46 032	BUTTON, PUSH	8872-46-032	1	'81 & '82 MODELS	
	46 035A	PIN	1244-46-035	1	'81 & '82 MODELS	
	46 038	SPRING	1244-46-038	1	'81 & '82 MODELS	
	46 055	LEVER	1244-46-055	1	'81 & '82 MODELS	
	46 061	NUT	8202-46-061A	1		
	46 062	SPRING	2375-46-062	1		
	46 081	BOOT	1481-46-081A	1		
	46 083	RUBBER, SEAL	FA03-46-083	1		
	46 084	SPACER	1481-46-084A	5		
	46 085	BUSHING	1015-46-085	2		
	46 110	BRACKET, LEVER	FA03-46-110	1		
	46 150	LEVER	1481-46-150A	1		
	46 160	LEVER, ADJUST	1481-46-160	1		
	46 571	ROD	FA03-46-571	1		
	46 684	BUSHING	1015-46-684A	1		
	46 684A	BUSHING, COUNTER LEVER	1481-46-684	1		
	46 691A	BUSHING, JOINT	8872-46-685	1		