D/TEMP-01

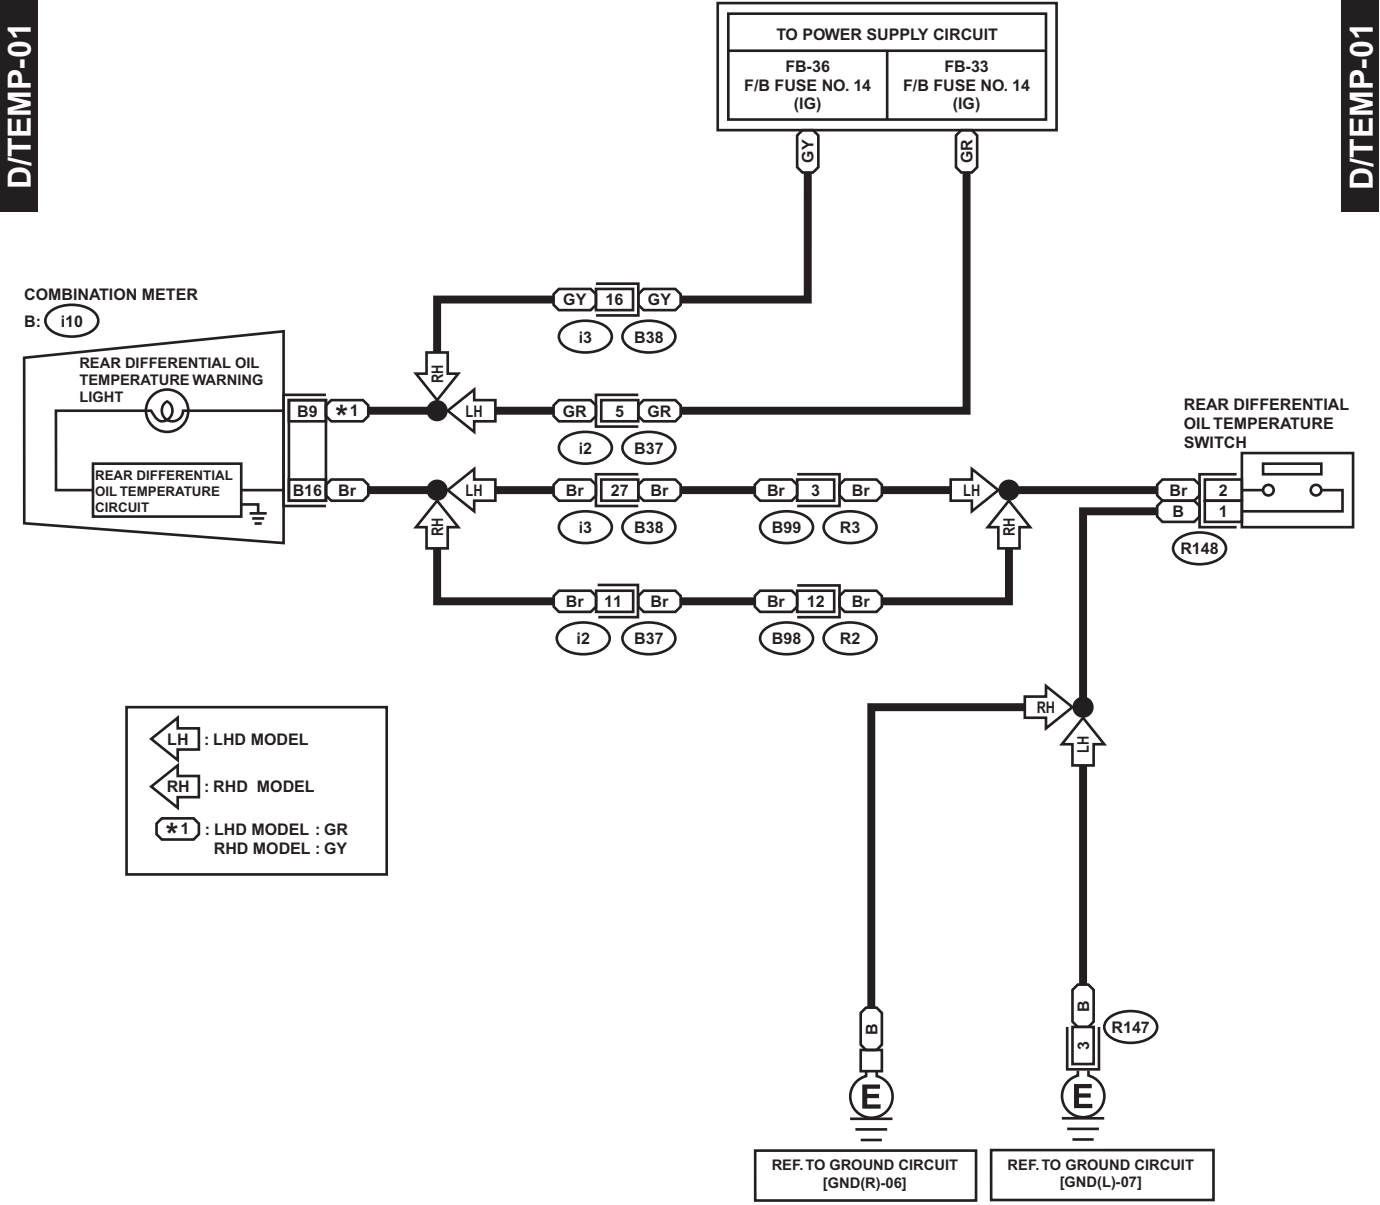
TO POWER SUPPLY CIRCUIT
FB-36
F/B FUSE NO. 14
(IG)
FB-33
F/B FUSE NO. 14
(IG)
GY
GR
COMBINATION METER
B: i10
REAR DIFFERENTIAL OIL TEMPERATURE WARNING LIGHT
REAR DIFFERENTIAL OIL TEMPERATURE CIRCUIT
B9
*1
B16
Br
RH
LH
GY 16 GY
i3
B38
GR 5 GR
i2
B37
Br 27 Br
i3
B38
Br 3 Br
B99
R3
Br 11 Br
i2
B37
Br 12 Br
B98
R2
REAR DIFFERENTIAL OIL TEMPERATURE SWITCH
Br
B
2
1
R148
B
3
R147
E
REF. TO GROUND CIRCUIT
[GND(R)-06]
REF. TO GROUND CIRCUIT
[GND(L)-07]
LH : LHD MODEL
RH : RHD MODEL
*1 : LHD MODEL : GR
RHD MODEL : GY

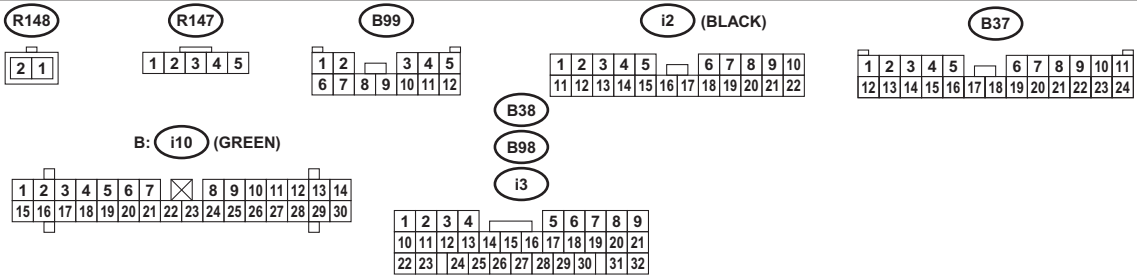
R148
R147
B99
i2 (BLACK)
B37
B: i10 (GREEN)
B38
B98
i3