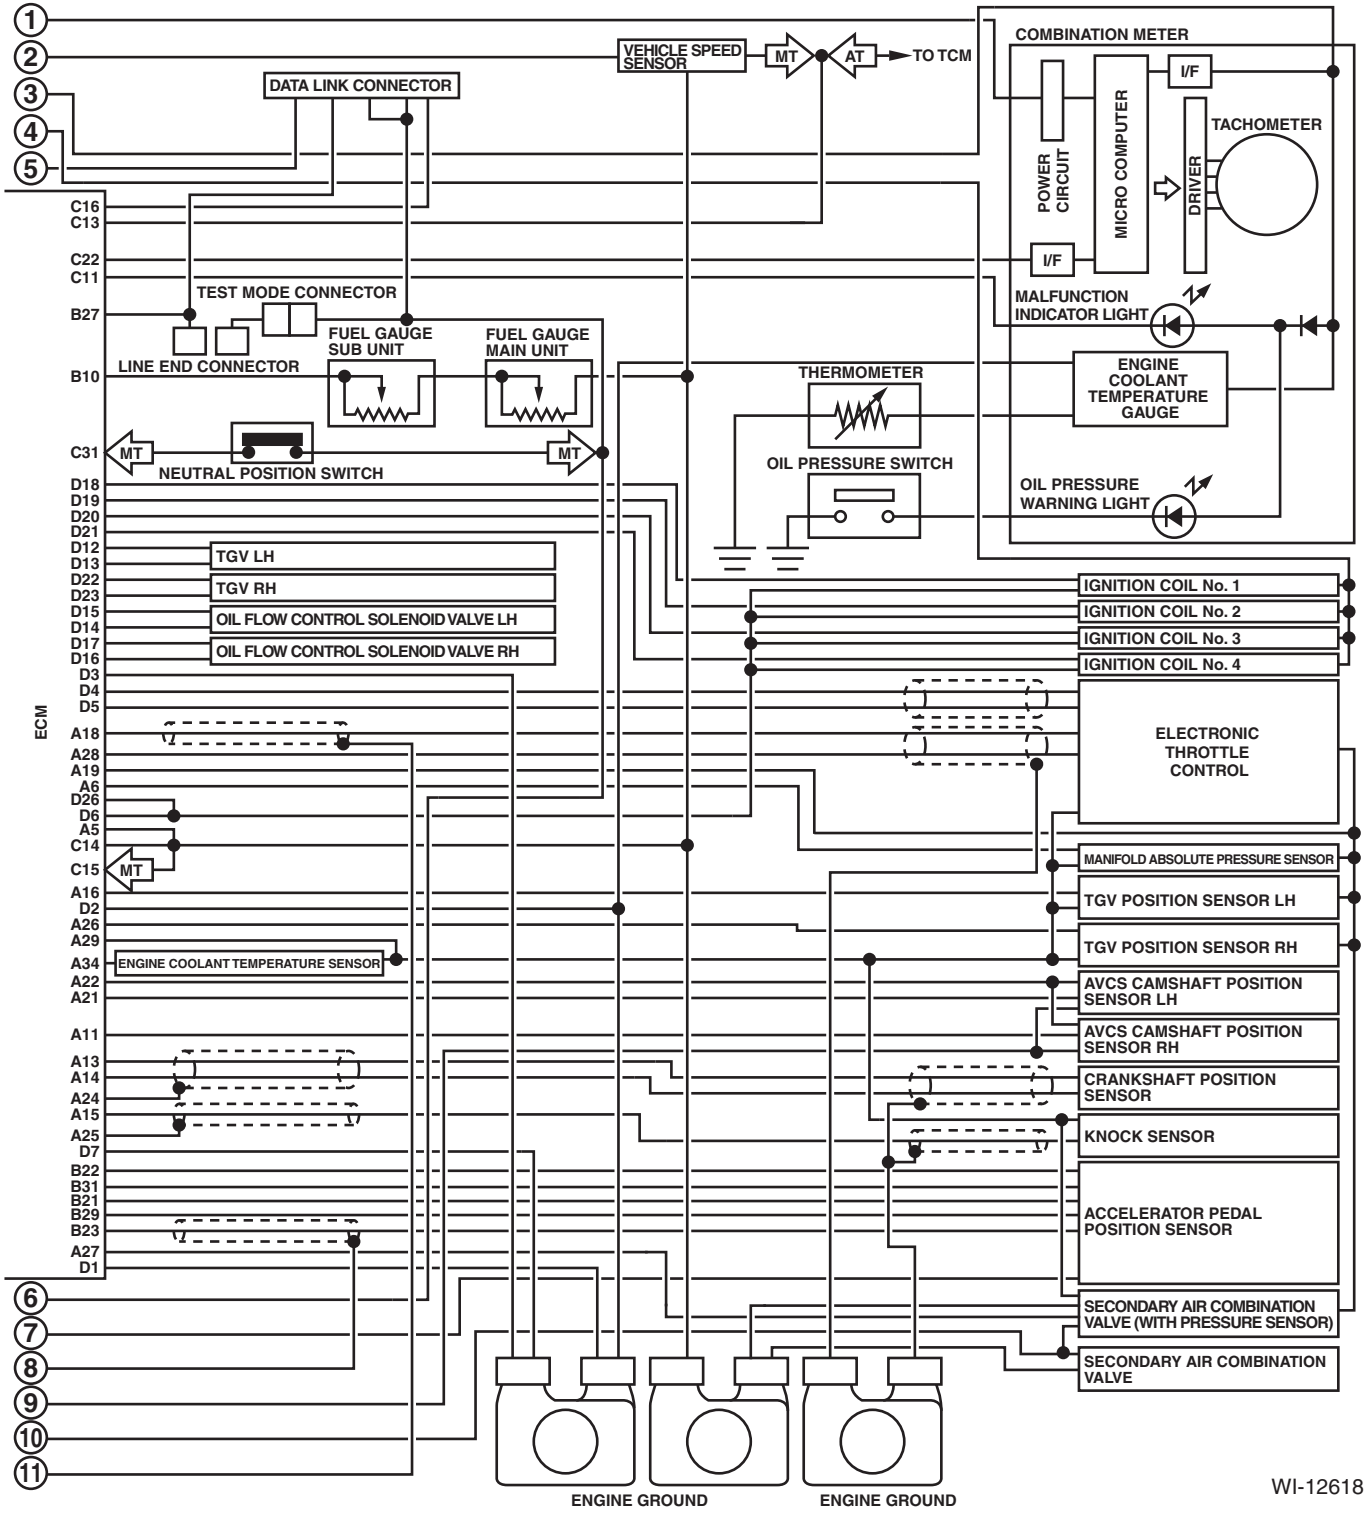
1
2
3
4
5
6
7
8
9
10
11
VEHICLE SPEED SENSOR
MT
AT
TO TCM
COMBINATION METER
I/F
TACHOMETER
POWER CIRCUIT
MICRO COMPUTER
DRIVER
I/F
DATA LINK CONNECTOR
C16
C13
C22
C11
B27
B10
C31
D18
D19
D20
D21
D12
D13
D22
D23
D15
D14
D17
D16
D3
D4
D5
A18
A28
A19
A6
D26
D6
A5
C14
C15
A16
D2
A26
A29
A34
A22
A21
A11
A13
A14
A24
A15
A25
D7
B22
B31
B21
B29
B23
A27
D1
ECM
TEST MODE CONNECTOR
LINE END CONNECTOR
FUEL GAUGE SUB UNIT
FUEL GAUGE MAIN UNIT
NEUTRAL POSITION SWITCH
MALFUNCTION INDICATOR LIGHT
ENGINE COOLANT TEMPERATURE GAUGE
THERMOMETER
OIL PRESSURE SWITCH
OIL PRESSURE WARNING LIGHT
TGV LH
TGV RH
OIL FLOW CONTROL SOLENOID VALVE LH
OIL FLOW CONTROL SOLENOID VALVE RH
IGNITION COIL No. 1
IGNITION COIL No. 2
IGNITION COIL No. 3
IGNITION COIL No. 4
ELECTRONIC THROTTLE CONTROL
MANIFOLD ABSOLUTE PRESSURE SENSOR
TGV POSITION SENSOR LH
TGV POSITION SENSOR RH
ENGINE COOLANT TEMPERATURE SENSOR
AVCS CAMSHAFT POSITION SENSOR LH
AVCS CAMSHAFT POSITION SENSOR RH
CRANKSHAFT POSITION SENSOR
KNOCK SENSOR
ACCELERATOR PEDAL POSITION SENSOR
SECONDARY AIR COMBINATION VALVE (WITH PRESSURE SENSOR)
SECONDARY AIR COMBINATION VALVE
ENGINE GROUND
ENGINE GROUND
WI-12618