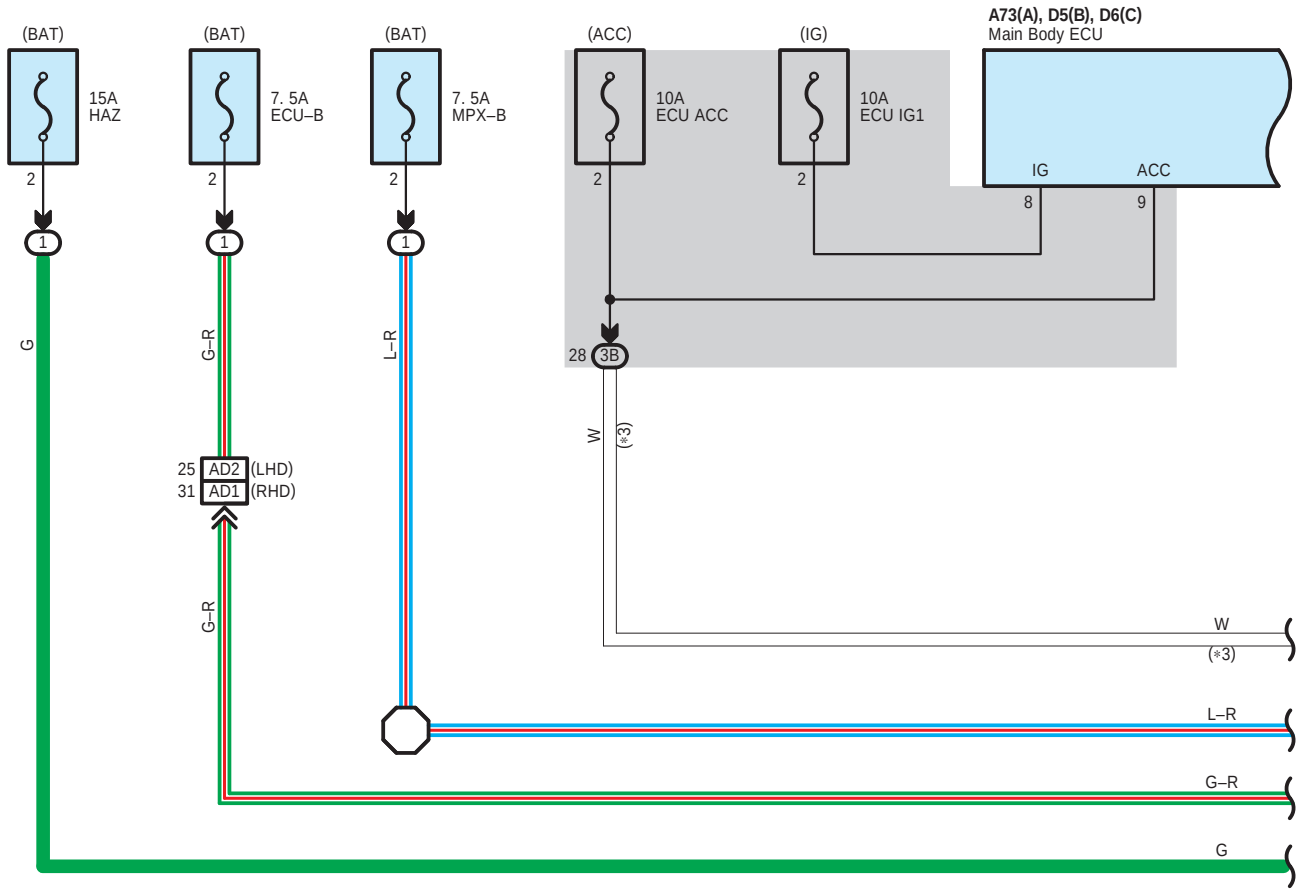

* 3 : w/ Entry & Start System

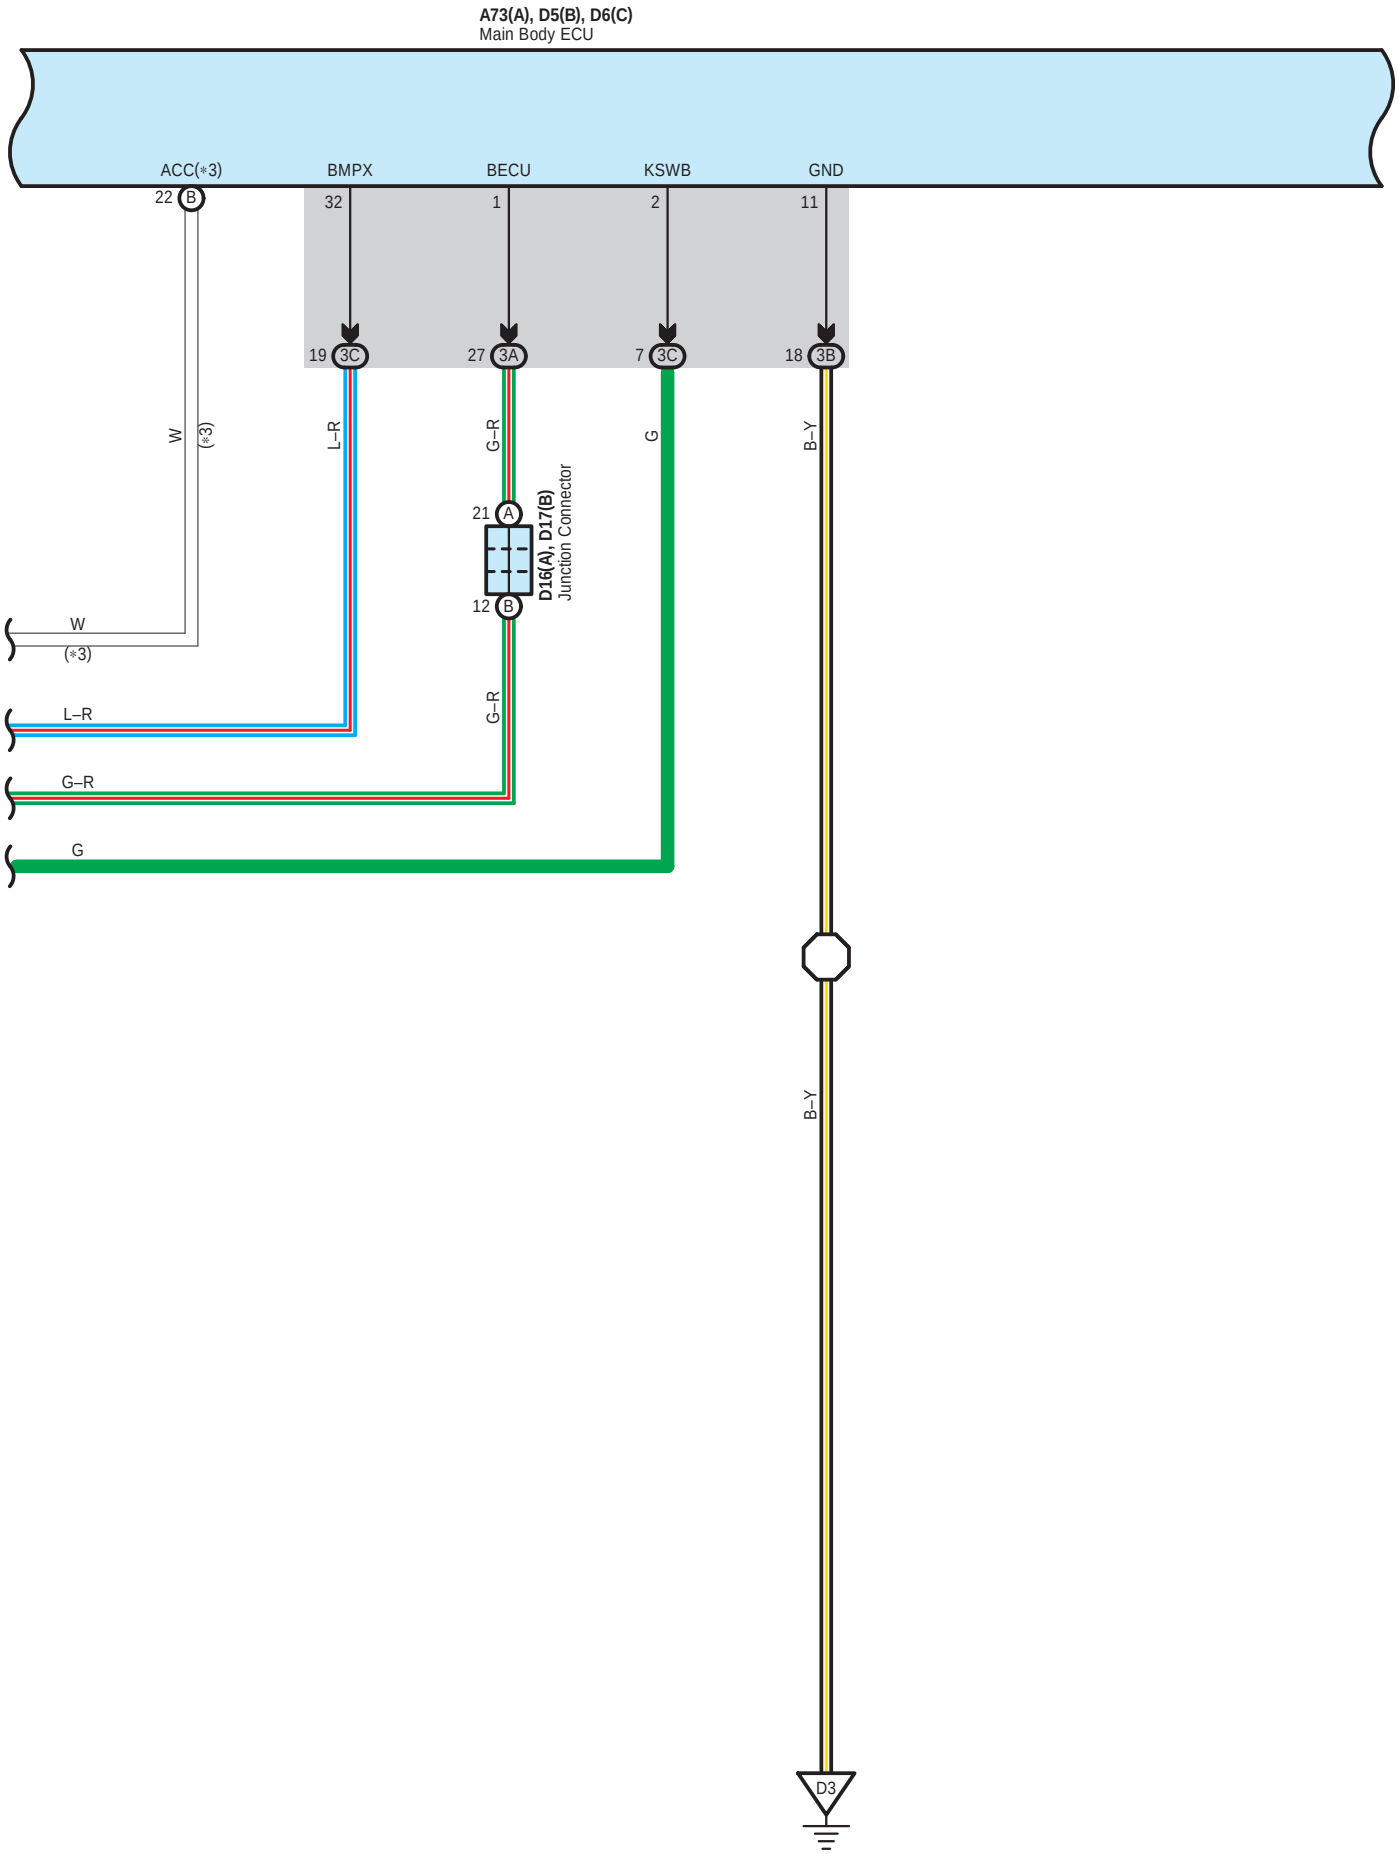
A73(A), D5(B), D6(C)
Main Body ECU
ACC(*3)
BMPX
BECU
KSWB
GND
22 B
32
1
2
11
19 3C
27 3A
7 3C
18 3B
W
(*3)
L–R
G–R
G
B–Y
21 A
12 B
D16(A), D17(B)
Junction Connector
W
(*3)
L–R
G–R
G
G–R
B–Y
D3

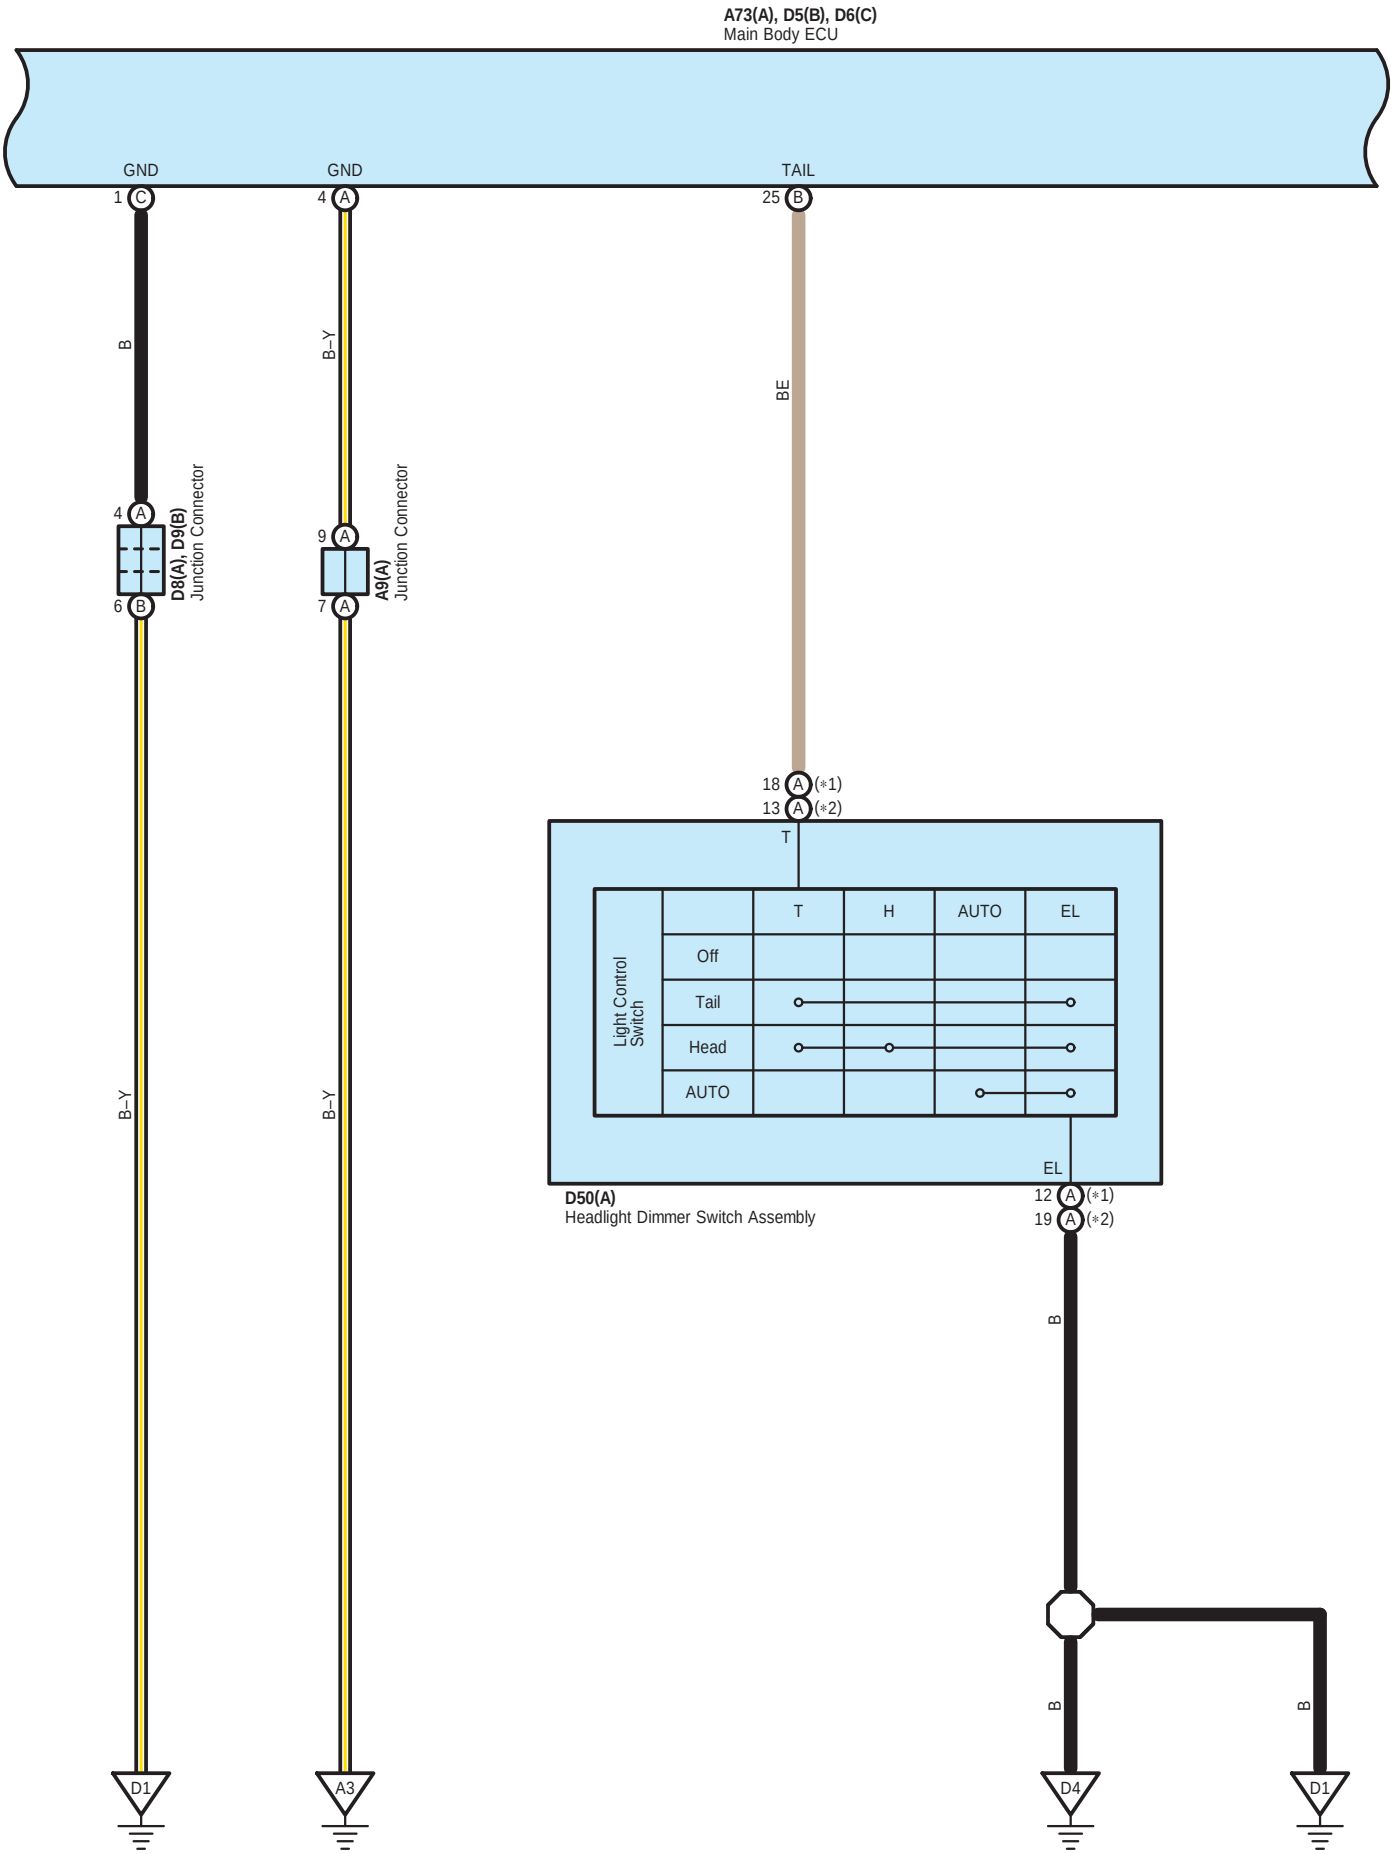
A73(A), D5(B), D6(C)
Main Body ECU
GND
GND
TAIL
1 C
4 A
25 B
B
B–Y
BE
4 A
6 B
D8(A), D9(B)
Junction Connector
9 A
7 A
A9(A)
Junction Connector
18 A (*1)
13 A (*2)
T
Light Control Switch
T
H
AUTO
EL
Off
Tail
Head
AUTO
EL
D50(A)
Headlight Dimmer Switch Assembly
12 A (*1)
19 A (*2)
B–Y
B–Y
B
B
B
D1
A3
D4
D1

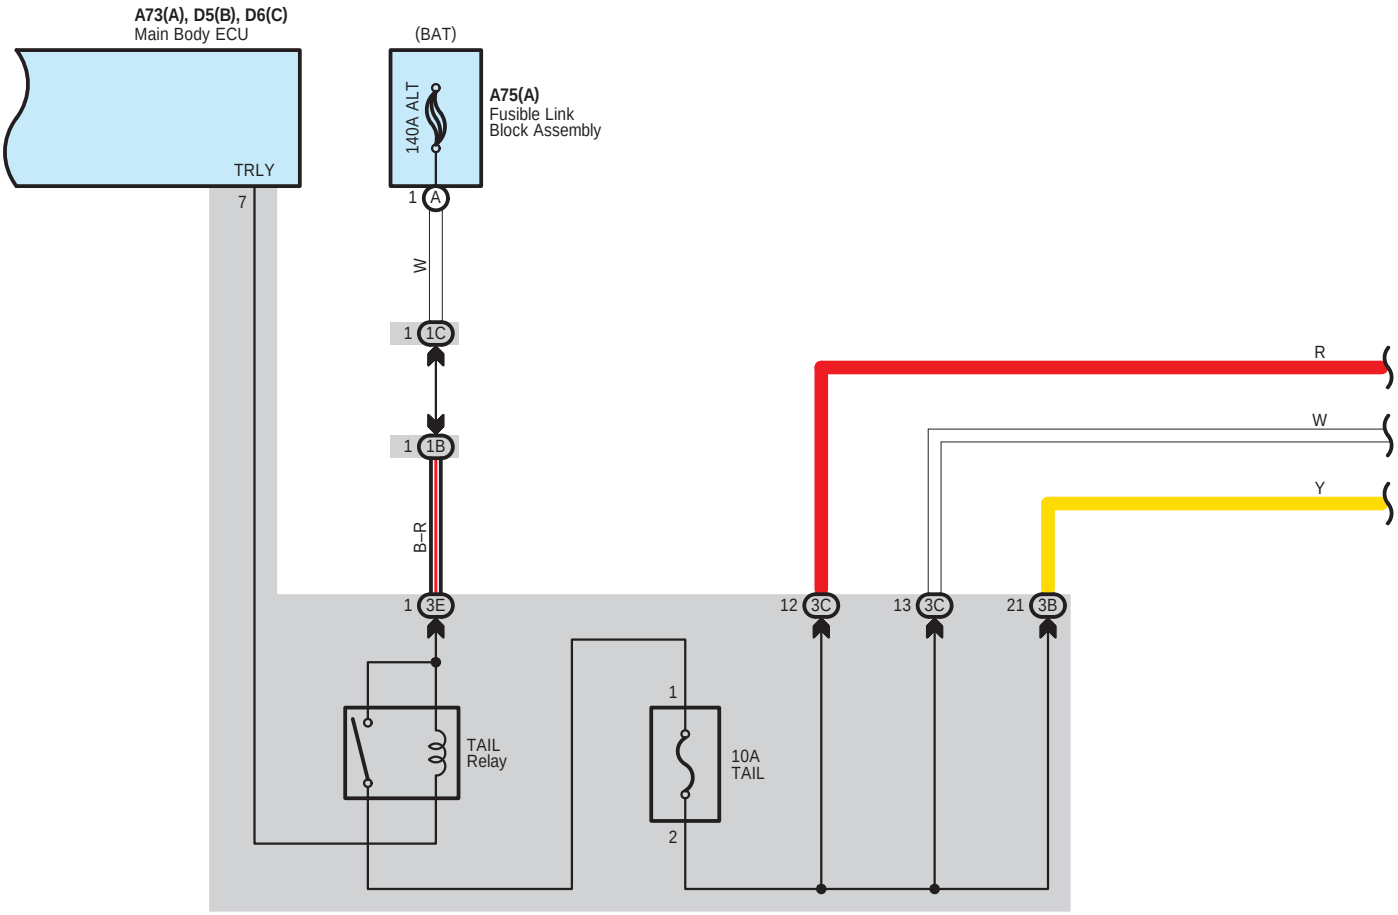

∗ 1 : LHD, RHD Headlight Dimmer Switch Assembly LH Side Type
∗ 2 : RHD Headlight Dimmer Switch Assembly RH Side Type

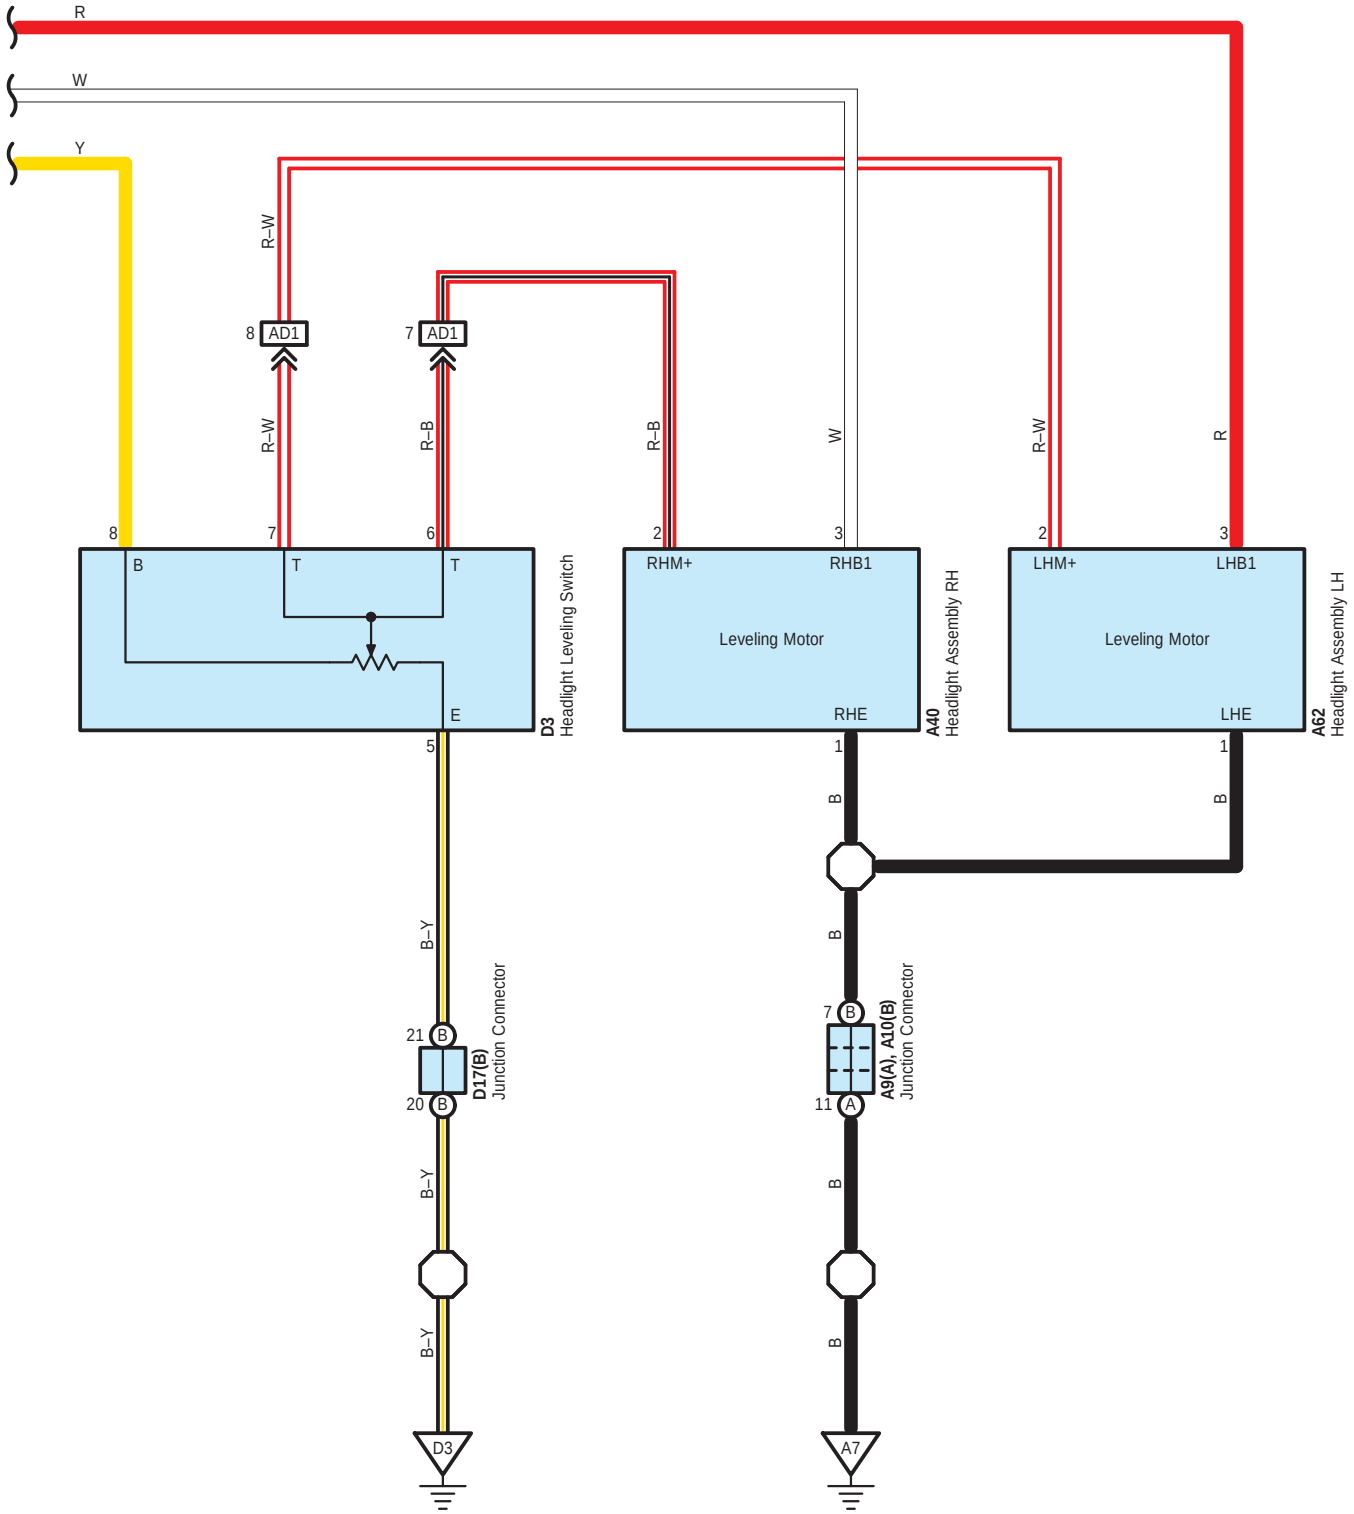
R
W
Y
R–W
8 AD1
7 AD1
R–W
R–B
R–B
W
R–W
R
8
7
6
2
3
2
3
B
T
T
E
D3
Headlight Leveling Switch
RHM+
RHB1
Leveling Motor
RHE
A40
Headlight Assembly RH
LHM+
LHB1
Leveling Motor
LHE
A62
Headlight Assembly LH
5
1
1
B
B
B–Y
21 B
20 B
D17(B)
Junction Connector
7 B
11 A
A9(A), A10(B)
Junction Connector
B–Y
B–Y
B
B
D3
A7

A 9
Gray

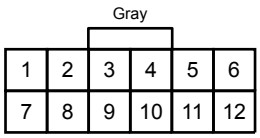

A 10
Gray

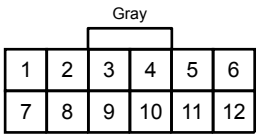

A 40
Gray



(Headlight Leveling Motor)

A 62
Gray



(Headlight Leveling Motor)

A 73
White

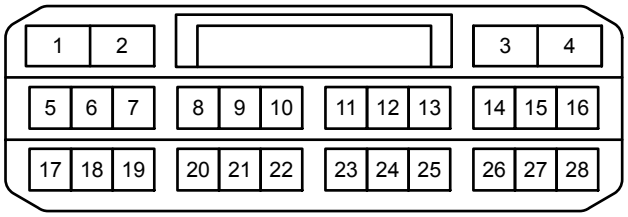

A 75



D 3
White



D 5
White

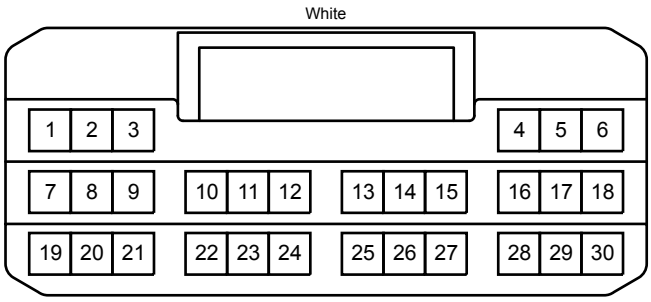

D 6
White

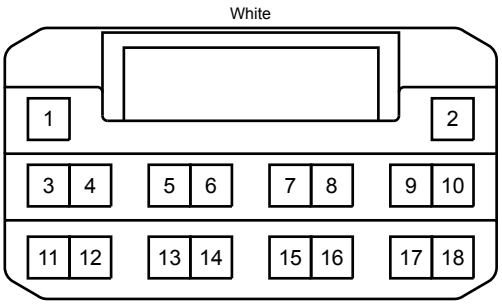

D 8
Blue

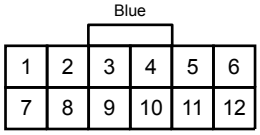

D 9
Blue

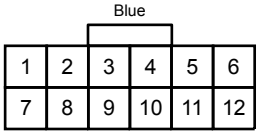

D 16
Black

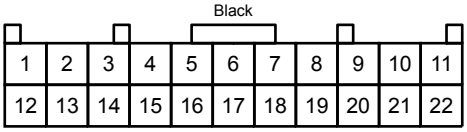

D 17
Black

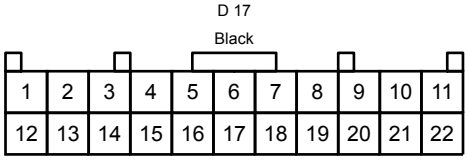

D 50
White

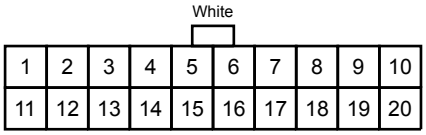

1B



1C



3A
White

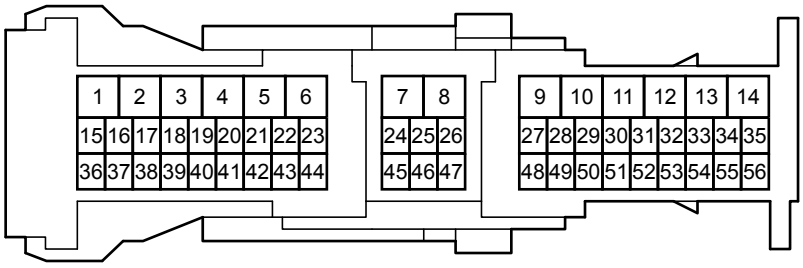

3B
White

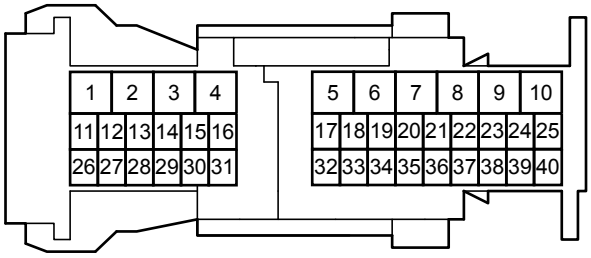

3C
White

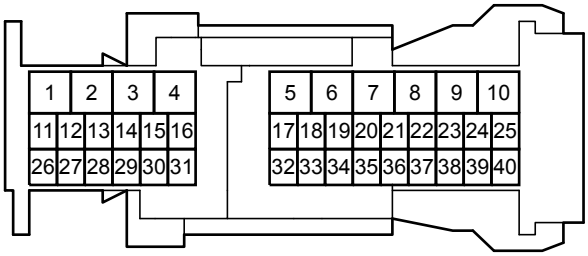

3E
White

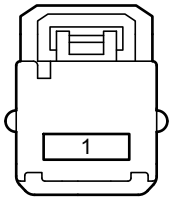

AD1
White

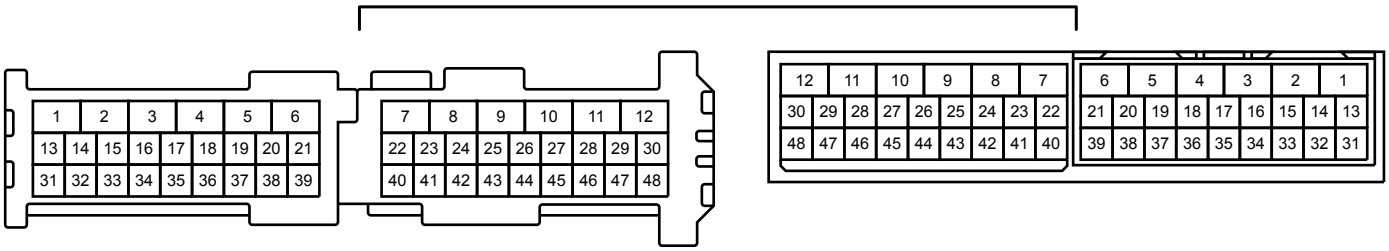
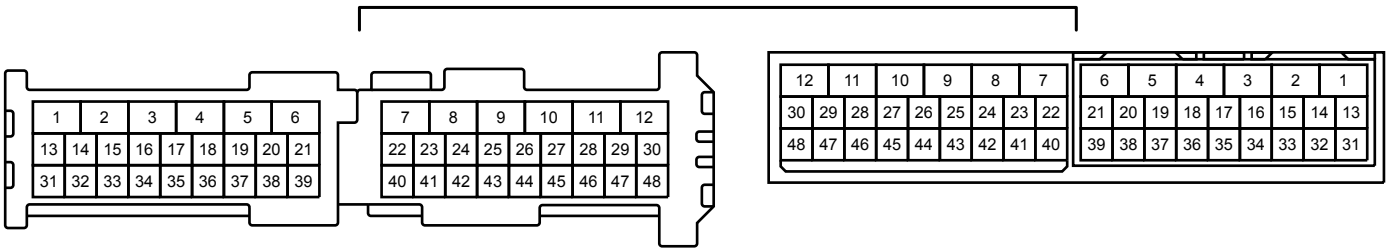
AD2
White