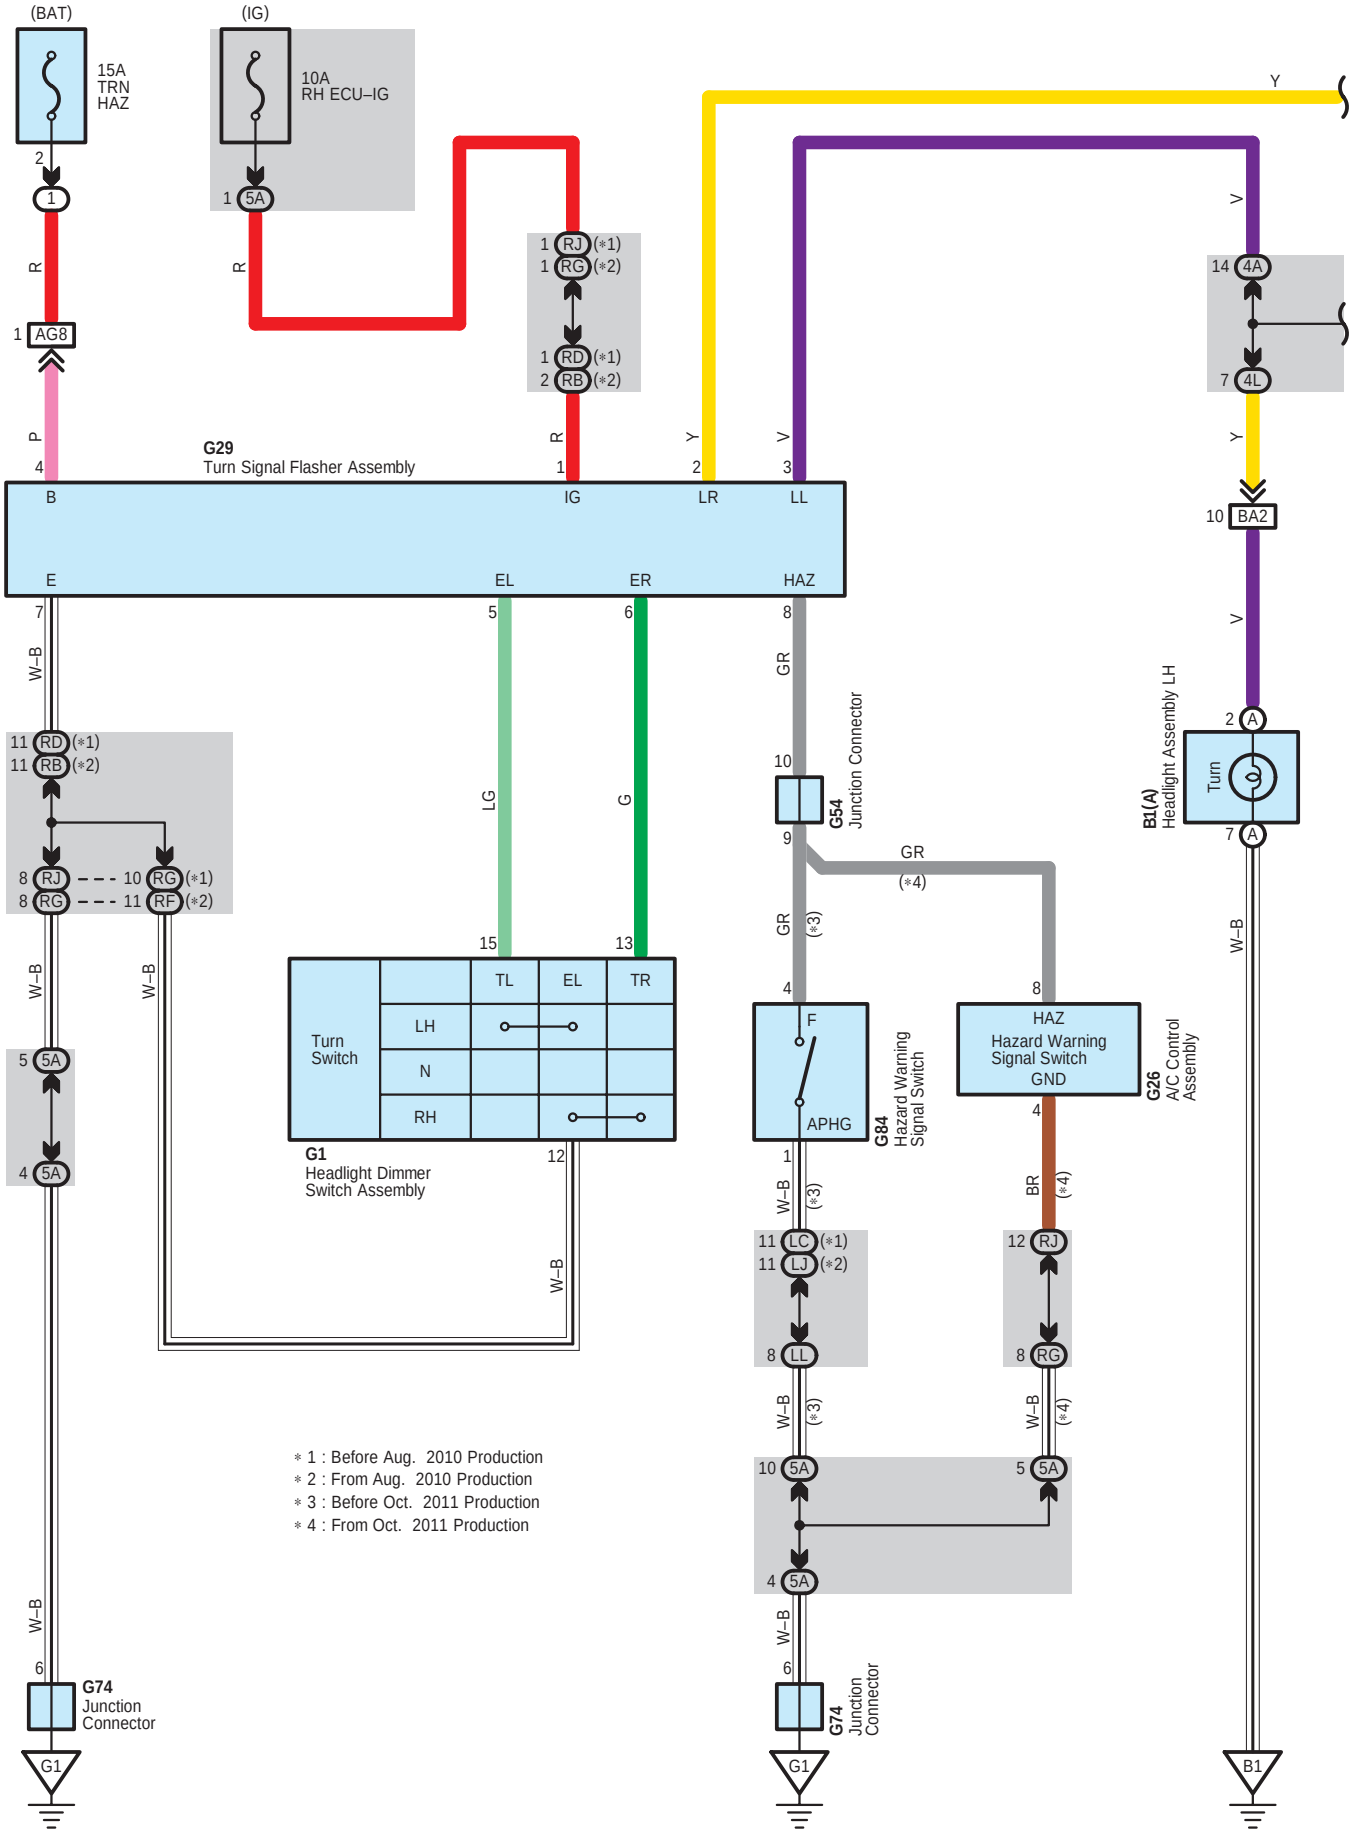
(BAT)
15A
TRN
HAZ
(IG)
10A
RH ECU–IG
AG8
G29
Turn Signal Flasher Assembly
B
IG
LR
LL
E
EL
ER
HAZ
G54
Junction Connector
G84
Hazard Warning
Signal Switch
APHG
G26
A/C Control
Assembly
HAZ
Hazard Warning
Signal Switch
GND
B1(A)
Headlight Assembly LH
Turn
BA2
4A
4L
Turn
Switch
LH
N
RH
TL
EL
TR
G1
Headlight Dimmer
Switch Assembly
G74
Junction
Connector
G1
B1
∗1 : Before Aug. 2010 Production
∗2 : From Aug. 2010 Production
∗3 : Before Oct. 2011 Production
∗4 : From Oct. 2011 Production

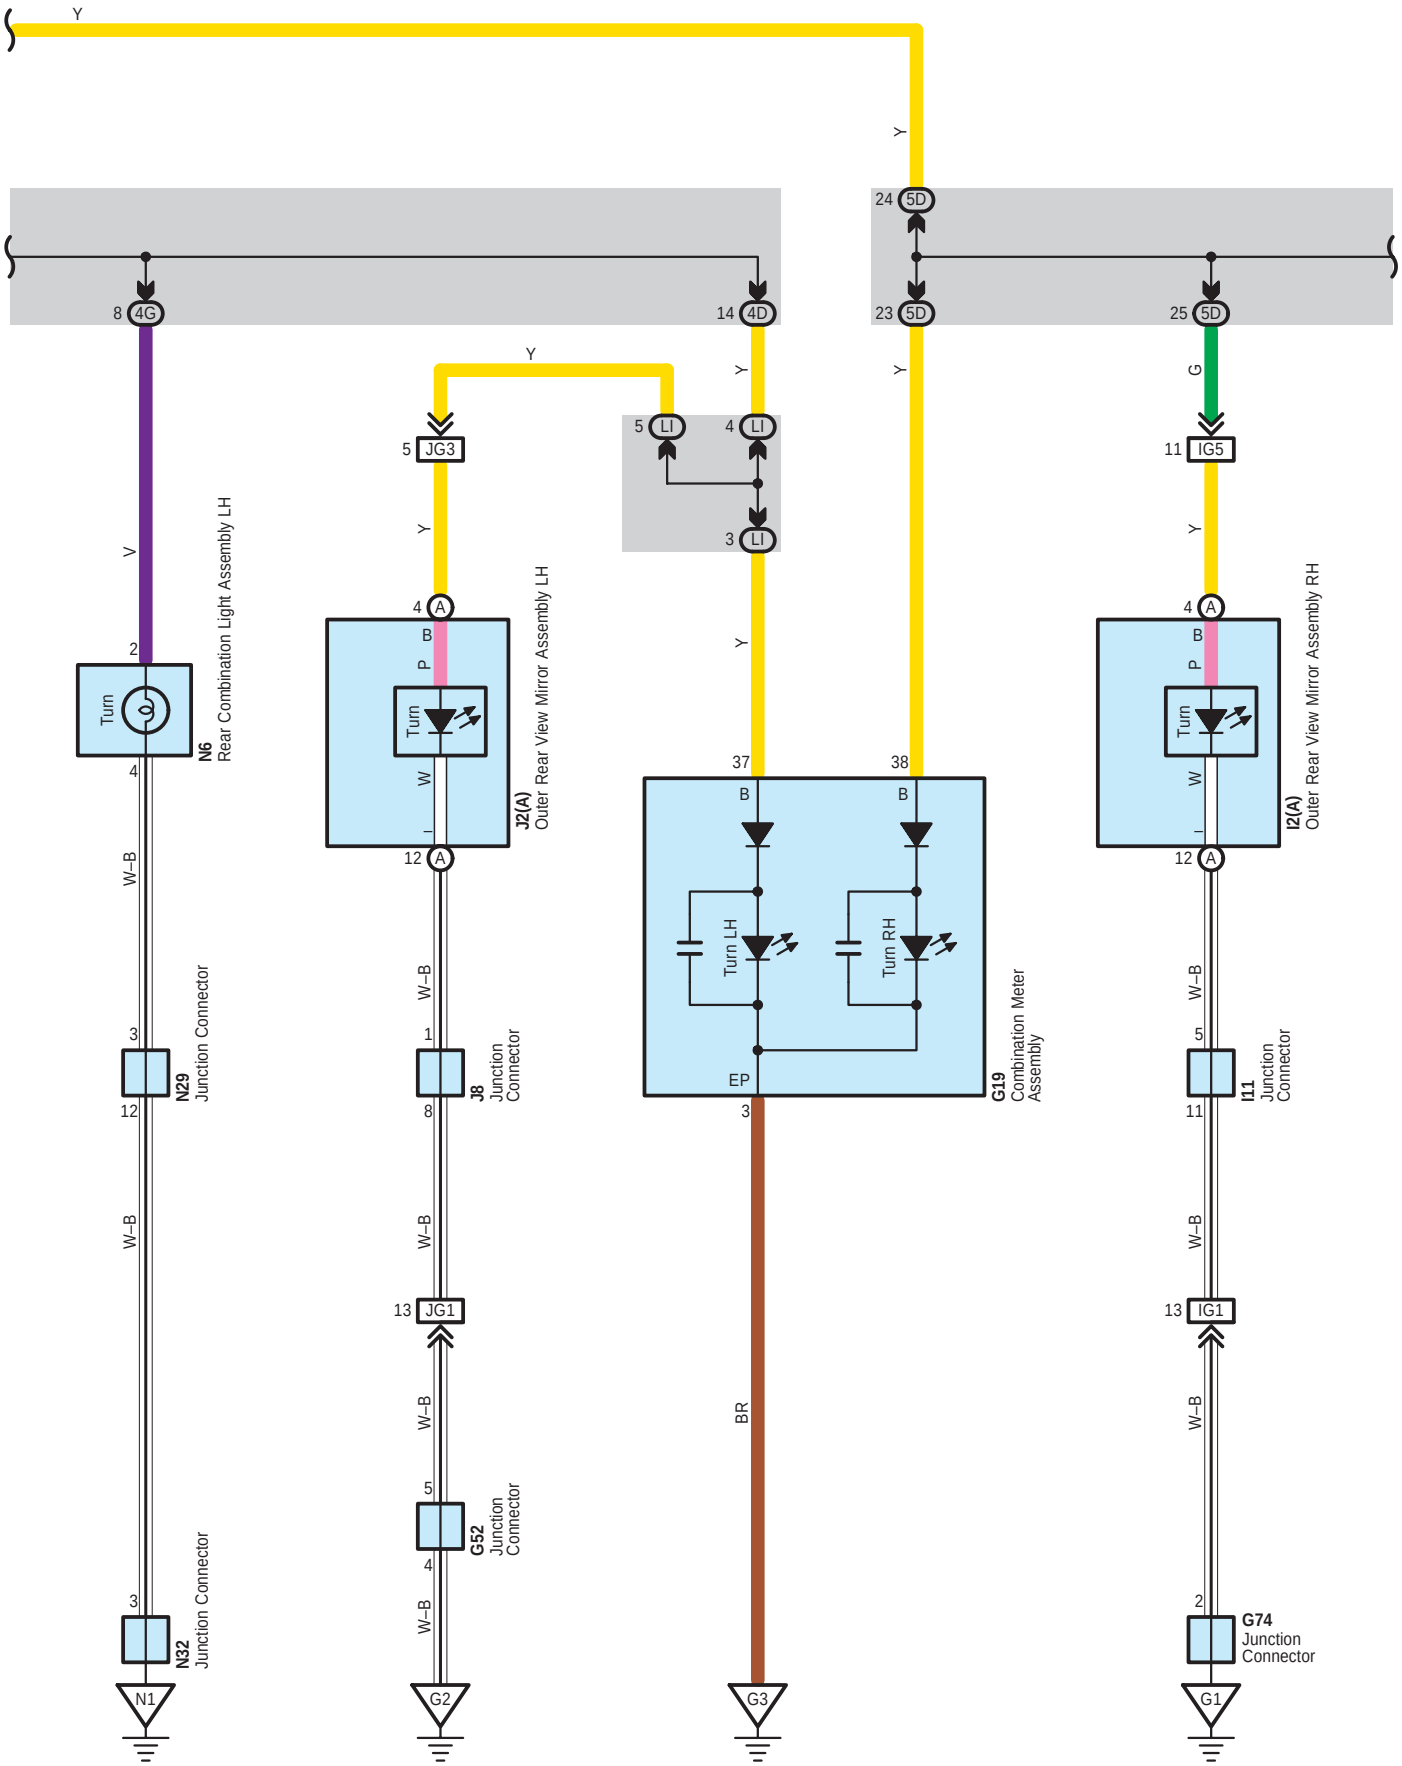
Y
24 5D
8 4G
14 4D
23 5D
25 5D
5 JG3
5 LI
4 LI
3 LI
11 IG5
V
Y
G
Turn
N6
Rear Combination Light Assembly LH
4 A
B
P
W
J2(A)
Outer Rear View Mirror Assembly LH
12 A
I2(A)
Outer Rear View Mirror Assembly RH
37
38
Turn LH
Turn RH
EP
G19
Combination Meter Assembly
W–B
N29
Junction Connector
J8
Junction Connector
I11
Junction Connector
13 JG1
13 IG1
BR
G52
Junction Connector
N32
Junction Connector
G74
Junction Connector
N1
G2
G3
G1

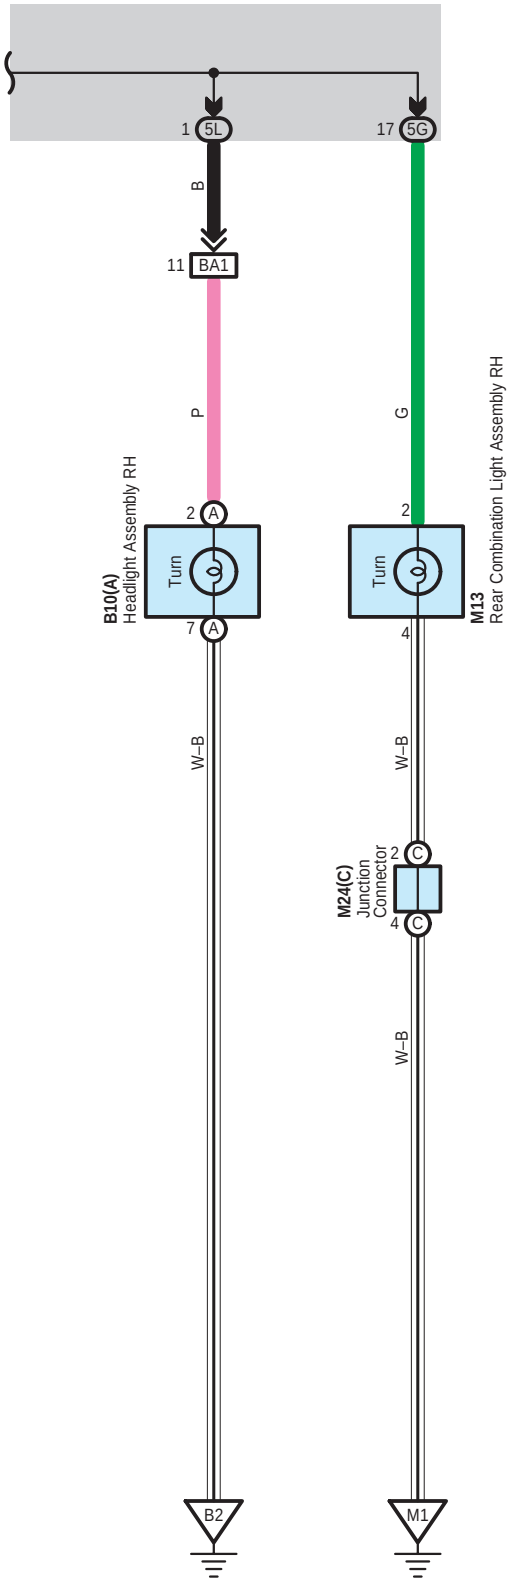
1
5L
B
11
BA1
P
2
A
B10(A)
Headlight Assembly RH
Turn
7
A
W–B
B2
17
5G
G
2
M13
Rear Combination Light Assembly RH
Turn
4
W–B
2
C
M24(C)
Junction
Connector
4
C
W–B
M1

B 1
Gray

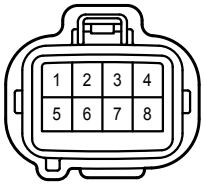

B 10
Gray

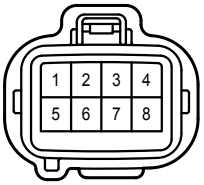

G 1
White

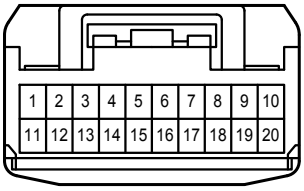

G 19
White

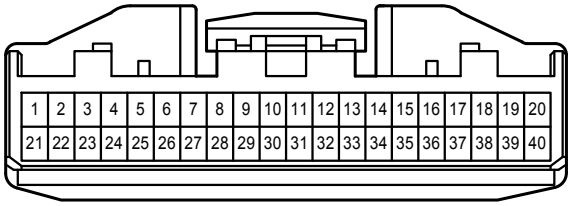

G 26
Black

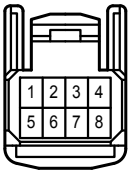

G 29
Black

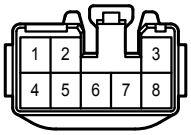

G 52
Gray

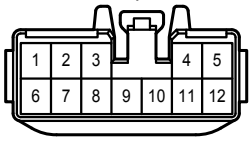

G 54
Blue

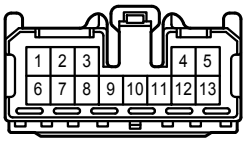

G 74
White

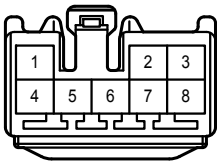

G 84
Gray

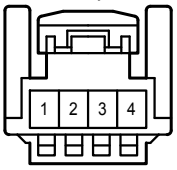

I 2
White

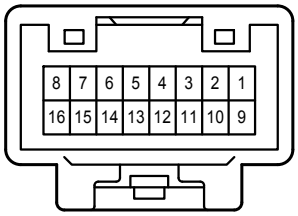

I 11
Blue

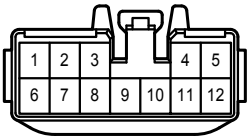

J 2
White

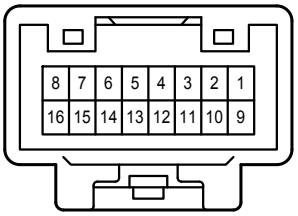

J 8
Blue

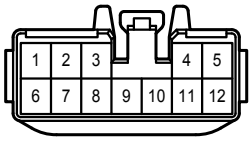

M 13
White



M 24
Blue

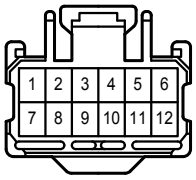

(Before Jun. 2009 Production)

M 24
Blue

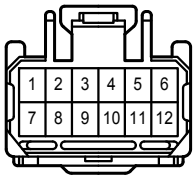

(From Jun. 2009 Production)

N 6
White



N 29
Blue

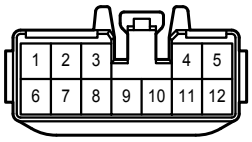

N 32
Black

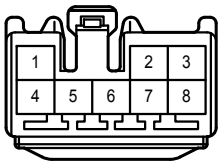

4A
White

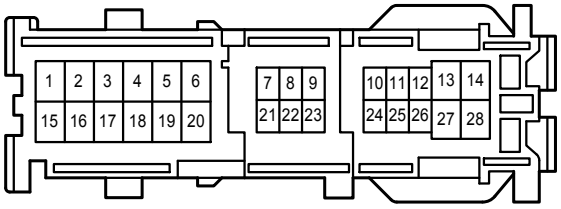

4D
White

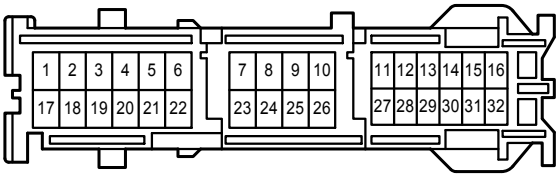

4G
White

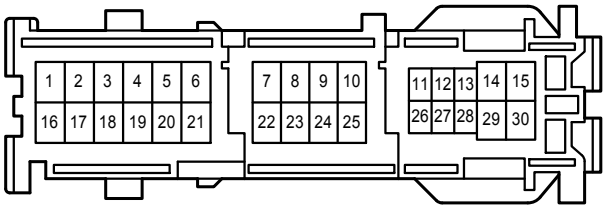

4L
Gray

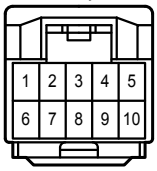

5A
White

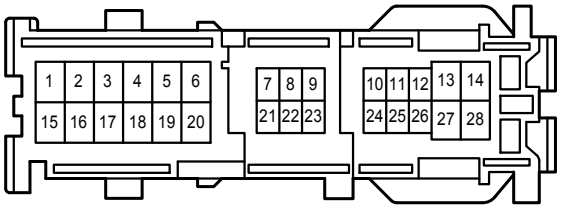

5D
White

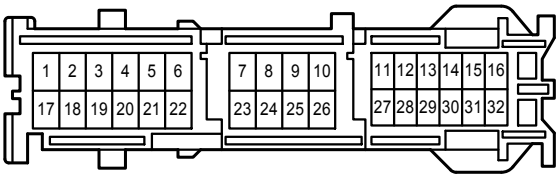

5G
White

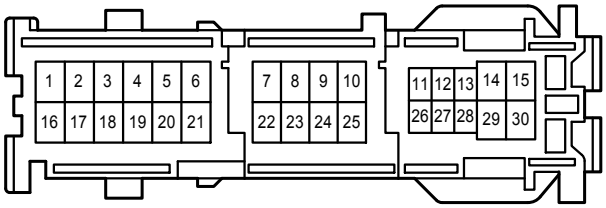

5L
Gray

LC
White



LI
White



LJ
Gray



LL
Gray



RB
Gray



RD
Gray



RF
Gray



RG
White



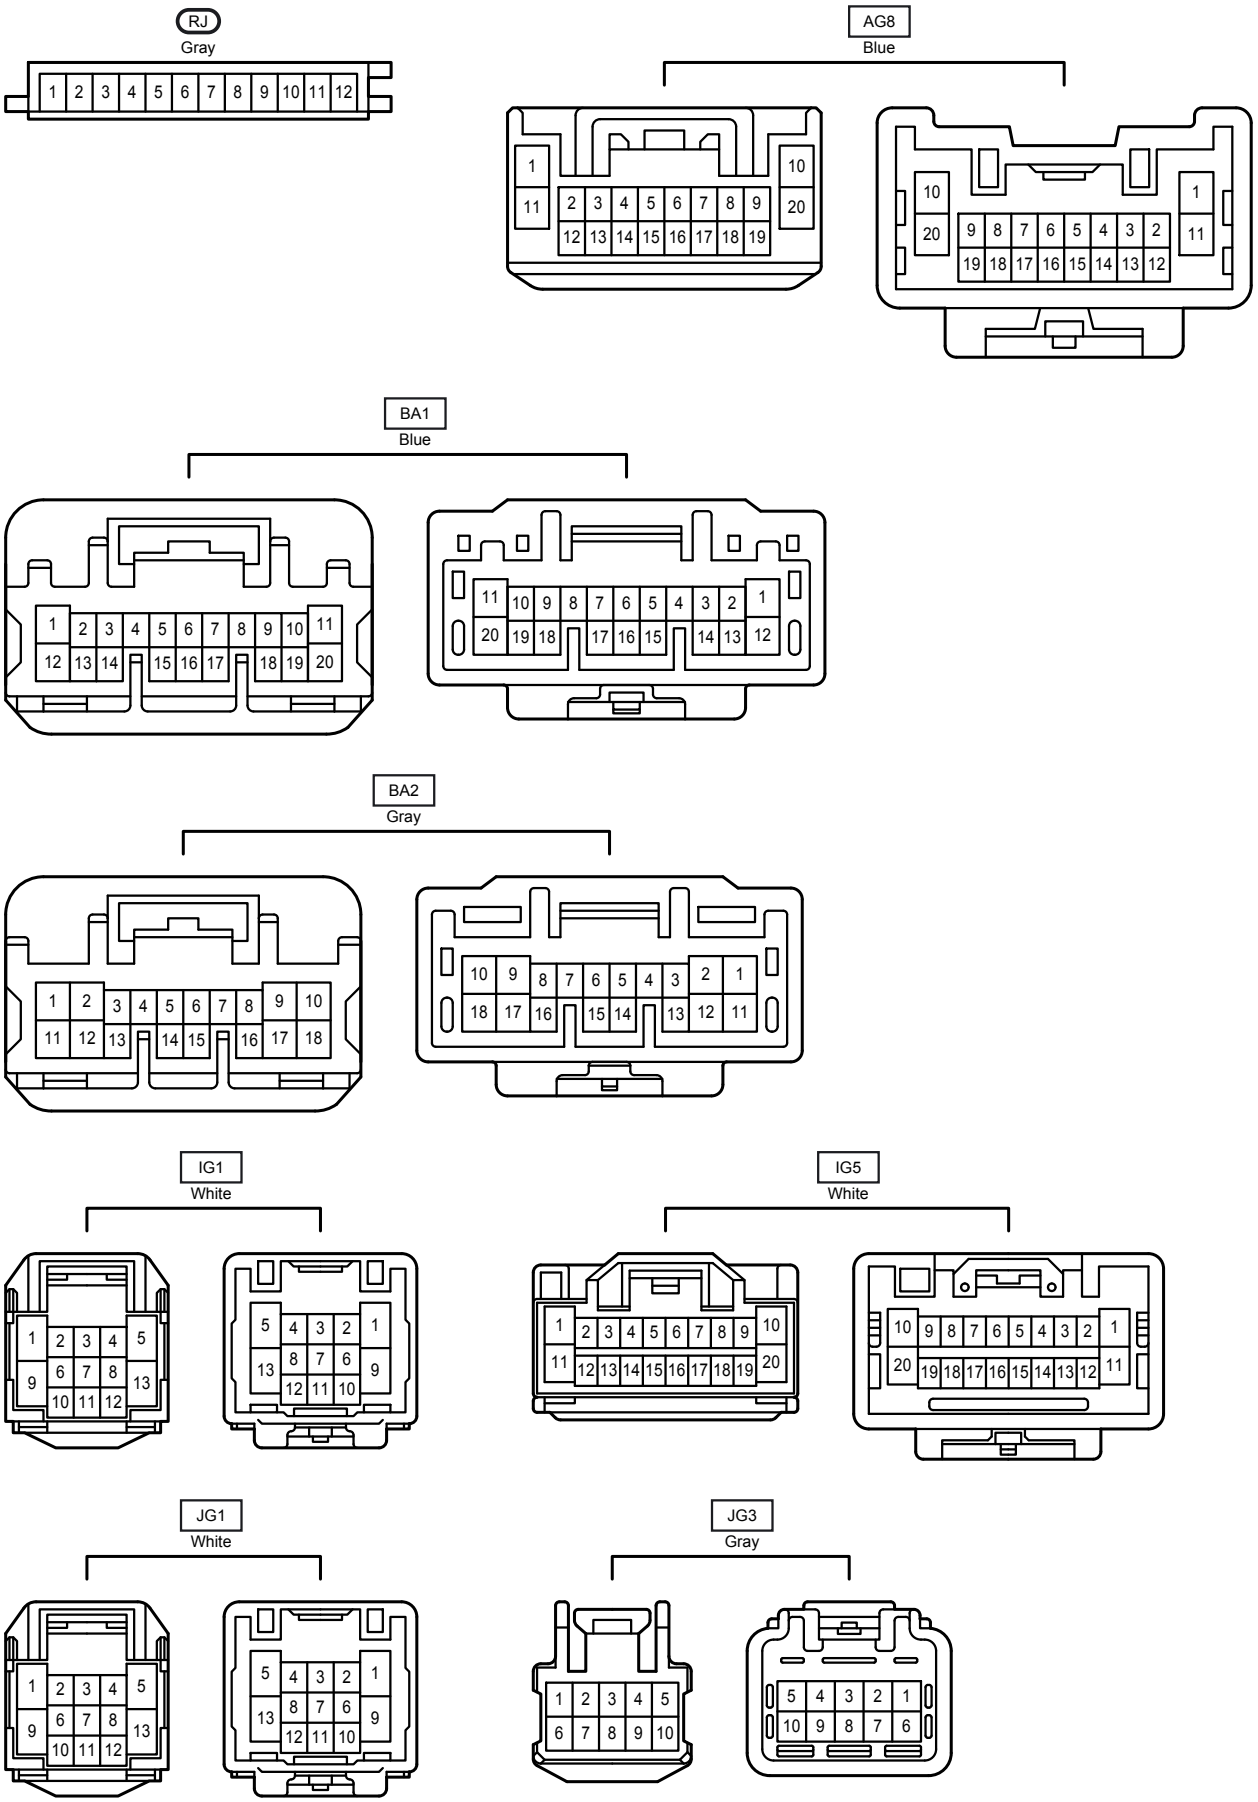
RJ
Gray
AG8
Blue
BA1
Blue
BA2
Gray
IG1
White
IG5
White
JG1
White
JG3
Gray