(Cont. next page)

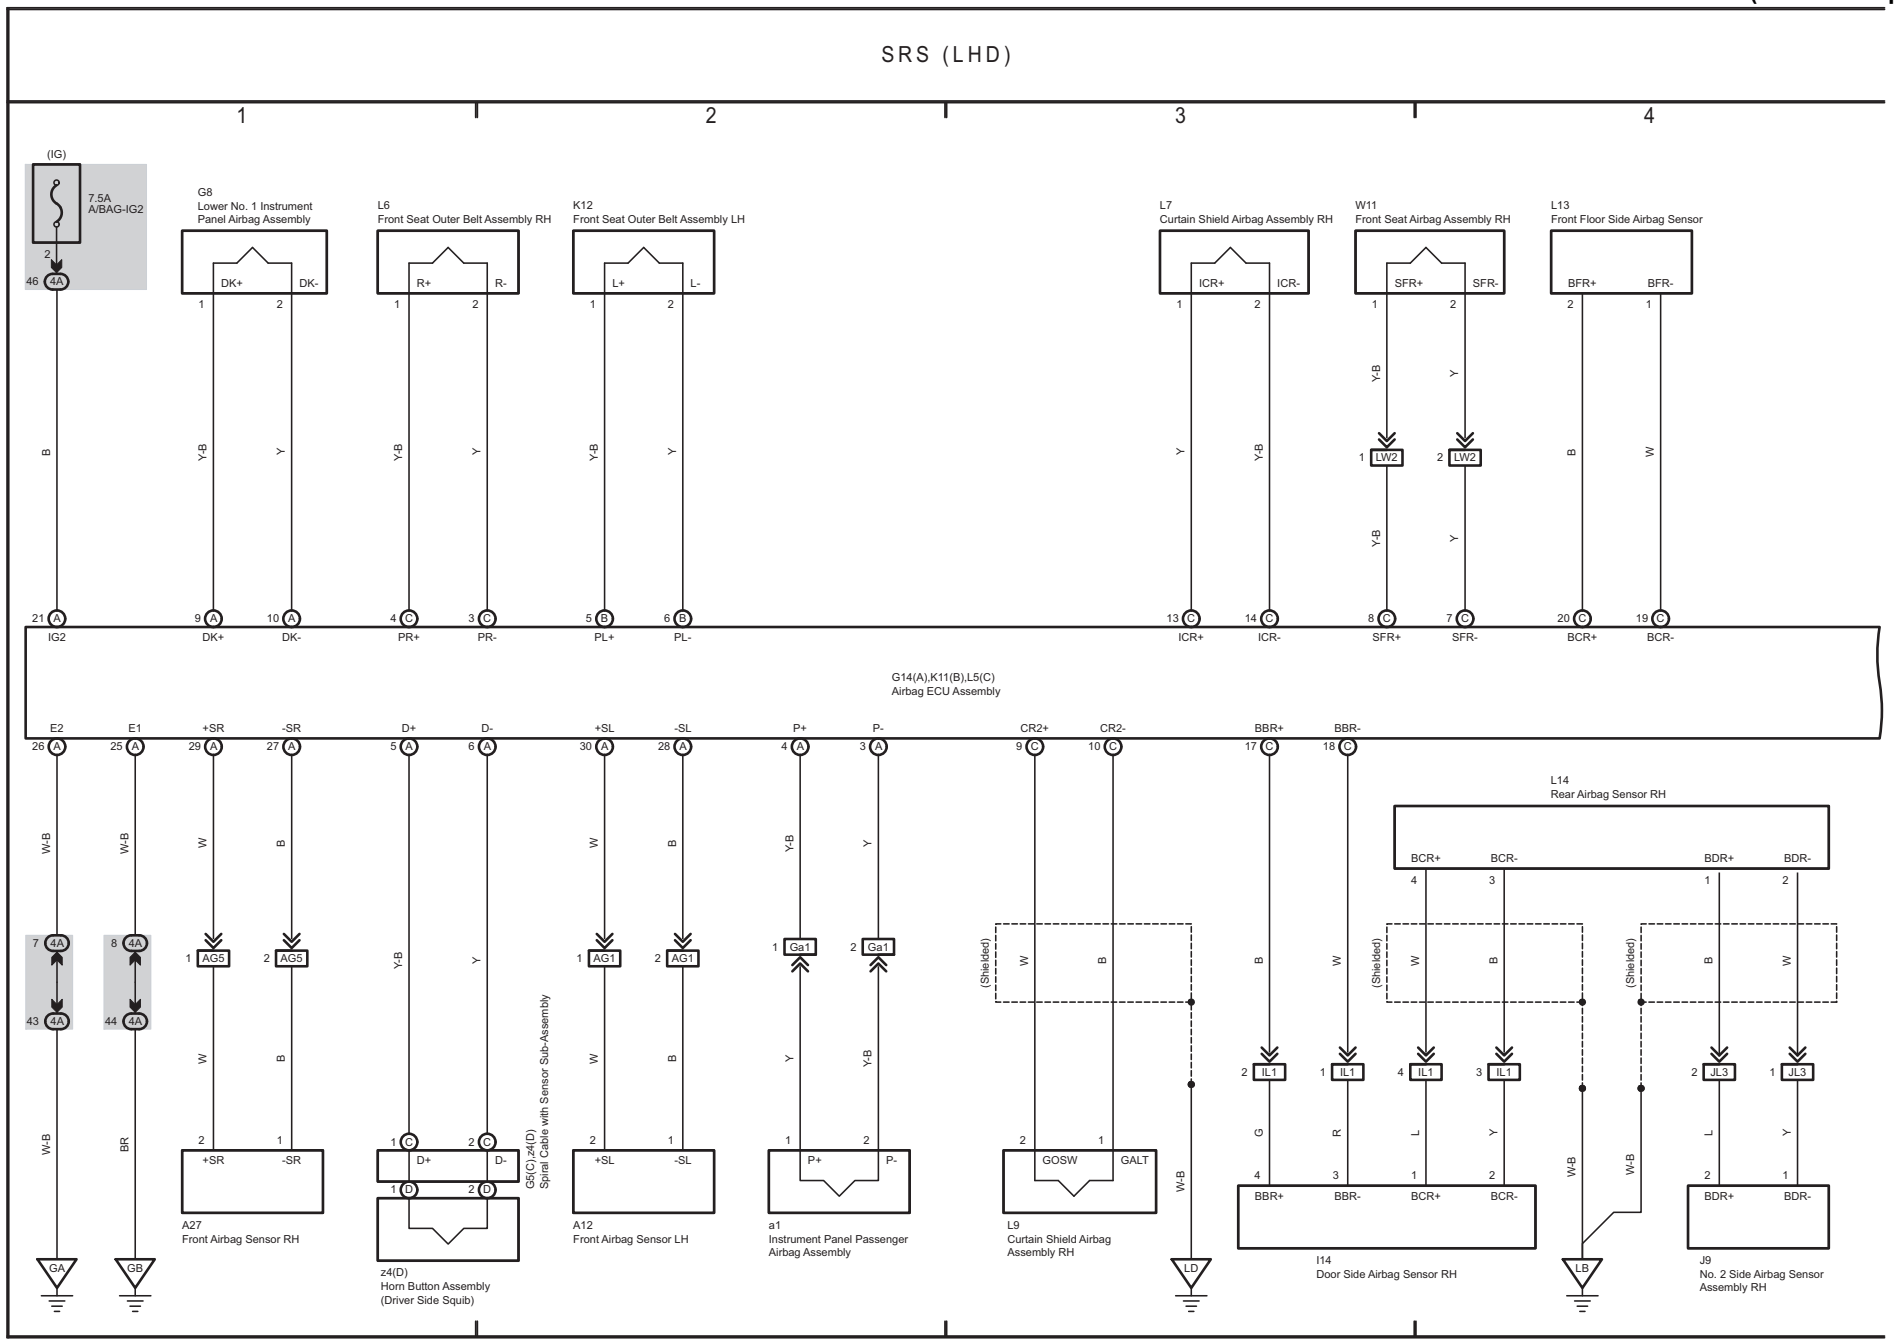

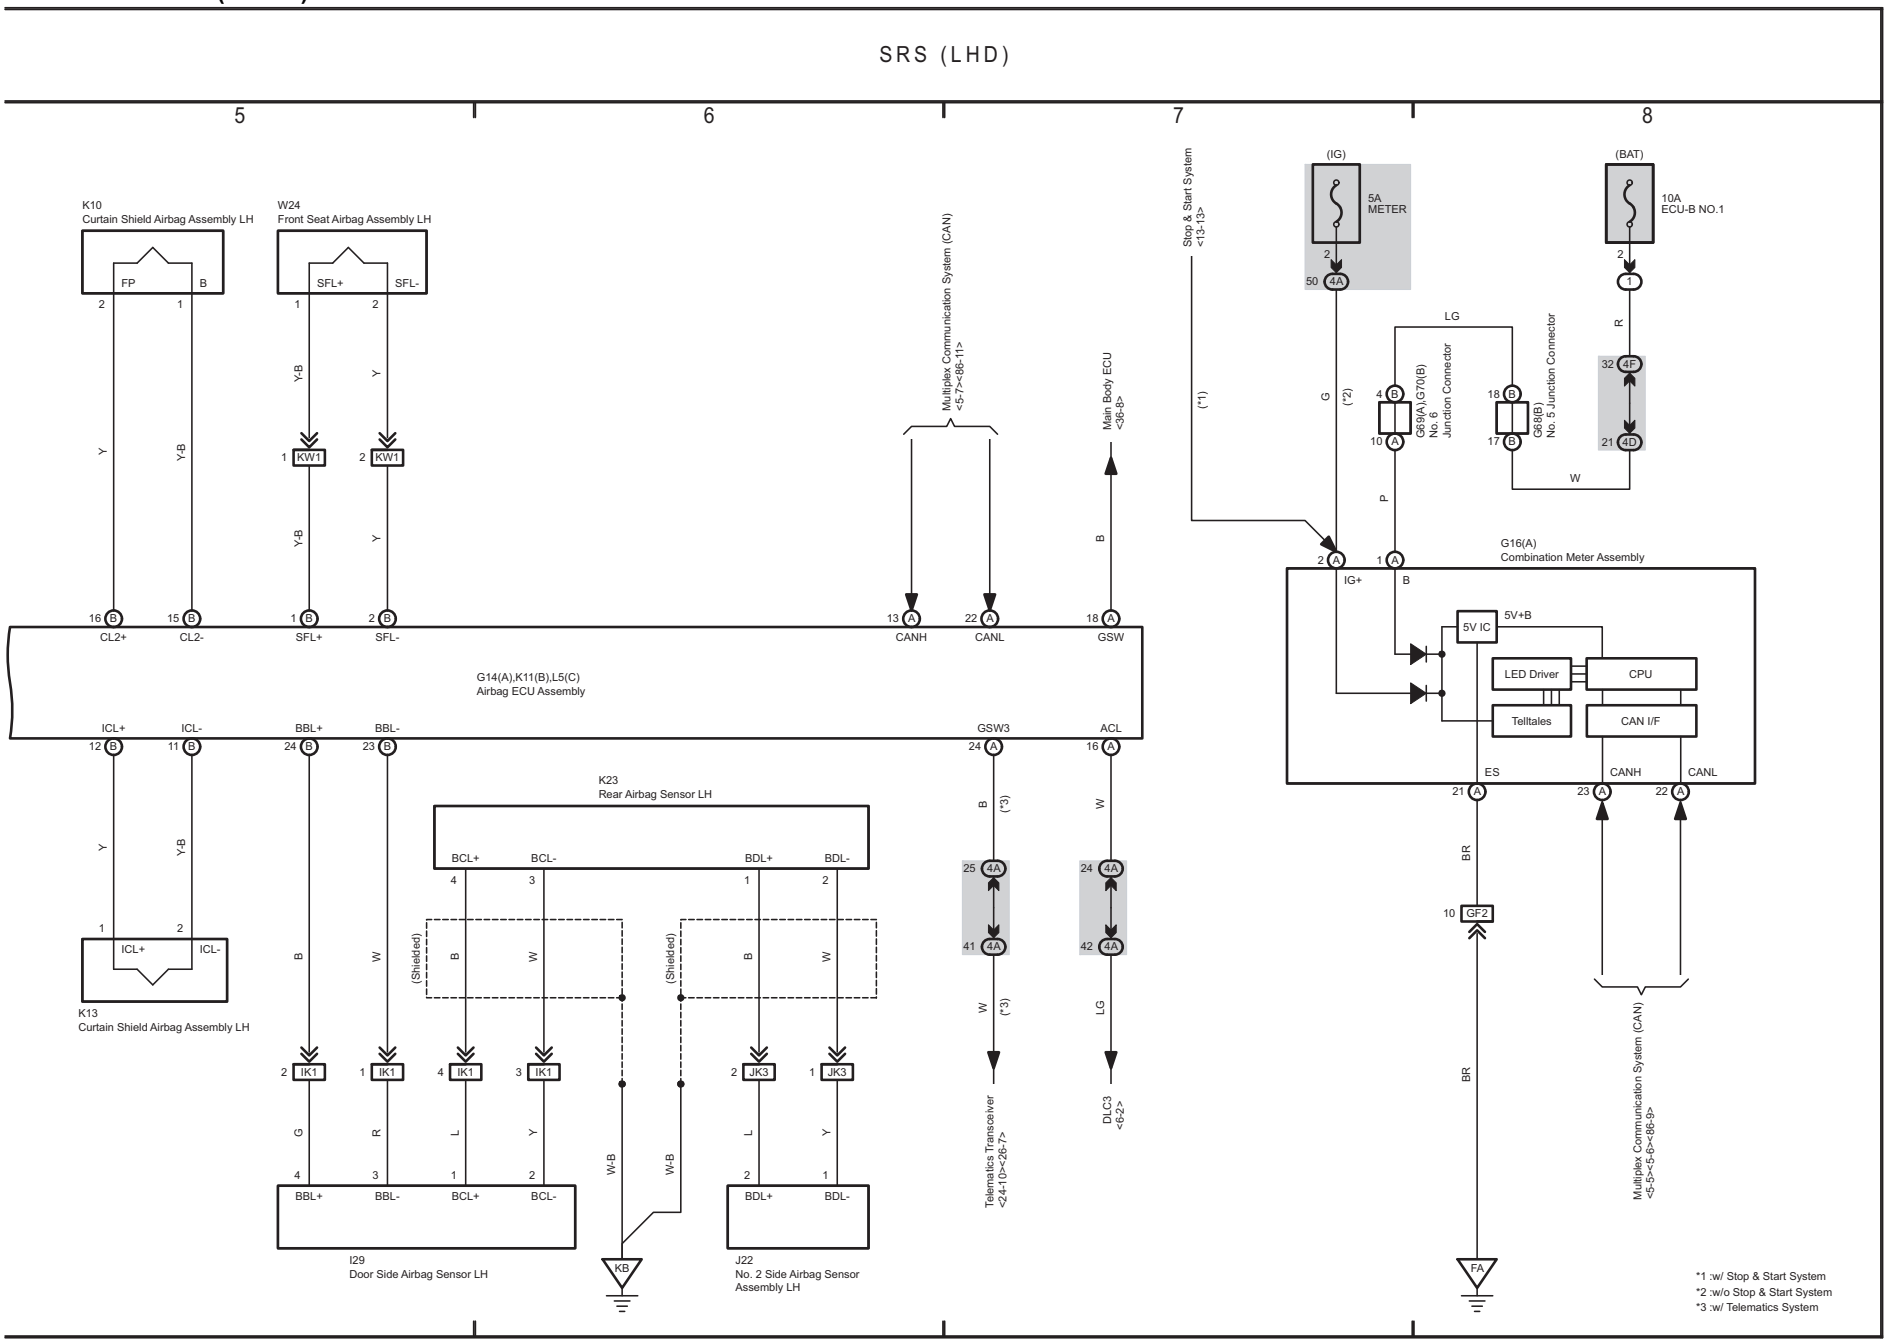
SRS (LHD)
5
6
7
8
K10
Curtain Shield Airbag Assembly LH
W24
Front Seat Airbag Assembly LH
Multiplex Communication System (CAN)
<5-7><86-11>
Main Body ECU
<36-8>
Stop & Start System
<13-13>
(IG)
5A
METER
(BAT)
10A
ECU-B NO.1
G69(A),G70(B)
No. 6
Junction Connector
G68(B)
No. 5 Junction Connector
G16(A)
Combination Meter Assembly
5V IC
5V+B
LED Driver
CPU
Telltales
CAN I/F
CL2+
CL2-
SFL+
SFL-
CANH
CANL
GSW
G14(A),K11(B),L5(C)
Airbag ECU Assembly
ICL+
ICL-
BBL+
BBL-
GSW3
ACL
K23
Rear Airbag Sensor LH
BCL+
BCL-
BDL+
BDL-
(Shielded)
K13
Curtain Shield Airbag Assembly LH
I29
Door Side Airbag Sensor LH
J22
No. 2 Side Airbag Sensor
Assembly LH
Telematics Transceiver
<24-10><26-7>
DLC3
<6-2>
Multiplex Communication System (CAN)
<5-5><5-6><86-9>
ES
GF2
KB
FA
*1 :w/ Stop & Start System
*2 :w/o Stop & Start System
*3 :w/ Telematics System