(Cont. next page)

Power Seat (Rear No.1 Seat w/ Seat Position Memory) (LH Side)

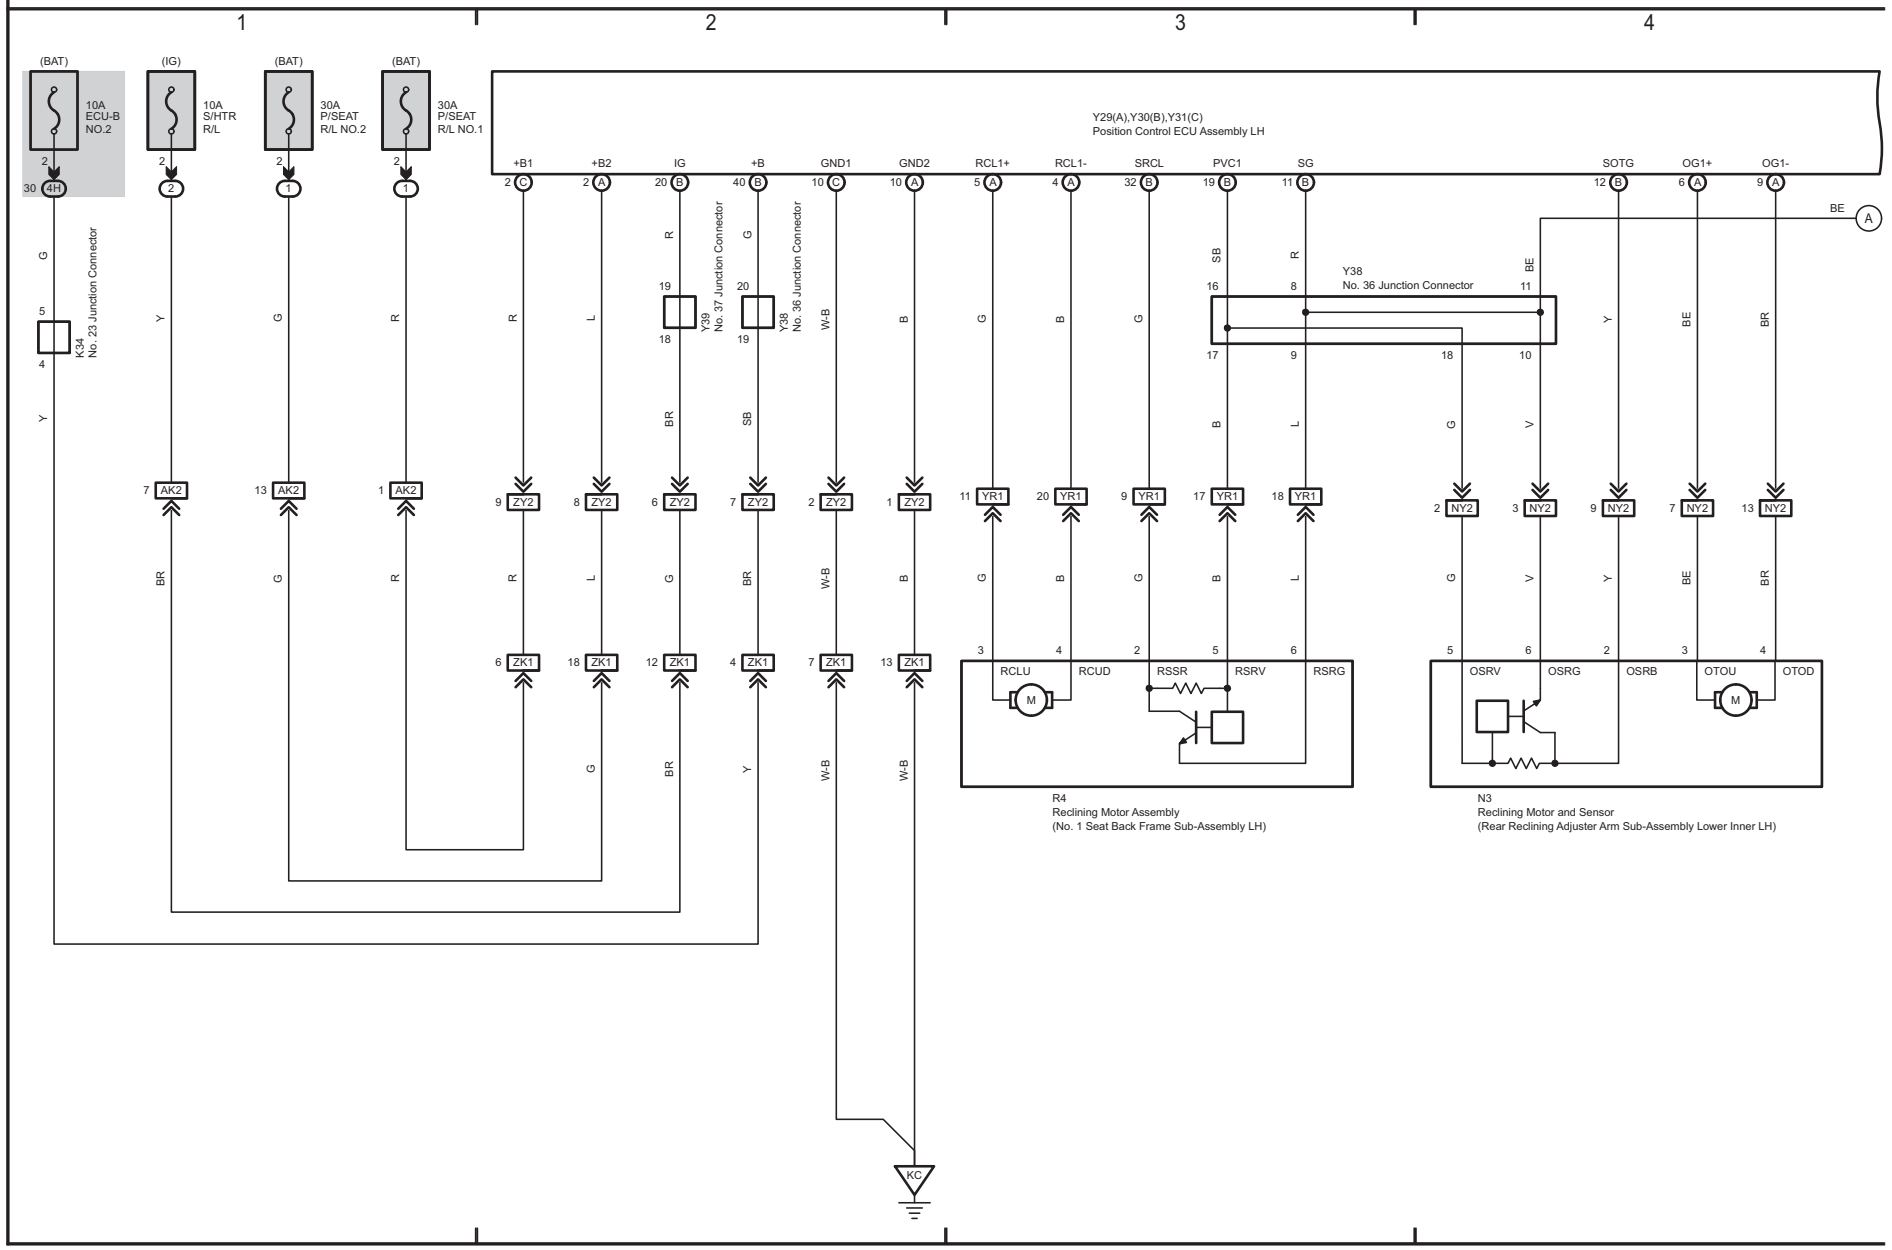

(Cont. next page)

Power Seat (Rear No.1 Seat w/ Seat Position Memory) (LH Side)

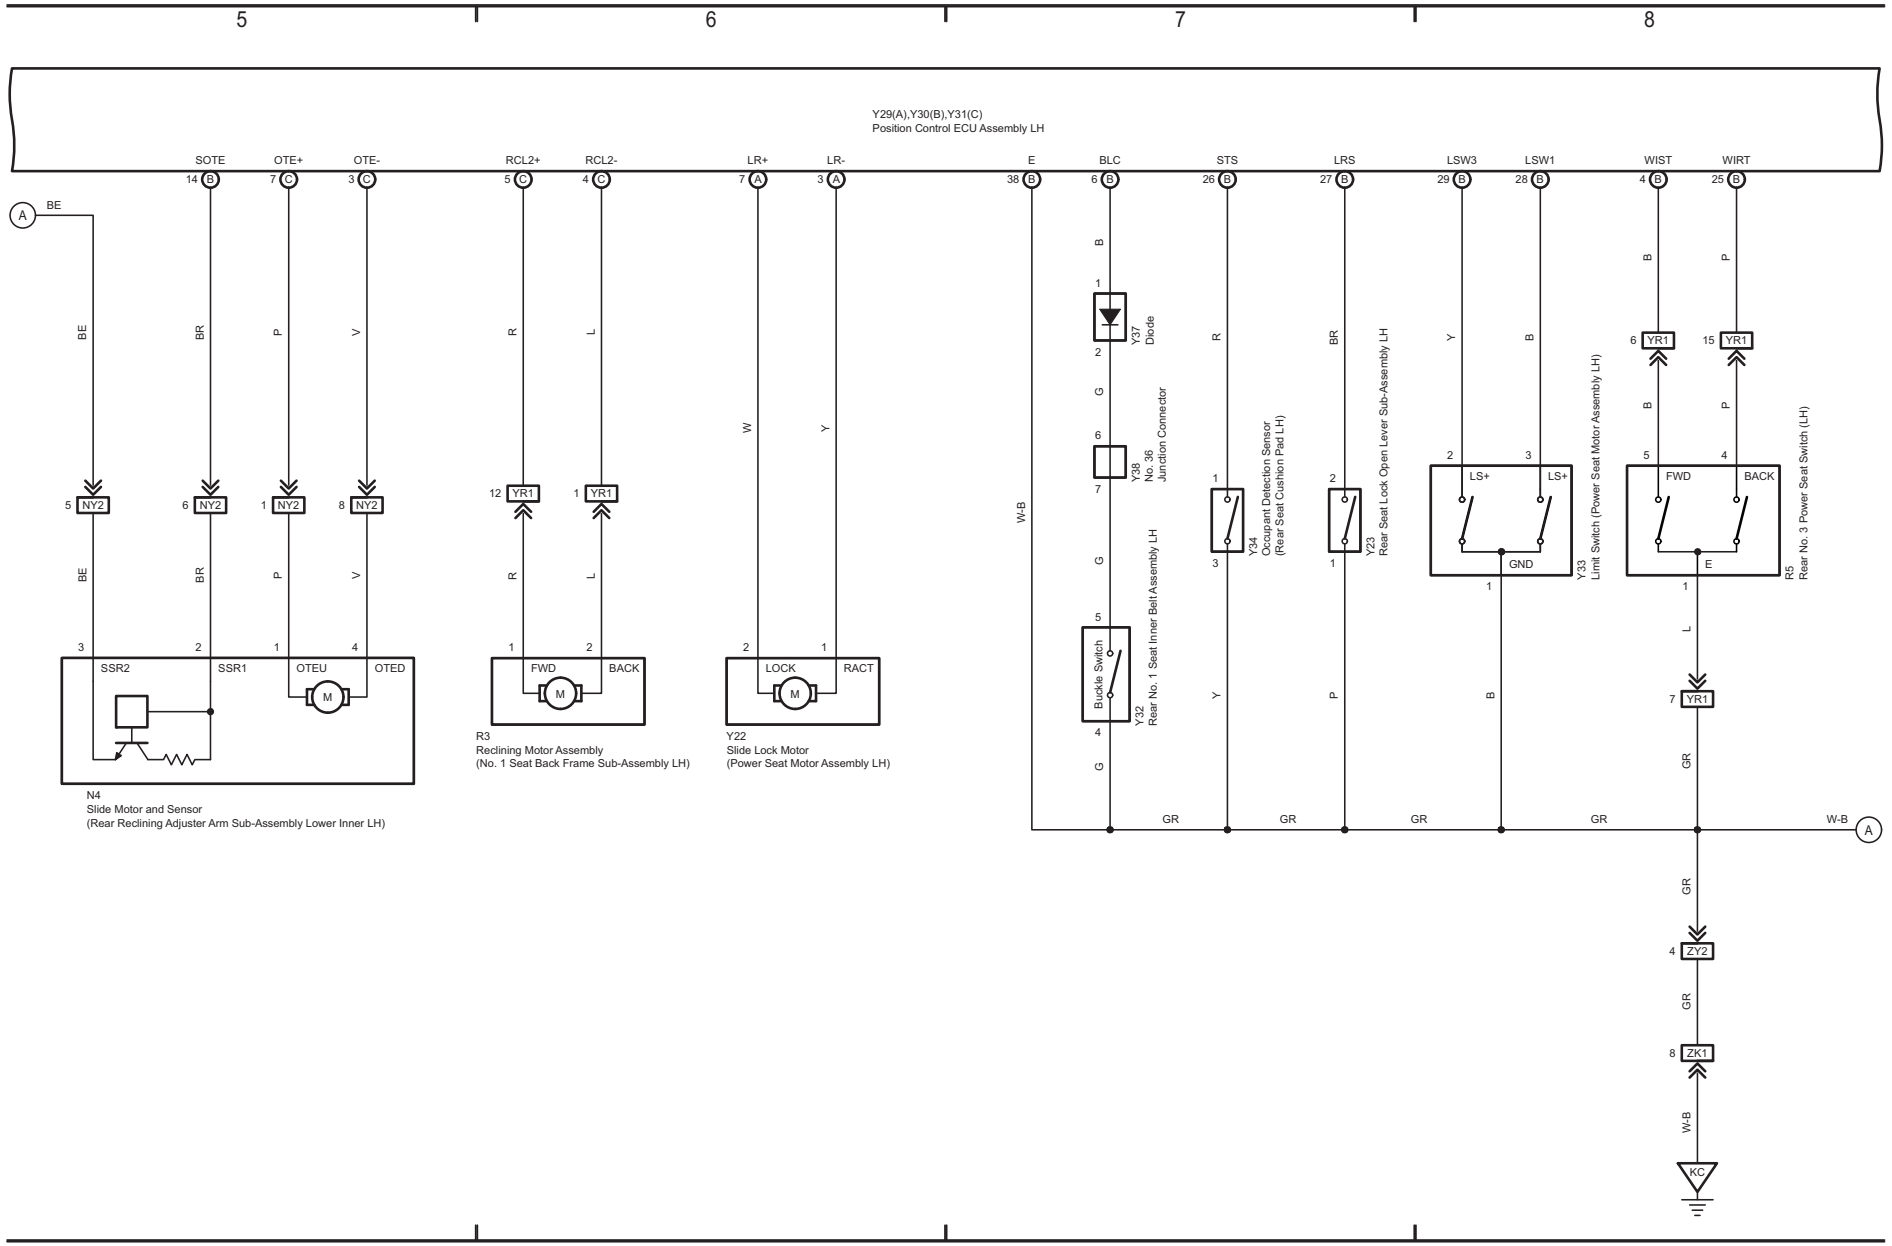

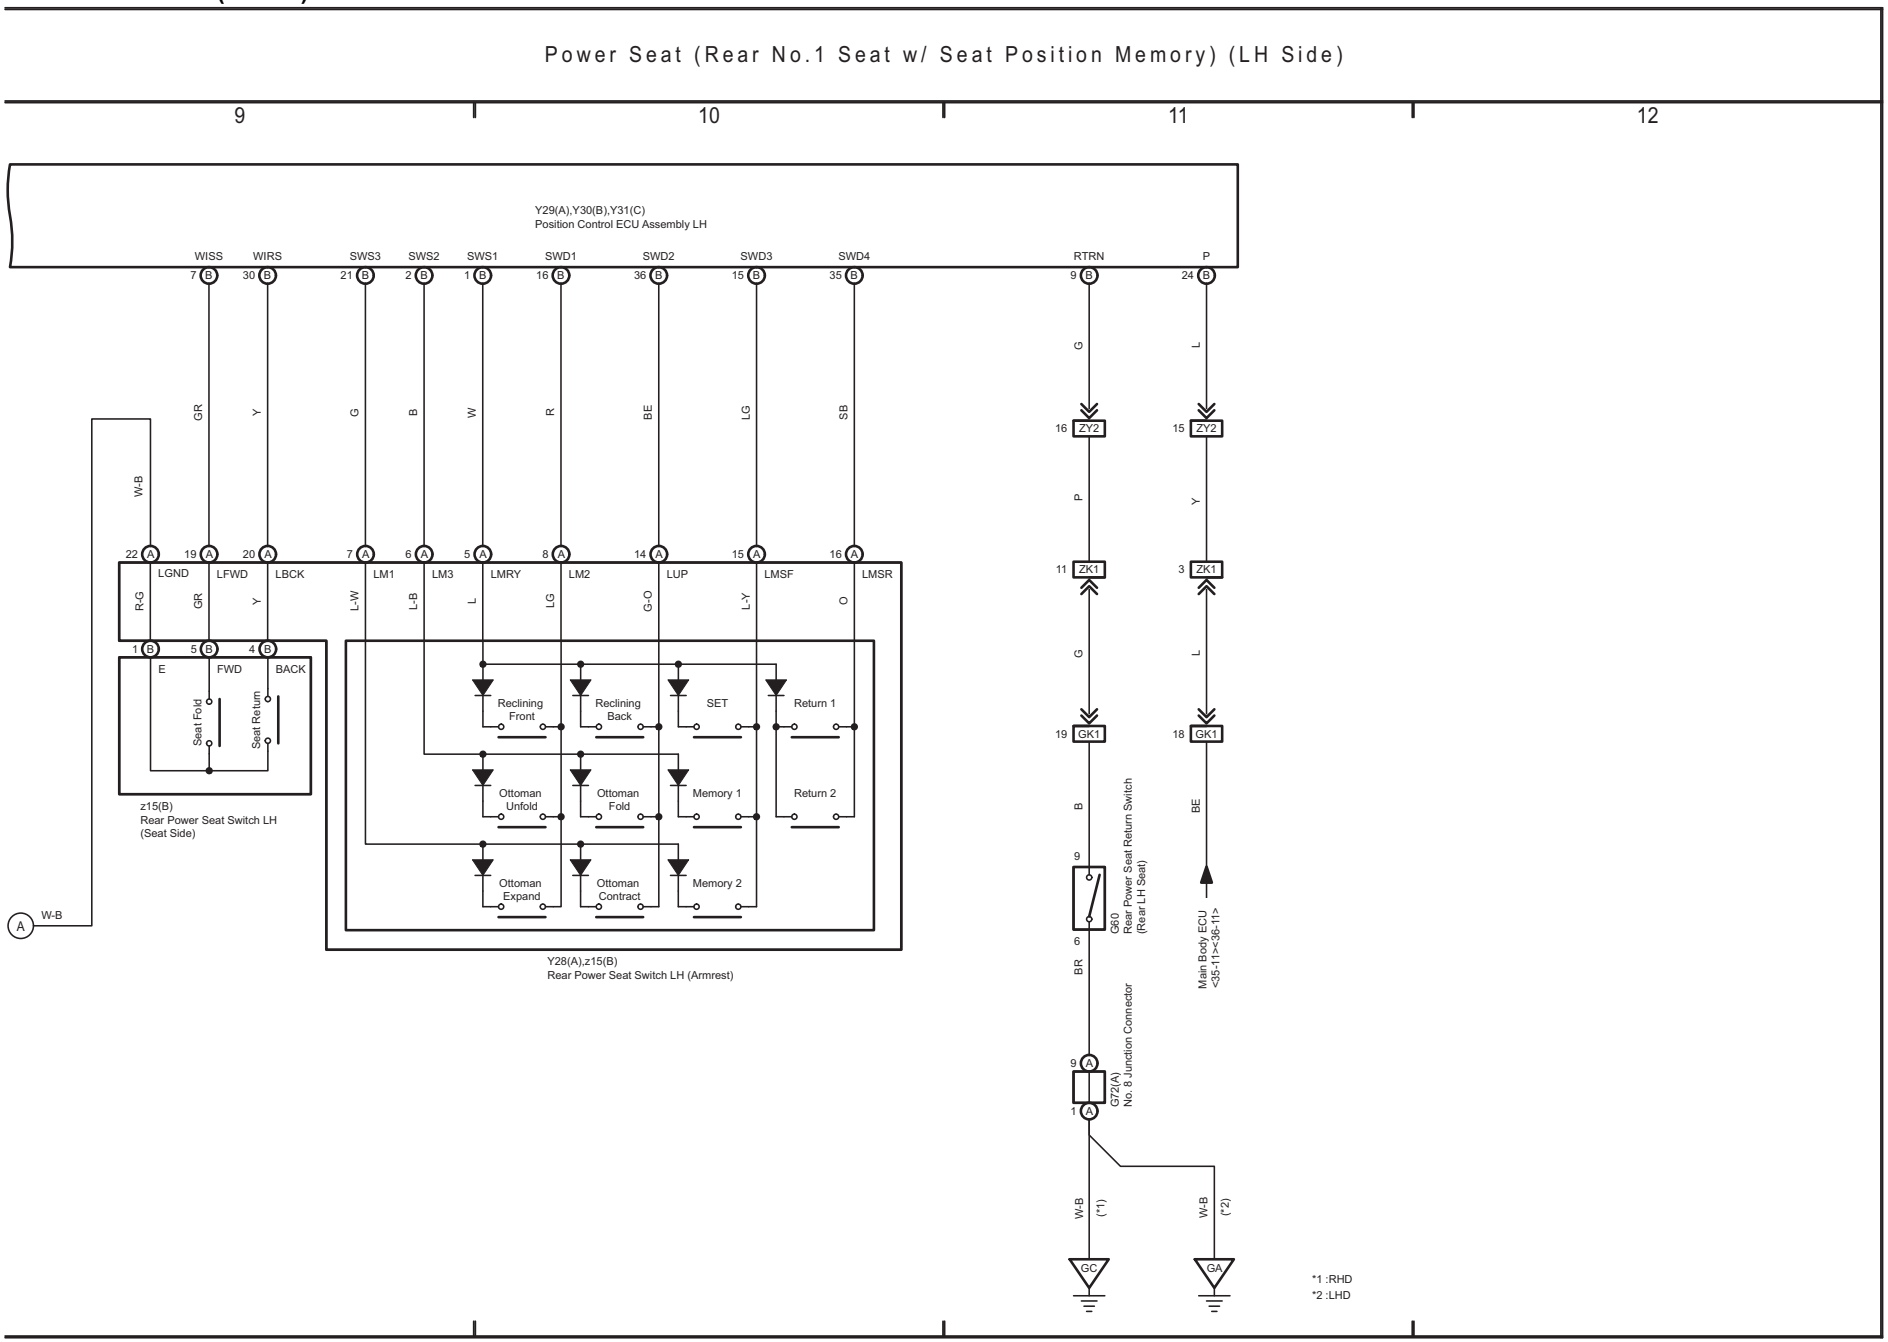
Power Seat (Rear No.1 Seat w/ Seat Position Memory) (LH Side)
9
10
11
12
Y29(A),Y30(B),Y31(C)
Position Control ECU Assembly LH
WISS
WIRS
SWS3
SWS2
SWS1
SWD1
SWD2
SWD3
SWD4
RTRN
P
LGND
LFWD
LBCK
LM1
LM3
LMRY
LM2
LUP
LMSF
LMSR
E
FWD
BACK
Seat Fold
Seat Return
z15(B)
Rear Power Seat Switch LH
(Seat Side)
Reclining Front
Reclining Back
SET
Return 1
Ottoman Unfold
Ottoman Fold
Memory 1
Return 2
Ottoman Expand
Ottoman Contract
Memory 2
Y28(A),z15(B)
Rear Power Seat Switch LH (Armrest)
ZY2
ZK1
GK1
G60
Rear Power Seat Return Switch
(Rear LH Seat)
G72(A)
No. 8 Junction Connector
Main Body ECU
<35-11><36-11>
GC
GA
*1 :RHD
*2 :LHD