Position of Parts in Engine Compartment <LHD From May 2015 Production>

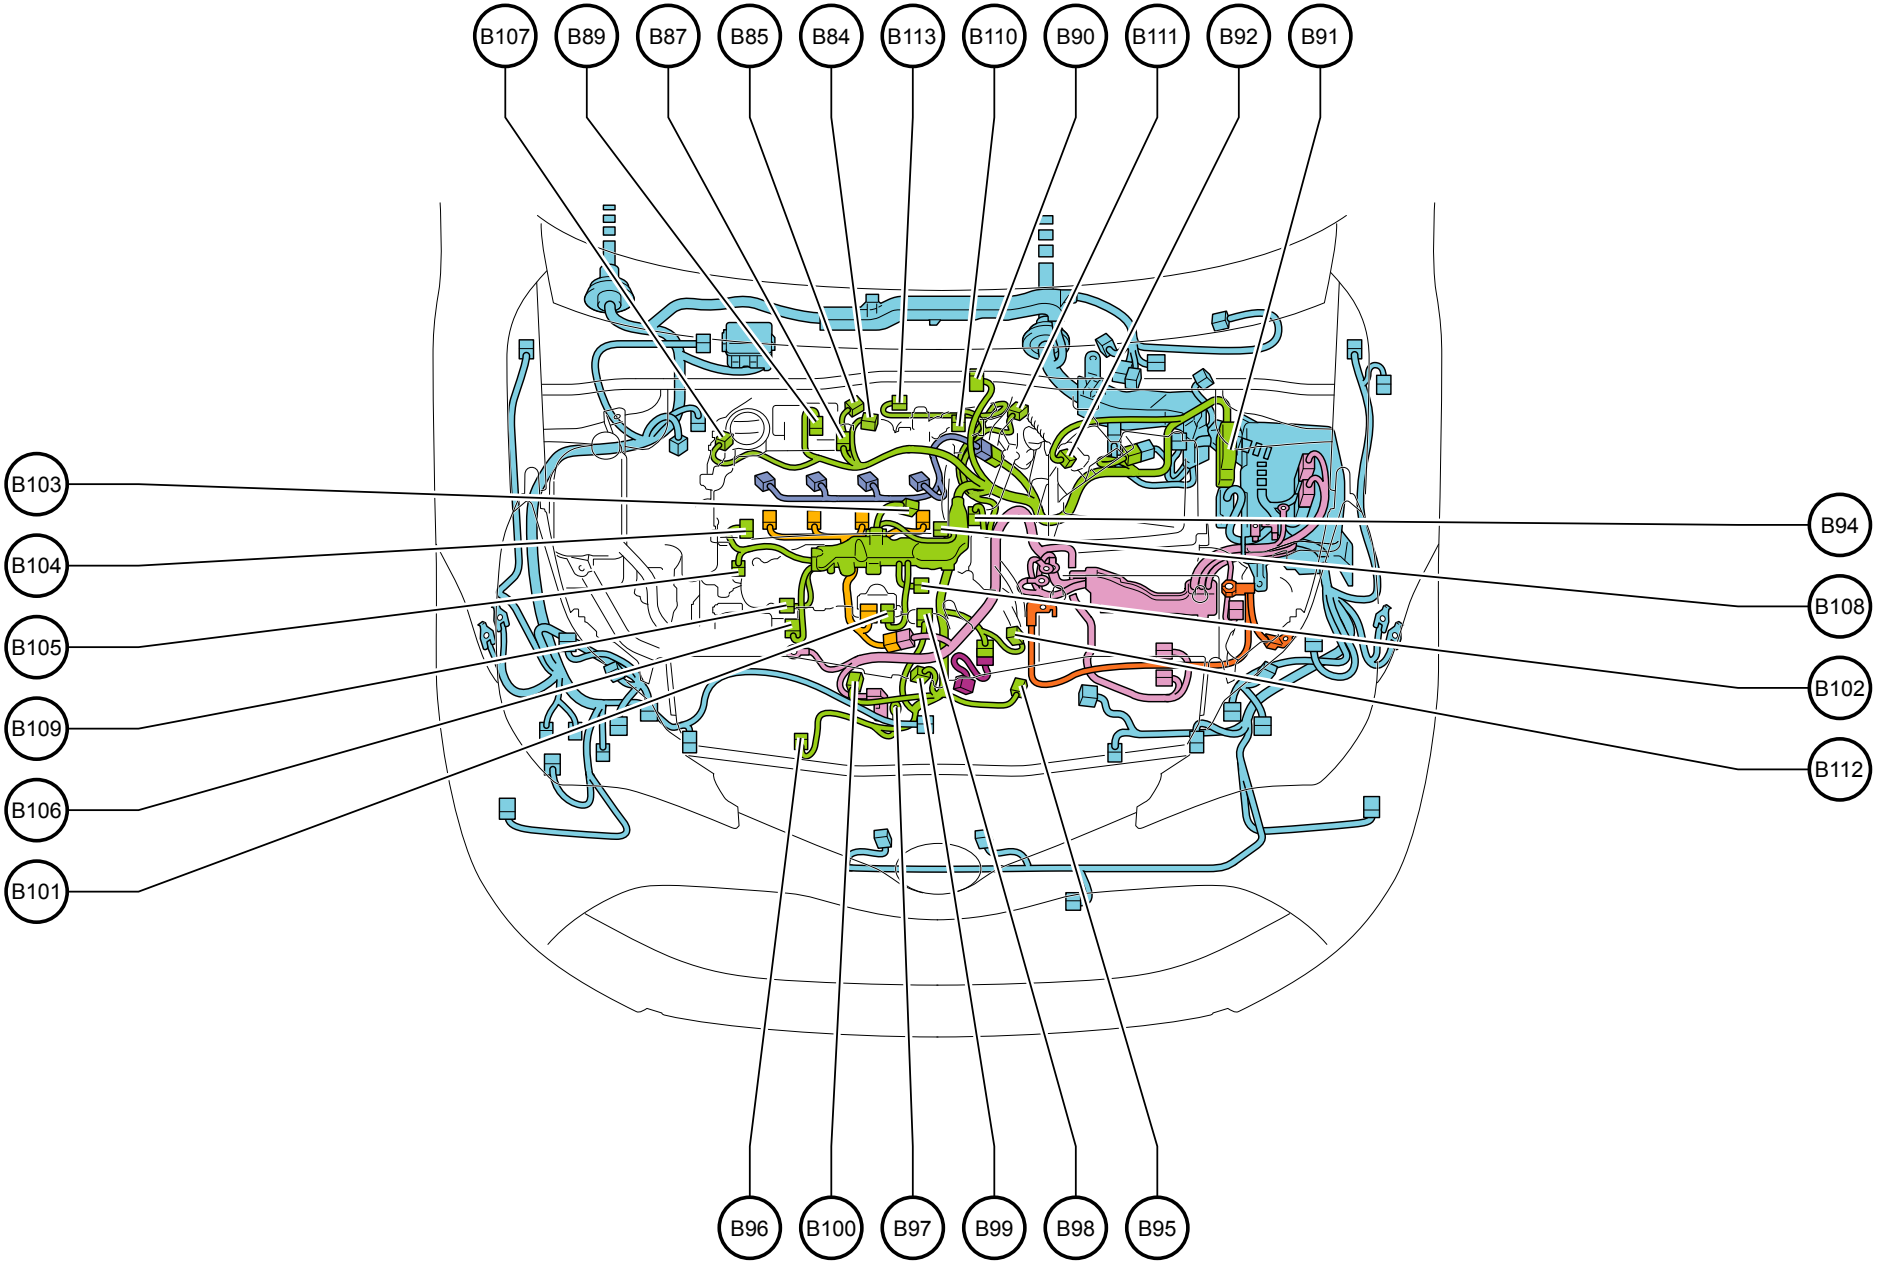

B 84 Air Fuel Ratio Sensor (Bank 1 Sensor 1)
B 85 Exhaust Gas Temperature Sensor
B 87 VSV (EGR)
B 89 No. 2 Exhaust Gas Temperature Sensor
B 90 Turbocharger Sub-Assembly
B 91 ECM
B 92 Mass Air Flow Meter
B 94 Crank Position Sensor
B 95 Intake Air Temperature Sensor
B 96 Cooler Compressor Assembly
B 97 Starter Assembly
B 98 Engine Oil Pressure Switch Assembly
B 99 Suction Control Valve
B 100 Fuel Temperature Sensor
B 101 Glow Plug Controller
B 102 Turbo Pressure Sensor
B 103 Cam Position Sensor
B 104 Rail Pressure Sensor
B 105 E.F.I. Engine Coolant Temperature Sensor
B 106 Generator Assembly
B 107 Differential Pressure Sensor
B 108 Fuel Pressure Control Valve
B 109 Swirl Control Valve
B 110 Exhaust Gas Pressure Sensor
B 111 EGR Valve Assembly
B 112 EGR Valve Temperature Sensor
B 113 Air Fuel Ratio Sensor (Bank 1 Sensor 2)

B 84
Black

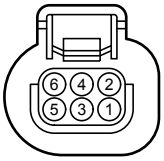

B 85
Black

B 87
Black

B 89
Black

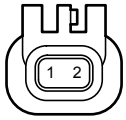

B 90
Black



B 91
Black

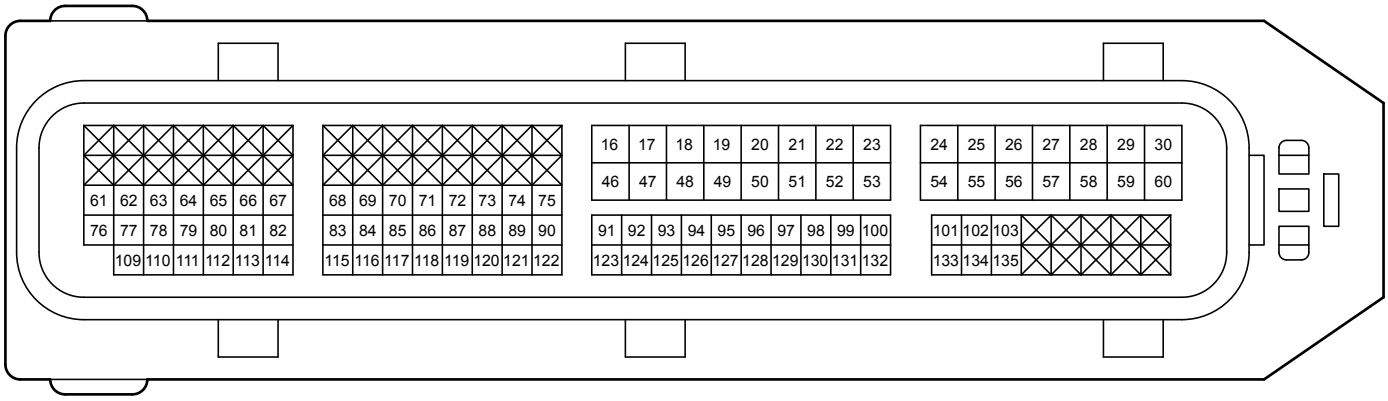

B 92
Yellow



B 94
Black

B 95
Black

B 96
Black

B 97



B 98
Black

B 99
Black

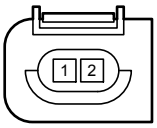

B100
Black

B101
Black

B102
Black

B103
Black

B104
Black



B105
Black

B106
Black

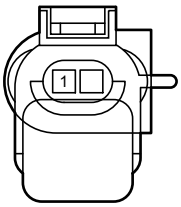

B107
Black

B108
Black

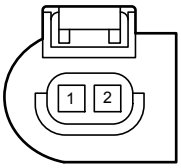

B109
Black

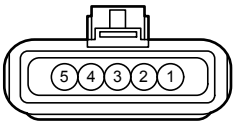

B110
Black

B111
Black

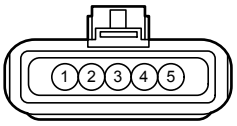

B112
Black

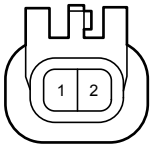
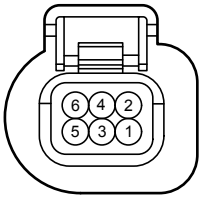
B113
Black