Position of Parts in Instrument Panel <RHD From May 2015 Production>

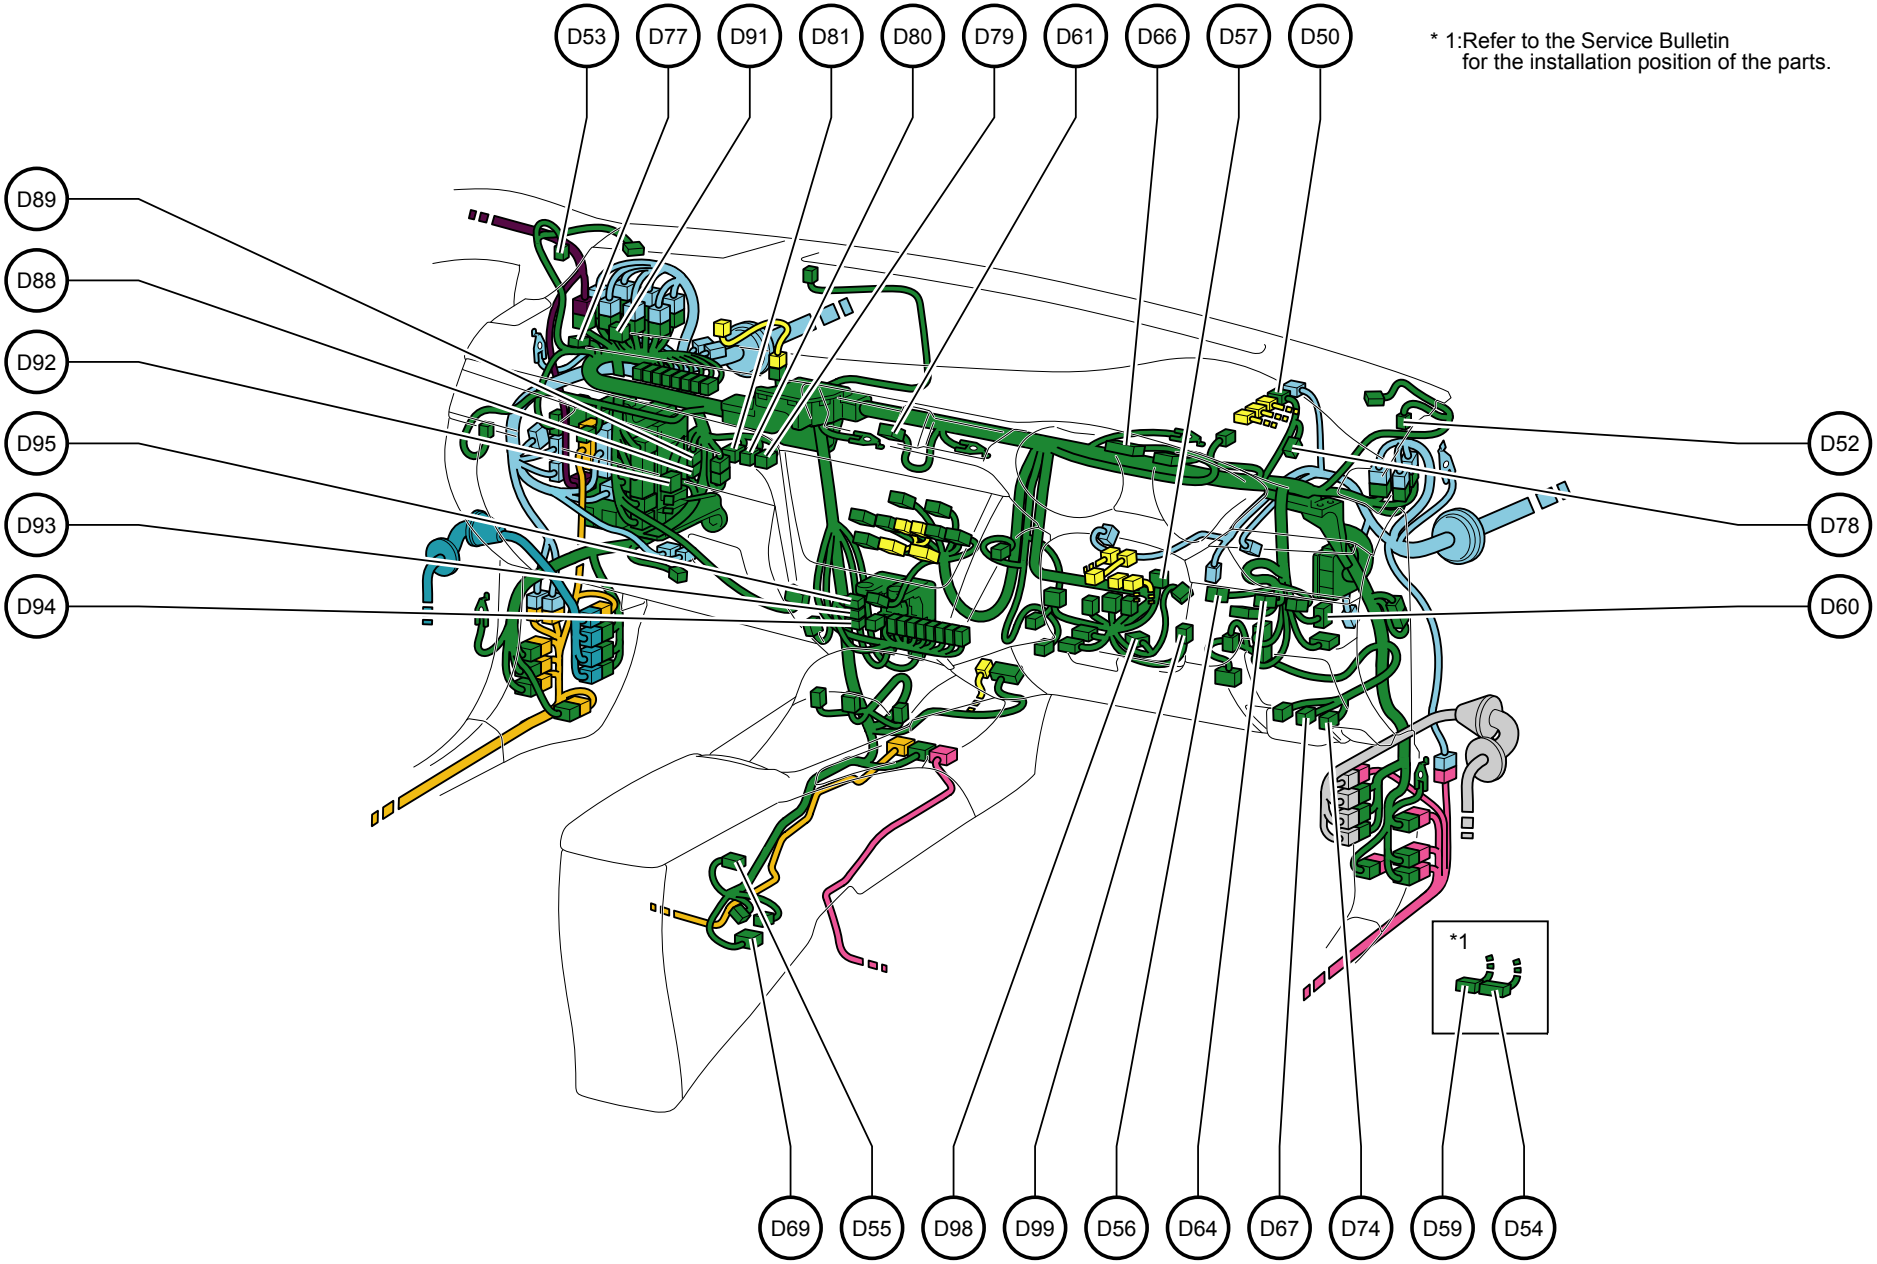

D 50 Power Steering ECU Assembly
D 52 Front No. 2 Speaker RH
D 53 Front No. 2 Speaker LH
D 54 Certification ECU Assembly
D 55 Front Indoor Electrical Key Oscillator
D 56 Engine Switch
D 57 Steering Lock Actuator Assembly
D 59 Certification ECU Assembly
D 60 Windshield Wiper Relay Assembly
D 61 Hazard Warning Signal Switch Assembly
D 64 Headlight Leveling Switch
D 66 Combination Meter
D 67 VSC Off Switch
D 69 Yaw Rate Sensor
D 74 Fuel Lid Opener Switch
D 77 Diode (Front Door Courtesy Switch LH)
D 78 Diode (Front Door Courtesy Switch RH)
D 79 Main Body ECU
D 80 Main Body ECU
D 81 Main Body ECU
D 88 Junction Connector
D 89 Junction Connector
D 91 Junction Connector
D 92 Fuse Block
D 93 Junction Connector
D 94 Junction Connector
D 95 Junction Connector
D 98 Ignition or Starter Switch Assembly
D 99 Un-Lock Warning Switch Assembly

D 50
White

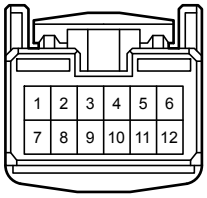

D 52
White



D 53
White



D 54
White

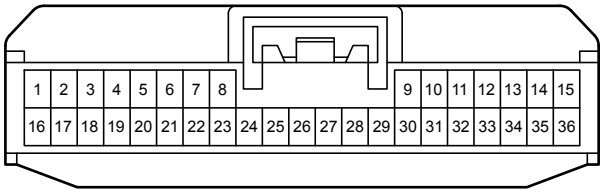

D 55
White

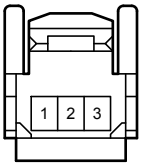

D 56
Black

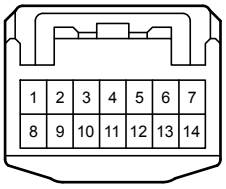

D 57
Black

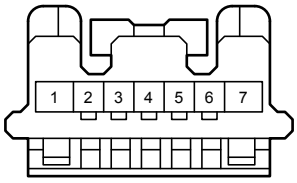

D 59
White

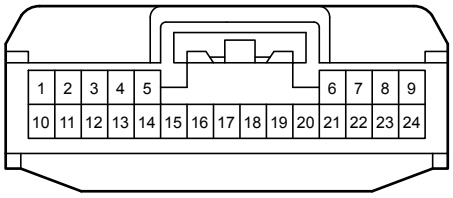

D 60
Black

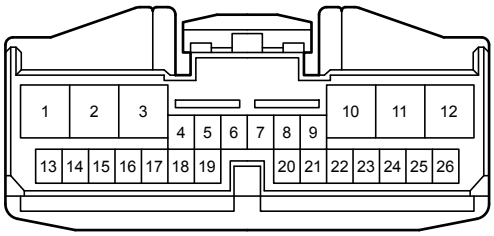

D 61
Gray

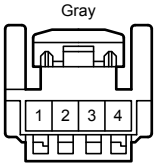

D 64
Black



D 66
Black

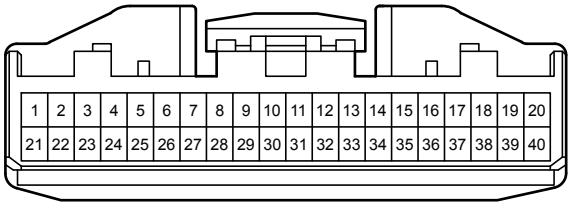

D 67
Black

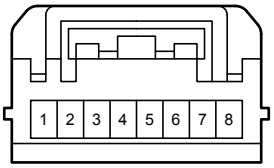

D 69
Black

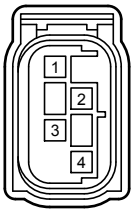

D 74
Black

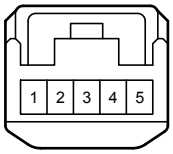

D 77
Black

D 78
Black

D 79
White

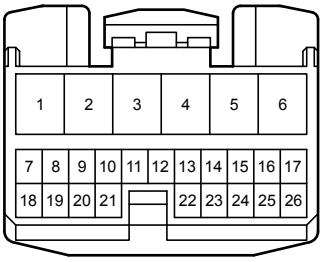

D 80
White

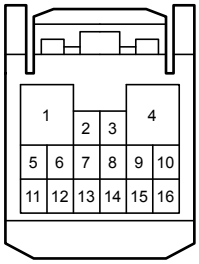

D 81
White

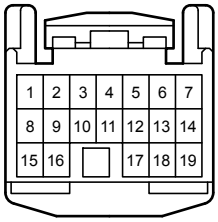

D 88
White

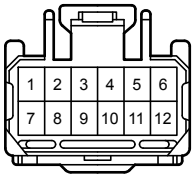

D 89
White

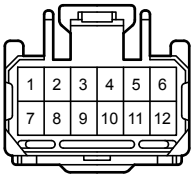

D 91
White

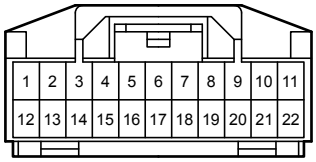

D 92



D 93
White



D 94
White

D 95
White



D 98
White

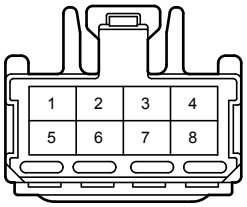

D 99
White