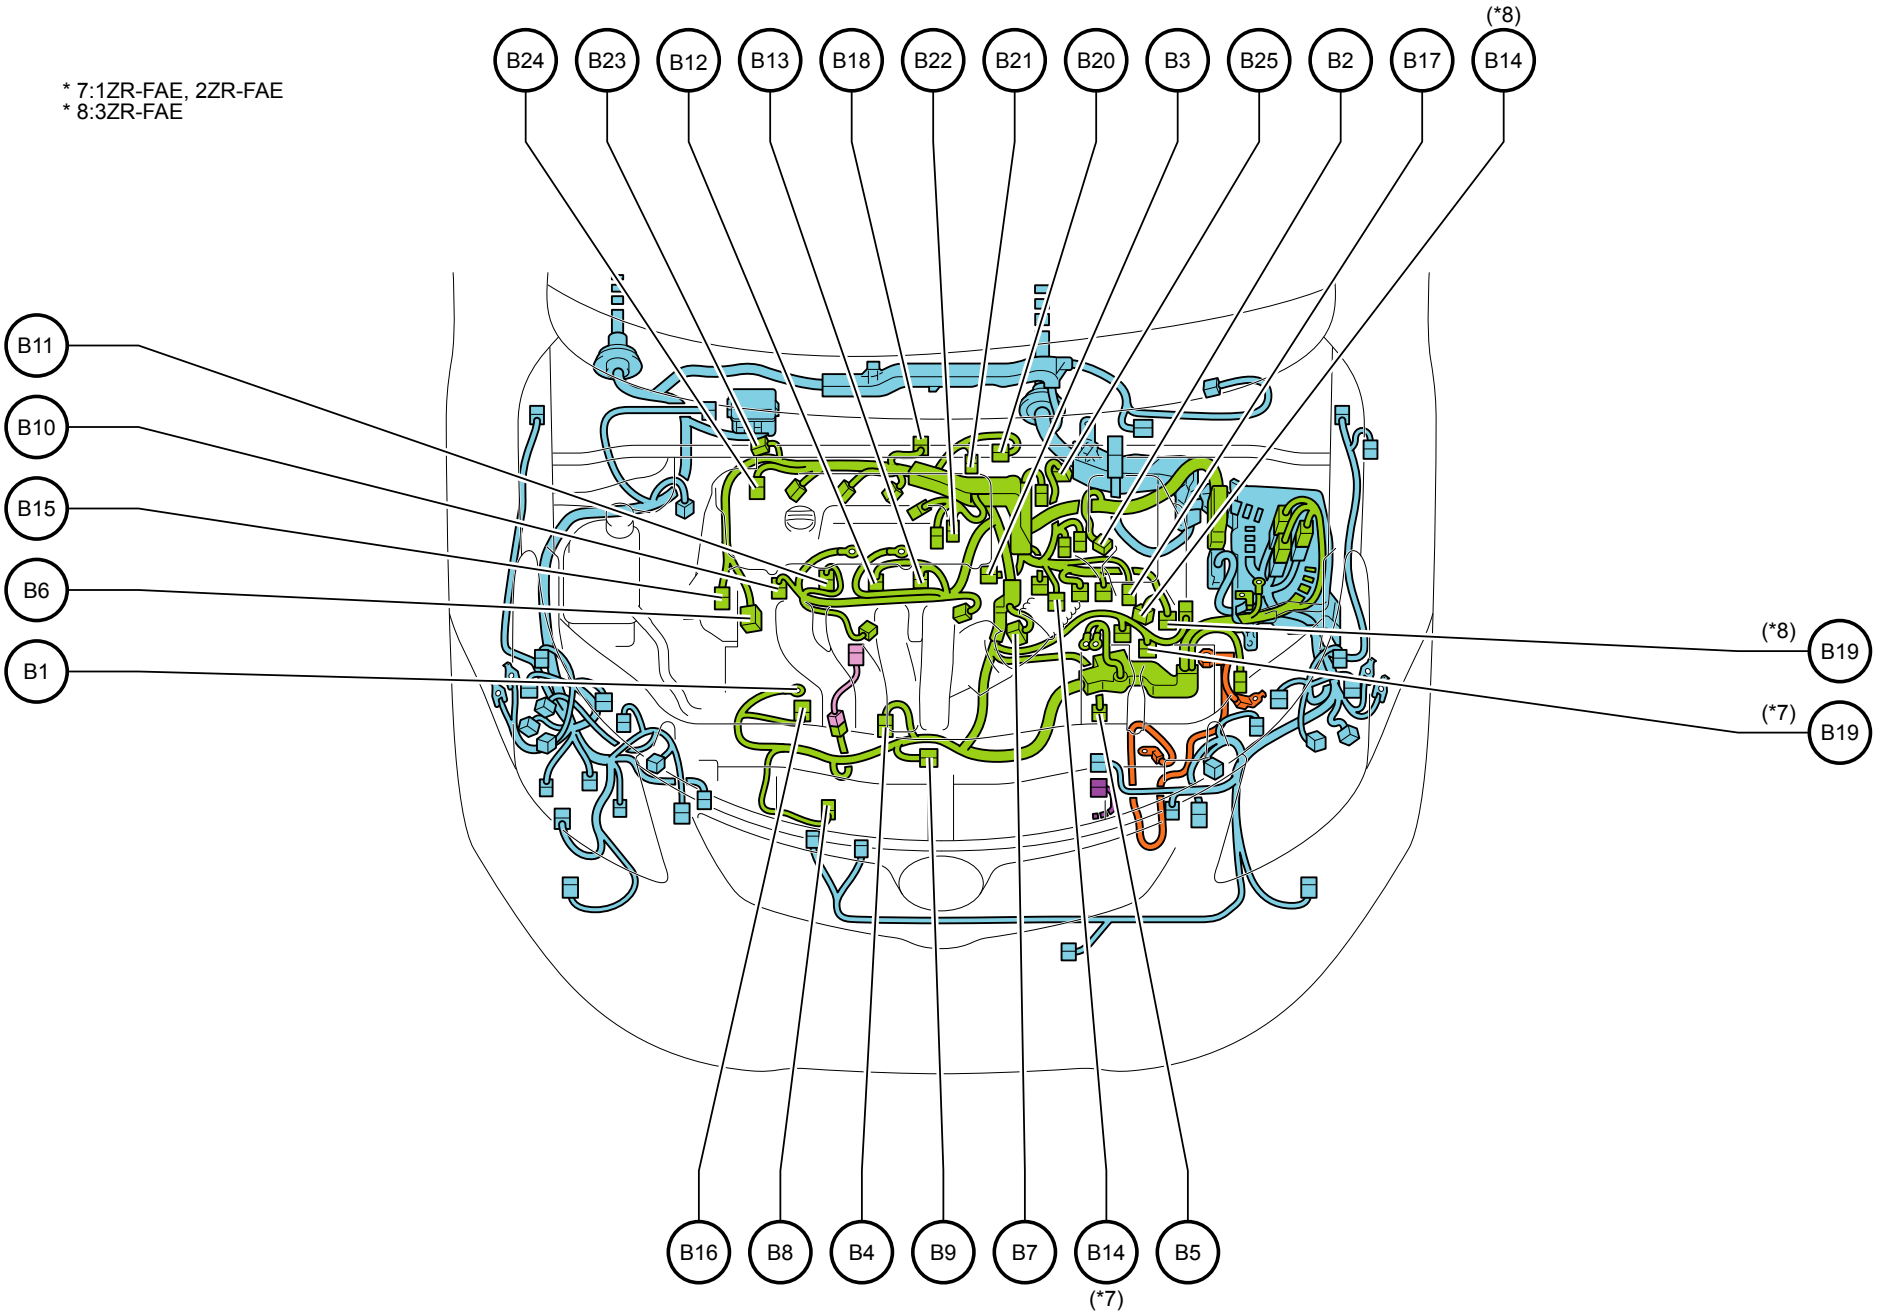
* 7:1ZR-FAE, 2ZR-FAE
* 8:3ZR-FAE
B24
B23
B12
B13
B18
B22
B21
B20
B3
B25
B2
B17
(*8)
B14
B11
B10
B15
B6
B1
(*8)
B19
(*7)
B19
B16
B8
B4
B9
B7
B14
(*7)
B5

B	1	Generator Assembly
B	2	Mass Air Flow Meter
B	3	E.F.I. Engine Coolant Temperature Sensor
B	4	Starter Assembly
B	5	Back-Up Light Switch Assembly
B	6	Engine Oil Pressure Switch Assembly
B	7	Throttle Body Assembly
B	8	Cooler Compressor Assembly
B	9	Starter Assembly
B	10	Fuel Injector Assembly No. 1
B	11	Fuel Injector Assembly No. 2
B	12	Fuel Injector Assembly No. 3
B	13	Fuel Injector Assembly No. 4
B	14	Park/Neutral Position Switch
B	15	Crank Position Sensor
B	16	Generator Assembly
B	17	Park/Neutral Position Switch
B	18	Air Fuel Ratio Sensor (Bank 1 Sensor 1)
B	19	ECT Solenoid
B	20	Purge VSV
B	21	VVT Sensor (Exhaust Side)
B	22	VVT Sensor (Intake Side)
B	23	Camshaft Timing Oil Control Valve (Exhaust Side)
B	24	Camshaft Timing Oil Control Valve (Intake Side)
B	25	Oxygen Sensor (Bank 1 Sensor 2)

B 1



B 2
Black

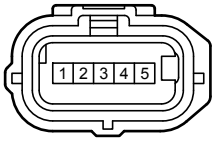

B 3
Gray

B 4



B 5
Gray

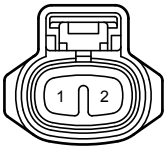

B 6
Gray

B 7
Black

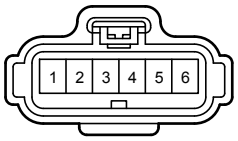

B 8
Black

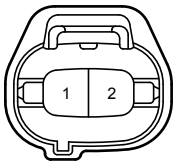

B 9
Black

B 10
Black



B 11
Gray

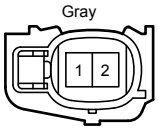

B 12
Black

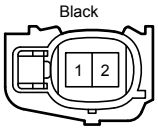

B 13
Gray

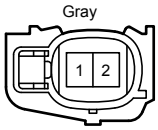

B 14
Gray

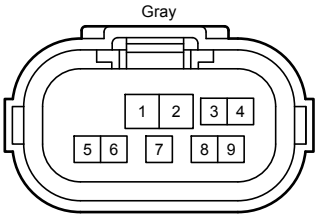

B 15
Black

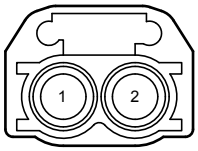

B 16
Black

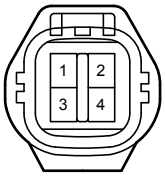

B 17
Black

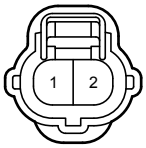

B 18
Dark Gray

B 19
Gray

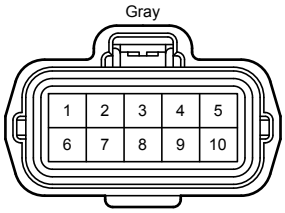

B 20
Black

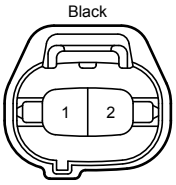

B 21
Black

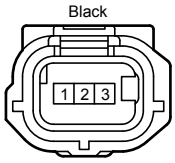

B 22
Gray

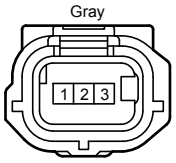

B 23
Black

B 24
Gray

B 25
Gray