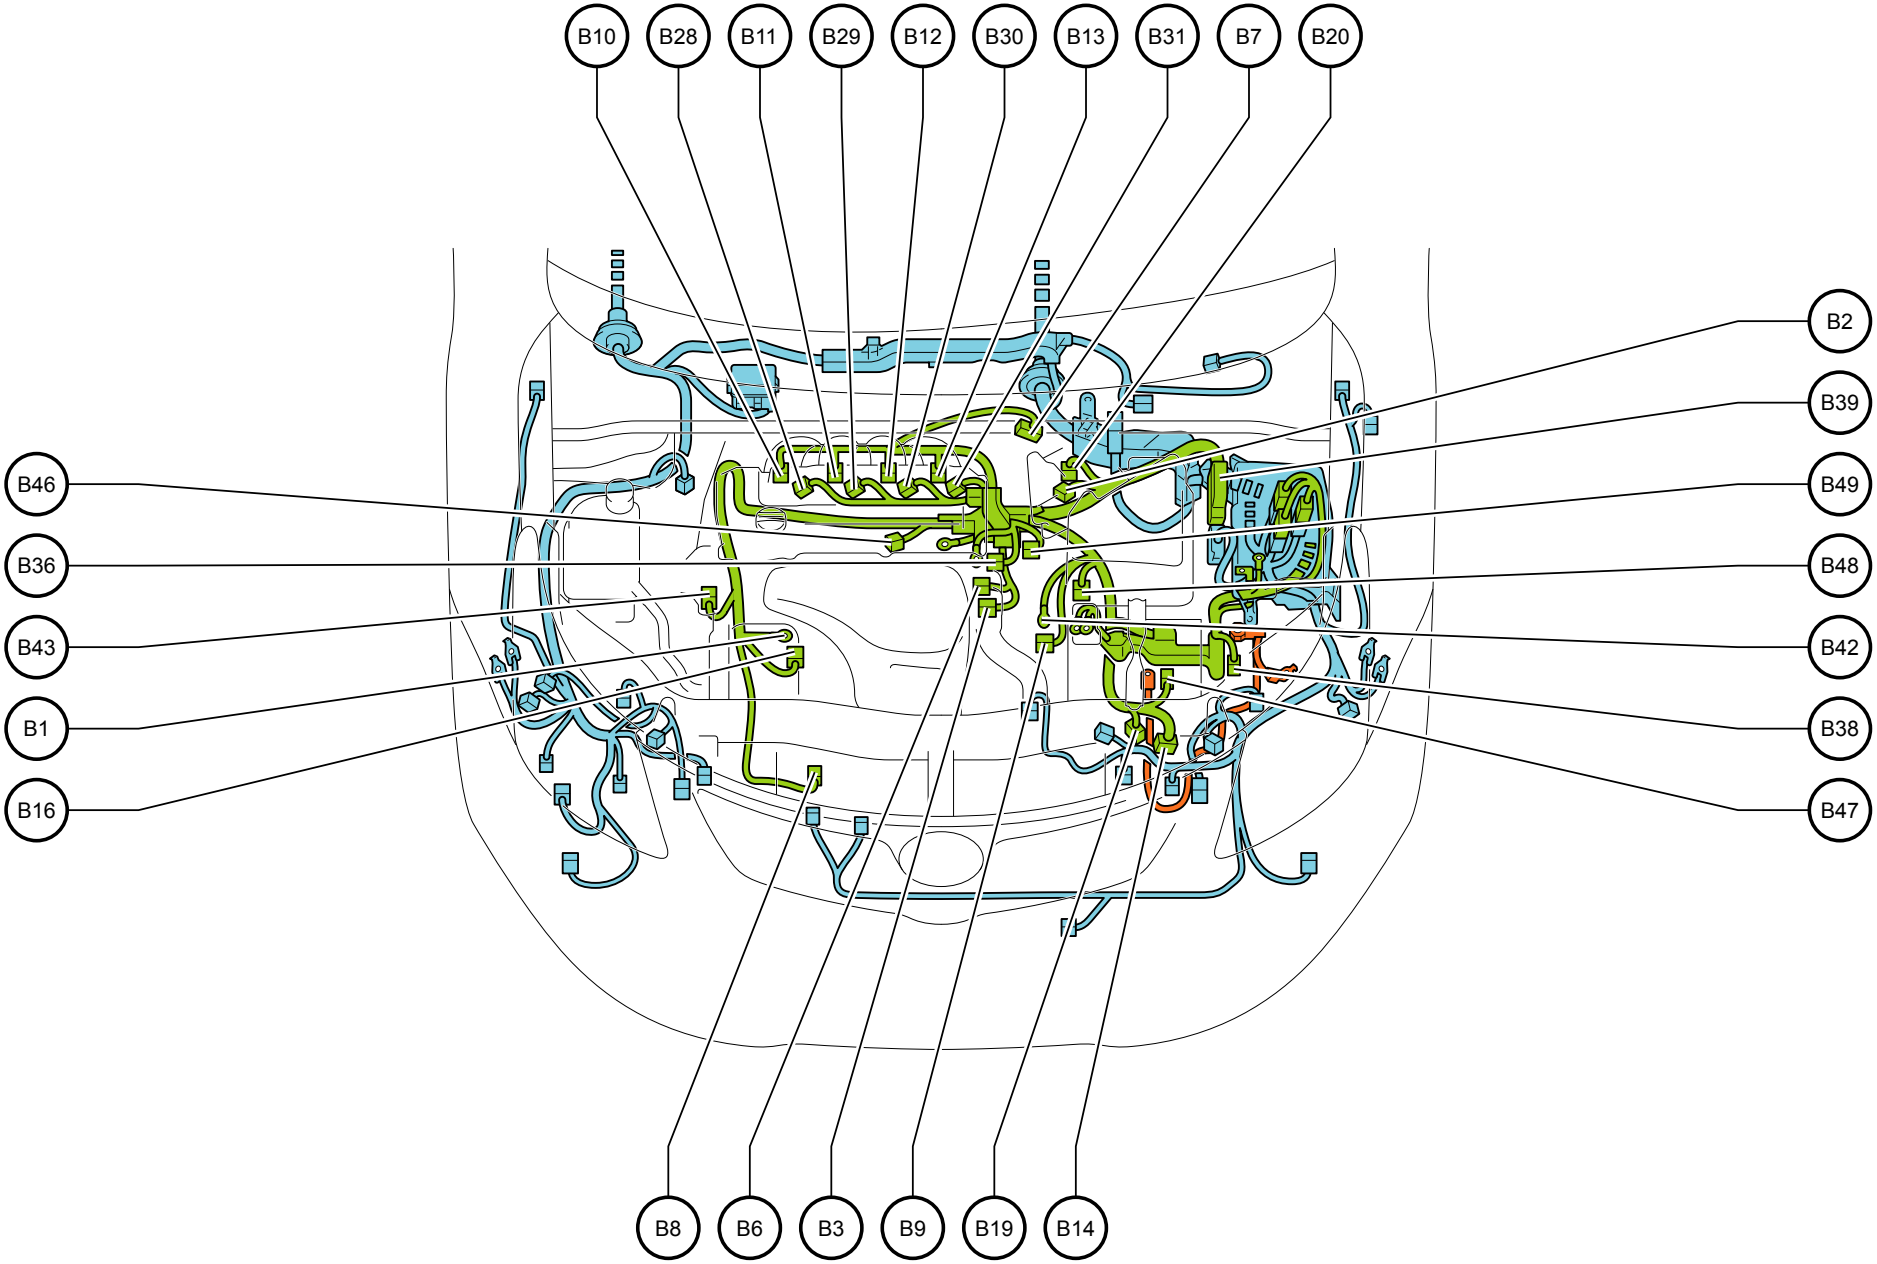
B10
B28
B11
B29
B12
B30
B13
B31
B7
B20
B2
B39
B49
B48
B42
B38
B47
B46
B36
B43
B1
B16
B8
B6
B3
B9
B19
B14

B 1 Generator Assembly
B 2 Mass Air Flow Meter
B 3 E.F.I. Engine Coolant Temperature Sensor
B 6 Engine Oil Pressure Switch Assembly
B 7 Throttle Body Assembly
B 8 Cooler Compressor Assembly
B 9 Starter Assembly
B 10 Fuel Injector Assembly No. 1
B 11 Fuel Injector Assembly No. 2
B 12 Fuel Injector Assembly No. 3
B 13 Fuel Injector Assembly No. 4
B 14 Park/Neutral Position Switch
B 16 Generator Assembly
B 19 ECT Solenoid
B 20 Purge VSV
B 28 Ignition Coil Assembly No. 1
B 29 Ignition Coil Assembly No. 2
B 30 Ignition Coil Assembly No. 3
B 31 Ignition Coil Assembly No. 4
B 36 Noise Filter (Ignition)
B 38 Battery Current Sensor Assembly
B 39 ECM
B 42 Starter Assembly
B 43 Crank Position Sensor
B 46 Knock Control Sensor (Bank 1)
B 47 Transmission Revolution Sensor (Turbine)
B 48 Transmission Revolution Sensor (Counter Gear)
B 49 Cam Position Sensor

B 1



B 2
Black

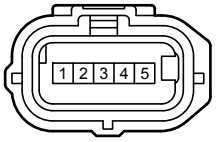

B 3
Gray

B 6
Gray

B 7
Black

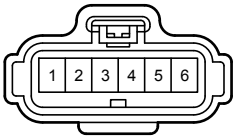

B 8
Black

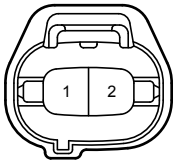

B 9
Black

B 10
Black



B 11
Gray



B 12
Black



B 13
Gray

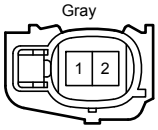

B 14
Gray

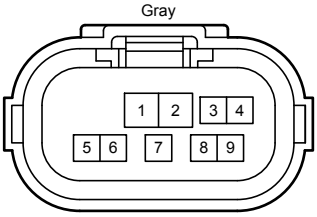

B 16
Black

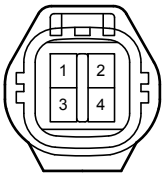

B 19
Gray

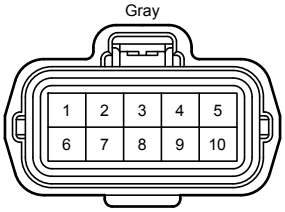

B 20
Black

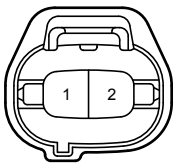

B 28
Black



B 29
Gray

B 30
Black



B 31
Gray

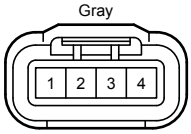

B 36
Gray

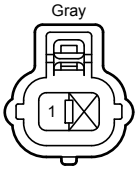

B 38
Black

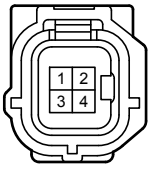

B 39
Black

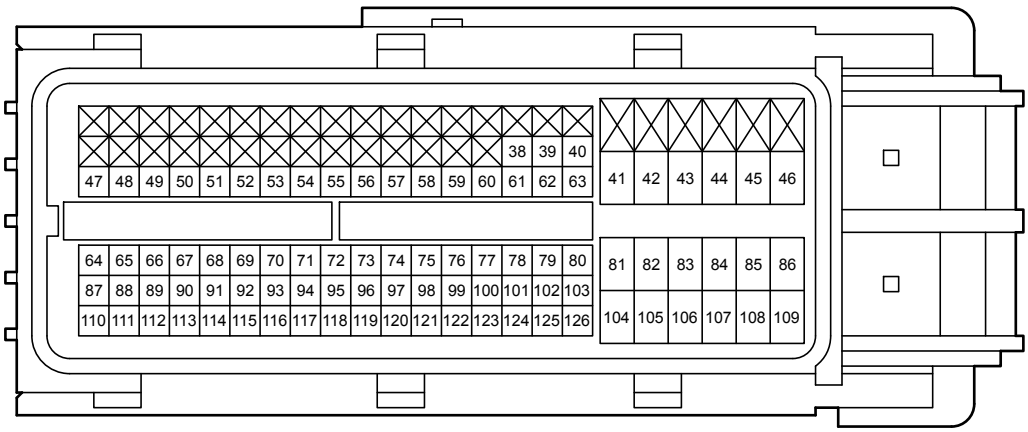

B 42



B 43
Gray

B 46
Black



B 47
Black

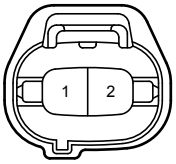

B 48
Black

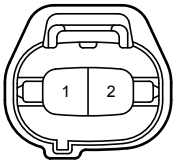

B 49
Black