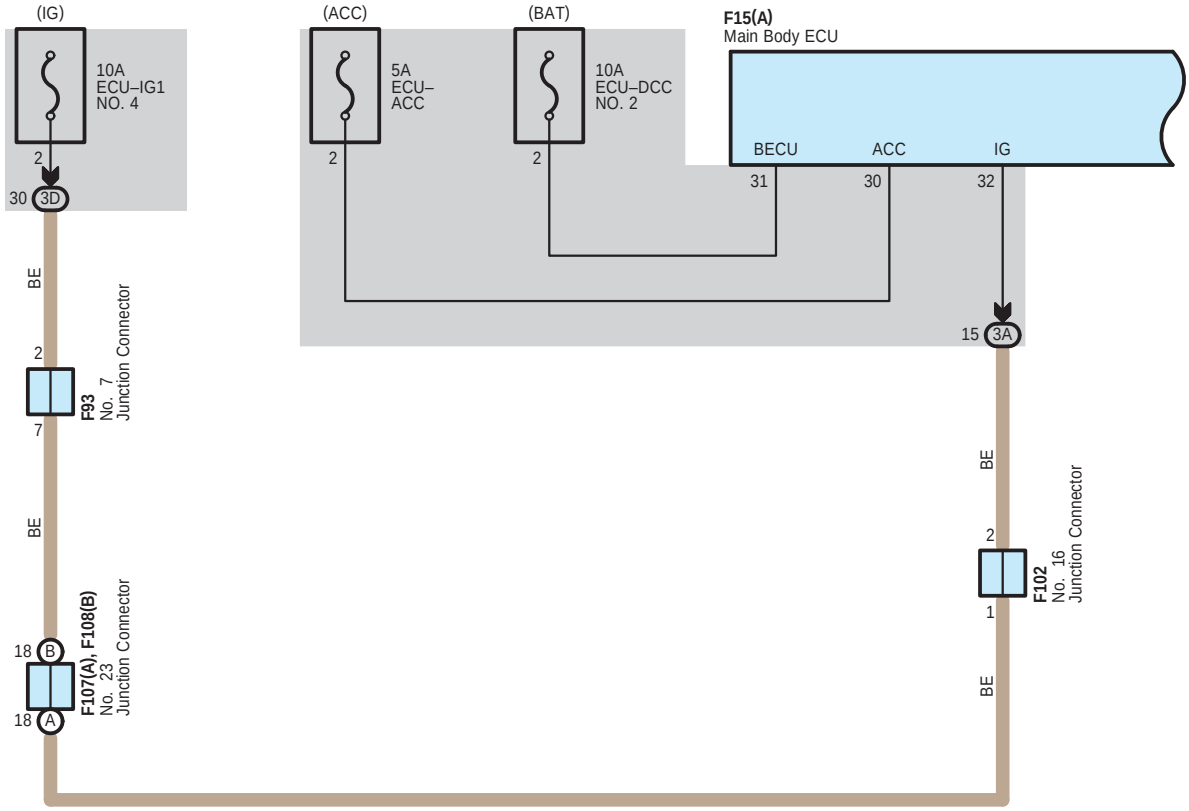
(IG)
10A
ECU–IG1
NO. 4
2
30
3D
BE
2
F93
No. 7
Junction Connector
7
BE
18
B
F107(A), F108(B)
No. 23
Junction Connector
18
A
(ACC)
5A
ECU–
ACC
2
(BAT)
10A
ECU–DCC
NO. 2
2
F15(A)
Main Body ECU
BECU
ACC
IG
31
30
32
15
3A
BE
2
F102
No. 16
Junction Connector
1
BE

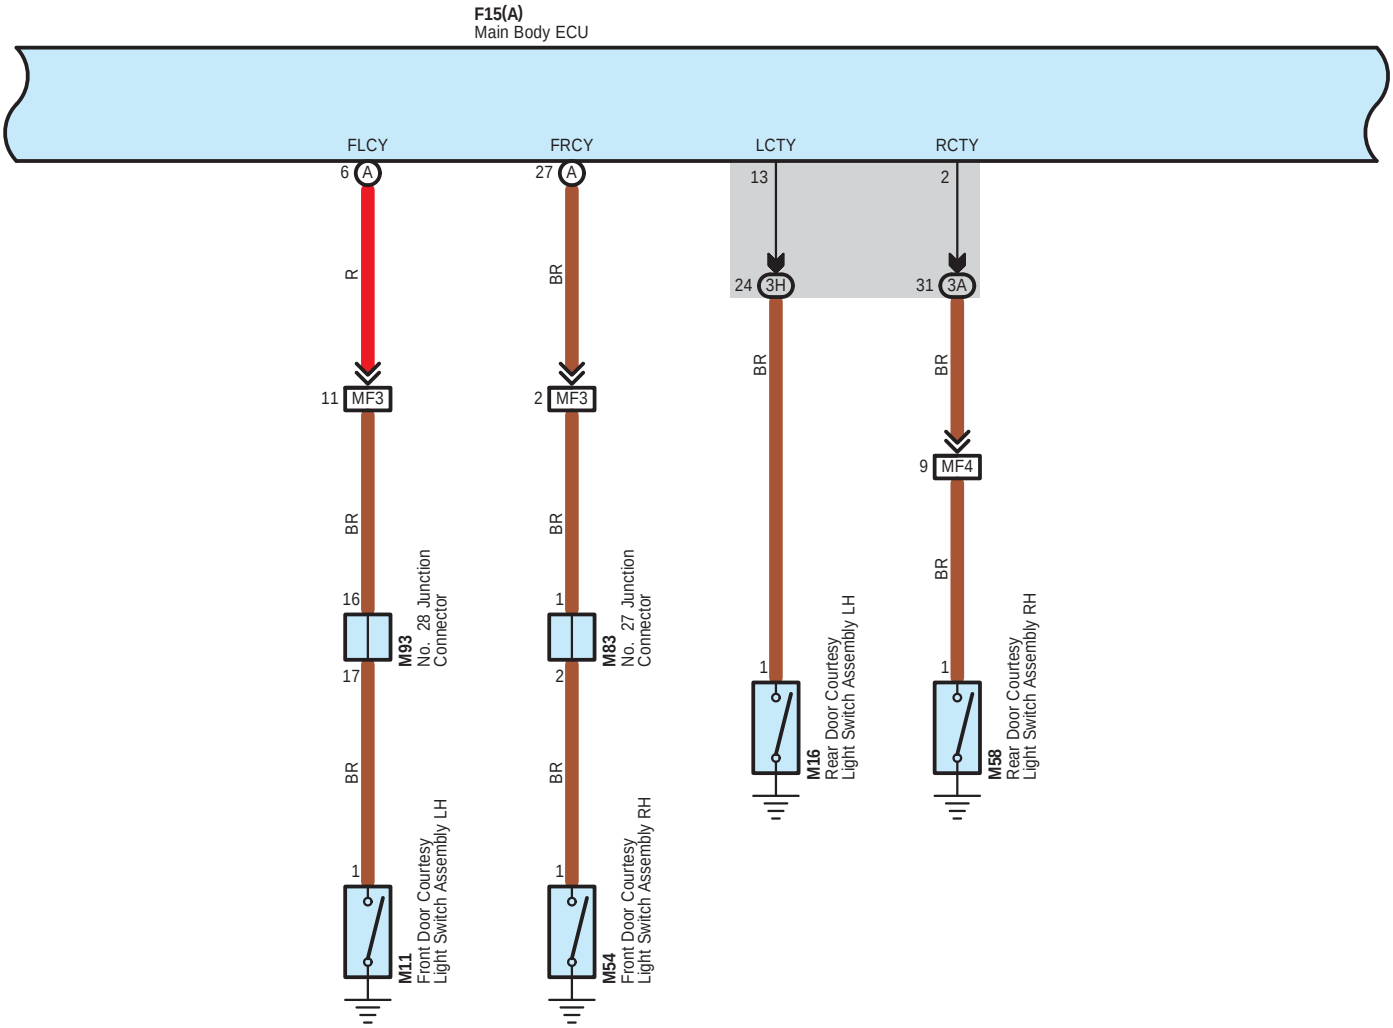
F15(A)
Main Body ECU
FLCY
FRCY
LCTY
RCTY
6 A
27 A
13
2
R
BR
24 3H
31 3A
11 MF3
2 MF3
9 MF4
16
17
1
2
M93
No. 28 Junction Connector
M83
No. 27 Junction Connector
M11
Front Door Courtesy Light Switch Assembly LH
M54
Front Door Courtesy Light Switch Assembly RH
M16
Rear Door Courtesy Light Switch Assembly LH
M58
Rear Door Courtesy Light Switch Assembly RH

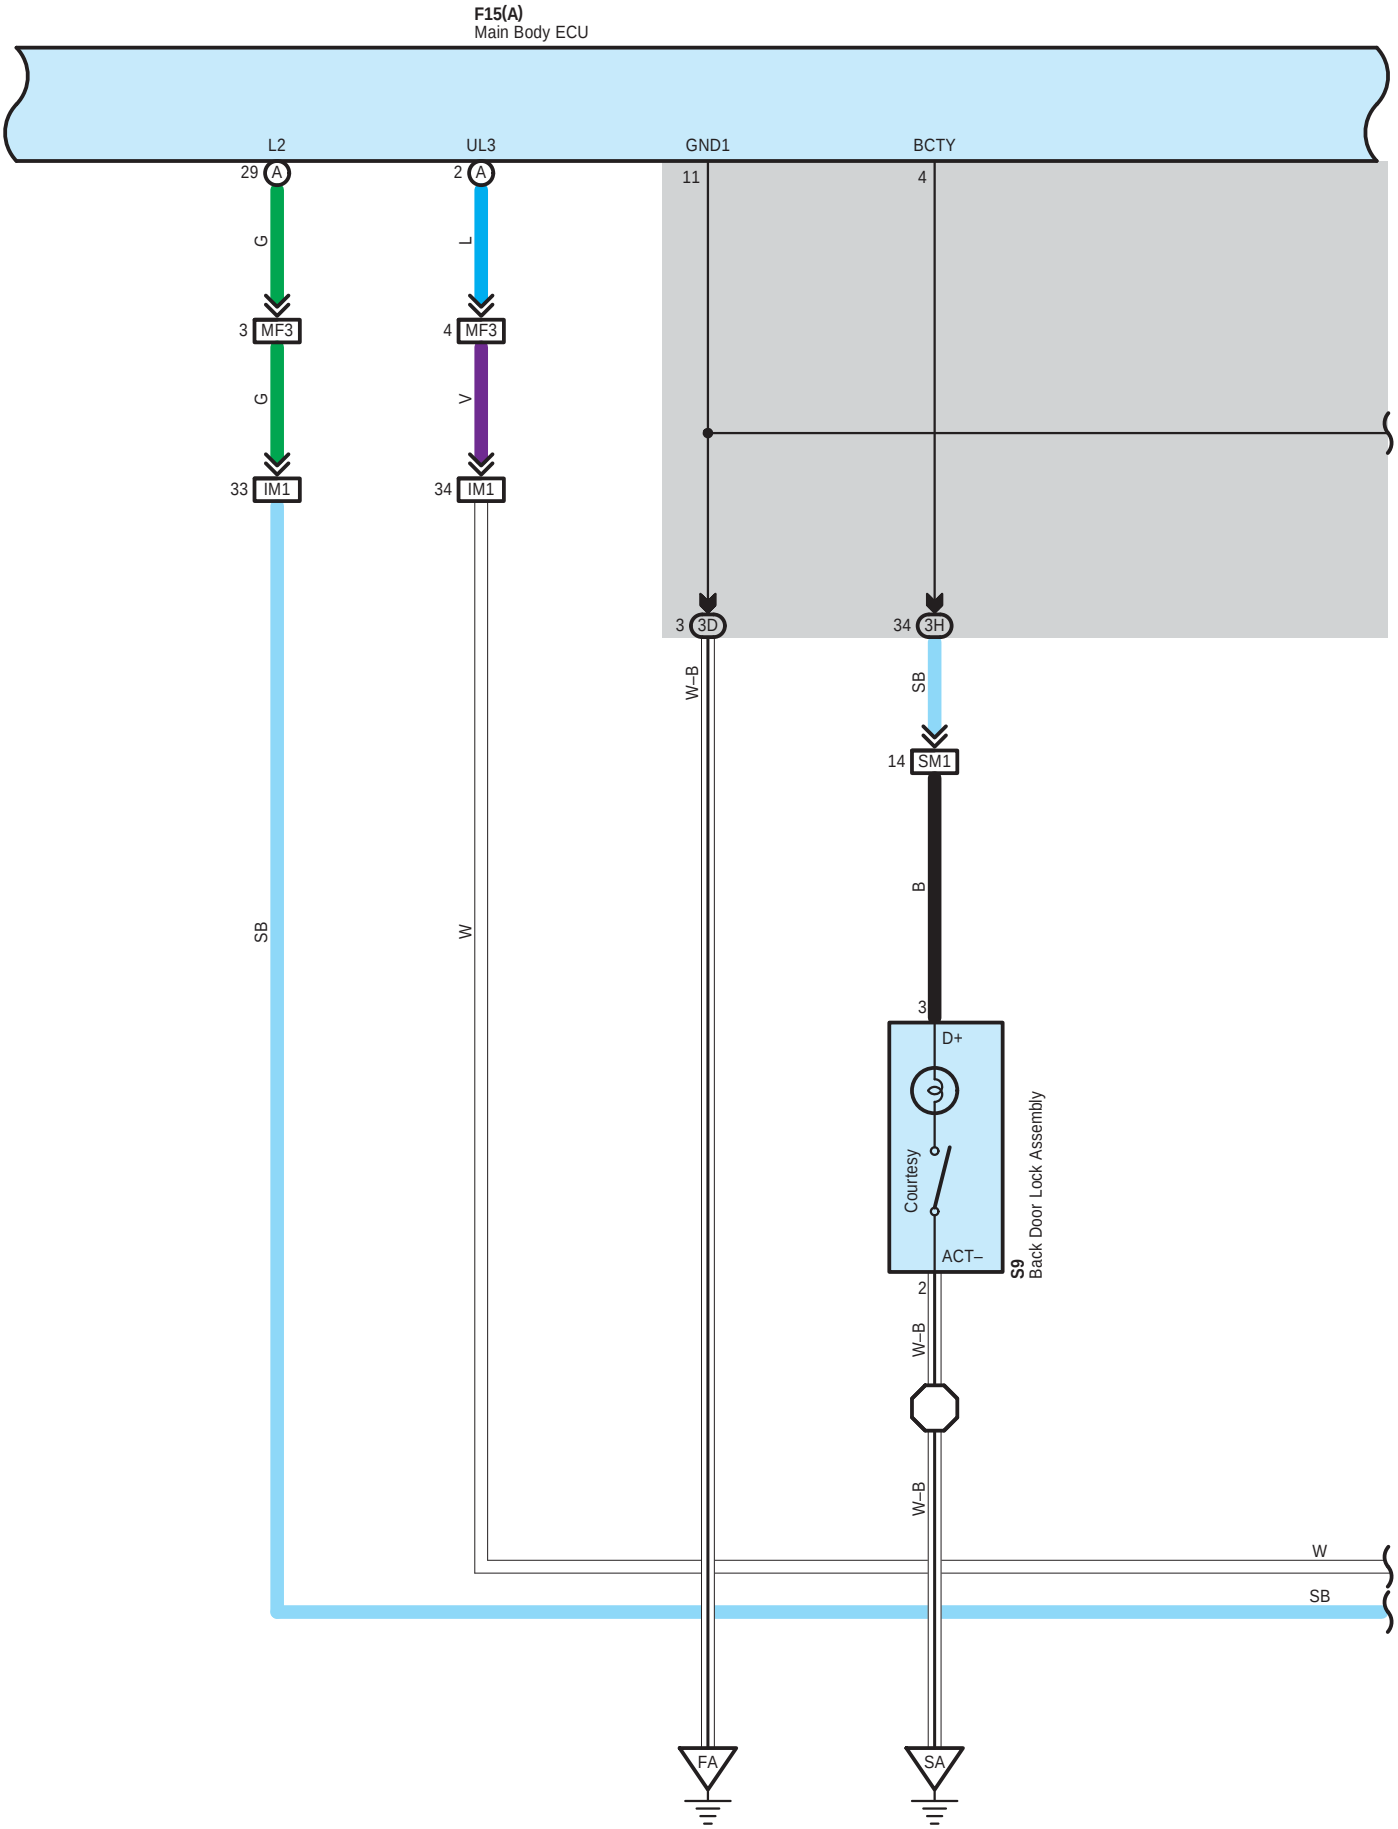
F15(A)
Main Body ECU
L2
UL3
GND1
BCTY
29 A
2 A
11
4
G
L
3 MF3
4 MF3
G
V
33 IM1
34 IM1
3 3D
34 3H
W–B
SB
14 SM1
B
SB
W
3
D+
Courtesy
ACT–
S9
Back Door Lock Assembly
2
W–B
W–B
W
SB
FA
SA

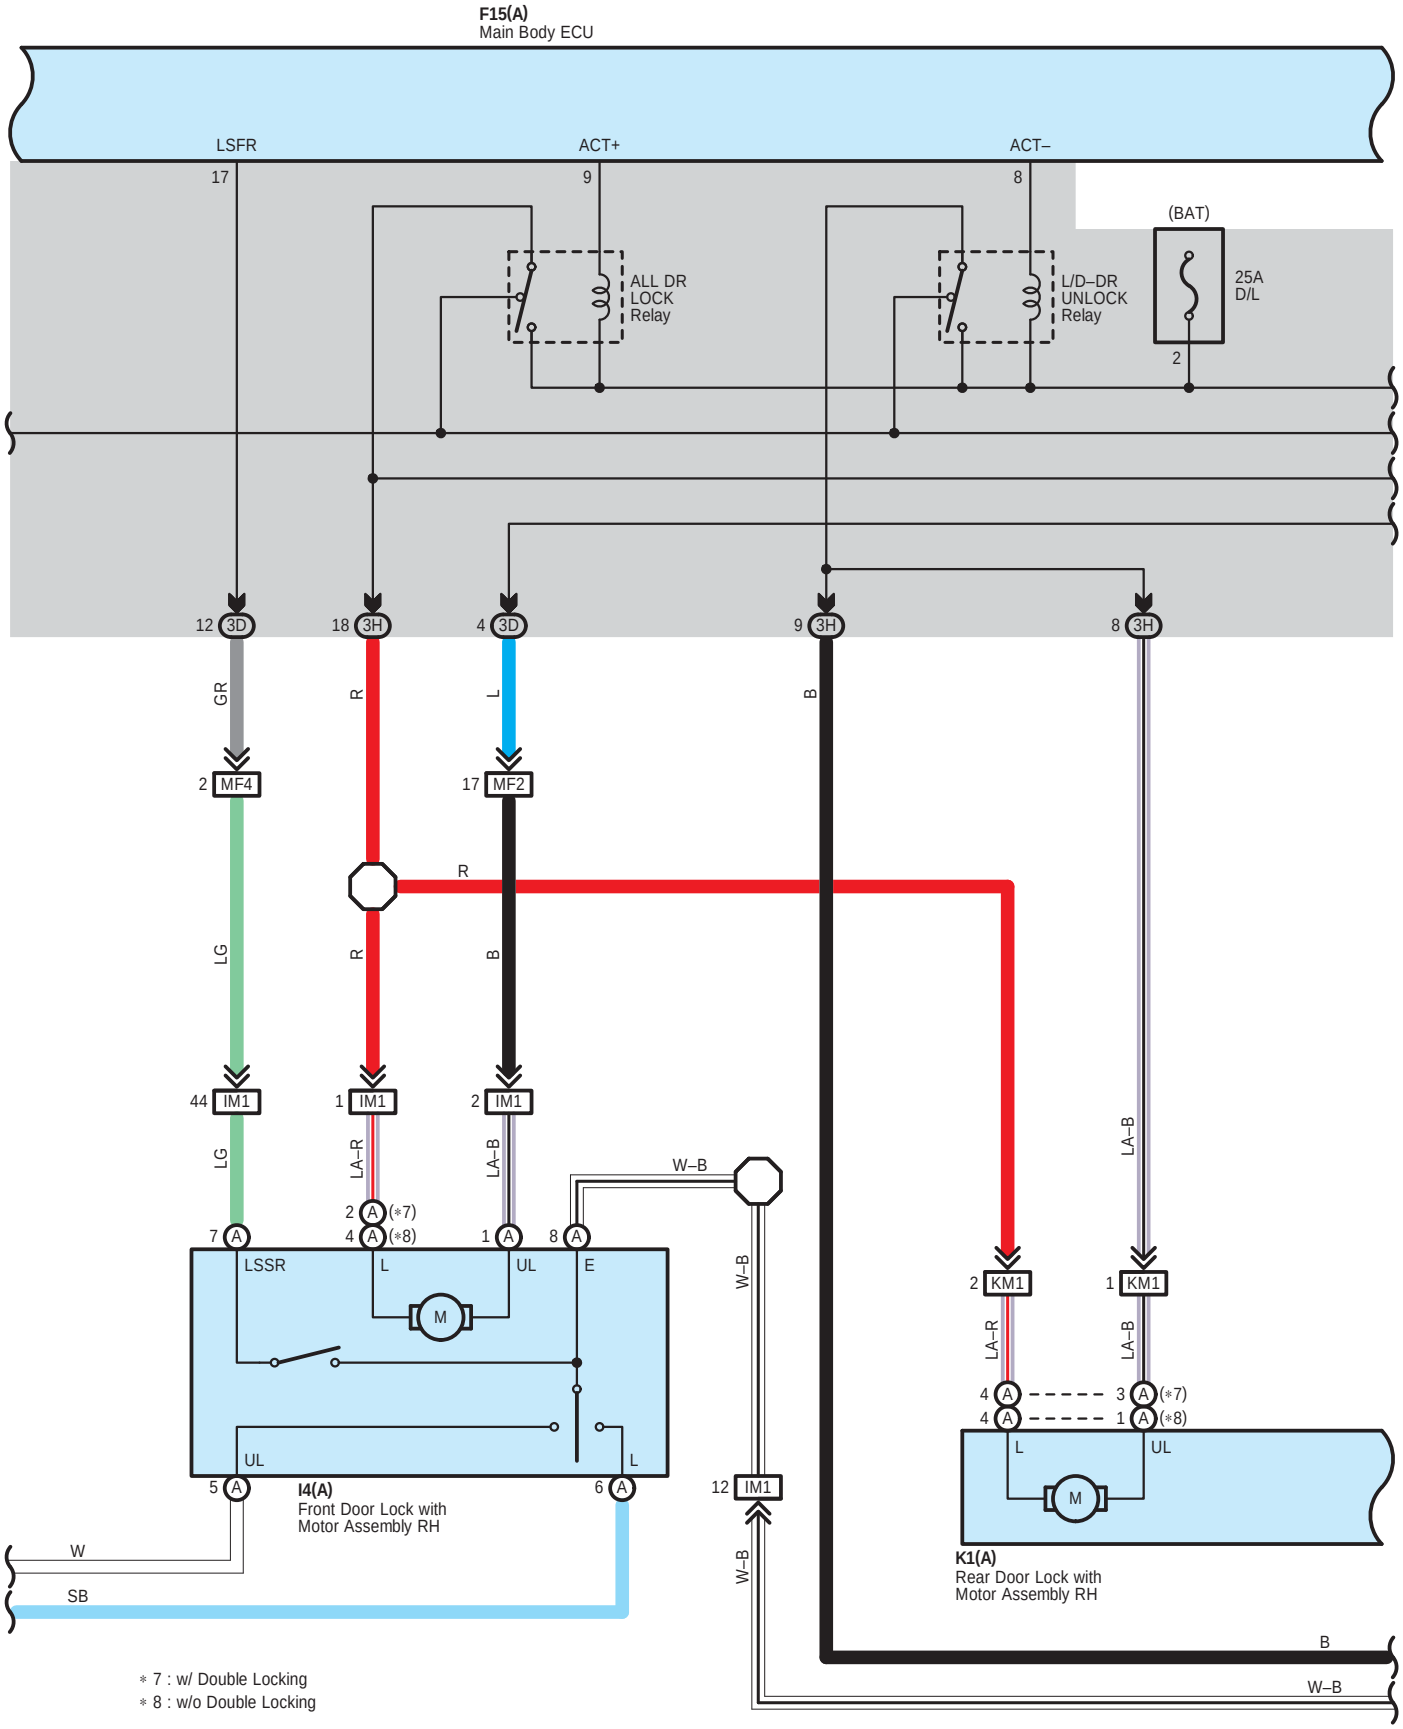
F15(A)
Main Body ECU
LSFR
ACT+
ACT–
17
9
8
(BAT)
ALL DR
LOCK
Relay
L/D–DR
UNLOCK
Relay
25A
D/L
2
12 3D
18 3H
4 3D
9 3H
8 3H
GR
R
L
B
2 MF4
17 MF2
R
LG
R
B
44 IM1
1 IM1
2 IM1
LG
LA–R
LA–B
W–B
LA–B
2 A (*7)
4 A (*8)
7 A
1 A
8 A
LSSR
L
UL
E
M
W–B
2 KM1
1 KM1
LA–R
LA–B
4 A
4 A
3 A (*7)
1 A (*8)
L
UL
M
UL
L
5 A
6 A
I4(A)
Front Door Lock with
Motor Assembly RH
12 IM1
W–B
K1(A)
Rear Door Lock with
Motor Assembly RH
W
SB
B
W–B
* 7 : w/ Double Locking
* 8 : w/o Double Locking

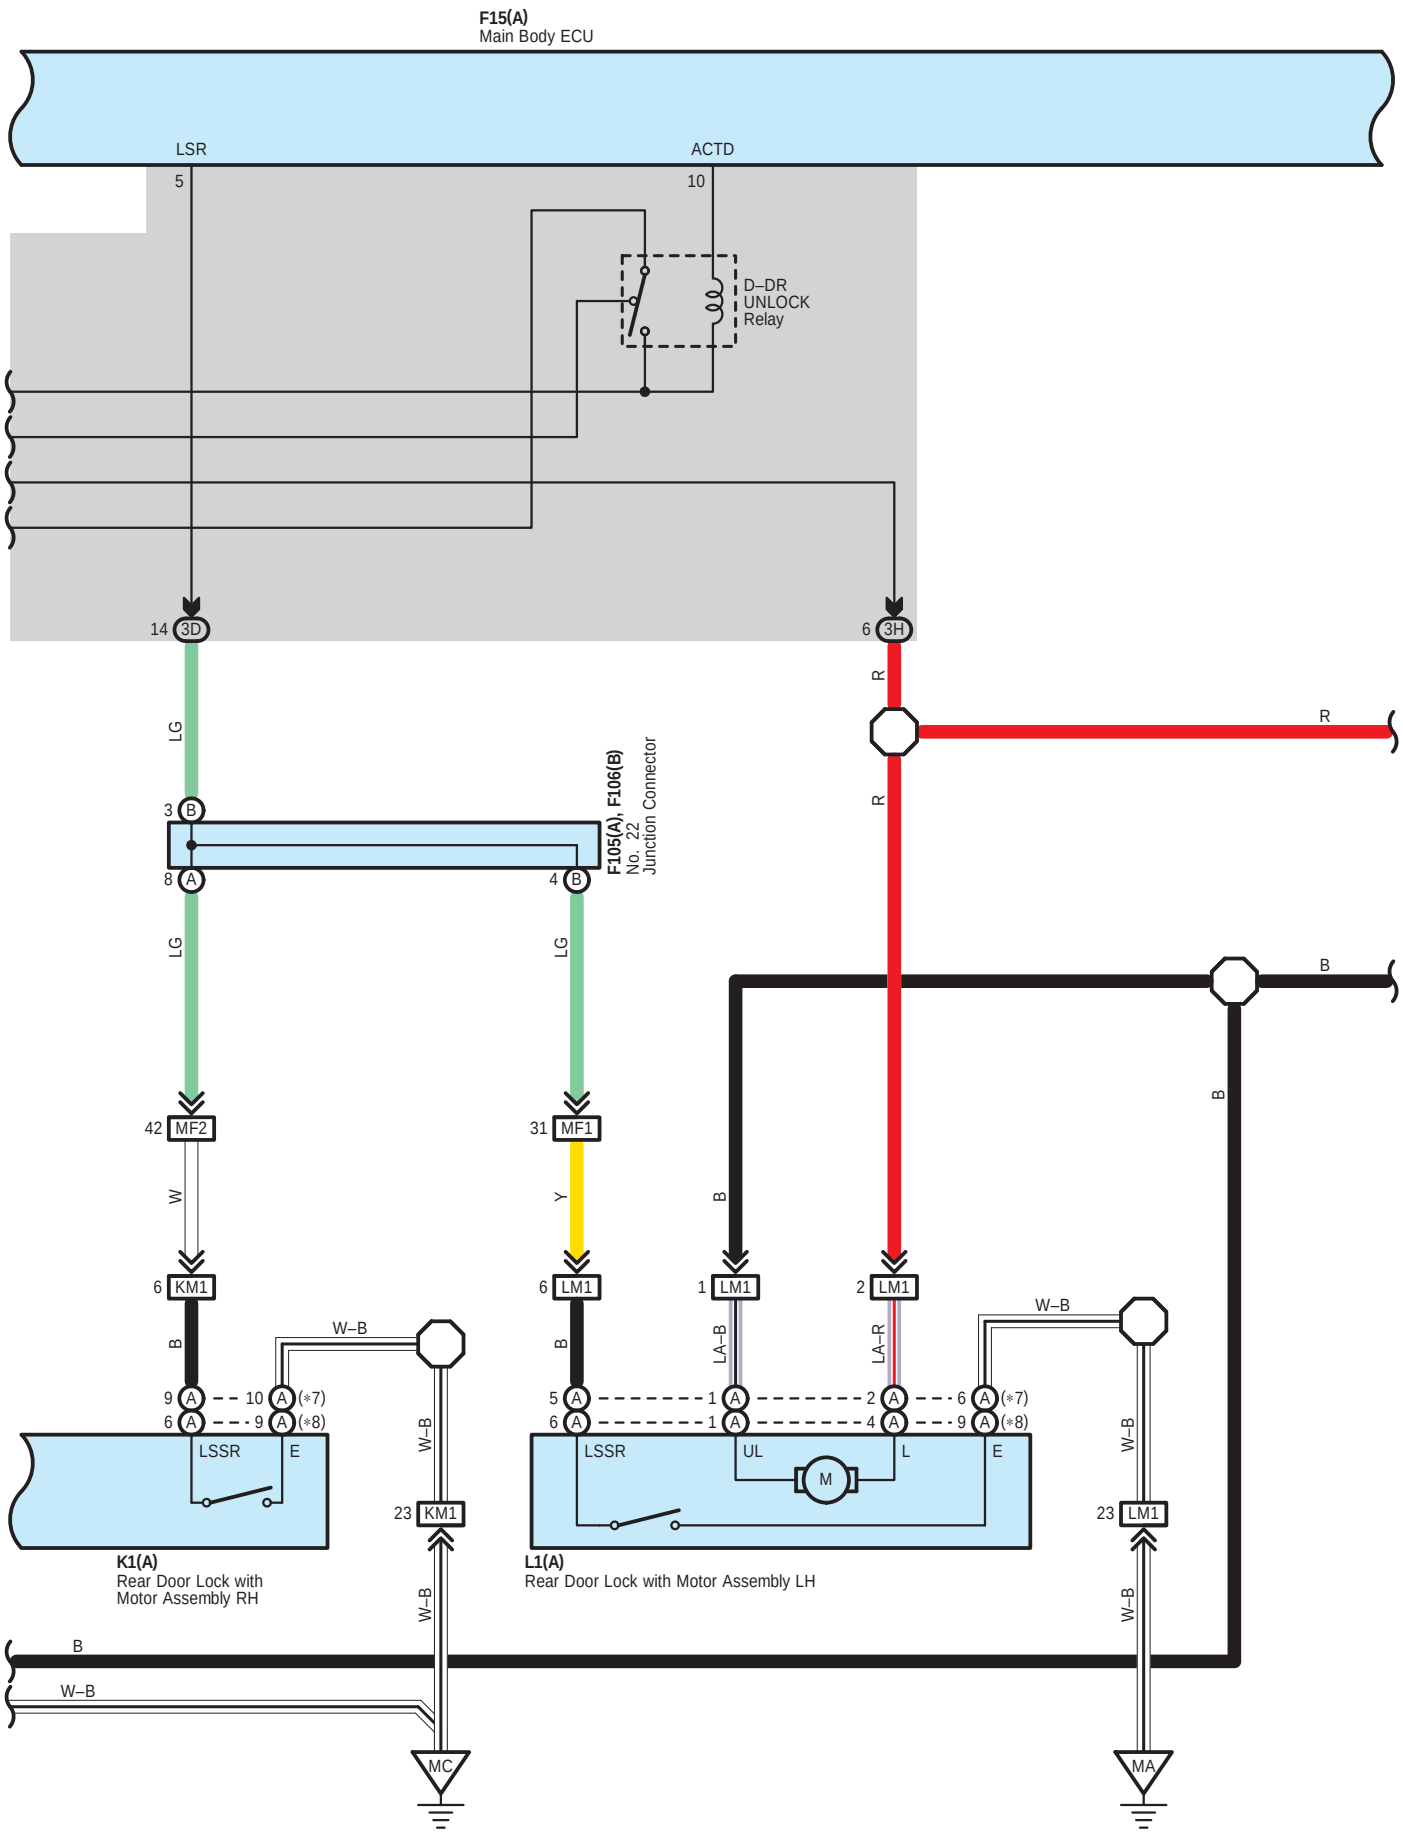
F15(A)
Main Body ECU
LSR
5
ACTD
10
D–DR
UNLOCK
Relay
14 3D
6 3H
LG
R
R
R
3 B
8 A
4 B
F105(A), F106(B)
No. 22
Junction Connector
LG
LG
B
B
42 MF2
31 MF1
W
Y
B
6 KM1
6 LM1
1 LM1
2 LM1
B
LA–B
LA–R
W–B
W–B
9 A
10 A (*7)
6 A
9 A (*8)
5 A
1 A
2 A
6 A (*7)
6 A
1 A
4 A
9 A (*8)
LSSR
E
LSSR
UL
L
E
M
W–B
W–B
23 KM1
23 LM1
K1(A)
Rear Door Lock with
Motor Assembly RH
L1(A)
Rear Door Lock with Motor Assembly LH
W–B
W–B
B
W–B
MC
MA

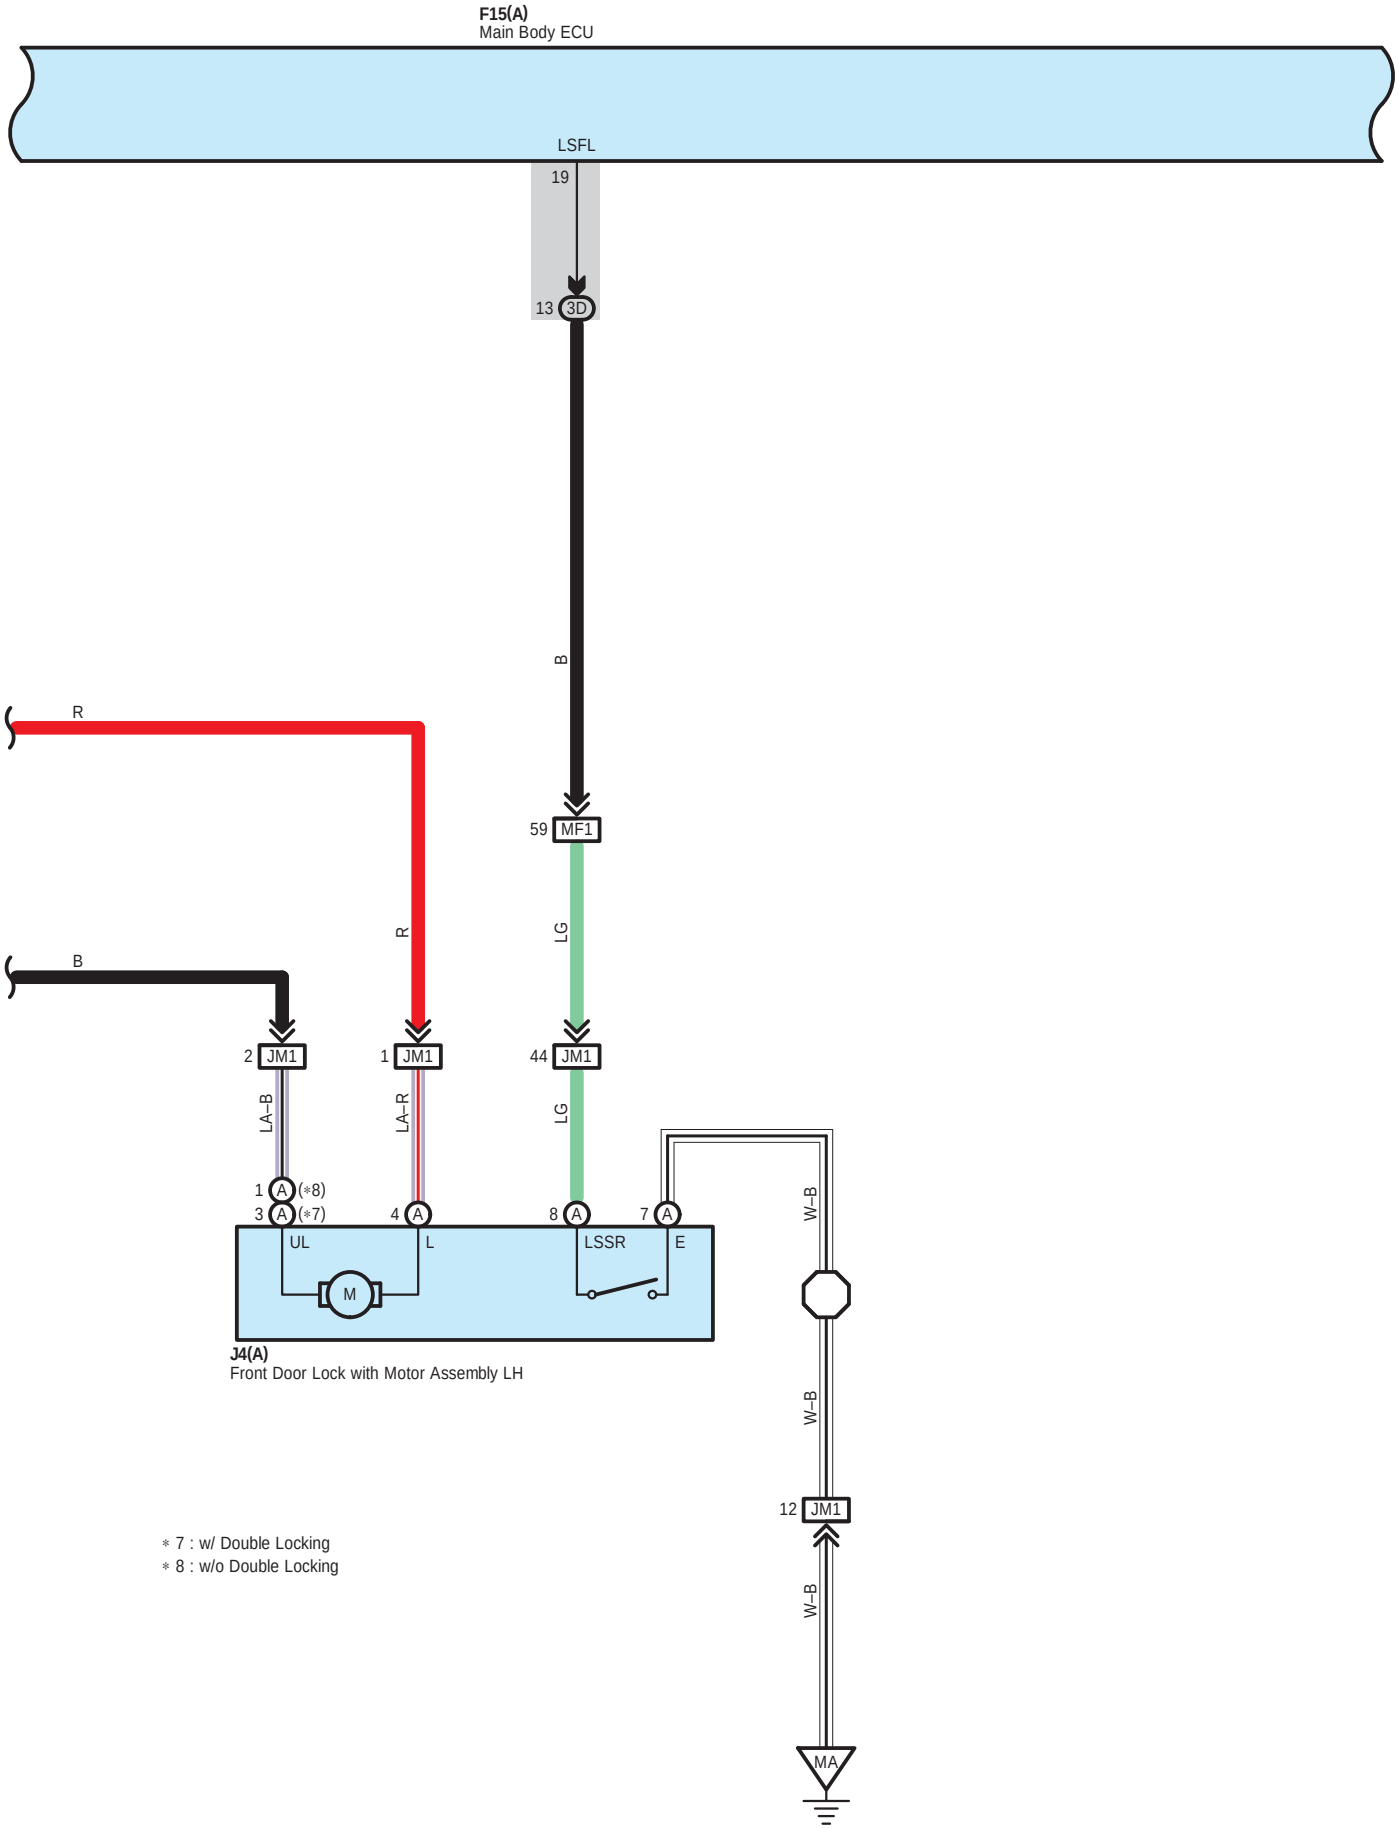
F15(A)
Main Body ECU
LSFL
19
13 3D
B
R
59 MF1
LG
R
B
2 JM1
1 JM1
44 JM1
LA–B
LA–R
LG
1 A (*8)
3 A (*7)
4 A
8 A
7 A
UL
L
LSSR
E
M
J4(A)
Front Door Lock with Motor Assembly LH
W–B
W–B
12 JM1
W–B
MA
* 7 : w/ Double Locking
* 8 : w/o Double Locking

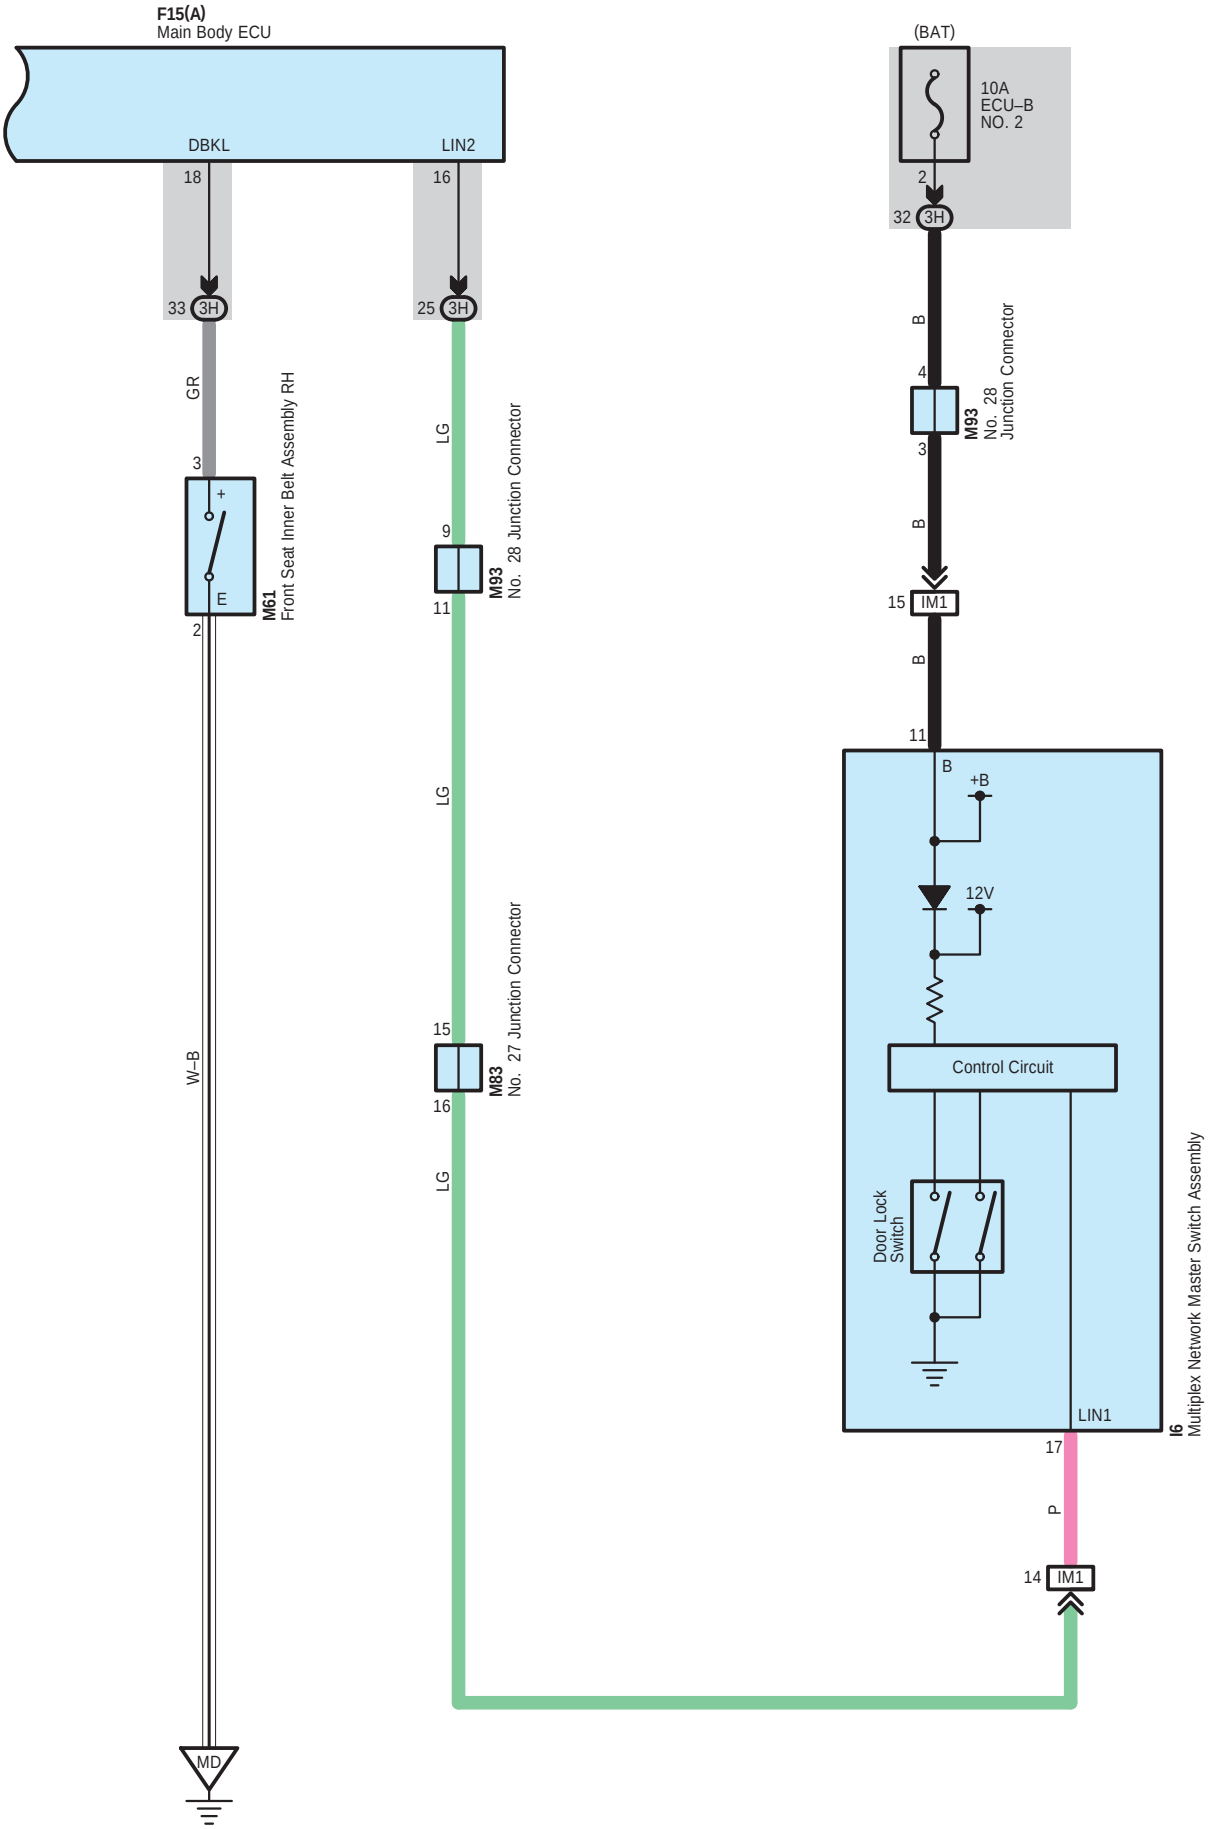
F15(A)
Main Body ECU
DBKL
LIN2
18
16
33 3H
25 3H
GR
LG
3
9
11
M61
Front Seat Inner Belt Assembly RH
M93
No. 28 Junction Connector
2
LG
15
16
M83
No. 27 Junction Connector
W–B
LG
MD
(BAT)
10A
ECU–B
NO. 2
2
32 3H
B
4
3
M93
No. 28
Junction Connector
B
15 IM1
B
11
B
+B
12V
Control Circuit
Door Lock
Switch
LIN1
I6
Multiplex Network Master Switch Assembly
17
P
14 IM1

F15
White

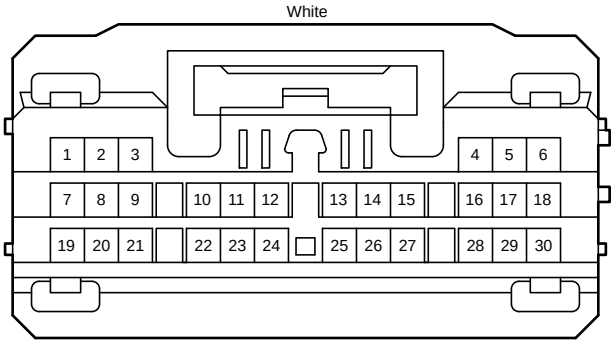

90980-12909

F93
Black

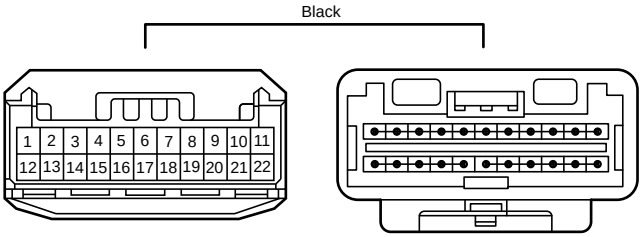

90980-12B54

F102
Black

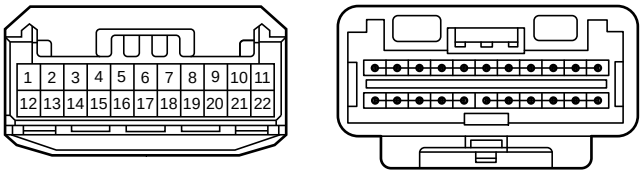

90980-12B54

F105
White

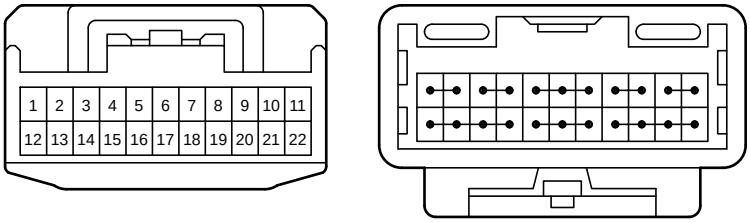

90980-12372

F106
White

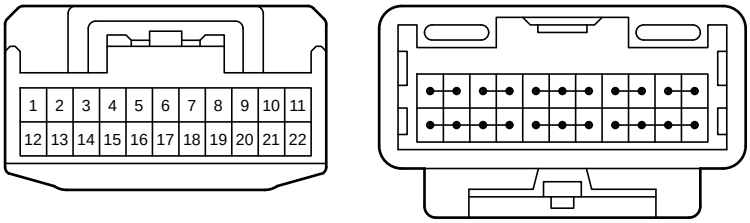

90980-12372

F107
White

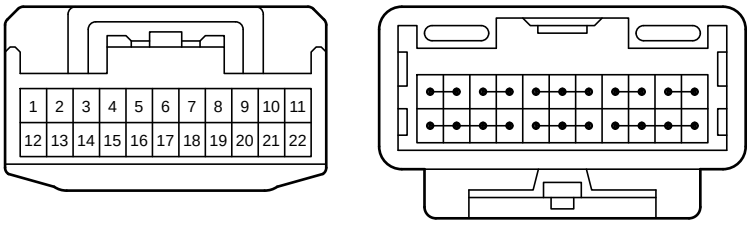

90980-12372

F108
White

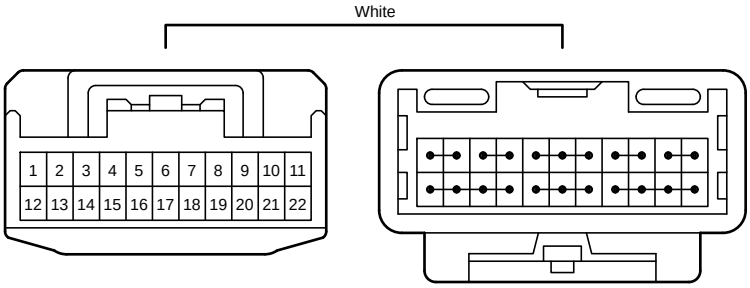

90980-12372

I4
White

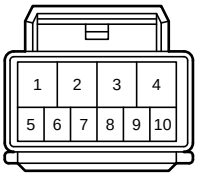

90980-12226

I6
White

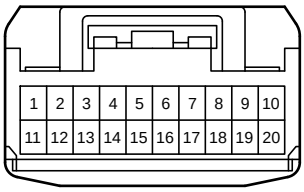

90980-12460

J4
White

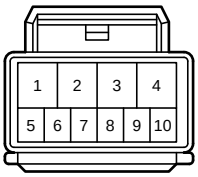

90980-12226

K1
White

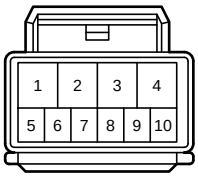

90980-12226

L1
White

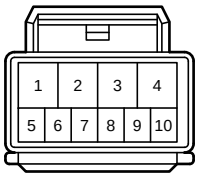

90980-12226

M11
Black

90980-10871

M16
Black

90980-10871

M54
Black

90980-10871

M58
Black

90980-10871

M61
White

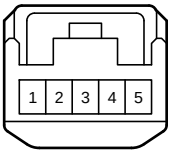

90980-12366

M83
Black

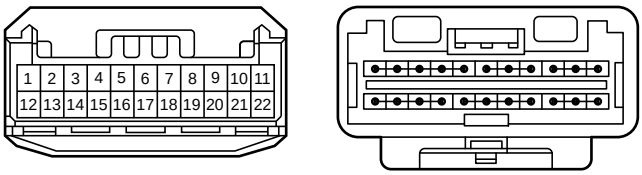

90980-12B54

M93
Black

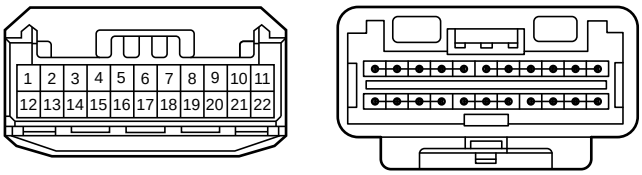

90980-12B54

S9
Black

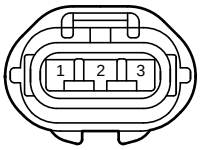

90980-11349

3A
White

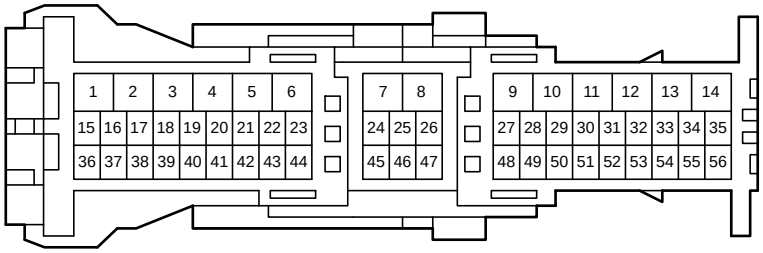

90980-12943

3D
White

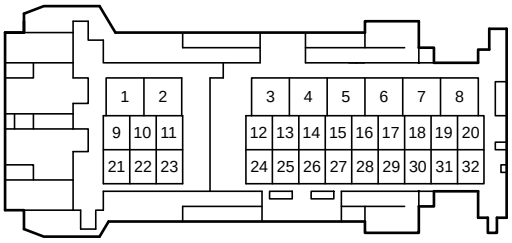

90980-12A48

3H
White

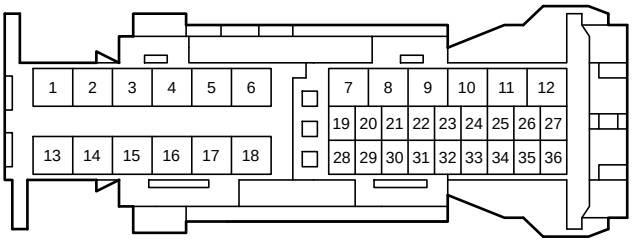

90980-12944

IM1
White

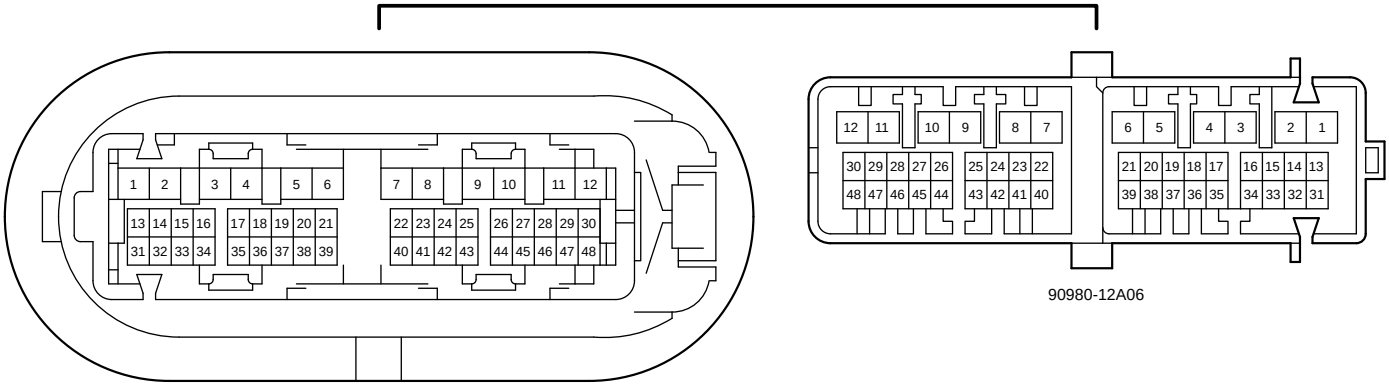

90980-12A09

90980-12A06

JM1
White

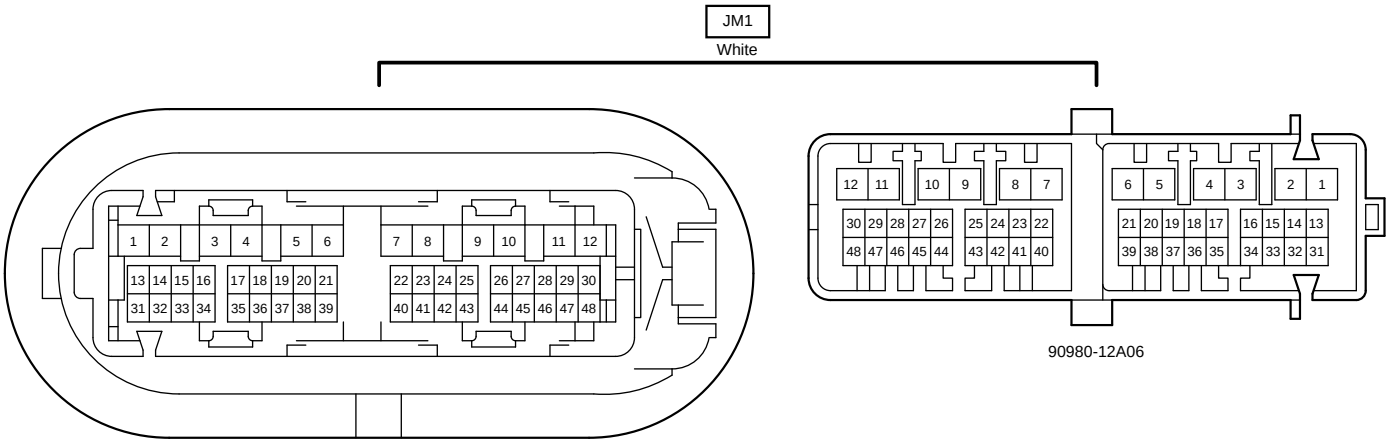

90980-12A09

90980-12A06

KM1
White

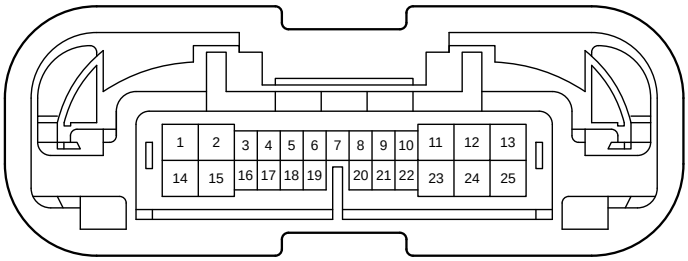

90980-12802

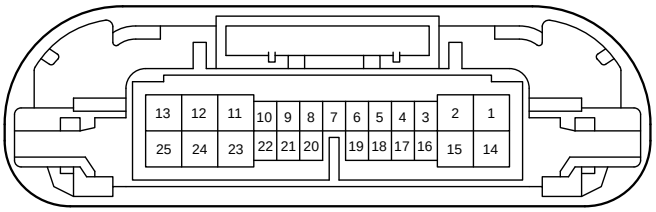

90980-12801

LM1
White

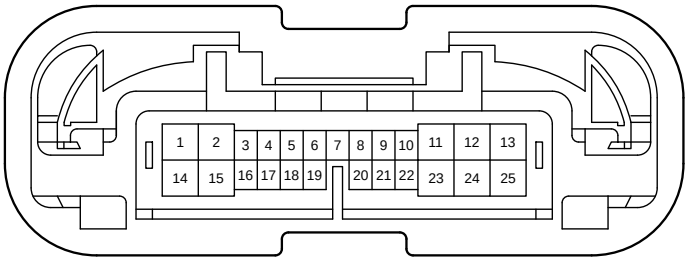

90980-12802

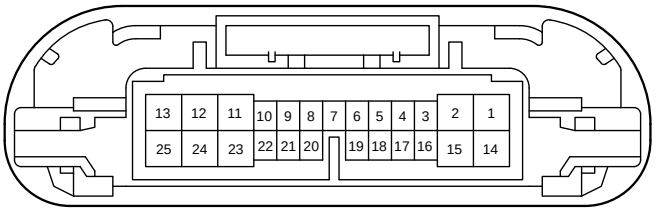

90980-12801

MF1
White

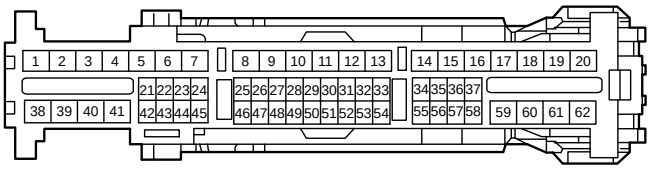

90980-12B22

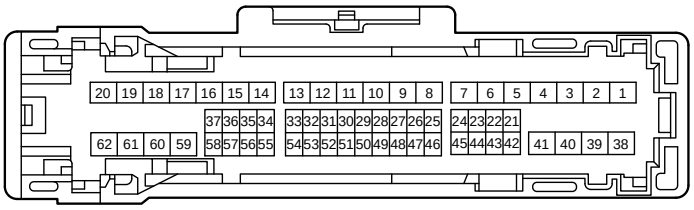

90980-12B21

MF2
White

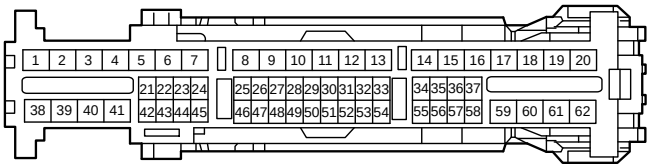

90980-12B22

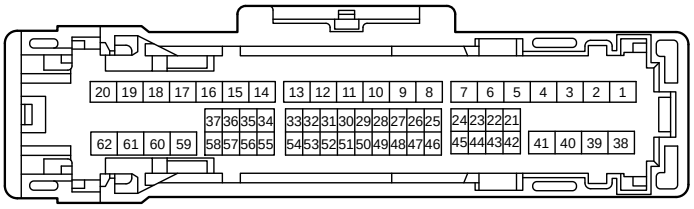

90980-12B21

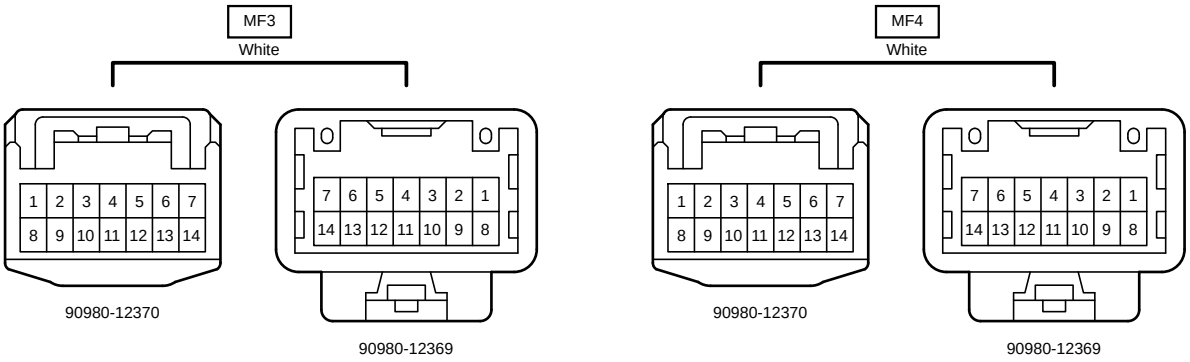
MF3
White
1 2 3 4 5 6 7
8 9 10 11 12 13 14
90980-12370
7 6 5 4 3 2 1
14 13 12 11 10 9 8
90980-12369
MF4
White
1 2 3 4 5 6 7
8 9 10 11 12 13 14
90980-12370
7 6 5 4 3 2 1
14 13 12 11 10 9 8
90980-12369

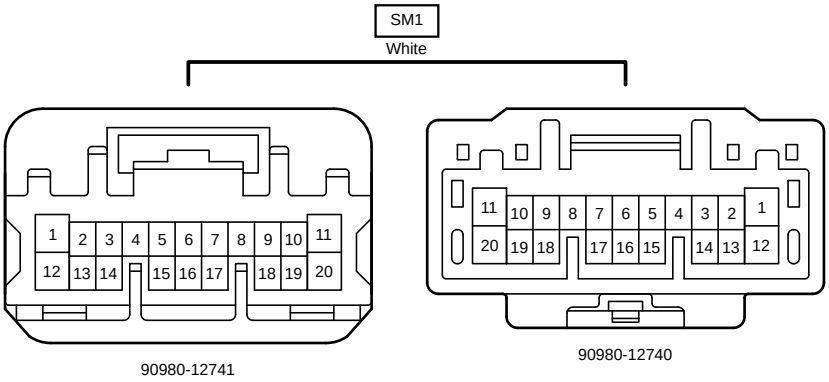
SM1
White
1 2 3 4 5 6 7 8 9 10 11
12 13 14 15 16 17 18 19 20
90980-12741
11 10 9 8 7 6 5 4 3 2 1
20 19 18 17 16 15 14 13 12
90980-12740