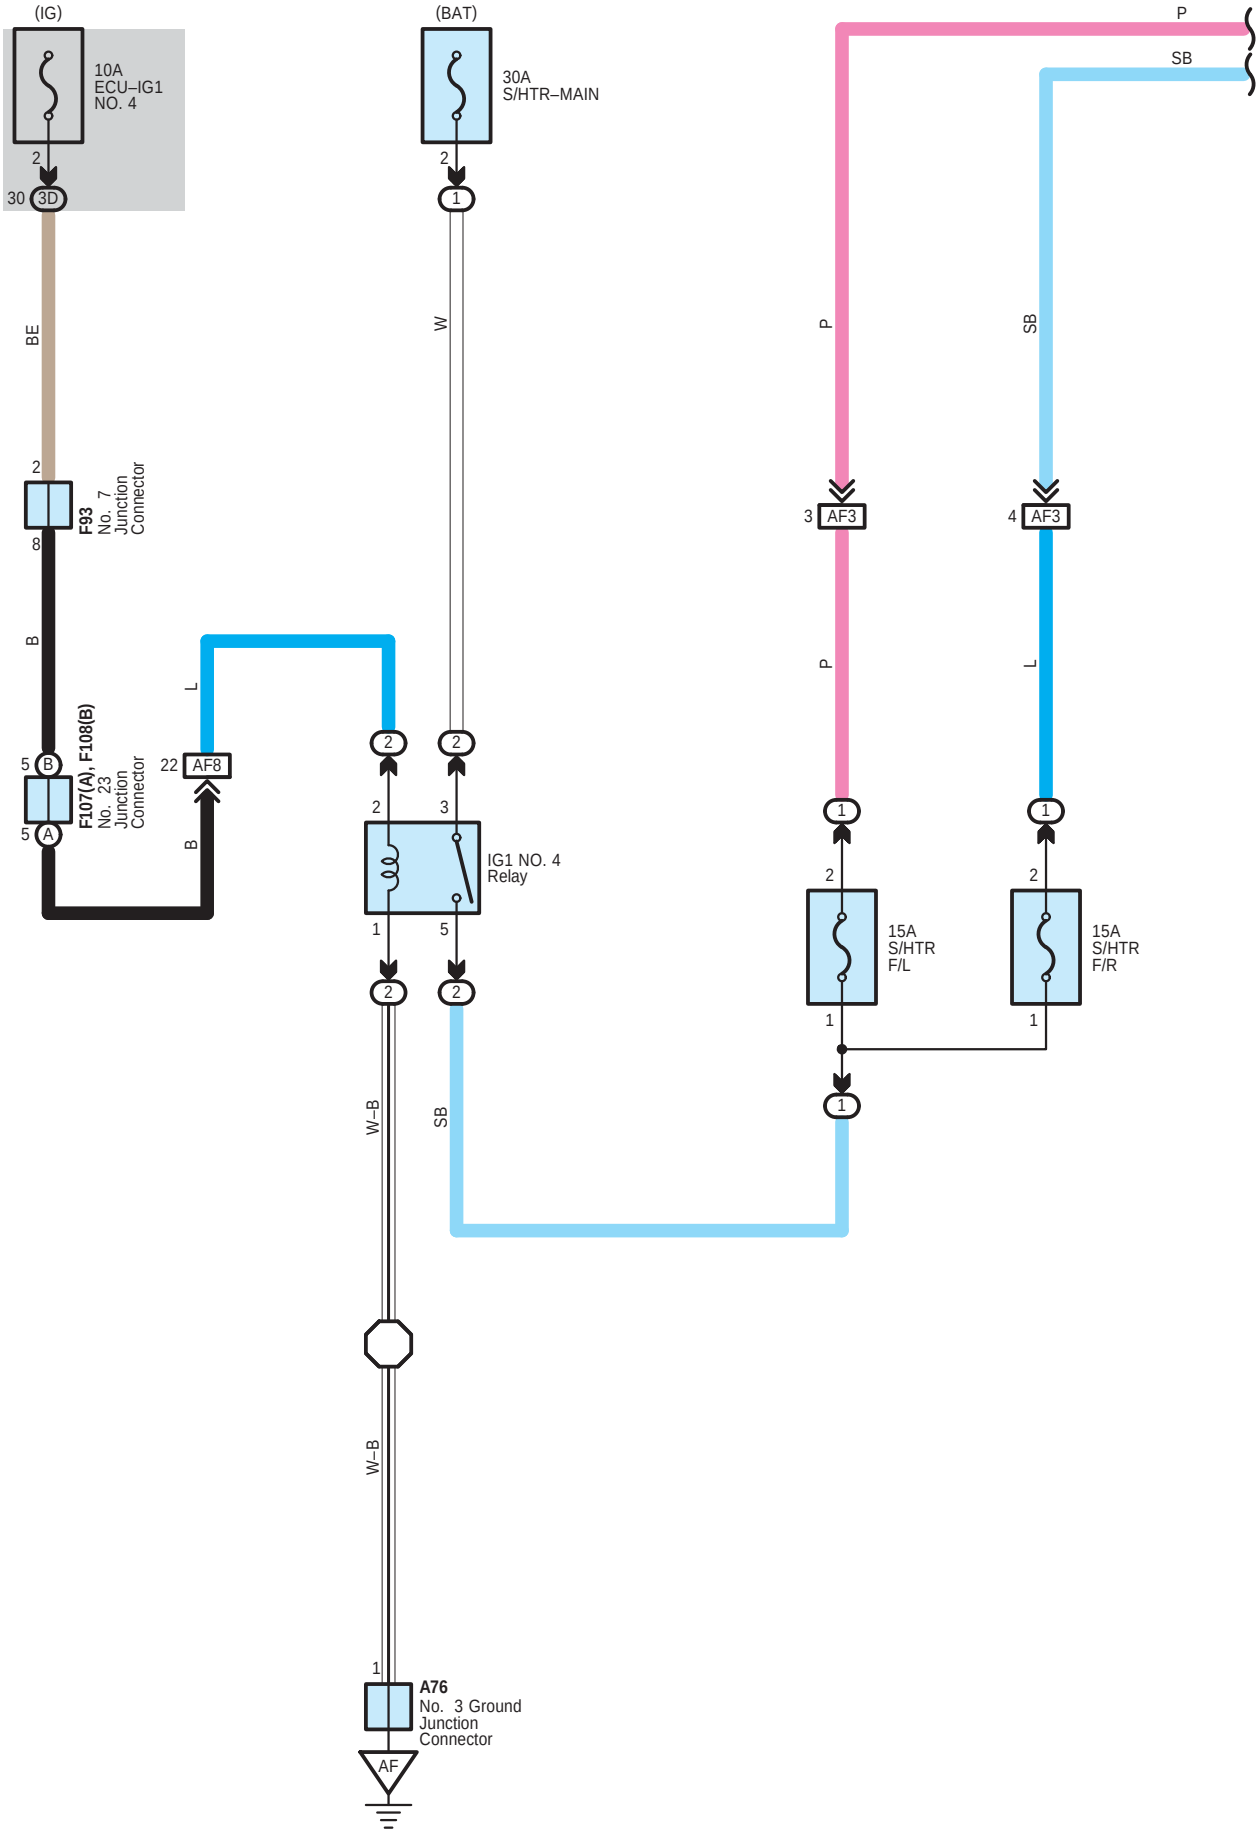
(IG)
10A
ECU–IG1
NO. 4
2
30 3D
BE
2
F93
No. 7
Junction
Connector
8
B
5 B
F107(A), F108(B)
No. 23
Junction
Connector
5 A
L
22 AF8
B
(BAT)
30A
S/HTR–MAIN
2
1
W
2
2
2
3
IG1 NO. 4
Relay
1
5
2
2
W–B
SB
W–B
1
A76
No. 3 Ground
Junction
Connector
AF
P
SB
P
SB
3 AF3
4 AF3
P
L
1
1
2
2
15A
S/HTR
F/L
15A
S/HTR
F/R
1
1
1

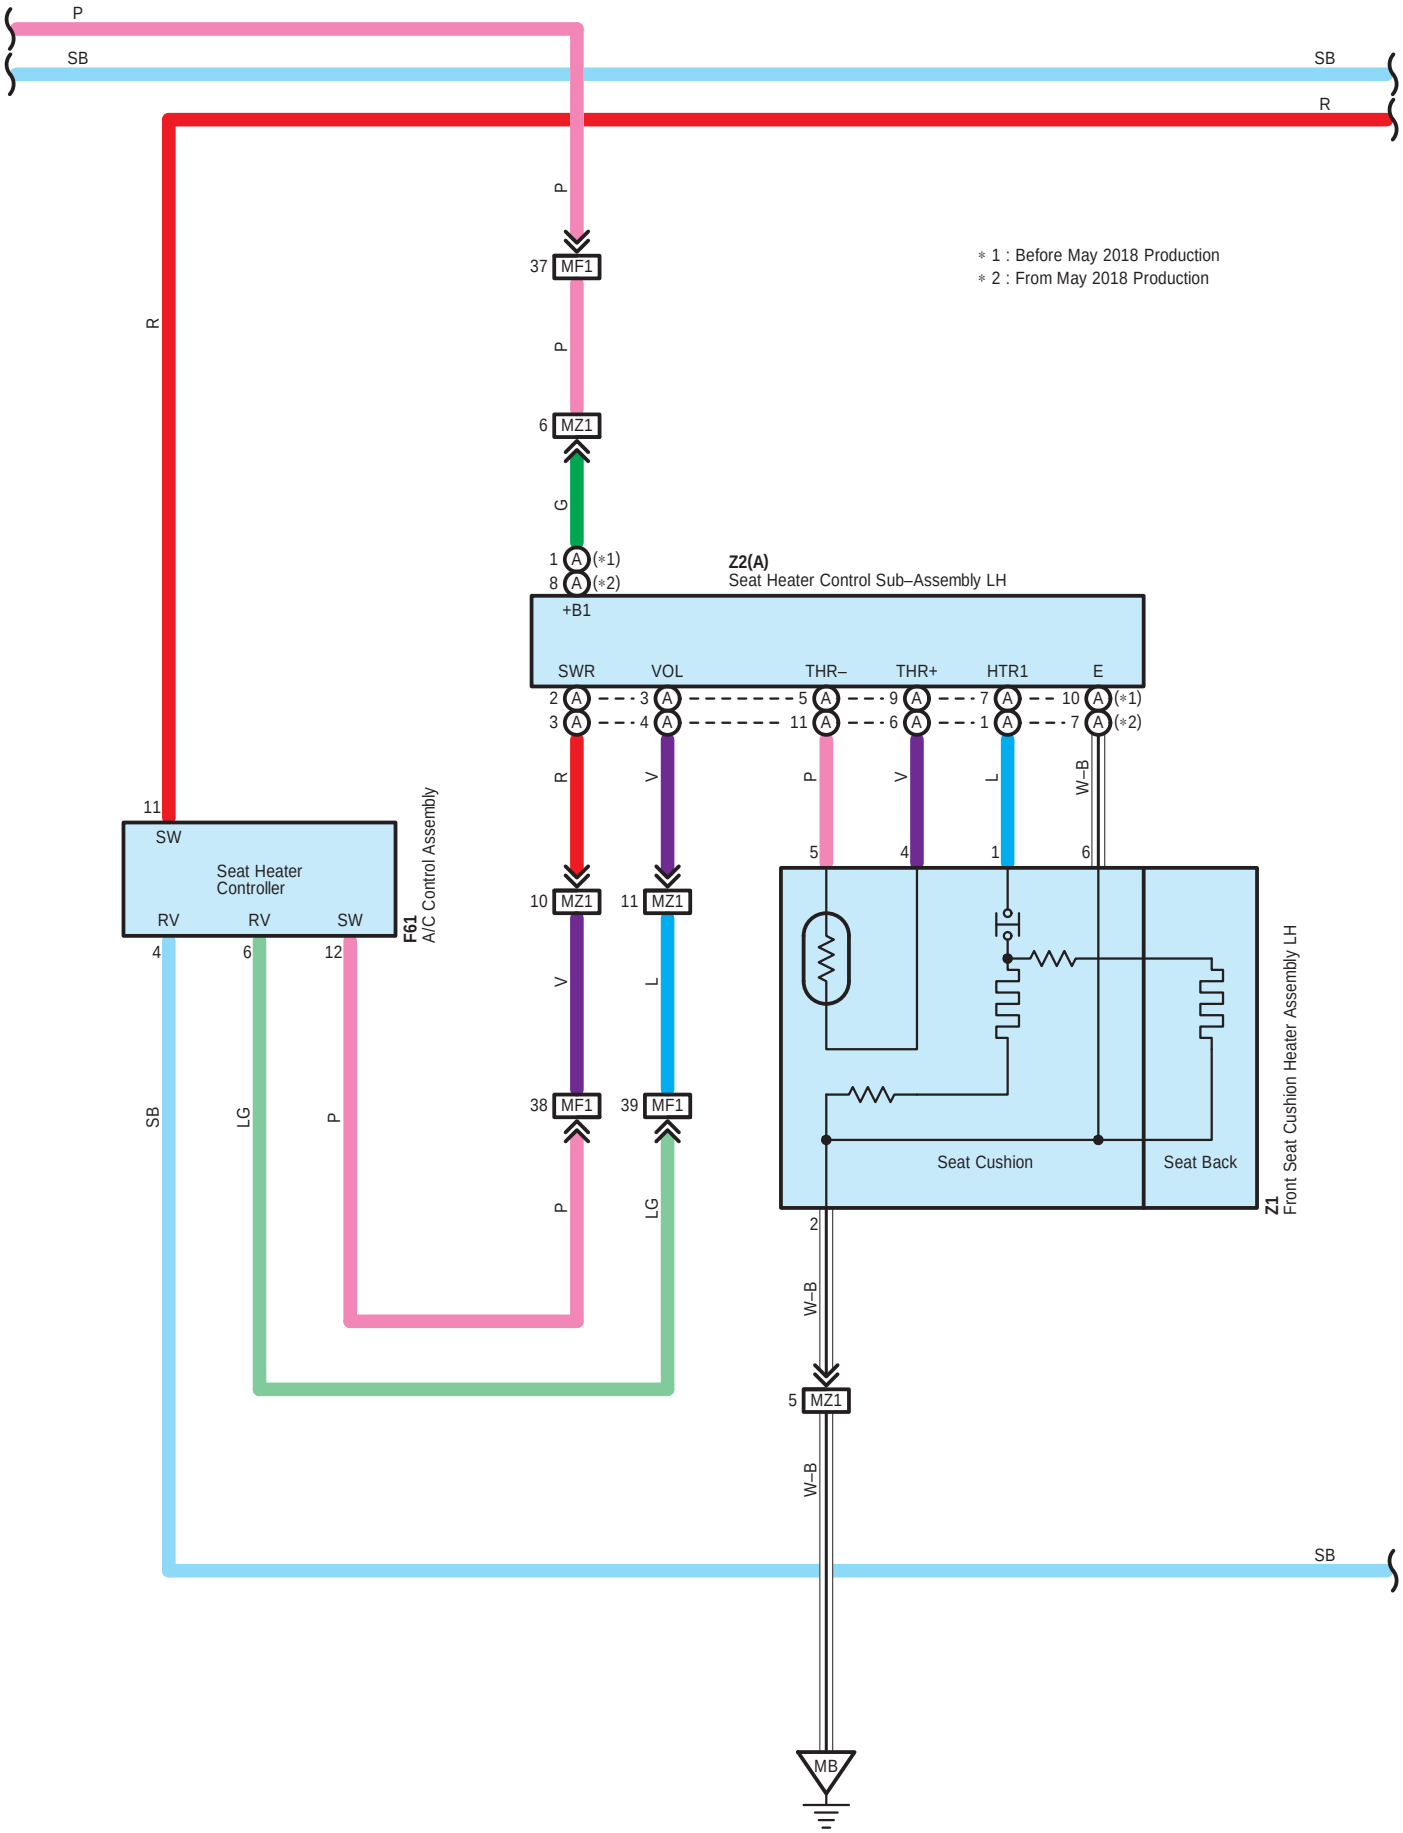
P
SB
SB
R
P
37 MF1
P
6 MZ1
G
1 A (*1)
8 A (*2)
+B1
Z2(A)
Seat Heater Control Sub–Assembly LH
SWR
VOL
THR–
THR+
HTR1
E
2 A
3 A
3 A
4 A
5 A
11 A
9 A
6 A
7 A
1 A
10 A (*1)
7 A (*2)
R
V
P
V
L
W–B
R
11
SW
Seat Heater
Controller
RV
RV
SW
4
6
12
F61
A/C Control Assembly
10 MZ1
11 MZ1
V
L
38 MF1
39 MF1
P
LG
SB
LG
P
5
4
1
6
Seat Cushion
Seat Back
Z1
Front Seat Cushion Heater Assembly LH
2
W–B
5 MZ1
W–B
SB
MB
* 1 : Before May 2018 Production
* 2 : From May 2018 Production

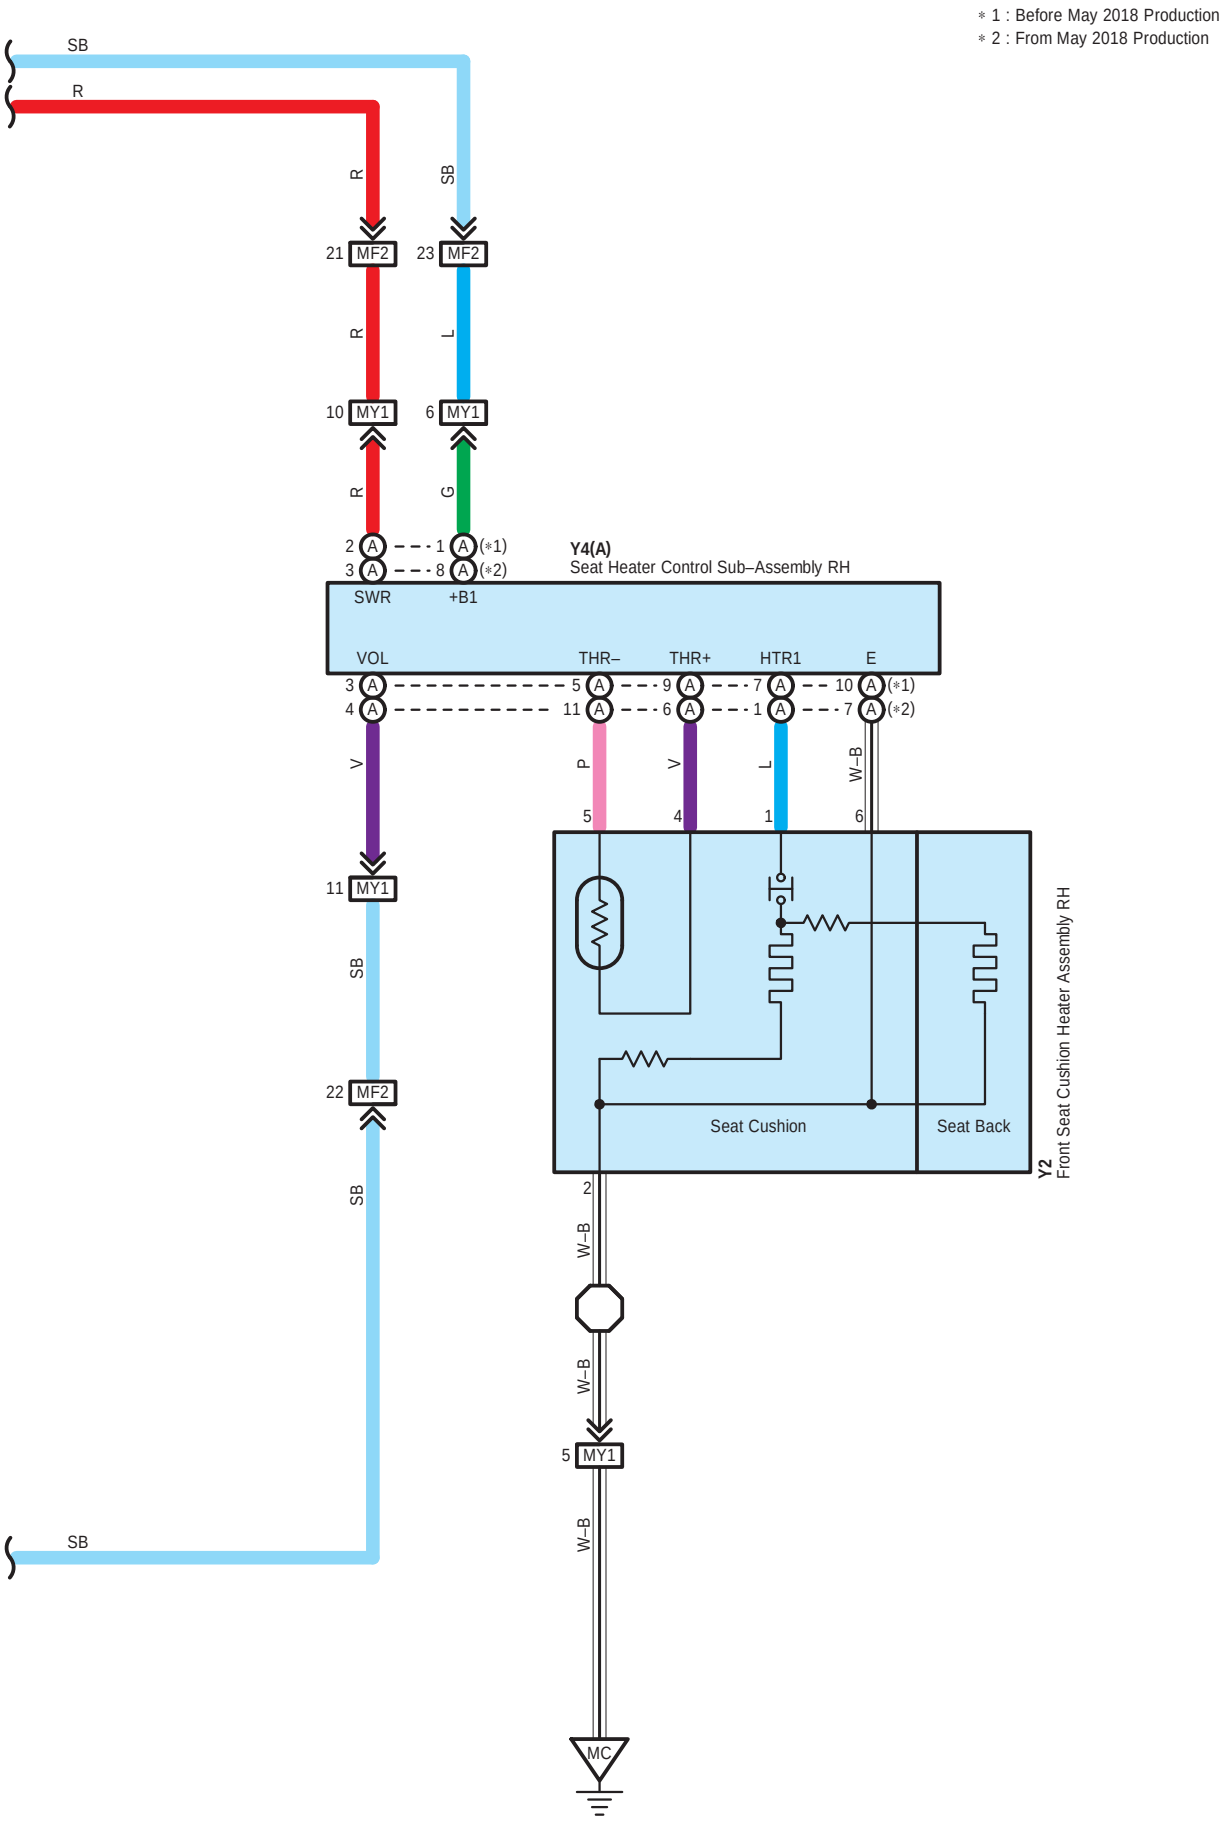
∗ 1 : Before May 2018 Production
∗ 2 : From May 2018 Production
SB
R
R
SB
21 MF2
23 MF2
R
L
10 MY1
6 MY1
R
G
2 A
3 A
1 A (∗1)
8 A (∗2)
SWR
+B1
Y4(A)
Seat Heater Control Sub–Assembly RH
VOL
THR–
THR+
HTR1
E
3 A
4 A
5 A
11 A
9 A
6 A
7 A
1 A
10 A (∗1)
7 A (∗2)
V
P
V
L
W–B
5
4
1
6
11 MY1
SB
22 MF2
SB
Seat Cushion
Seat Back
Y2
Front Seat Cushion Heater Assembly RH
2
W–B
W–B
5 MY1
W–B
SB
MC

A76
Black

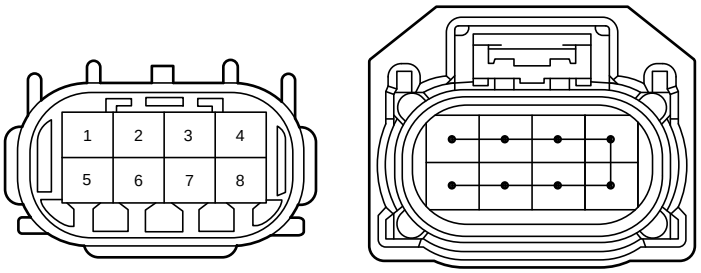

90980-12B56

F61
Black

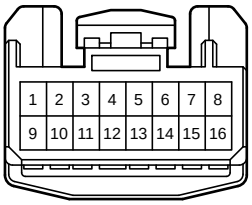

82824-33470

F93
Black

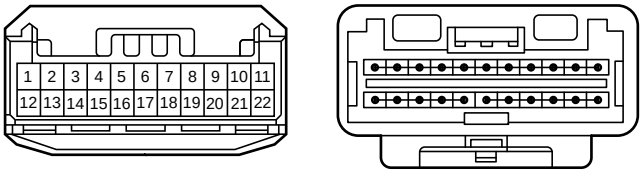

90980-12B54

F107
White

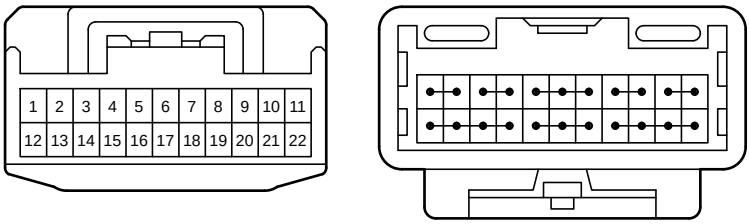

90980-12372

F108
White

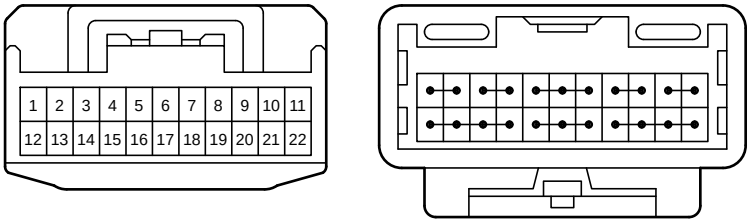

90980-12372

Y2
Black

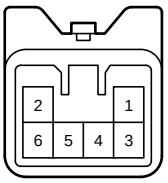

90980-10796

Y4
White

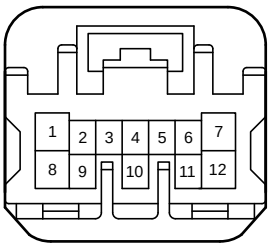

90980-12812

Z1
Black

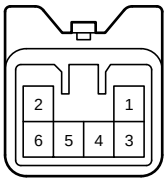

90980-10796

Z2
White

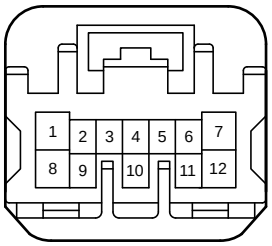

90980-12812

3D
White

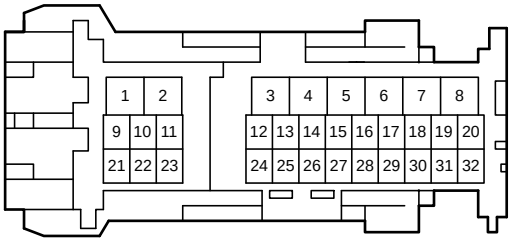

90980-12A48

AF3
White

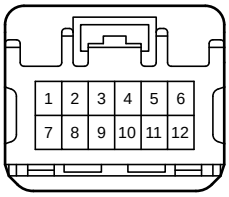

90980-12737

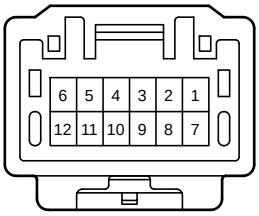

90980-12736

AF8
White

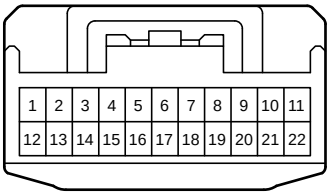

90980-12372

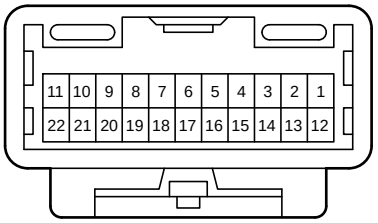

90980-12371

MF1
White

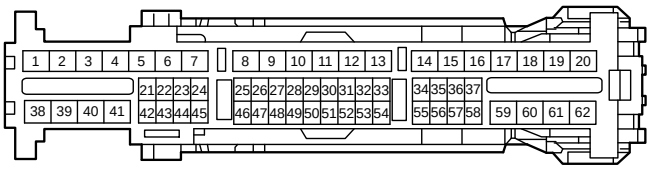

90980-12B22

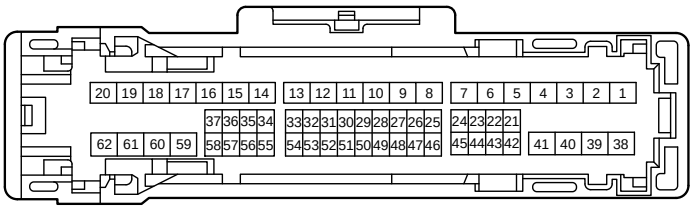

90980-12B21

MF2
White

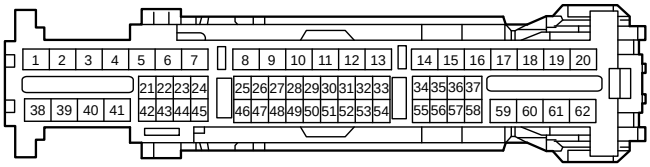

90980-12B22

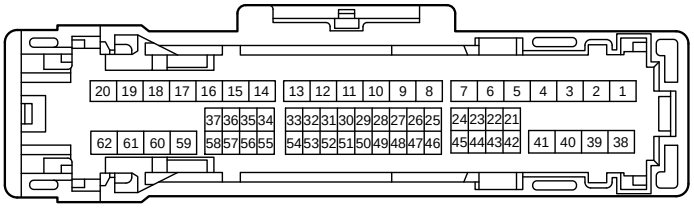

90980-12B21
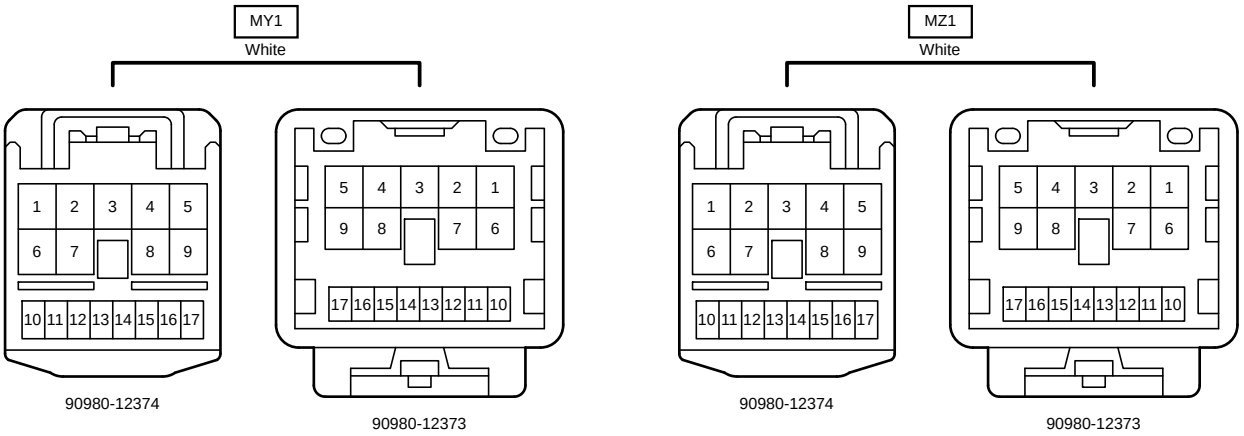
Seat Heater (RHD)