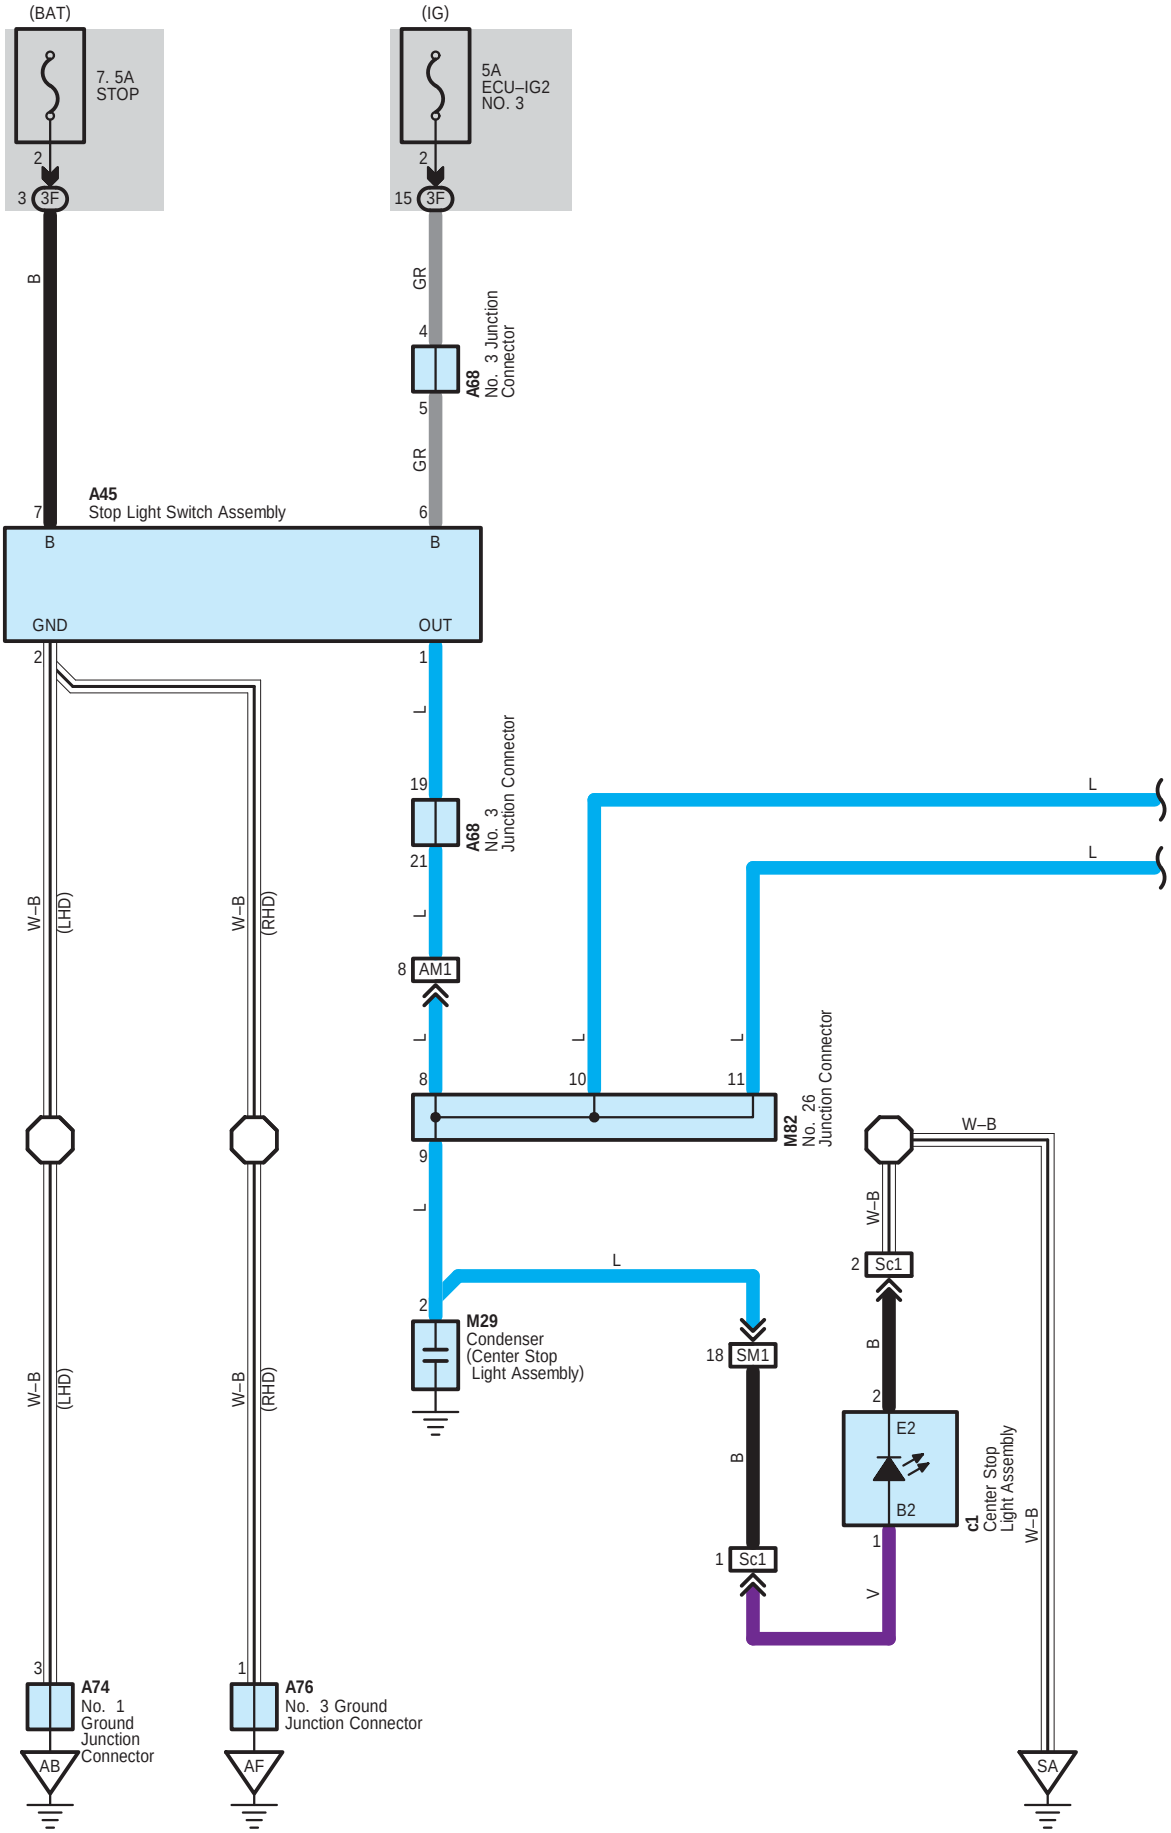
(BAT)
7. 5A
STOP
2
3
3F
B
(IG)
5A
ECU–IG2
NO. 3
2
15
3F
GR
4
A68
No. 3 Junction
Connector
5
GR
A45
Stop Light Switch Assembly
7
B
6
B
GND
OUT
2
1
L
19
A68
No. 3
Junction Connector
21
L
8
AM1
W–B
(LHD)
W–B
(RHD)
L
L
L
8
10
11
M82
No. 26
Junction Connector
9
L
W–B
W–B
2
Sc1
L
2
M29
Condenser
(Center Stop
Light Assembly)
18
SM1
B
2
E2
B2
c1
Center Stop
Light Assembly
W–B
B
1
Sc1
1
V
W–B
(LHD)
W–B
(RHD)
3
A74
No. 1
Ground
Junction
Connector
AB
1
A76
No. 3 Ground
Junction Connector
AF
SA

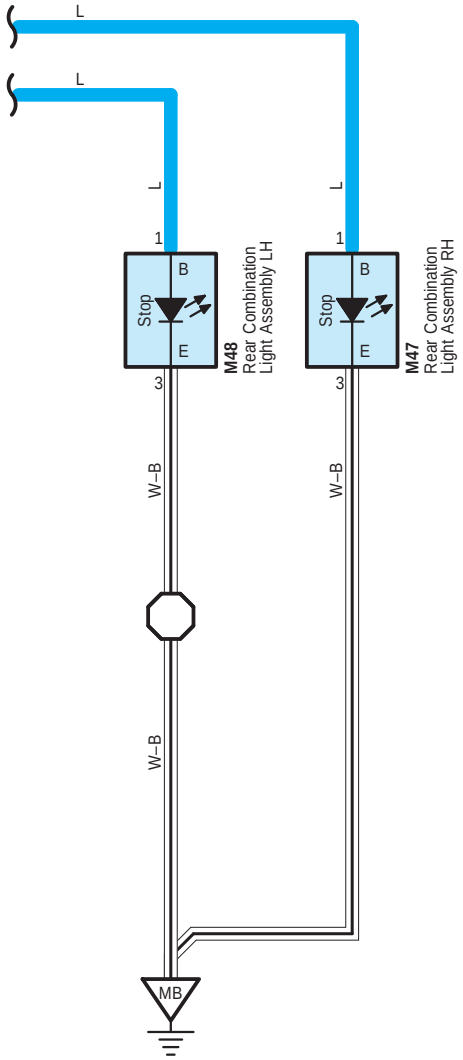
L
L
L
L
1
1
B
B
Stop
Stop
E
E
M48
Rear Combination
Light Assembly LH
M47
Rear Combination
Light Assembly RH
3
3
W–B
W–B
W–B
MB

A45
Black

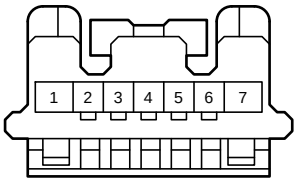

90980-12092

A68
Black

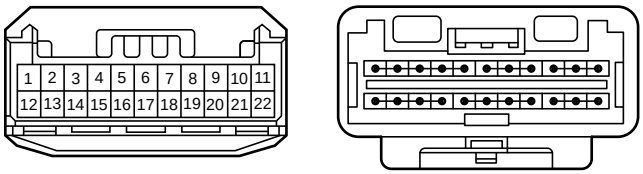

90980-12B54

A74
Black

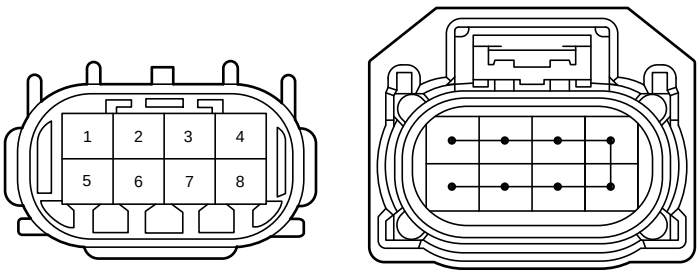

90980-12B56

A76
Black

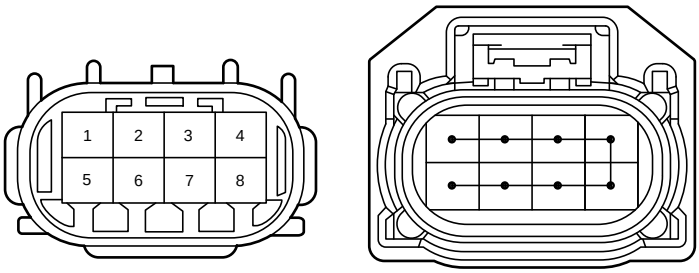

90980-12B56

M29
Black



M47
White

90980-10942

M48
White

90980-10942

M82
Black

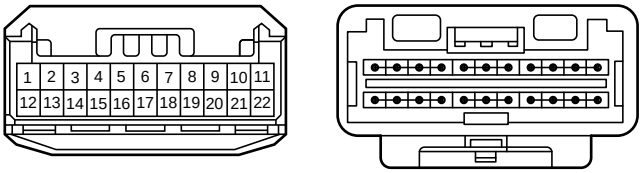

90980-12B54

c1
White



90980-11246

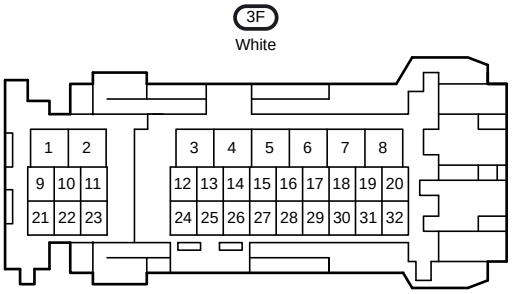

90980-12A47

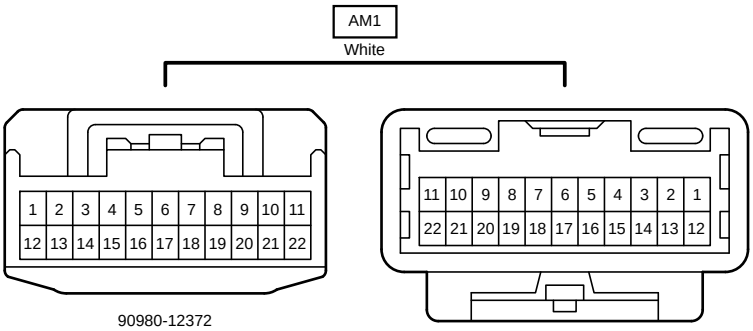

90980-12372

90980-12371

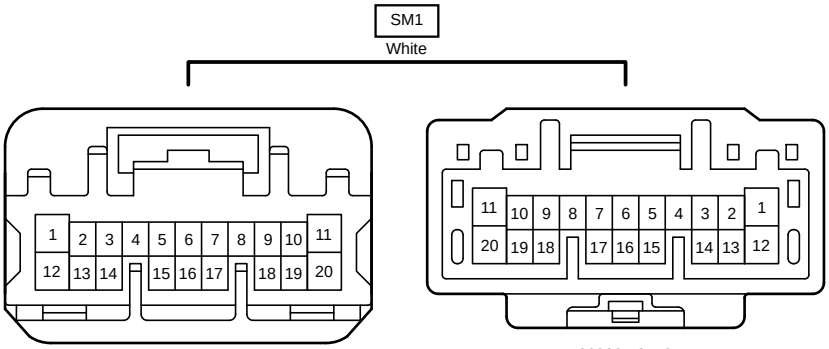

90980-12741

90980-12740

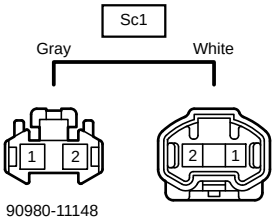

90980-11148

90980-11159