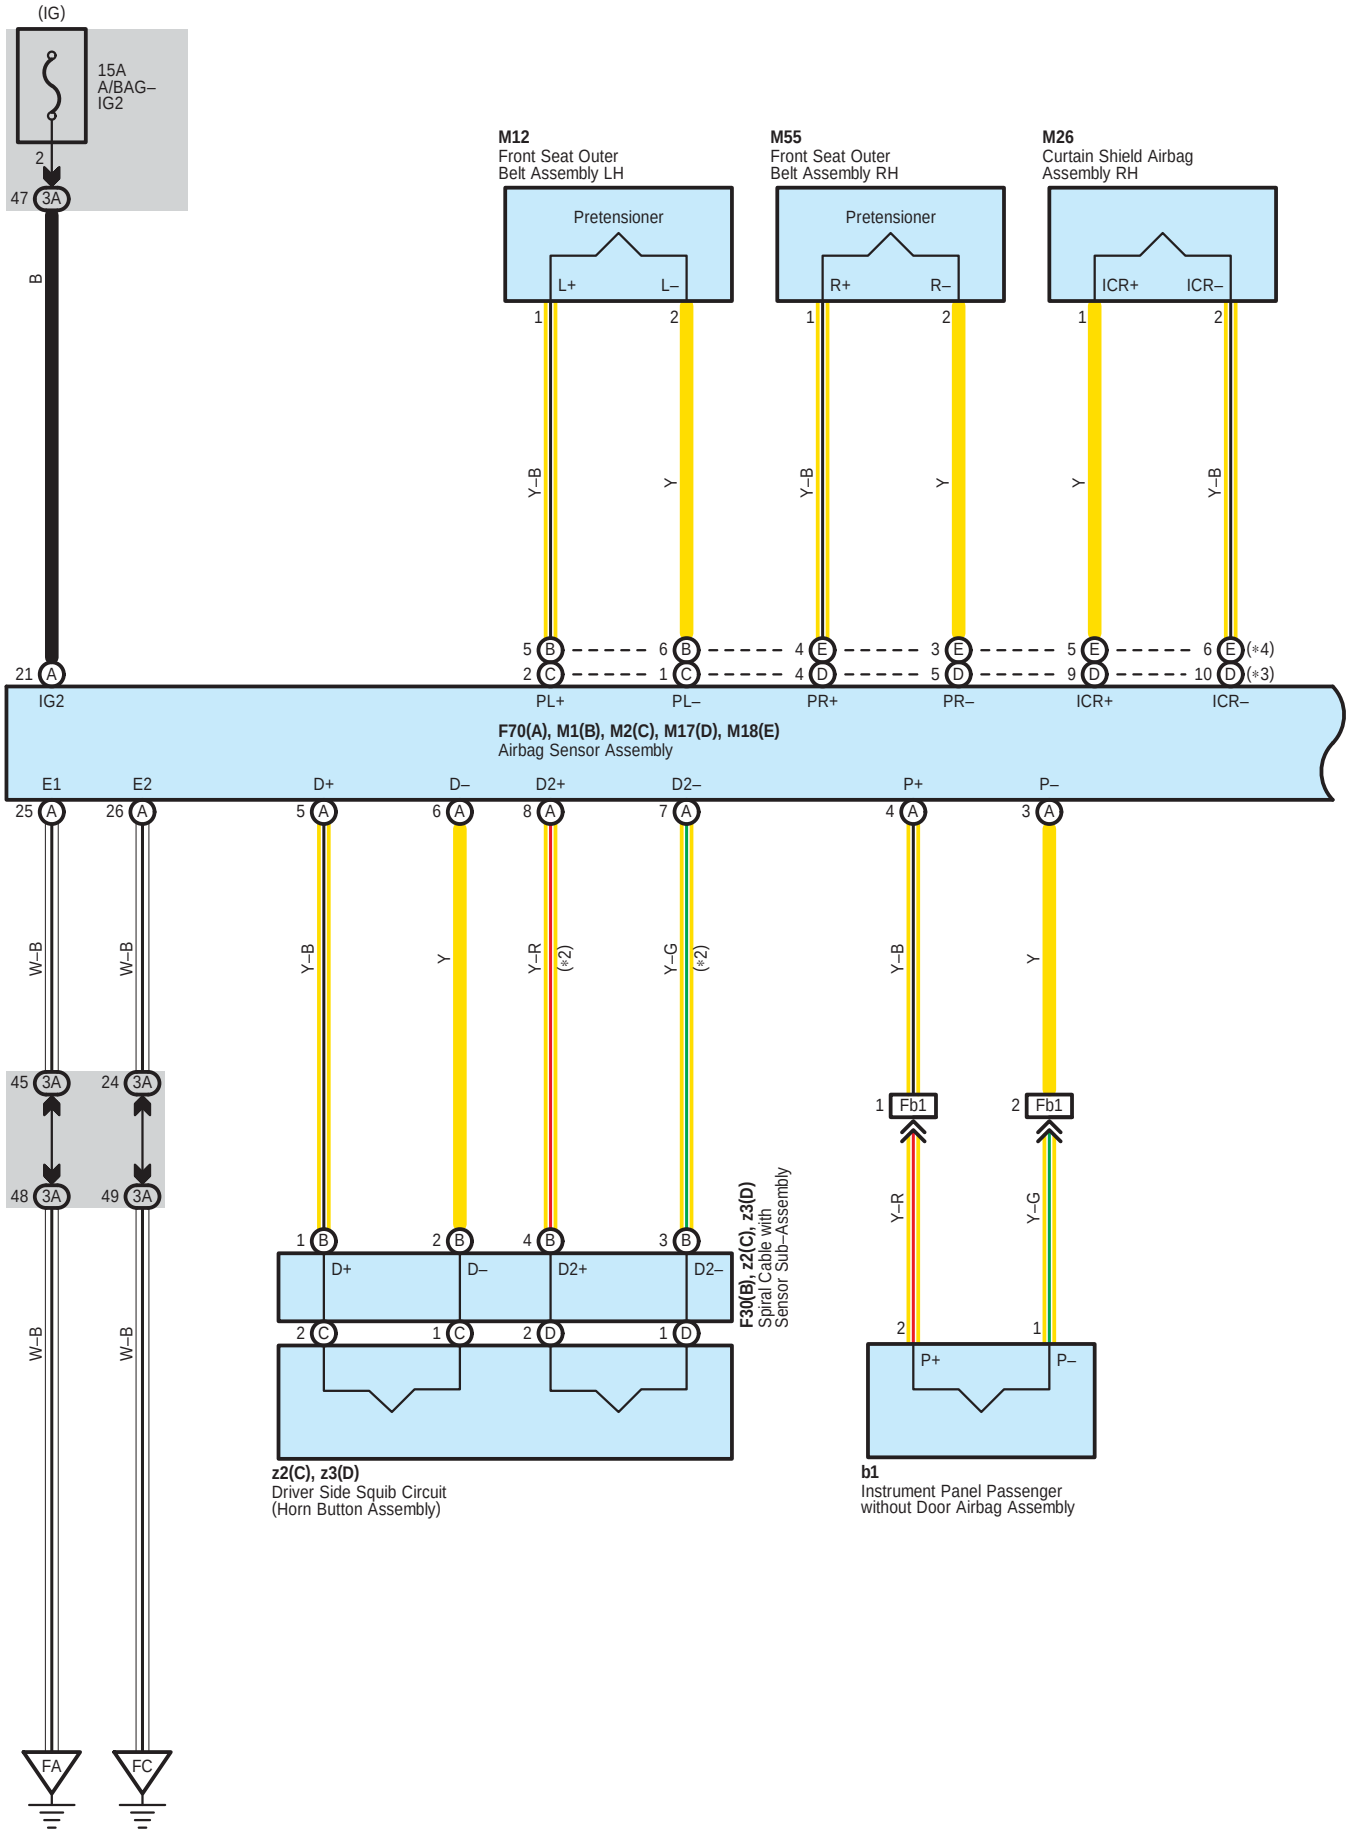
(IG)
15A
A/BAG–
IG2
2
47 3A
B
M12
Front Seat Outer
Belt Assembly LH
Pretensioner
L+
L–
M55
Front Seat Outer
Belt Assembly RH
Pretensioner
R+
R–
M26
Curtain Shield Airbag
Assembly RH
ICR+
ICR–
Y–B
Y
5 B
6 B
4 E
3 E
5 E
6 E (*4)
21 A
2 C
1 C
4 D
5 D
9 D
10 D (*3)
IG2
PL+
PL–
PR+
PR–
ICR+
ICR–
F70(A), M1(B), M2(C), M17(D), M18(E)
Airbag Sensor Assembly
E1
E2
D+
D–
D2+
D2–
P+
P–
25 A
26 A
5 A
6 A
8 A
7 A
4 A
3 A
W–B
Y–R
Y–G
(*2)
45 3A
24 3A
48 3A
49 3A
1 Fb1
2 Fb1
1 B
2 B
4 B
3 B
2 C
1 C
2 D
1 D
F30(B), z2(C), z3(D)
Spiral Cable with
Sensor Sub–Assembly
z2(C), z3(D)
Driver Side Squib Circuit
(Horn Button Assembly)
b1
Instrument Panel Passenger
without Door Airbag Assembly
FA
FC

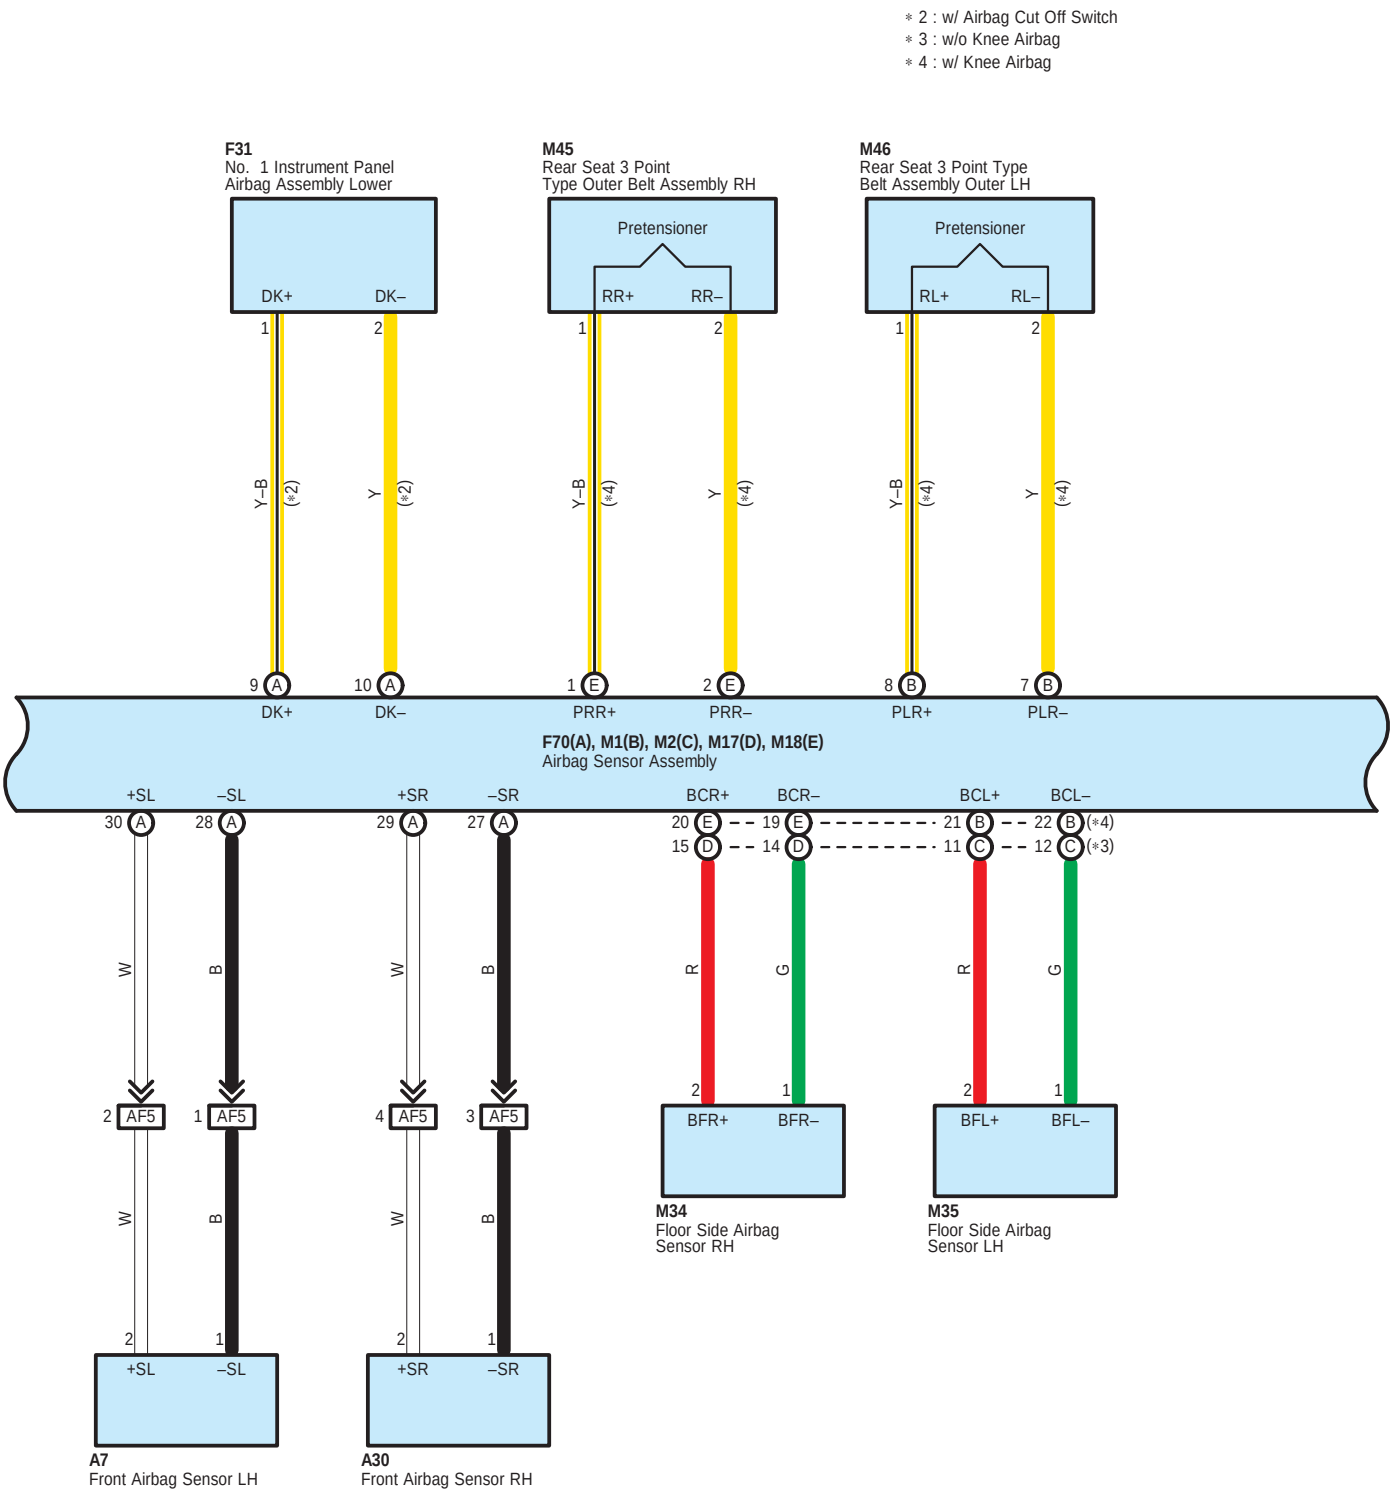
∗ 2 : w/ Airbag Cut Off Switch
∗ 3 : w/o Knee Airbag
∗ 4 : w/ Knee Airbag
F31
No. 1 Instrument Panel Airbag Assembly Lower
DK+
DK–
M45
Rear Seat 3 Point Type Outer Belt Assembly RH
Pretensioner
RR+
RR–
M46
Rear Seat 3 Point Type Belt Assembly Outer LH
Pretensioner
RL+
RL–
Y–B (∗2)
Y (∗2)
Y–B (∗4)
Y (∗4)
Y–B (∗4)
Y (∗4)
DK+
DK–
PRR+
PRR–
PLR+
PLR–
F70(A), M1(B), M2(C), M17(D), M18(E)
Airbag Sensor Assembly
+SL
–SL
+SR
–SR
BCR+
BCR–
BCL+
BCL–
(∗4)
(∗3)
W
B
R
G
AF5
BFR+
BFR–
BFL+
BFL–
M34
Floor Side Airbag Sensor RH
M35
Floor Side Airbag Sensor LH
A7
Front Airbag Sensor LH
A30
Front Airbag Sensor RH

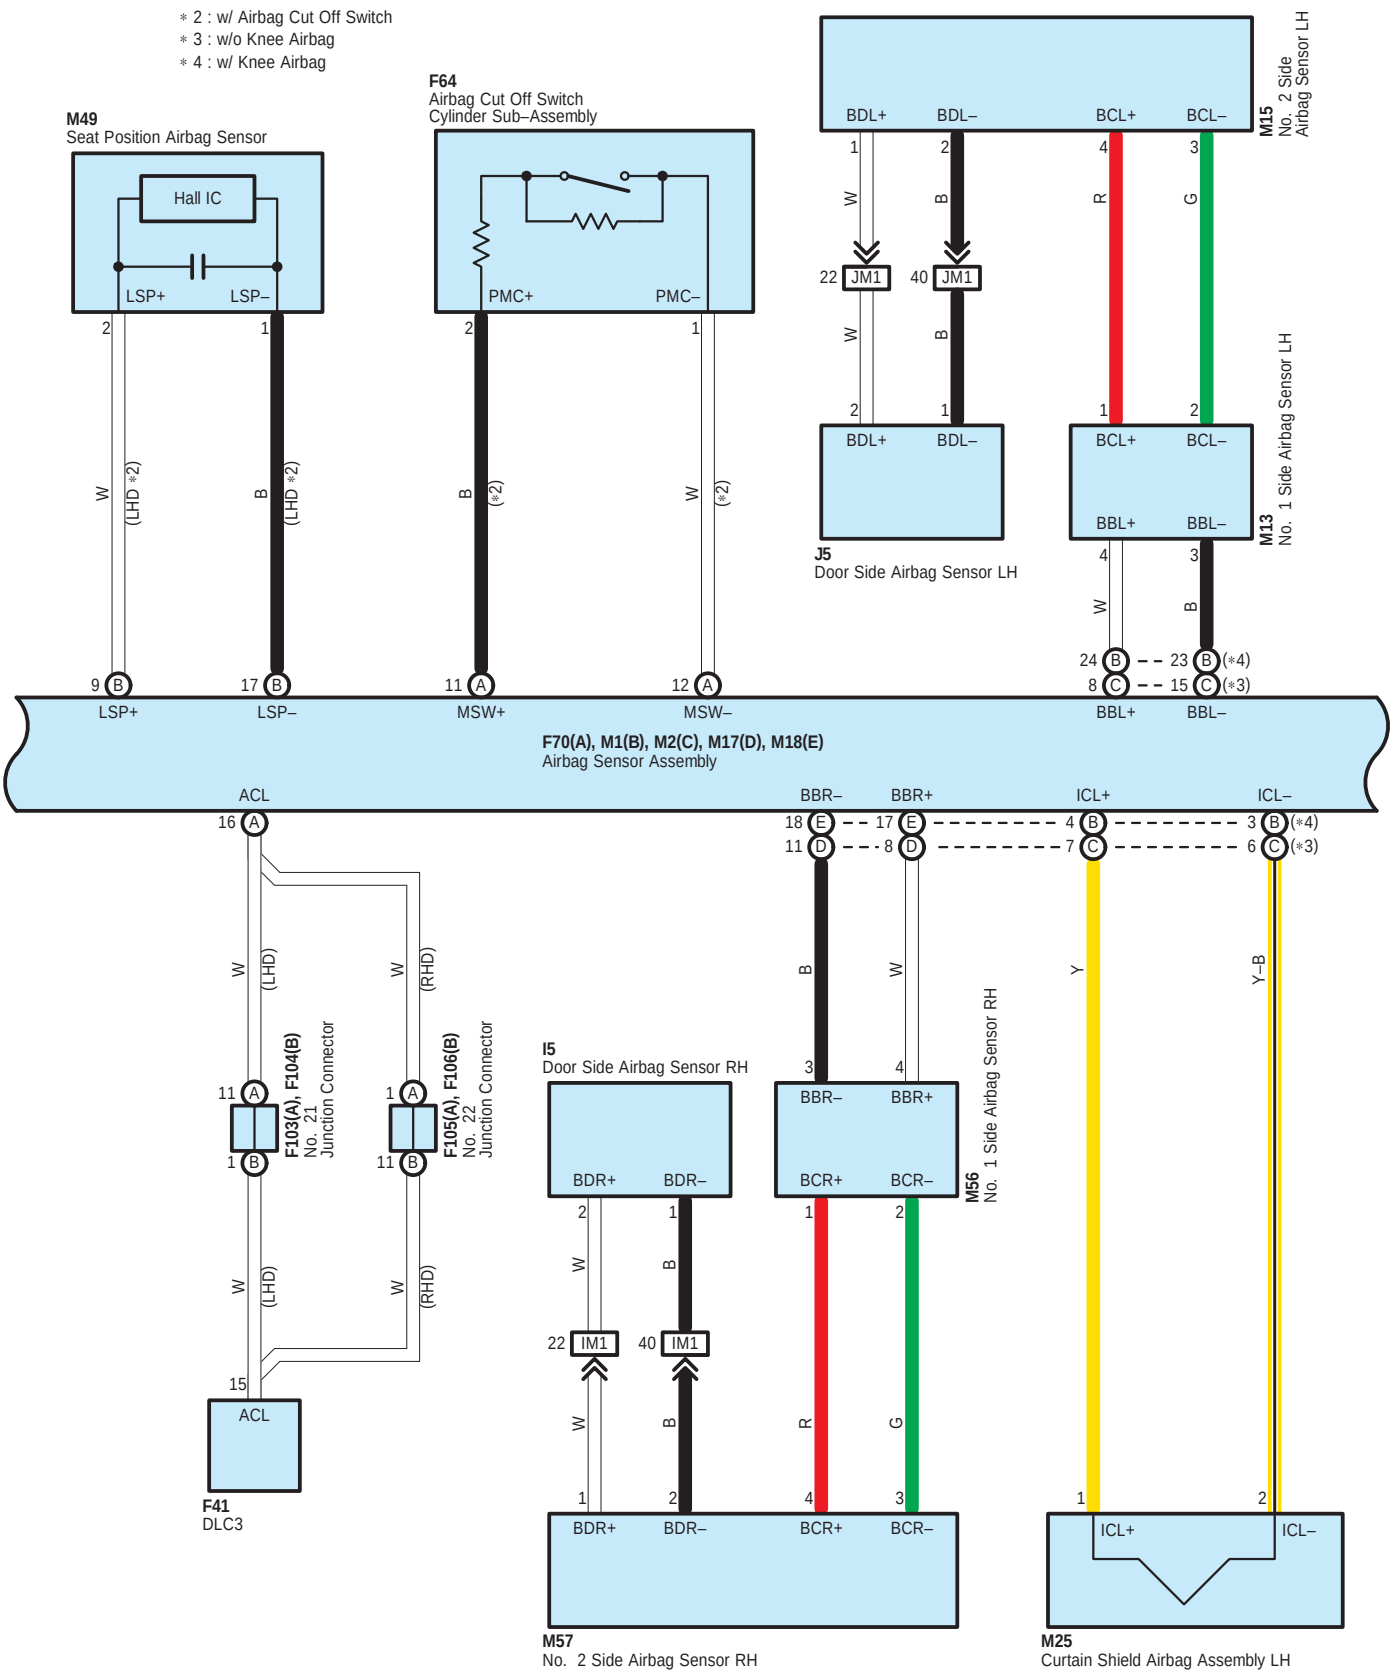
* 2 : w/ Airbag Cut Off Switch
* 3 : w/o Knee Airbag
* 4 : w/ Knee Airbag
M49
Seat Position Airbag Sensor
Hall IC
LSP+
LSP–
F64
Airbag Cut Off Switch
Cylinder Sub–Assembly
PMC+
PMC–
BDL+
BDL–
BCL+
BCL–
M15
No. 2 Side
Airbag Sensor LH
JM1
J5
Door Side Airbag Sensor LH
BBL+
BBL–
M13
No. 1 Side Airbag Sensor LH
(LHD *2)
(*2)
(*4)
(*3)
MSW+
MSW–
F70(A), M1(B), M2(C), M17(D), M18(E)
Airbag Sensor Assembly
ACL
BBR–
BBR+
ICL+
ICL–
(LHD)
(RHD)
F103(A), F104(B)
No. 21
Junction Connector
F105(A), F106(B)
No. 22
Junction Connector
I5
Door Side Airbag Sensor RH
BDR+
BDR–
BCR+
BCR–
M56
No. 1 Side Airbag Sensor RH
IM1
F41
DLC3
M57
No. 2 Side Airbag Sensor RH
M25
Curtain Shield Airbag Assembly LH

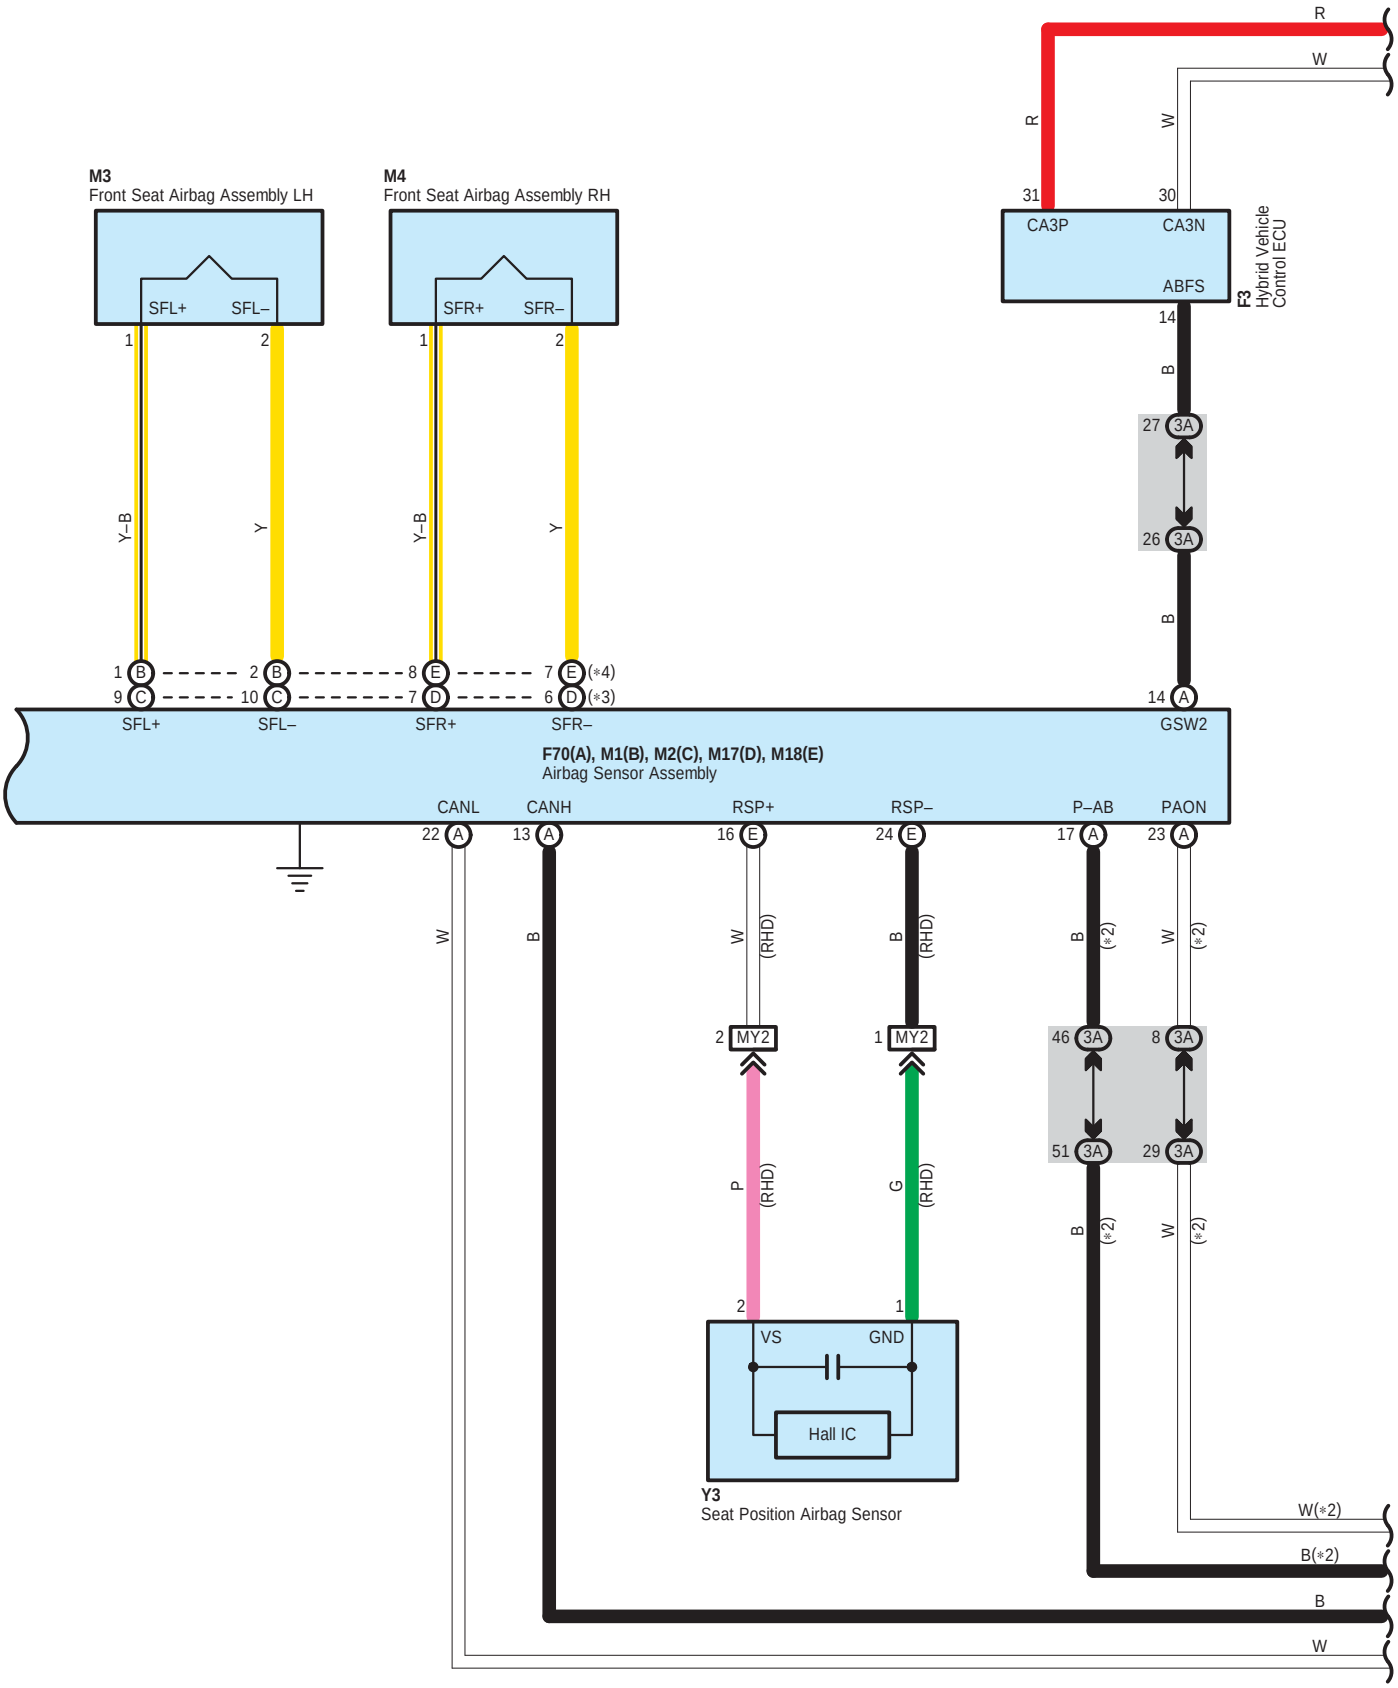
M3
Front Seat Airbag Assembly LH
SFL+
SFL–
M4
Front Seat Airbag Assembly RH
SFR+
SFR–
CA3P
CA3N
ABFS
F3
Hybrid Vehicle Control ECU
R
W
B
Y–B
Y
(*4)
(*3)
GSW2
F70(A), M1(B), M2(C), M17(D), M18(E)
Airbag Sensor Assembly
CANL
CANH
RSP+
RSP–
P–AB
PAON
(RHD)
(*2)
MY2
VS
GND
Hall IC
Y3
Seat Position Airbag Sensor
W(*2)
B(*2)

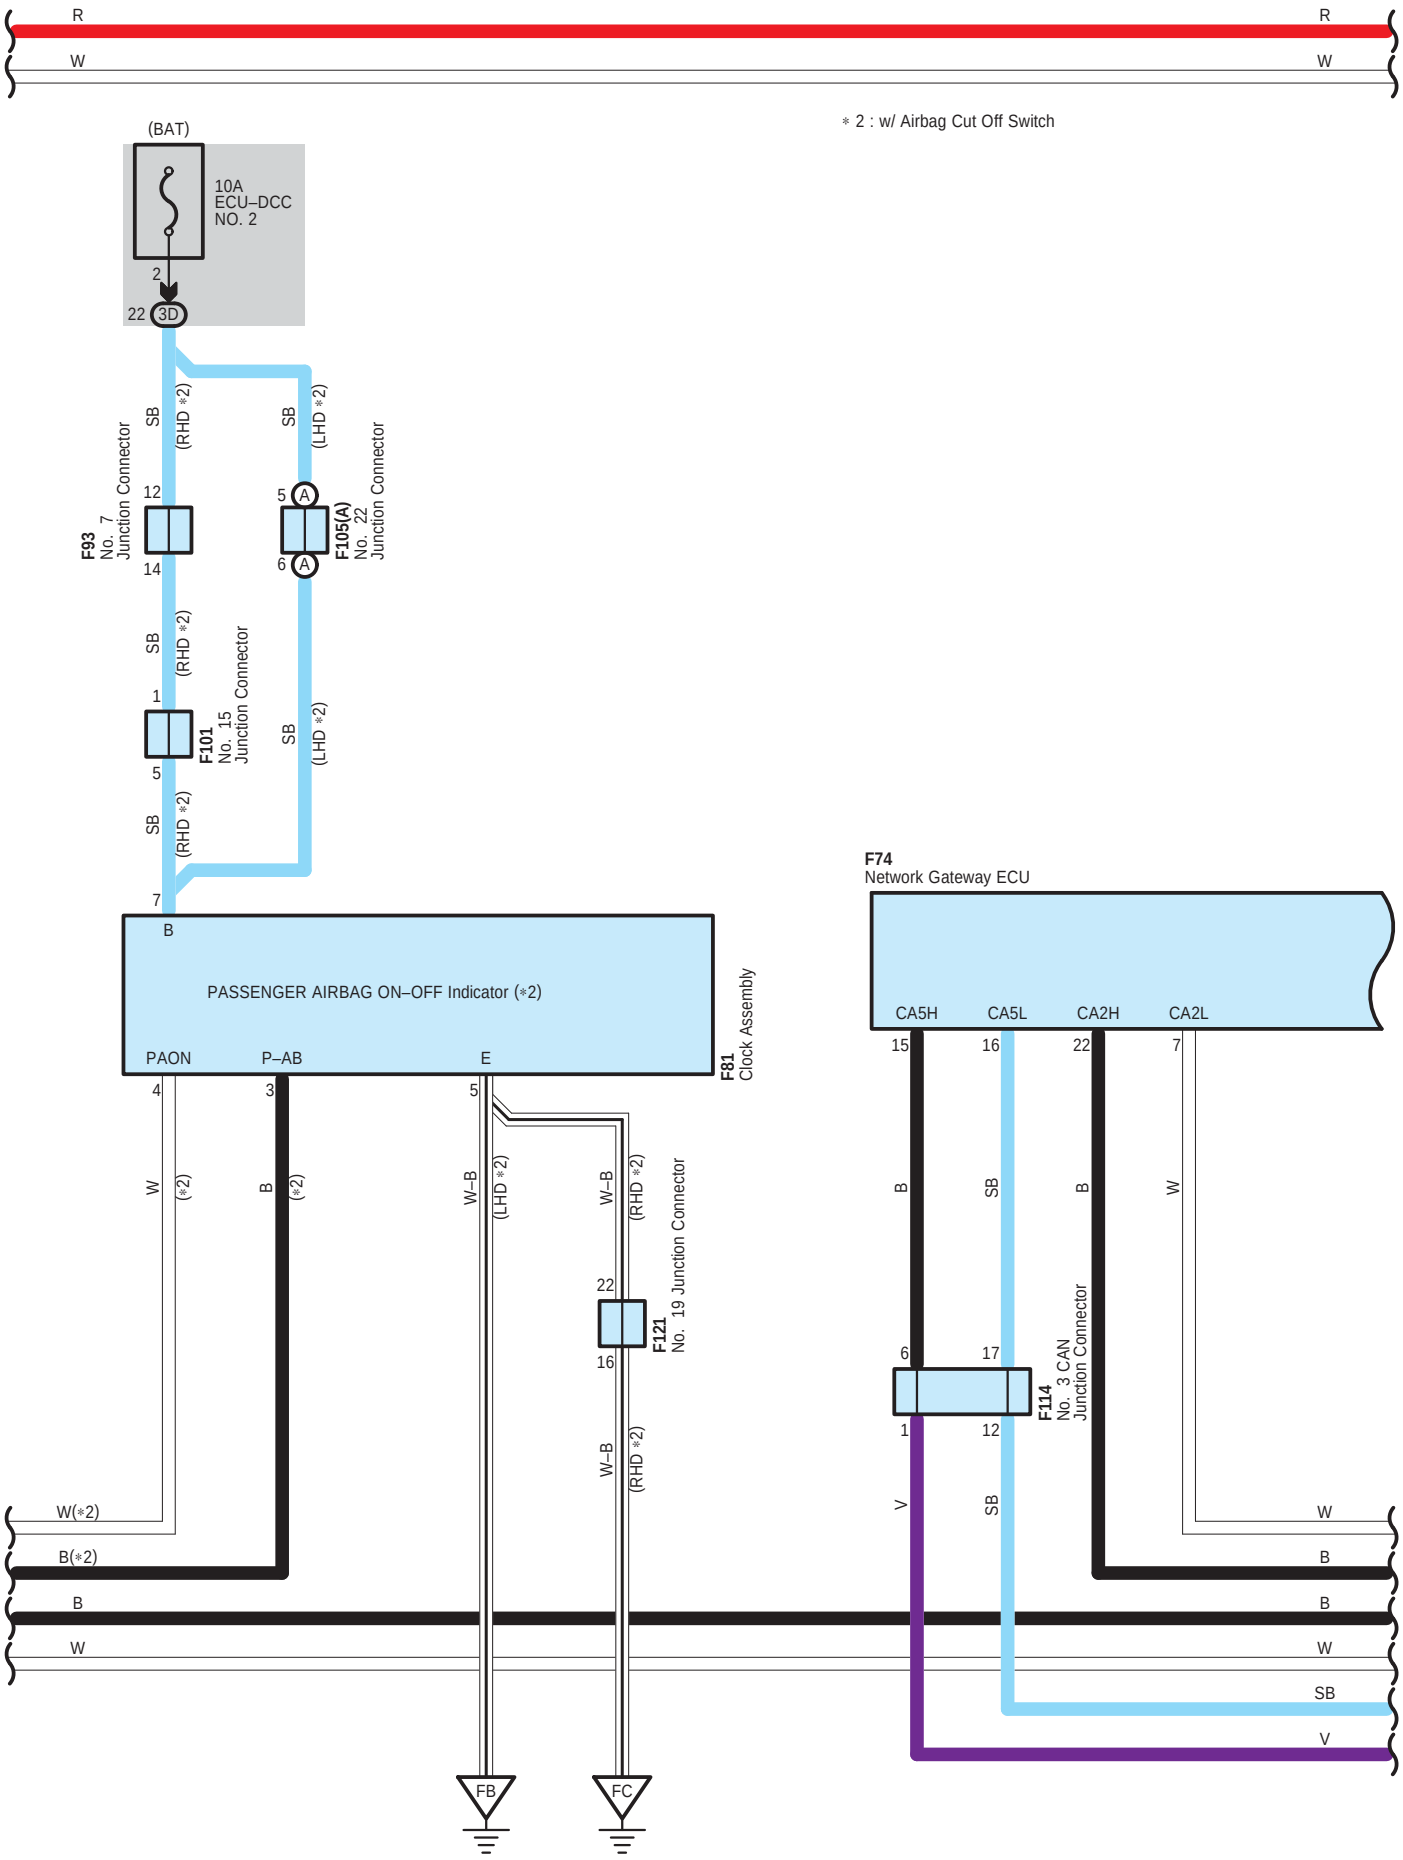
R
W
R
W
∗ 2 : w/ Airbag Cut Off Switch
(BAT)
10A
ECU–DCC
NO. 2
2
22
3D
SB
(RHD ∗2)
SB
(LHD ∗2)
F93
No. 7
Junction Connector
12
14
5
6
A
A
F105(A)
No. 22
Junction Connector
SB
(RHD ∗2)
1
5
F101
No. 15
Junction Connector
SB
(LHD ∗2)
SB
(RHD ∗2)
7
B
PASSENGER AIRBAG ON–OFF Indicator (∗2)
PAON
P–AB
E
F81
Clock Assembly
4
3
5
W
(∗2)
B
(∗2)
W–B
(LHD ∗2)
W–B
(RHD ∗2)
22
16
F121
No. 19 Junction Connector
W–B
(RHD ∗2)
F74
Network Gateway ECU
CA5H
CA5L
CA2H
CA2L
15
16
22
7
B
SB
B
W
6
17
1
12
F114
No. 3 CAN
Junction Connector
V
SB
W(∗2)
B(∗2)
B
W
W
B
B
W
SB
V
FB
FC

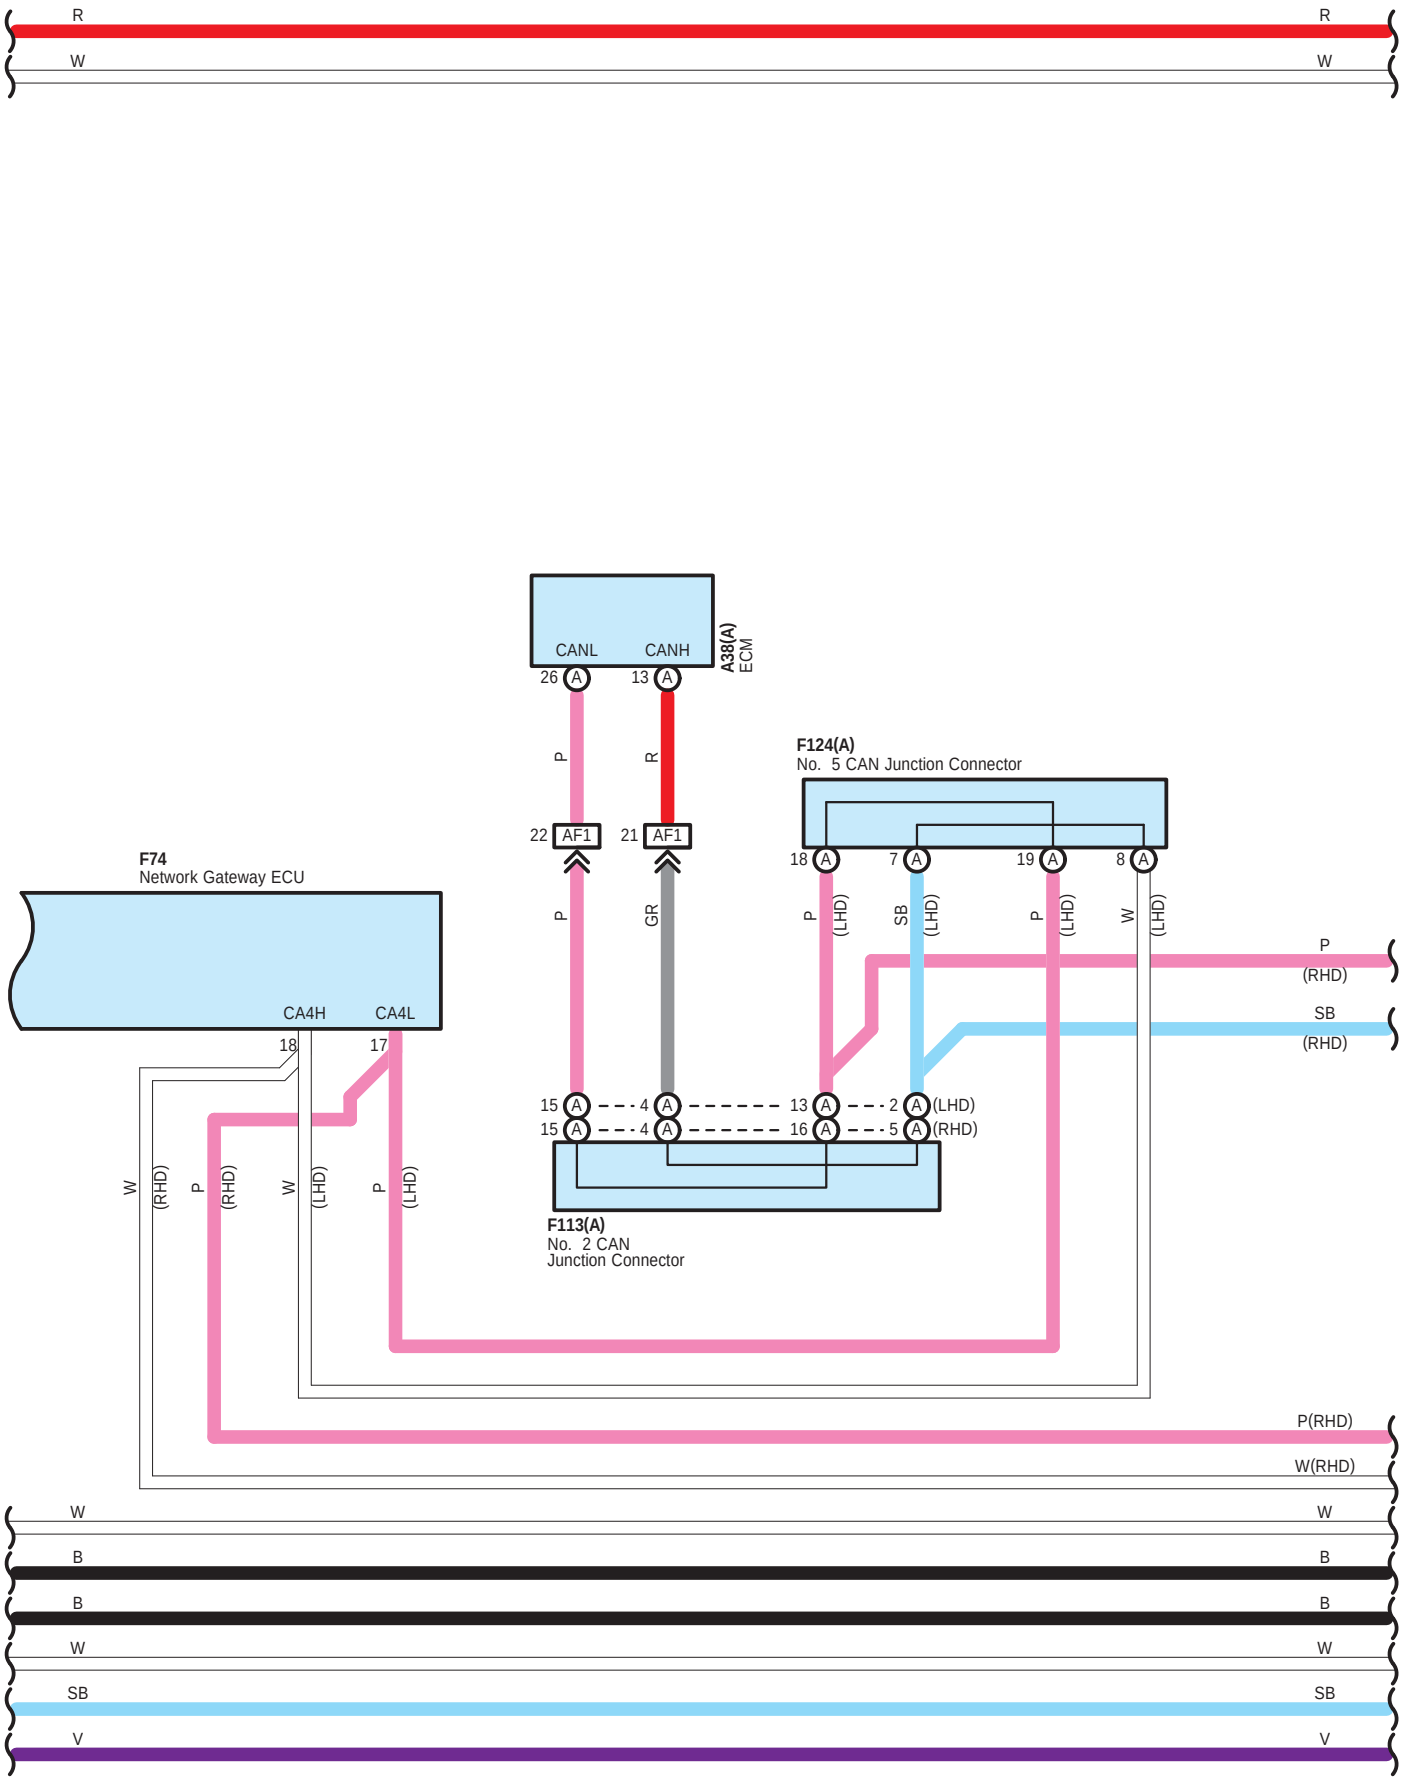
R
W
CANL
CANH
26
13
A38(A)
ECM
P
R
22
AF1
21
AF1
F124(A)
No. 5 CAN Junction Connector
18
7
19
8
P
(LHD)
SB
(LHD)
P
(LHD)
W
(LHD)
F74
Network Gateway ECU
CA4H
CA4L
18
17
P
(RHD)
SB
(RHD)
P
GR
15
4
13
2
(LHD)
15
4
16
5
(RHD)
W
(RHD)
P
(RHD)
W
(LHD)
P
(LHD)
F113(A)
No. 2 CAN
Junction Connector
P(RHD)
W(RHD)
W
B
B
W
SB
V

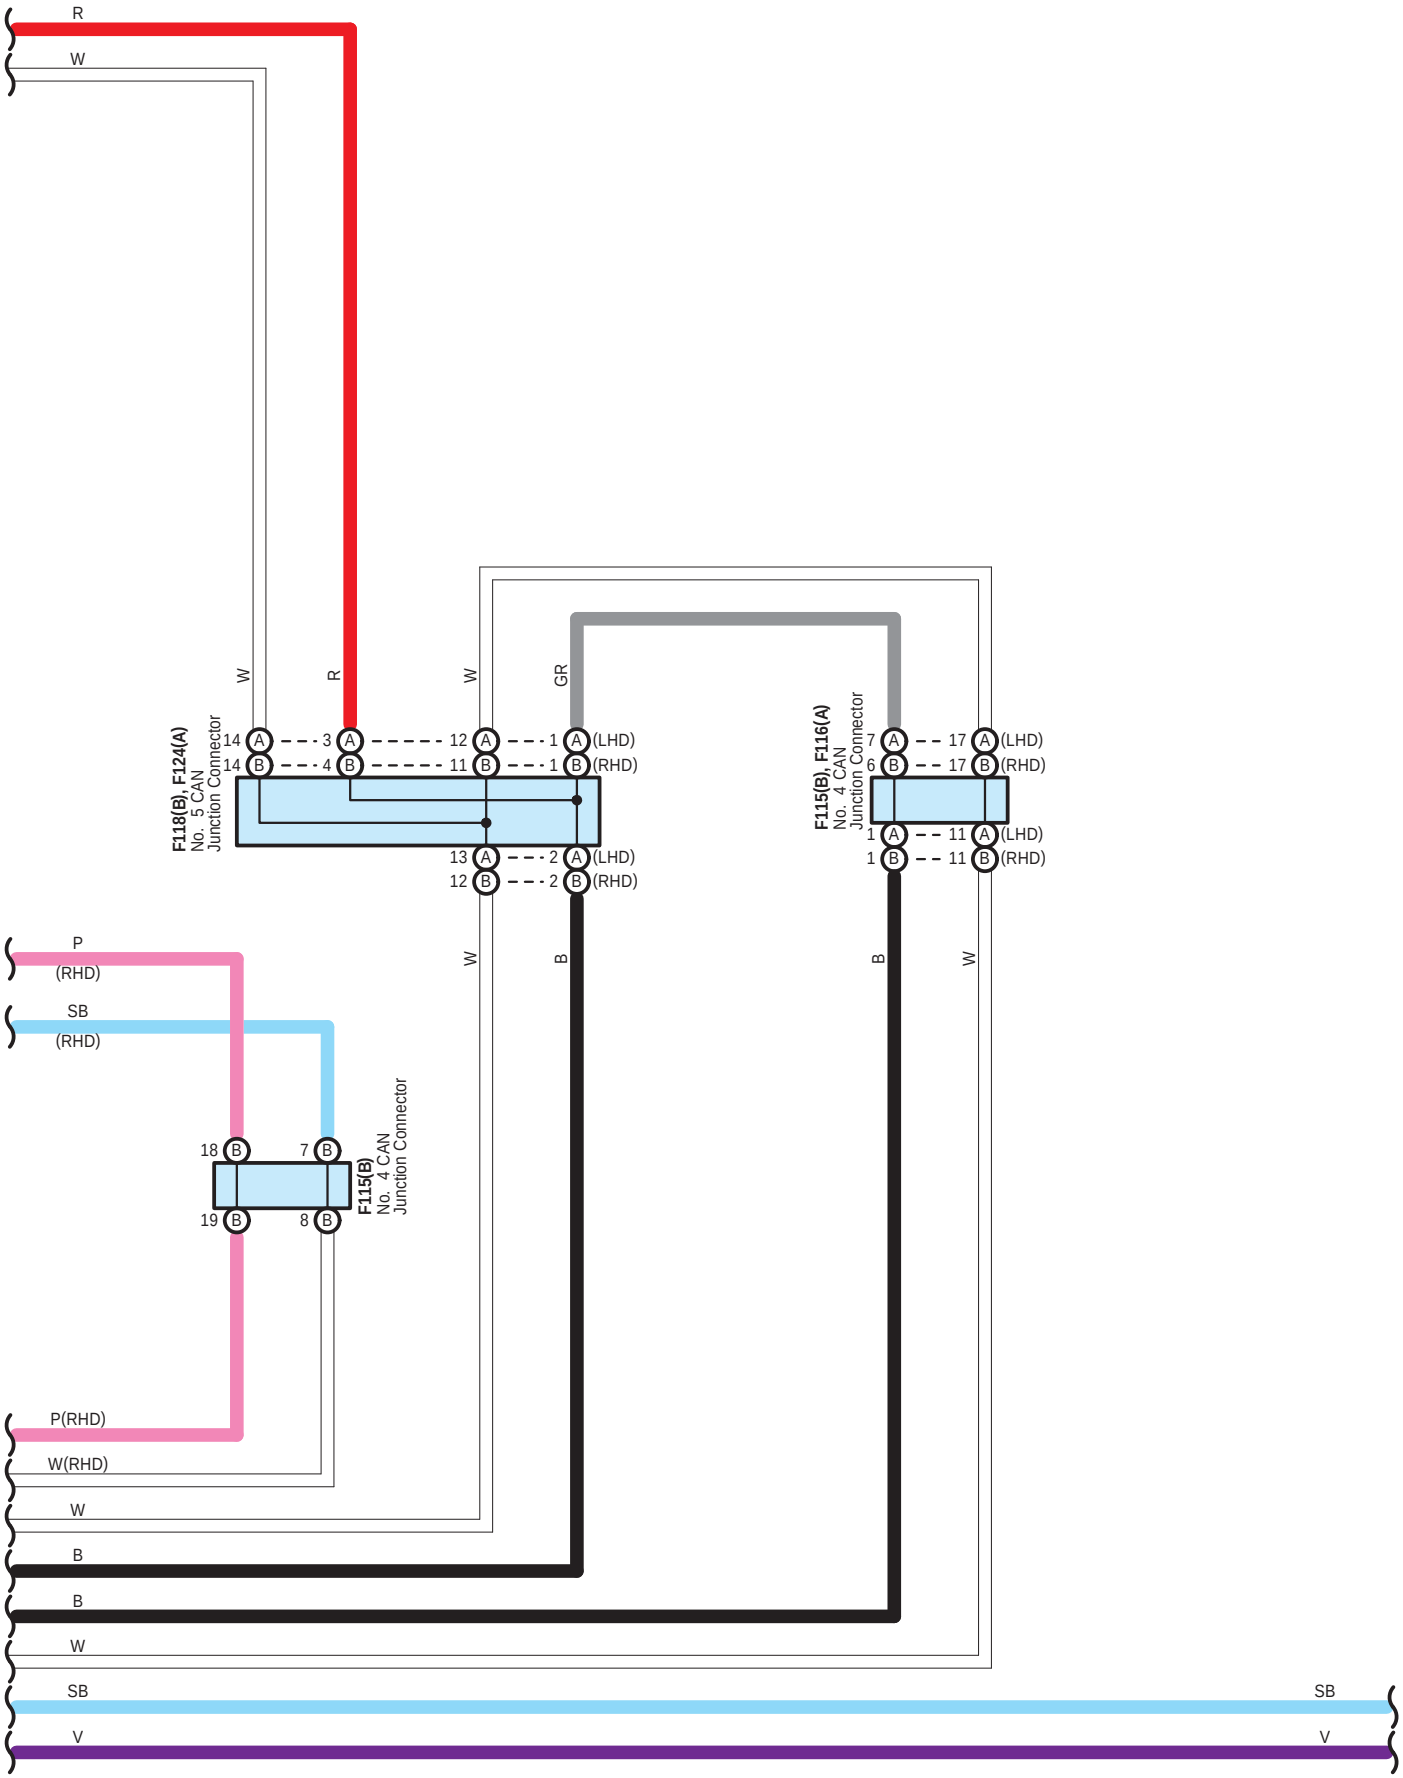
R
W
W
R
W
GR
F118(B), F124(A)
No. 5 CAN
Junction Connector
14 A
14 B
3 A
4 B
12 A
11 B
1 A (LHD)
1 B (RHD)
13 A
12 B
2 A (LHD)
2 B (RHD)
F115(B), F116(A)
No. 4 CAN
Junction Connector
7 A
6 B
17 A (LHD)
17 B (RHD)
1 A
1 B
11 A (LHD)
11 B (RHD)
P
(RHD)
SB
(RHD)
W
B
B
W
F115(B)
No. 4 CAN
Junction Connector
18 B
19 B
7 B
8 B
P(RHD)
W(RHD)
W
B
B
W
SB
SB
V
V

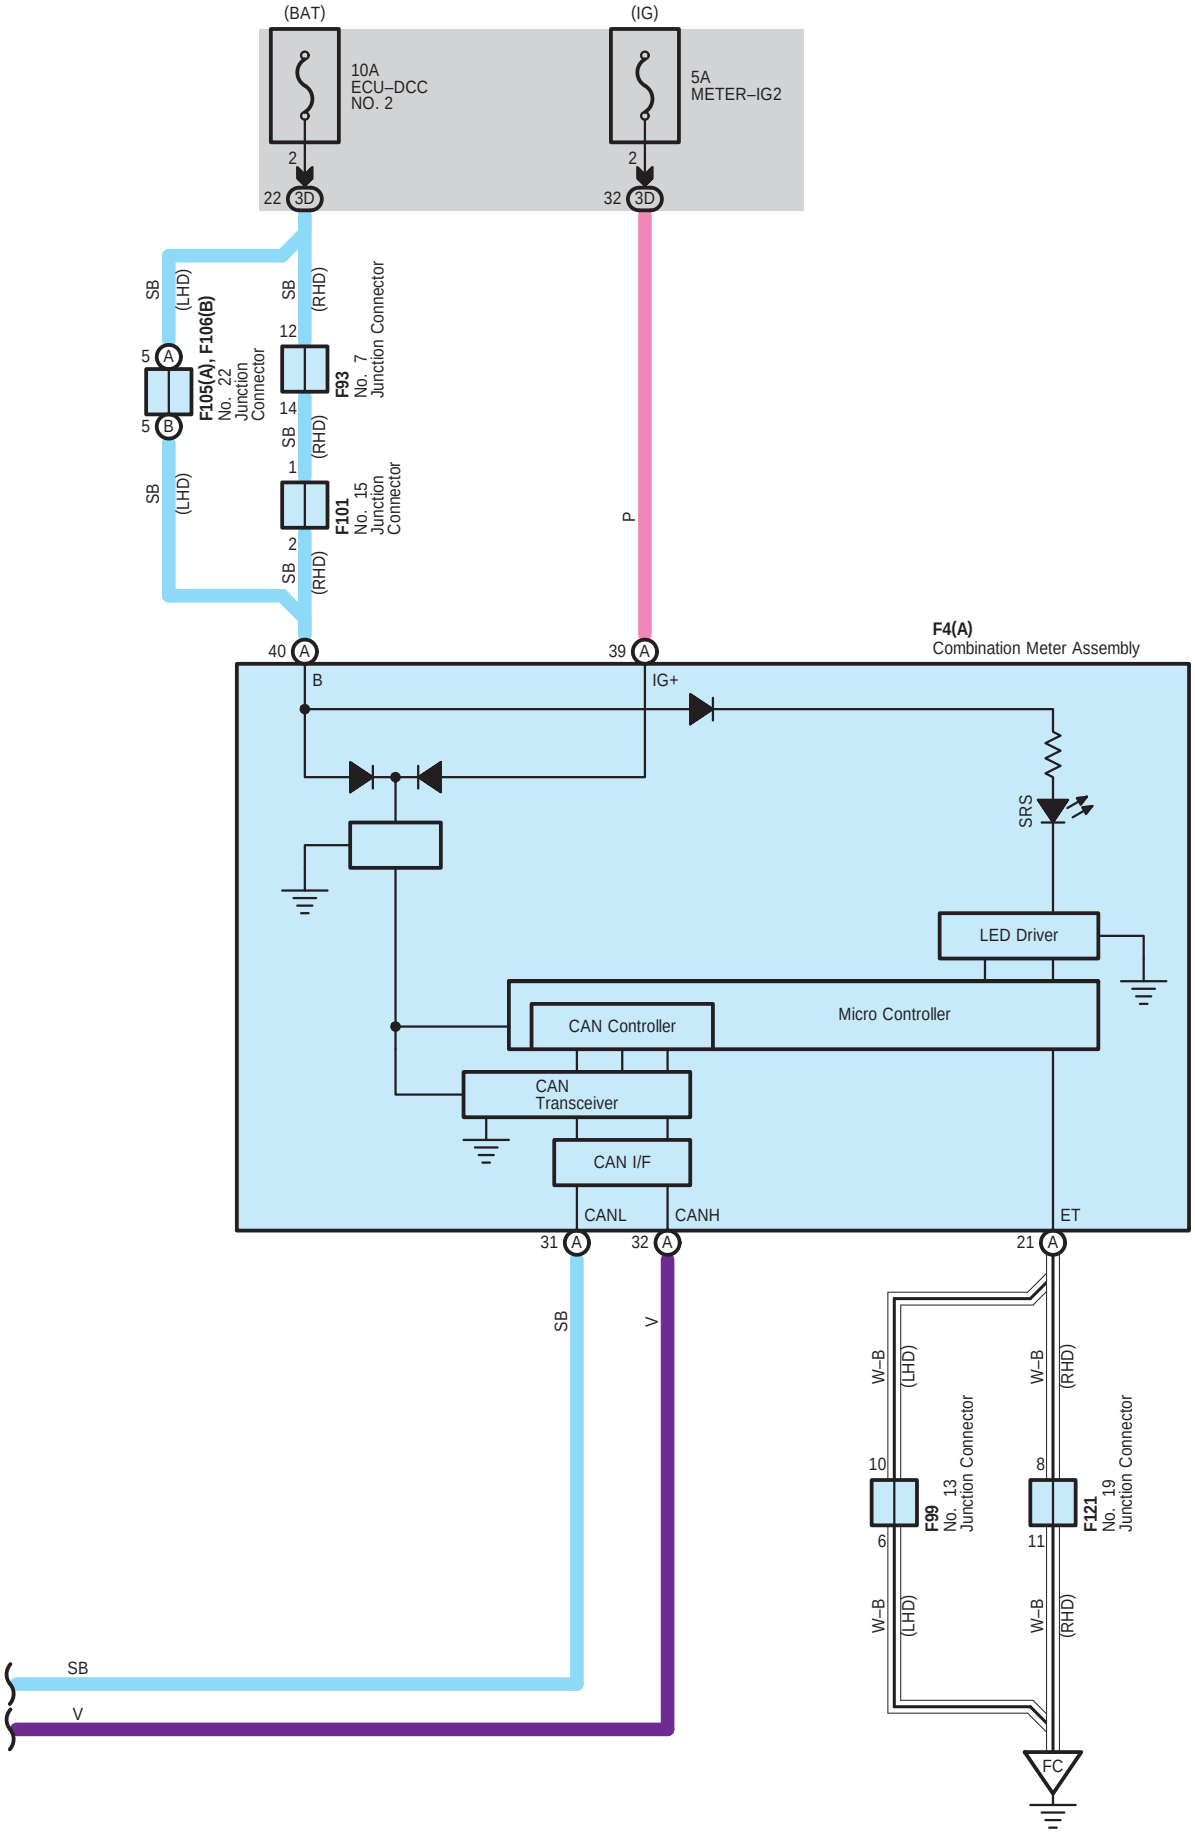
(BAT)
(IG)
10A
ECU–DCC
NO. 2
5A
METER–IG2
2
22 3D
32 3D
SB (LHD)
SB (RHD)
5 A
5 B
F105(A), F106(B)
No. 22
Junction
Connector
12
14
F93
No. 7
Junction Connector
SB (RHD)
1
2
F101
No. 15
Junction
Connector
SB (LHD)
SB (RHD)
P
40 A
39 A
F4(A)
Combination Meter Assembly
B
IG+
SRS
LED Driver
Micro Controller
CAN Controller
CAN
Transceiver
CAN I/F
CANL
CANH
ET
31 A
32 A
21 A
SB
V
W–B (LHD)
W–B (RHD)
10
8
F99
No. 13
Junction Connector
F121
No. 19
Junction Connector
6
11
W–B (LHD)
W–B (RHD)
SB
V
FC

A7
Yellow

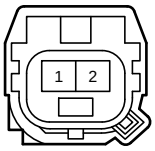

90980-12490

A30
Yellow

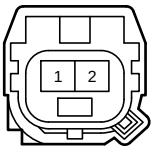

90980-12490

A38
Black

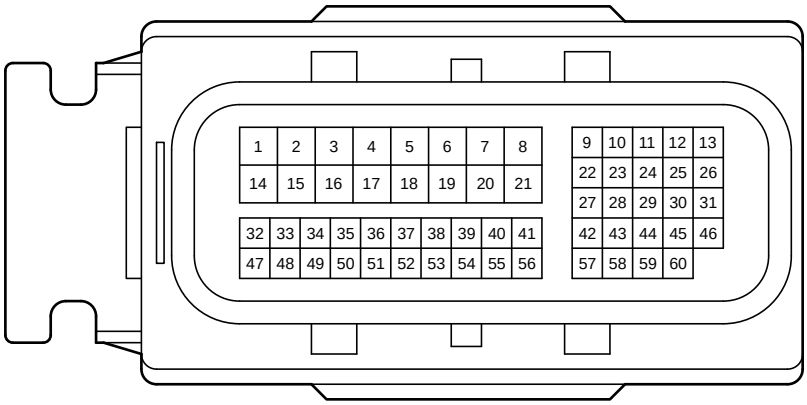

90980-12931

F3
Gray

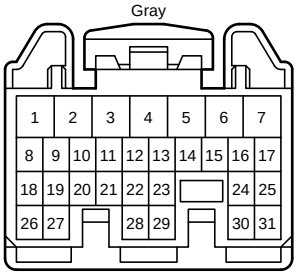

90980-12431

F4
Black

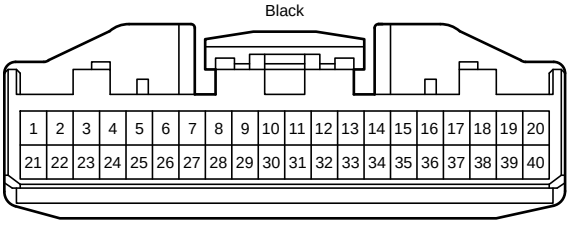

90980-12557

F30
Yellow

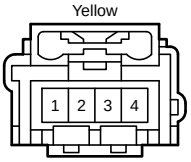

90980-12160

F31
Yellow

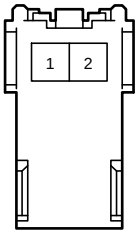

90980-12253

F41
White

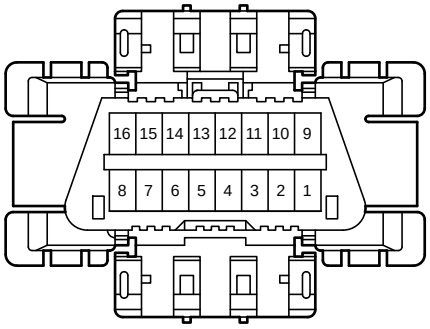

90980-11665

F64
White



90980-12063

F70
Yellow

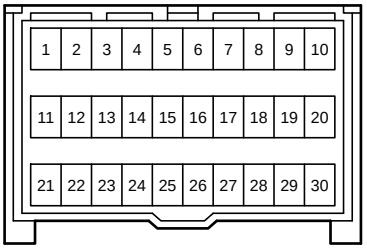

90980-12391

F74
Black

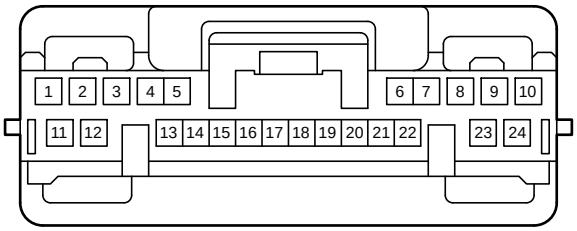

90980-12912

F81
White

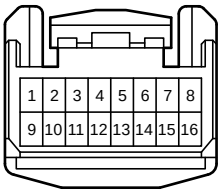

90980-12553

F93
Black

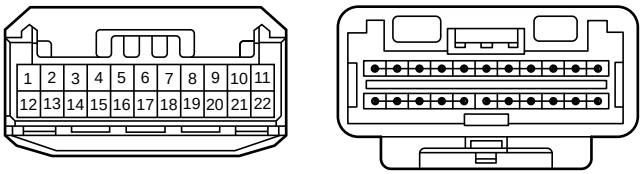

90980-12B54

F99
Black

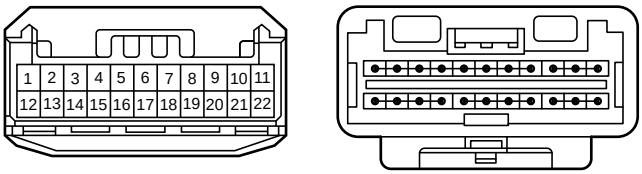

90980-12B54

F101
Black

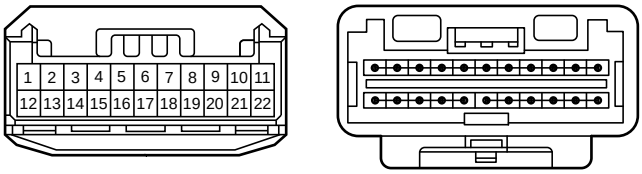

90980-12B54

F103
White

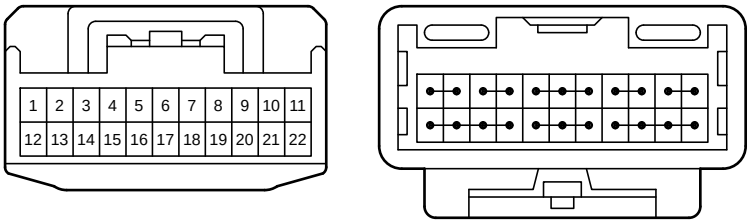

90980-12372

F104
White

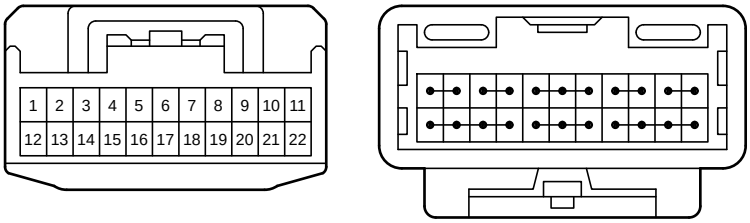

90980-12372

F105
White

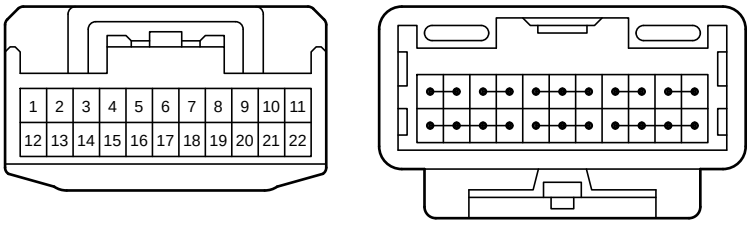

90980-12372

F106
White

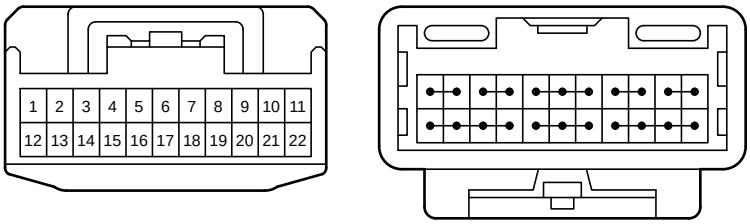

90980-12372

F113
Black

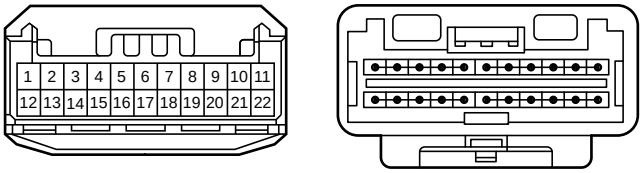

90980-12B54

F114
Black

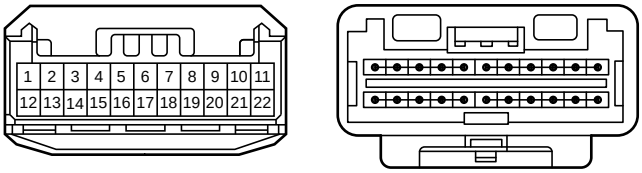

90980-12B54

F115
Black

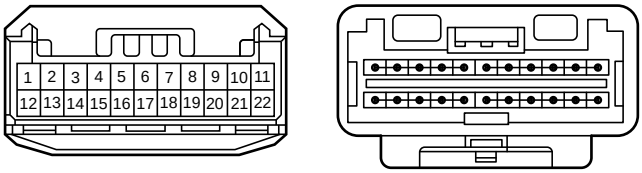

90980-12B54

F116
White

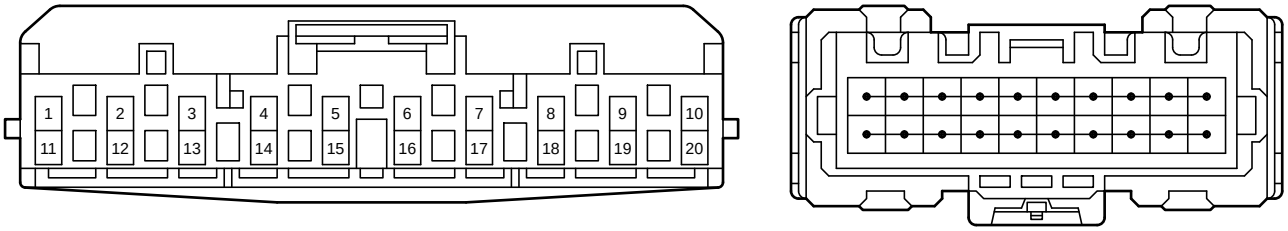

90980-12A58

F118
White

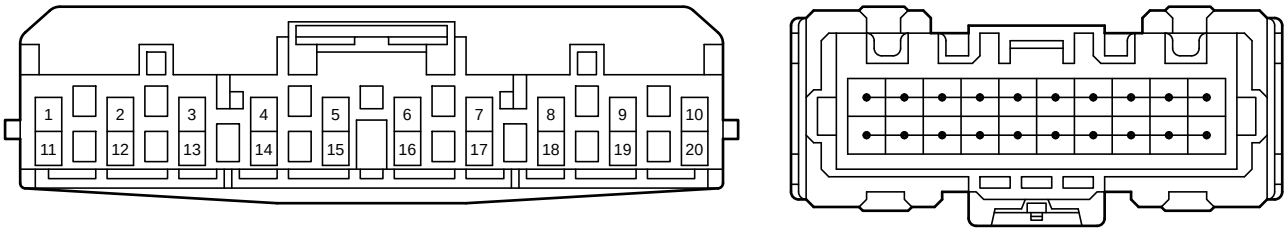

90980-12A58

F121
Black

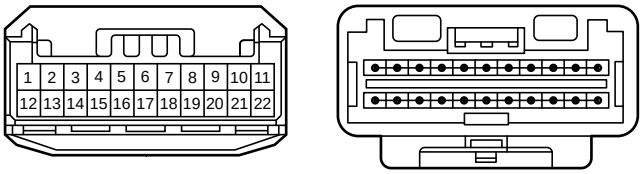

90980-12B54

F124
Black

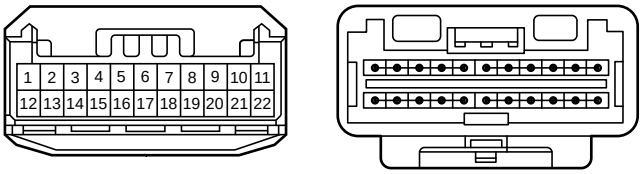

90980-12B54

I5
Yellow

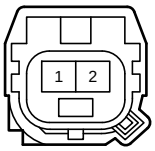

90980-12490

J5
Yellow

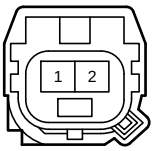

90980-12490

M1
Yellow

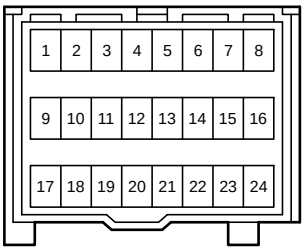

90980-12392

M2
Yellow

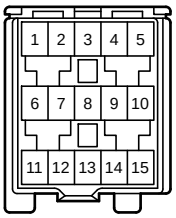

90980-12449

M3
Yellow

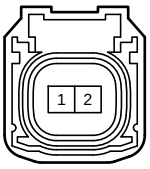

90980-12698

M4
Yellow

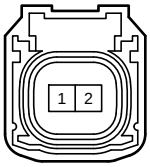

90980-12698

M12
Yellow



90980-12452

M13
Yellow

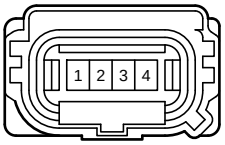

90980-12699

M15
Yellow

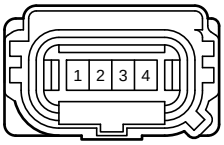

90980-12699

M17
Yellow

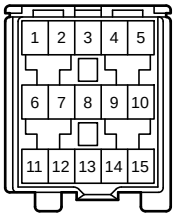

90980-12450

M18
Yellow

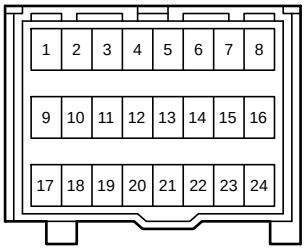

90980-12390

M25
Black

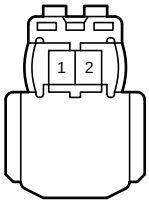

90980-12575

M26
Black

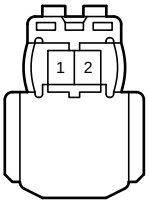

90980-12575

M34
Yellow

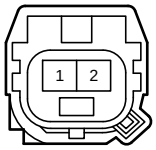

90980-12490

M35
Yellow

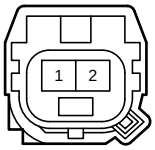

90980-12490

M45
Black



90980-12452

M46
Black



90980-12452

M49
Gray

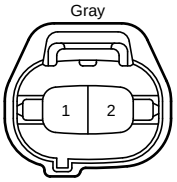

90980-11156

M55
Yellow



90980-12452

M56
Yellow

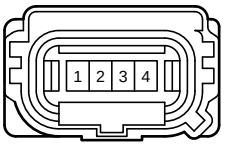

90980-12699

M57
Yellow

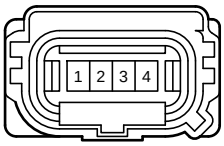

90980-12699

Y3
Black

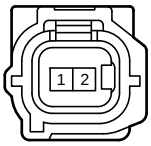

90980-12416

b1
Orange

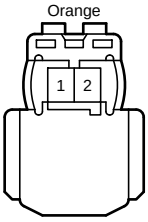

90980-12576

z2
Light Green

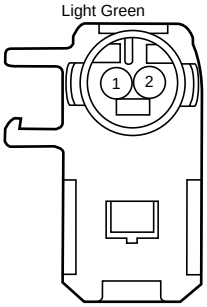

82824-47B40

z3
Black

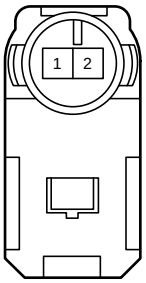

82824-10140

3A
White

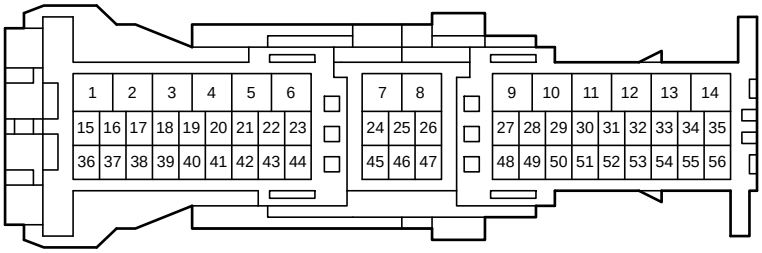

90980-12943

3D
White

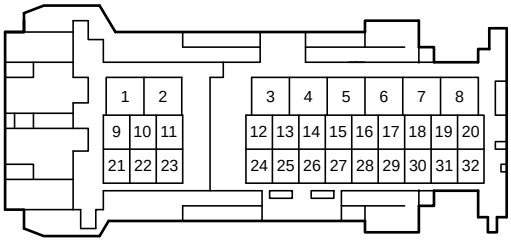

90980-12A48

AF1
Gray

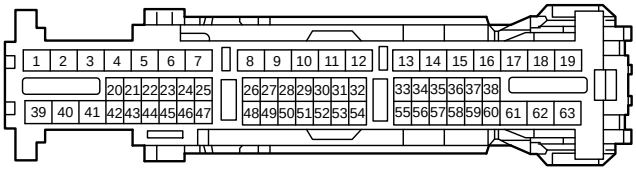

90980-12B20

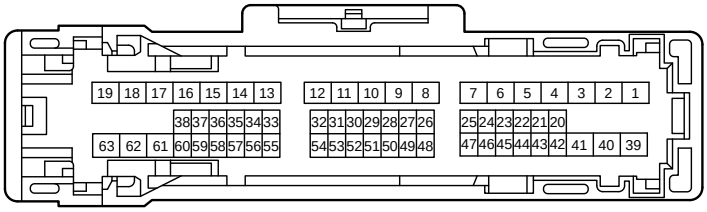

90980-12B19

AF5
Yellow

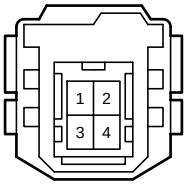

90980-12989

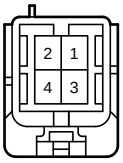

90980-12988

Fb1
Yellow



90980-11886

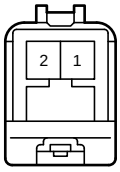

90980-11992

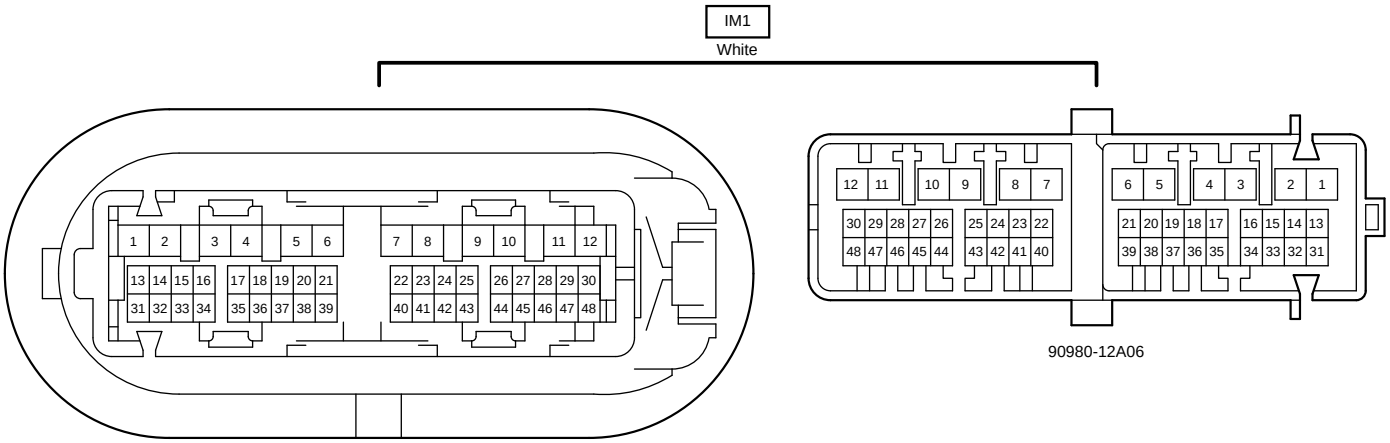
IM1
White
90980-12A09
90980-12A06

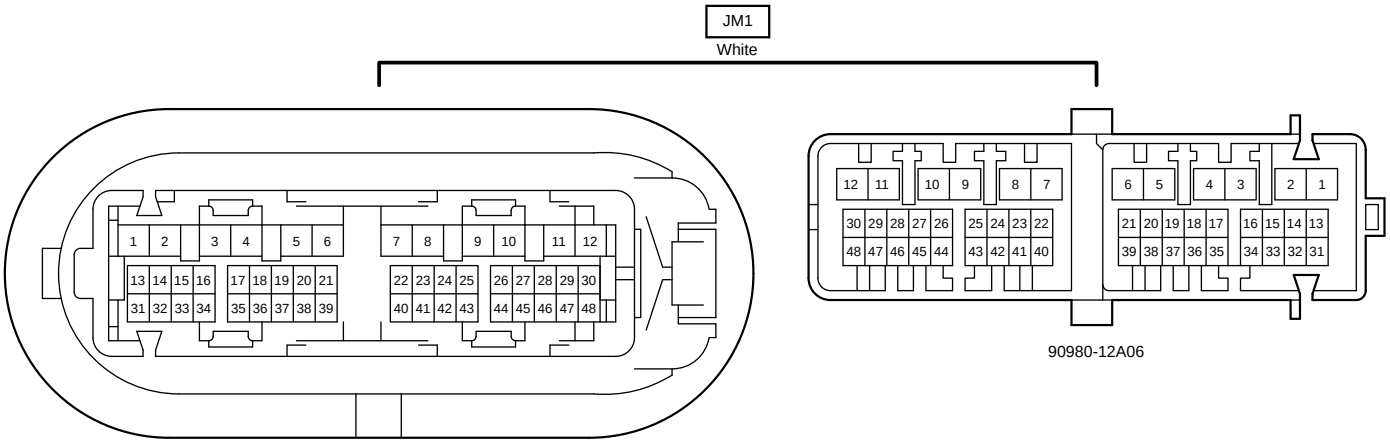
JM1
White
90980-12A09
90980-12A06

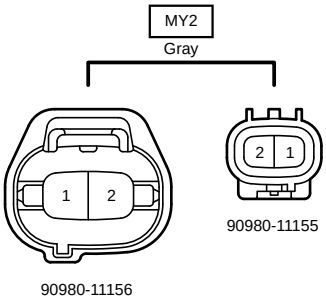
MY2
Gray
90980-11155
90980-11156