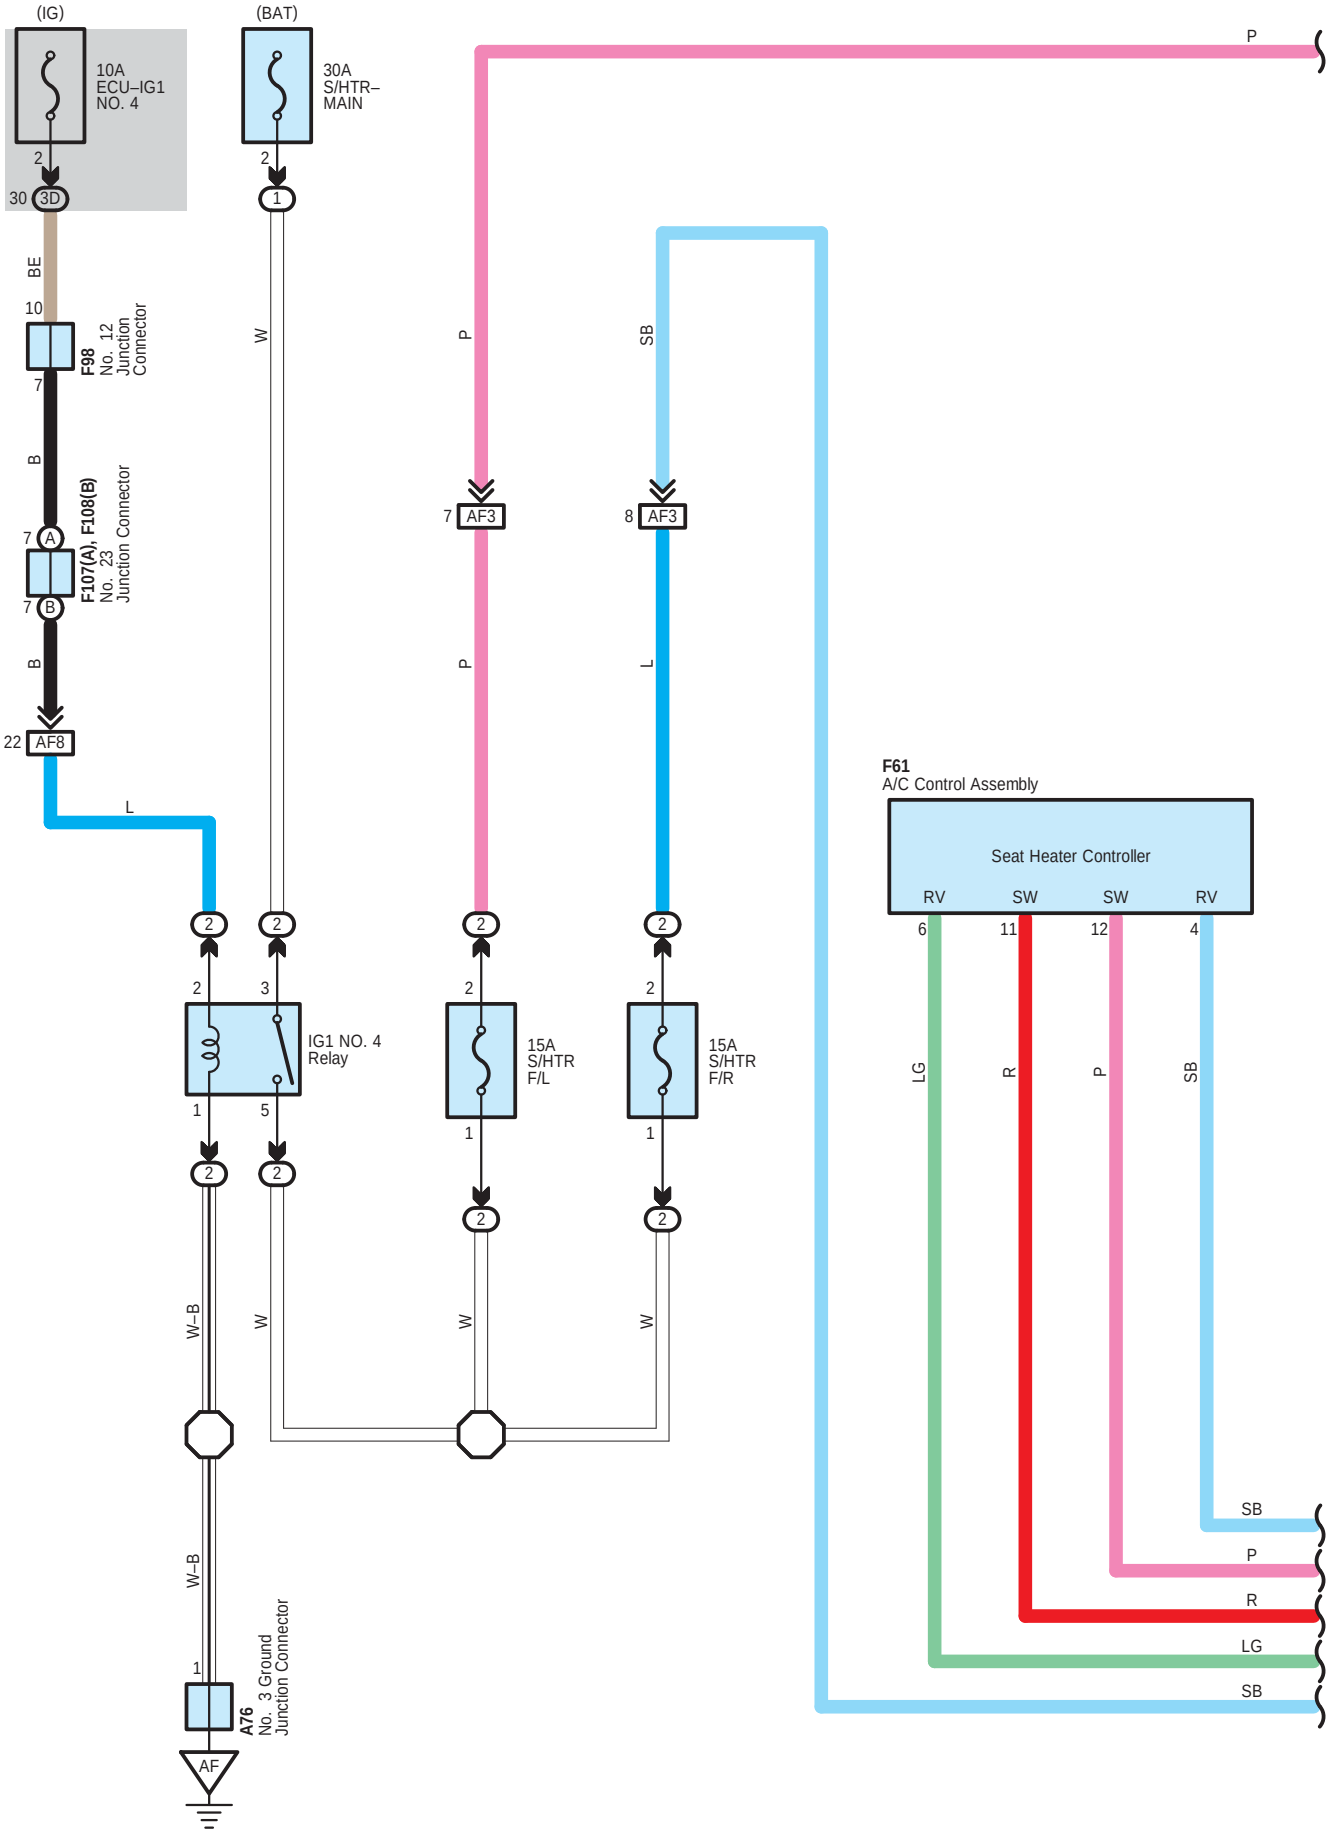
(IG)
10A
ECU–IG1
NO. 4
(BAT)
30A
S/HTR–
MAIN
30 3D
BE
10
F98
No. 12
Junction
Connector
7
B
7 A
F107(A), F108(B)
No. 23
Junction Connector
7 B
B
22 AF8
L
W
P
SB
7 AF3
8 AF3
P
L
F61
A/C Control Assembly
Seat Heater Controller
RV
SW
SW
RV
6
11
12
4
LG
R
P
SB
IG1 NO. 4
Relay
15A
S/HTR
F/L
15A
S/HTR
F/R
W–B
W
W
W
W–B
A76
No. 3 Ground
Junction Connector
AF
SB
P
R
LG
SB

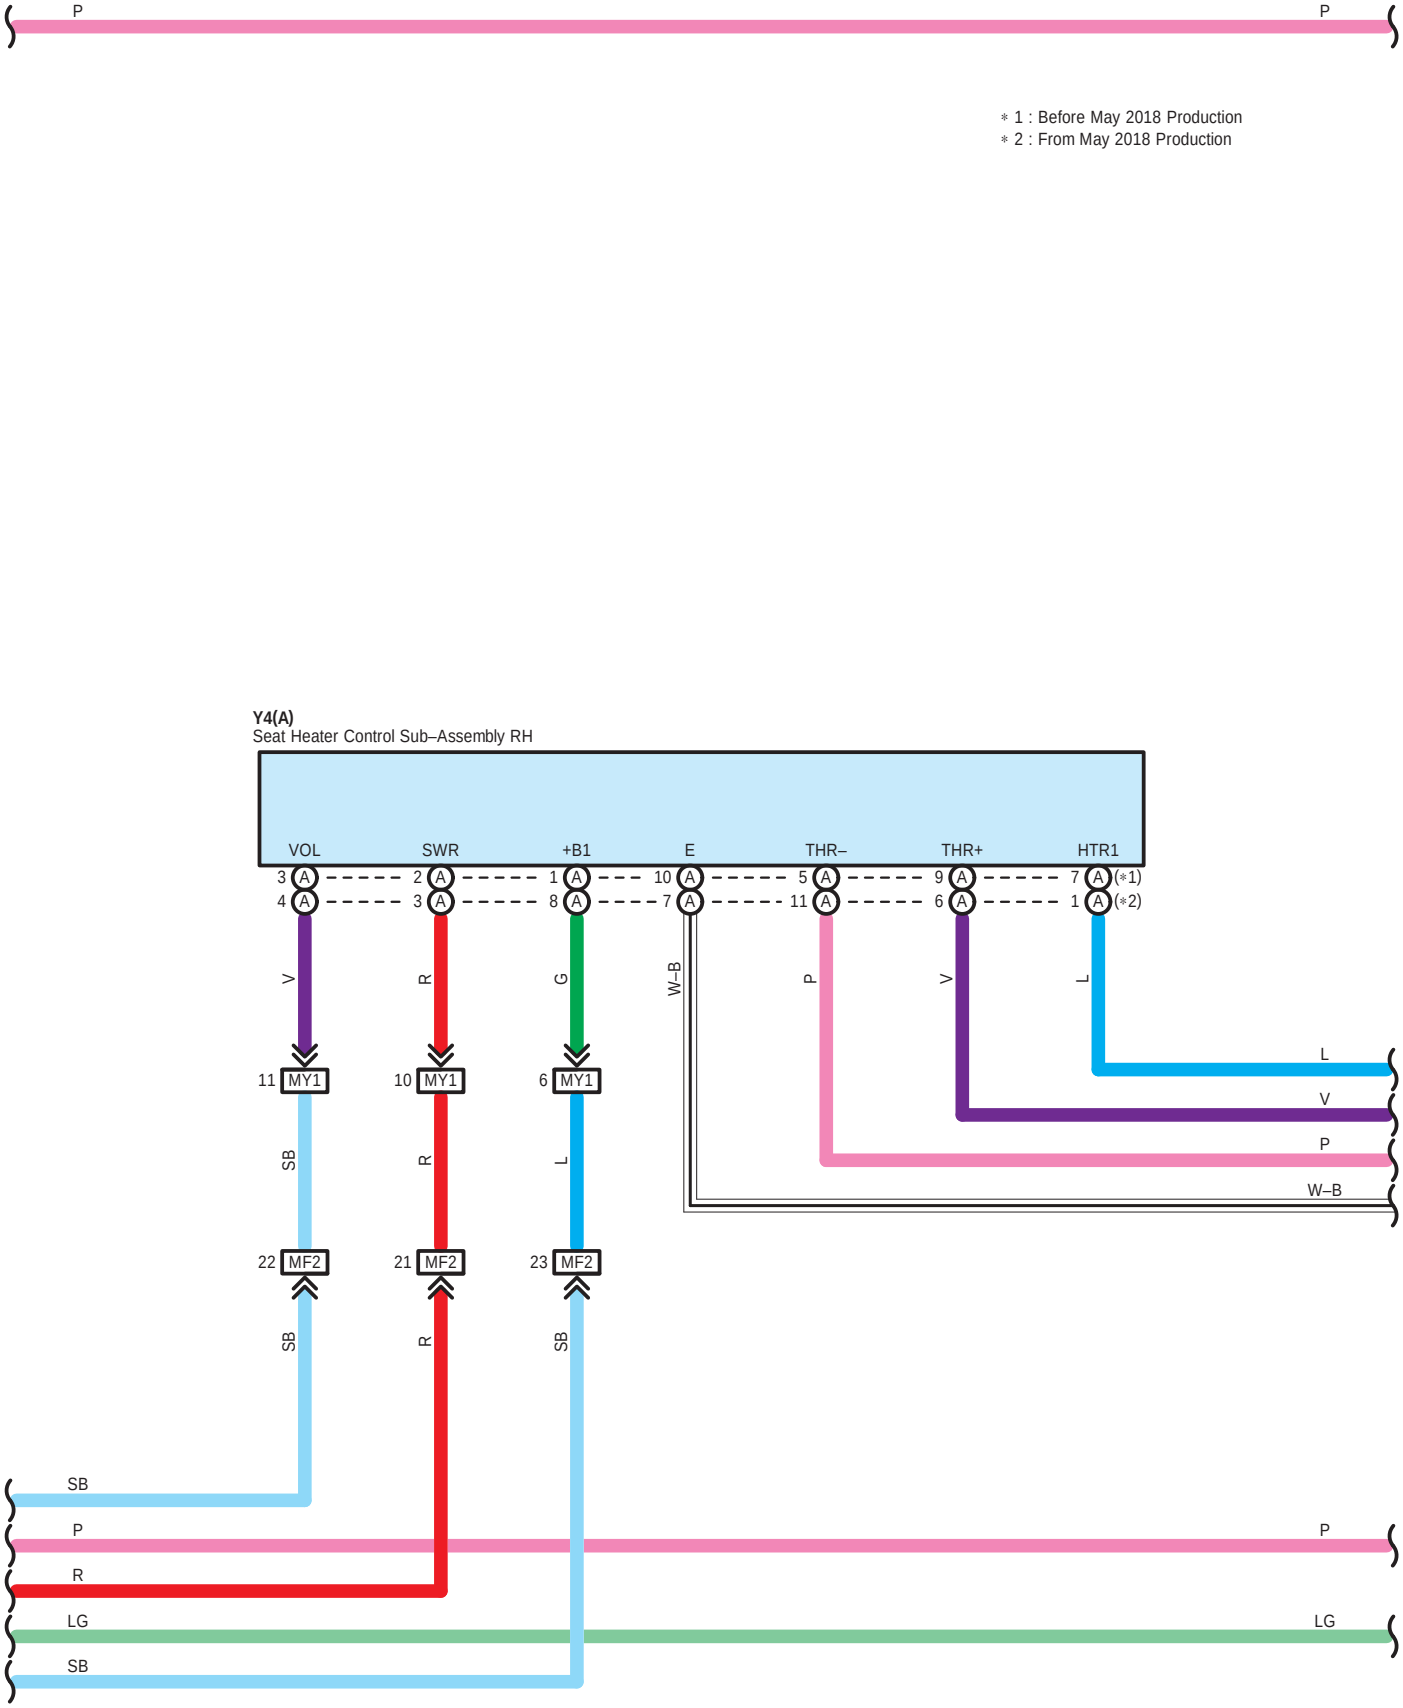
P
P
∗ 1 : Before May 2018 Production
∗ 2 : From May 2018 Production
Y4(A)
Seat Heater Control Sub–Assembly RH
VOL
SWR
+B1
E
THR–
THR+
HTR1
3 A
4 A
2 A
3 A
1 A
8 A
10 A
7 A
5 A
11 A
9 A
6 A
7 A (∗1)
1 A (∗2)
V
R
G
W–B
P
V
L
L
V
P
W–B
11 MY1
10 MY1
6 MY1
SB
R
L
22 MF2
21 MF2
23 MF2
SB
R
SB
SB
P
P
R
LG
LG
SB

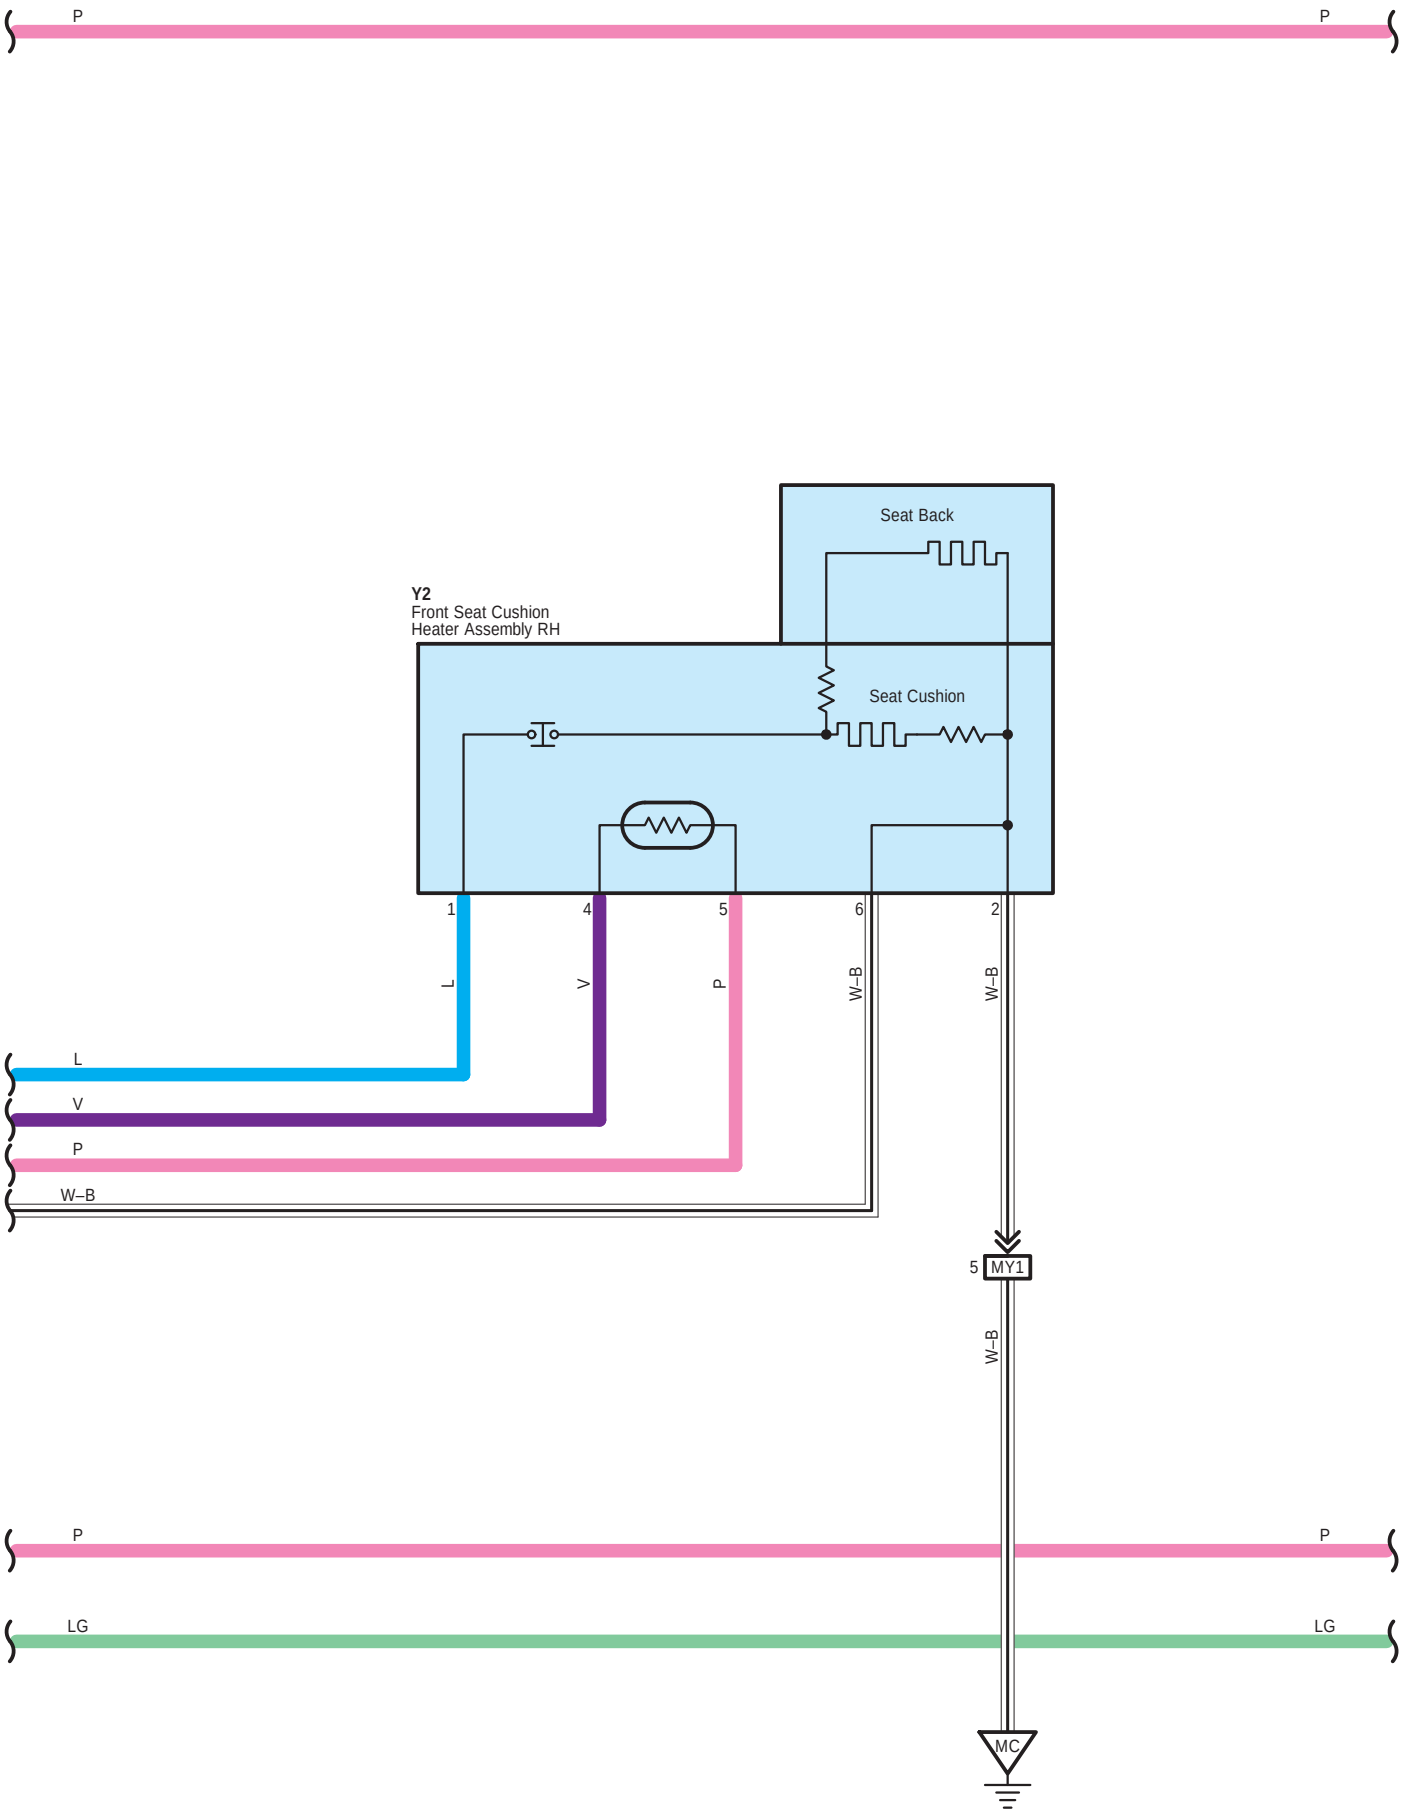
P
P
Seat Back
Y2
Front Seat Cushion
Heater Assembly RH
Seat Cushion
1
4
5
6
2
L
V
P
W–B
W–B
L
V
P
W–B
5
MY1
W–B
P
P
LG
LG
MC

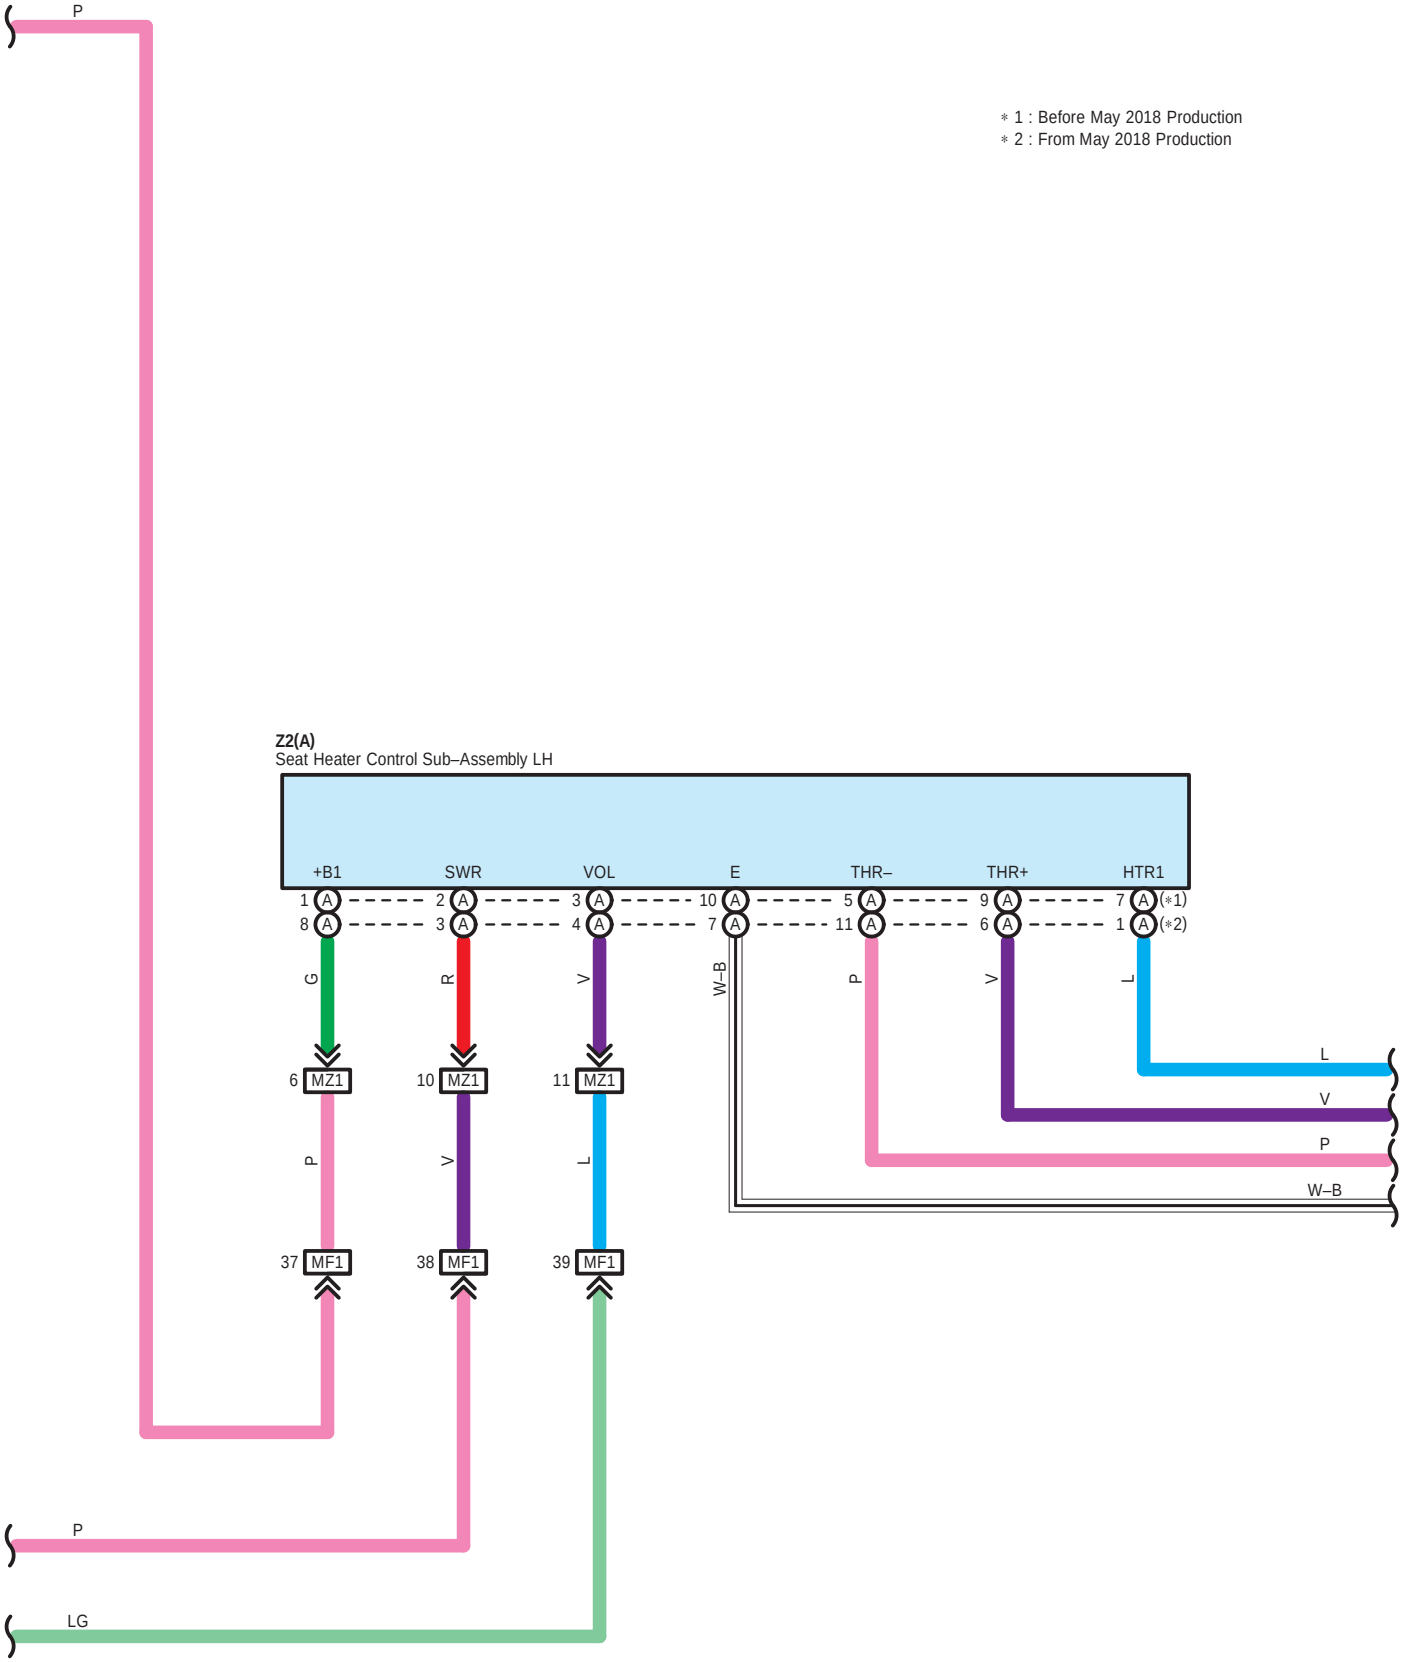
P
∗ 1 : Before May 2018 Production
∗ 2 : From May 2018 Production
Z2(A)
Seat Heater Control Sub–Assembly LH
+B1
SWR
VOL
E
THR–
THR+
HTR1
1 A
8 A
2 A
3 A
3 A
4 A
10 A
7 A
5 A
11 A
9 A
6 A
7 A (∗1)
1 A (∗2)
G
R
V
W–B
P
V
L
6 MZ1
10 MZ1
11 MZ1
P
V
L
37 MF1
38 MF1
39 MF1
L
V
P
W–B
P
LG

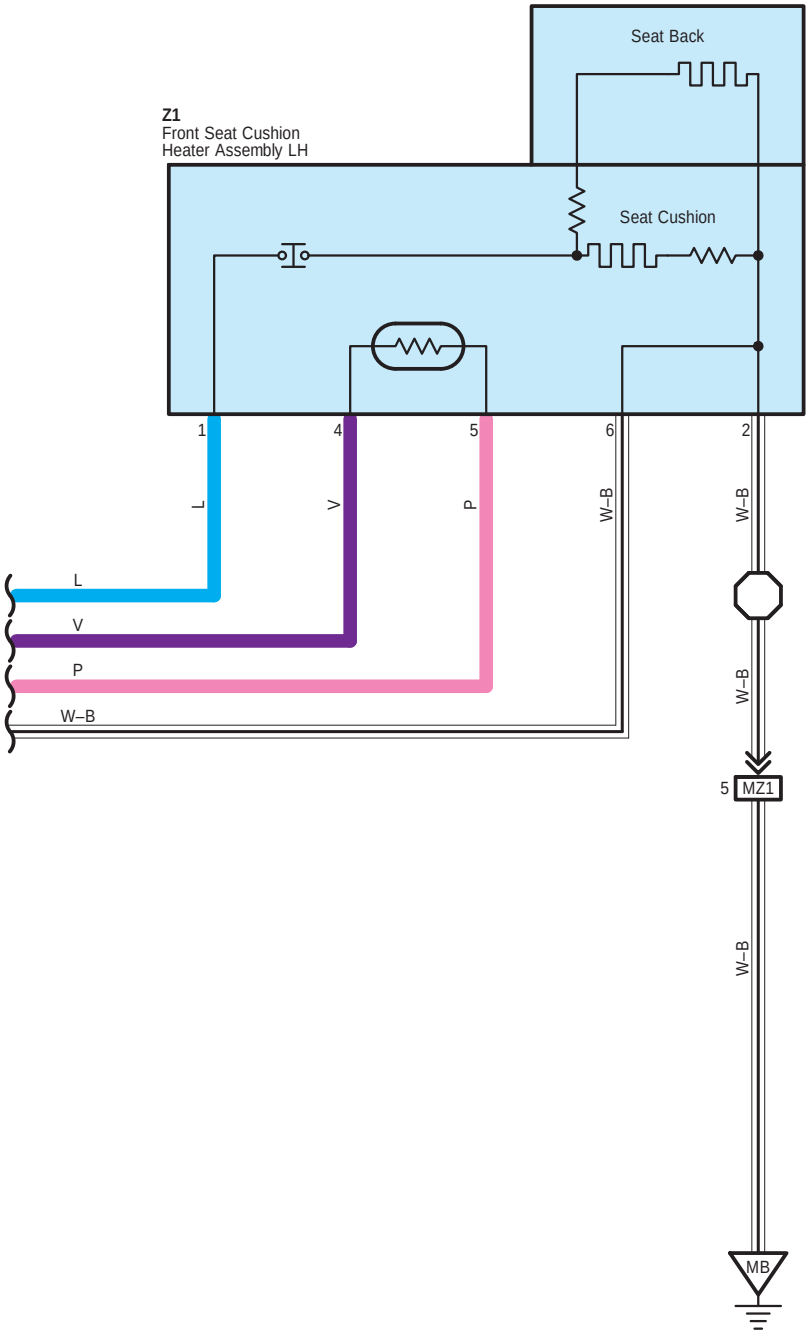
Seat Back
Z1
Front Seat Cushion
Heater Assembly LH
Seat Cushion
1
4
5
6
2
L
V
P
W–B
W–B
W–B
L
V
P
W–B
W–B
5
MZ1
W–B
MB

A76
Black

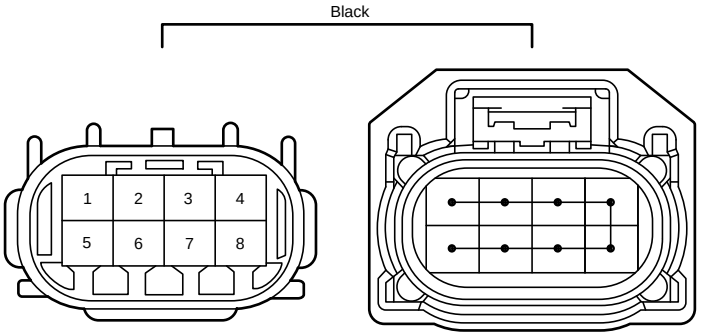

90980-12B56

F61
Black

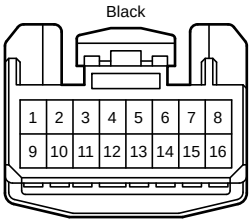

82824-33470

F98
Black

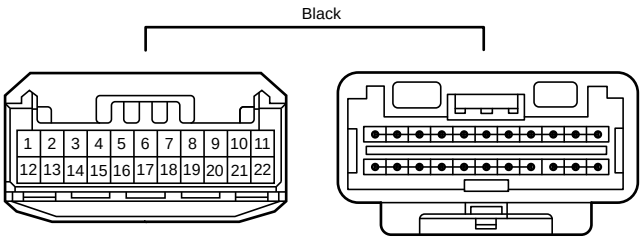

90980-12B54

F107
White

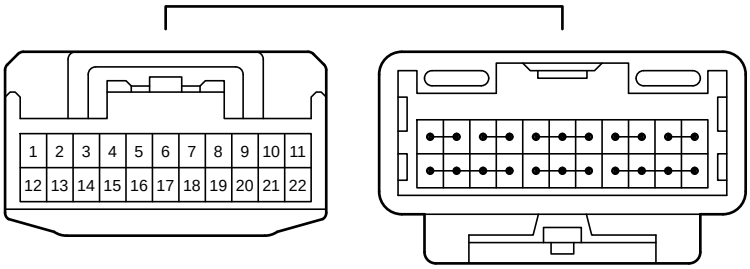

90980-12372

F108
White

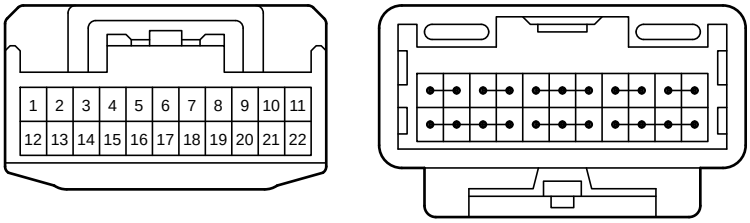

90980-12372

Y2
Black

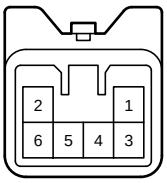

90980-10796

Y4
White

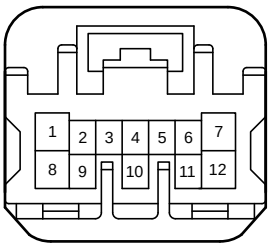

90980-12812

Z1
Black

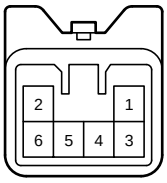

90980-10796

Z2
White

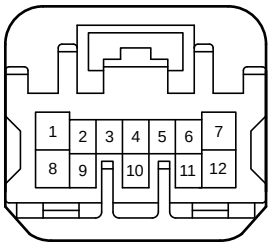

90980-12812

3D
White

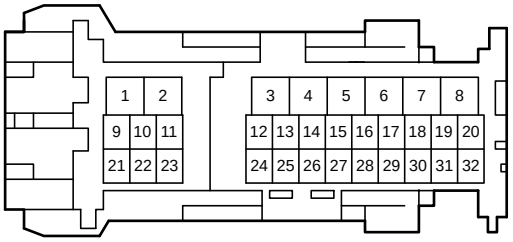

90980-12A48

AF3
White

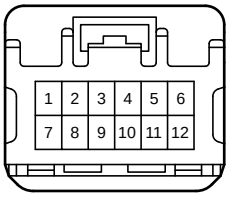

90980-12737

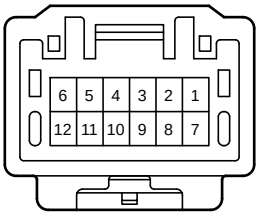

90980-12736

AF8
White

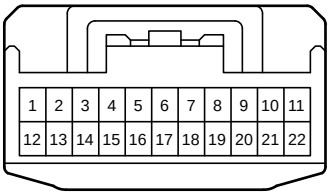

90980-12372

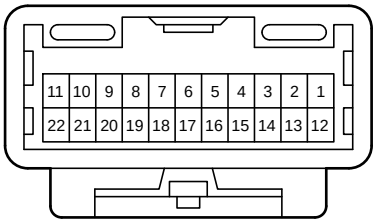

90980-12371

MF1
White

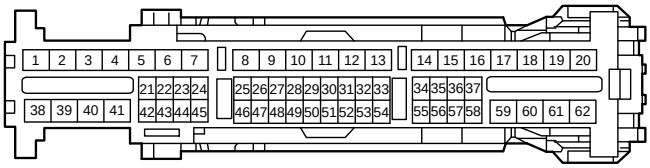

90980-12B22

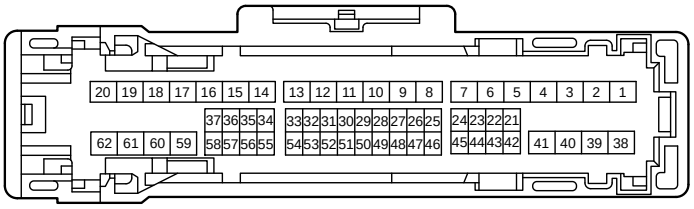

90980-12B21

MF2
White

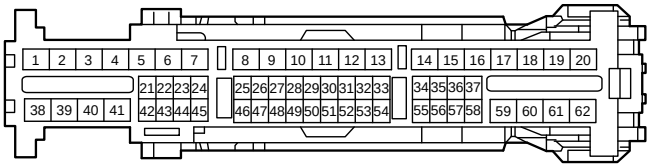

90980-12B22

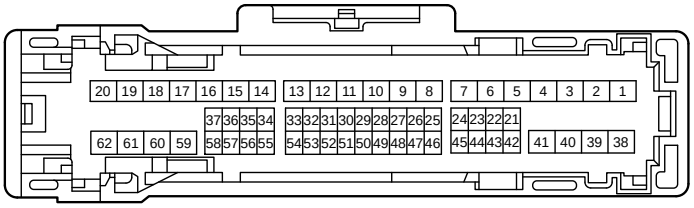

90980-12B21

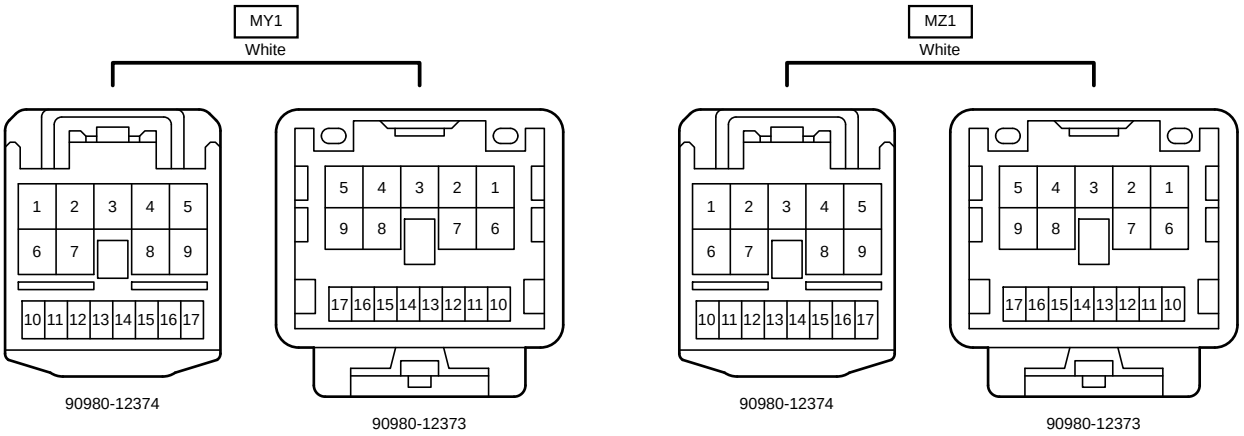
MY1
White
1 2 3 4 5
6 7 8 9
10 11 12 13 14 15 16 17
90980-12374
5 4 3 2 1
9 8 7 6
17 16 15 14 13 12 11 10
90980-12373
MZ1
White
1 2 3 4 5
6 7 8 9
10 11 12 13 14 15 16 17
90980-12374
5 4 3 2 1
9 8 7 6
17 16 15 14 13 12 11 10
90980-12373