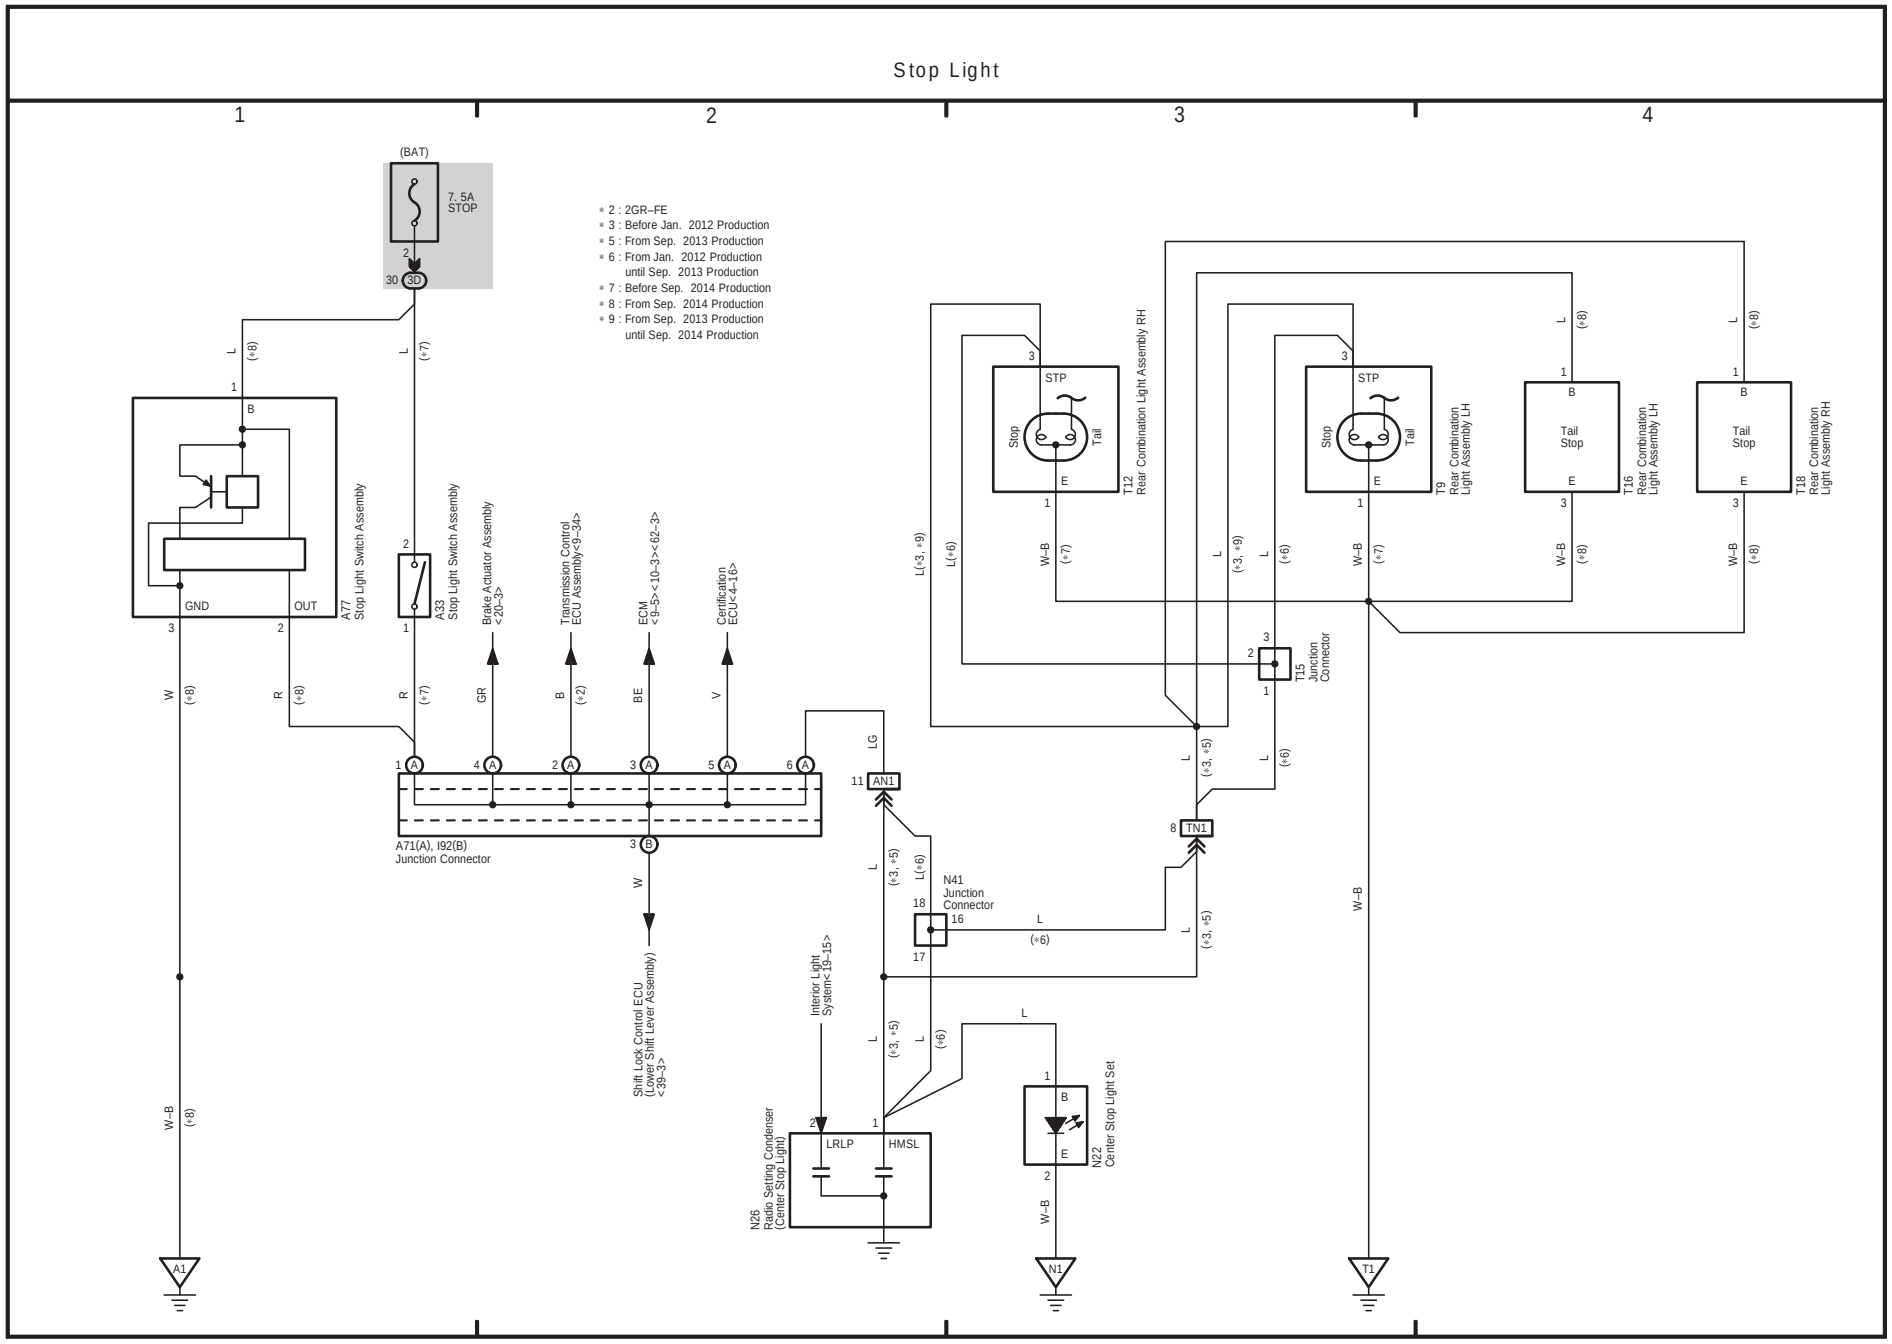
Stop Light
1
2
3
4
(BAT)
7. 5A
STOP
30
3D
* 2 : 2GR–FE
* 3 : Before Jan. 2012 Production
* 5 : From Sep. 2013 Production
* 6 : From Jan. 2012 Production until Sep. 2013 Production
* 7 : Before Sep. 2014 Production
* 8 : From Sep. 2014 Production
* 9 : From Sep. 2013 Production until Sep. 2014 Production
A77
Stop Light Switch Assembly
GND
OUT
A33
Stop Light Switch Assembly
Brake Actuator Assembly <2R–3>
Transmission Control ECU Assembly<9–34>
ECM <9–5><10–3><62–3>
Certification ECU<4–16>
A71(A), I92(B)
Junction Connector
Shift Lock Control ECU (Lower Shift Lever Assembly) <39–3>
Interior Light System<19–15>
N26
Radio Setting Condenser (Center Stop Light)
LRLP
HMSL
N41
Junction Connector
AN1
TN1
T12
Rear Combination Light Assembly RH
T9
Rear Combination Light Assembly LH
T16
Rear Combination Light Assembly LH
T18
Rear Combination Light Assembly RH
T15
Junction Connector
N22
Center Stop Light Set
Stop
Tail
STP
Tail Stop
A1
N1
T1