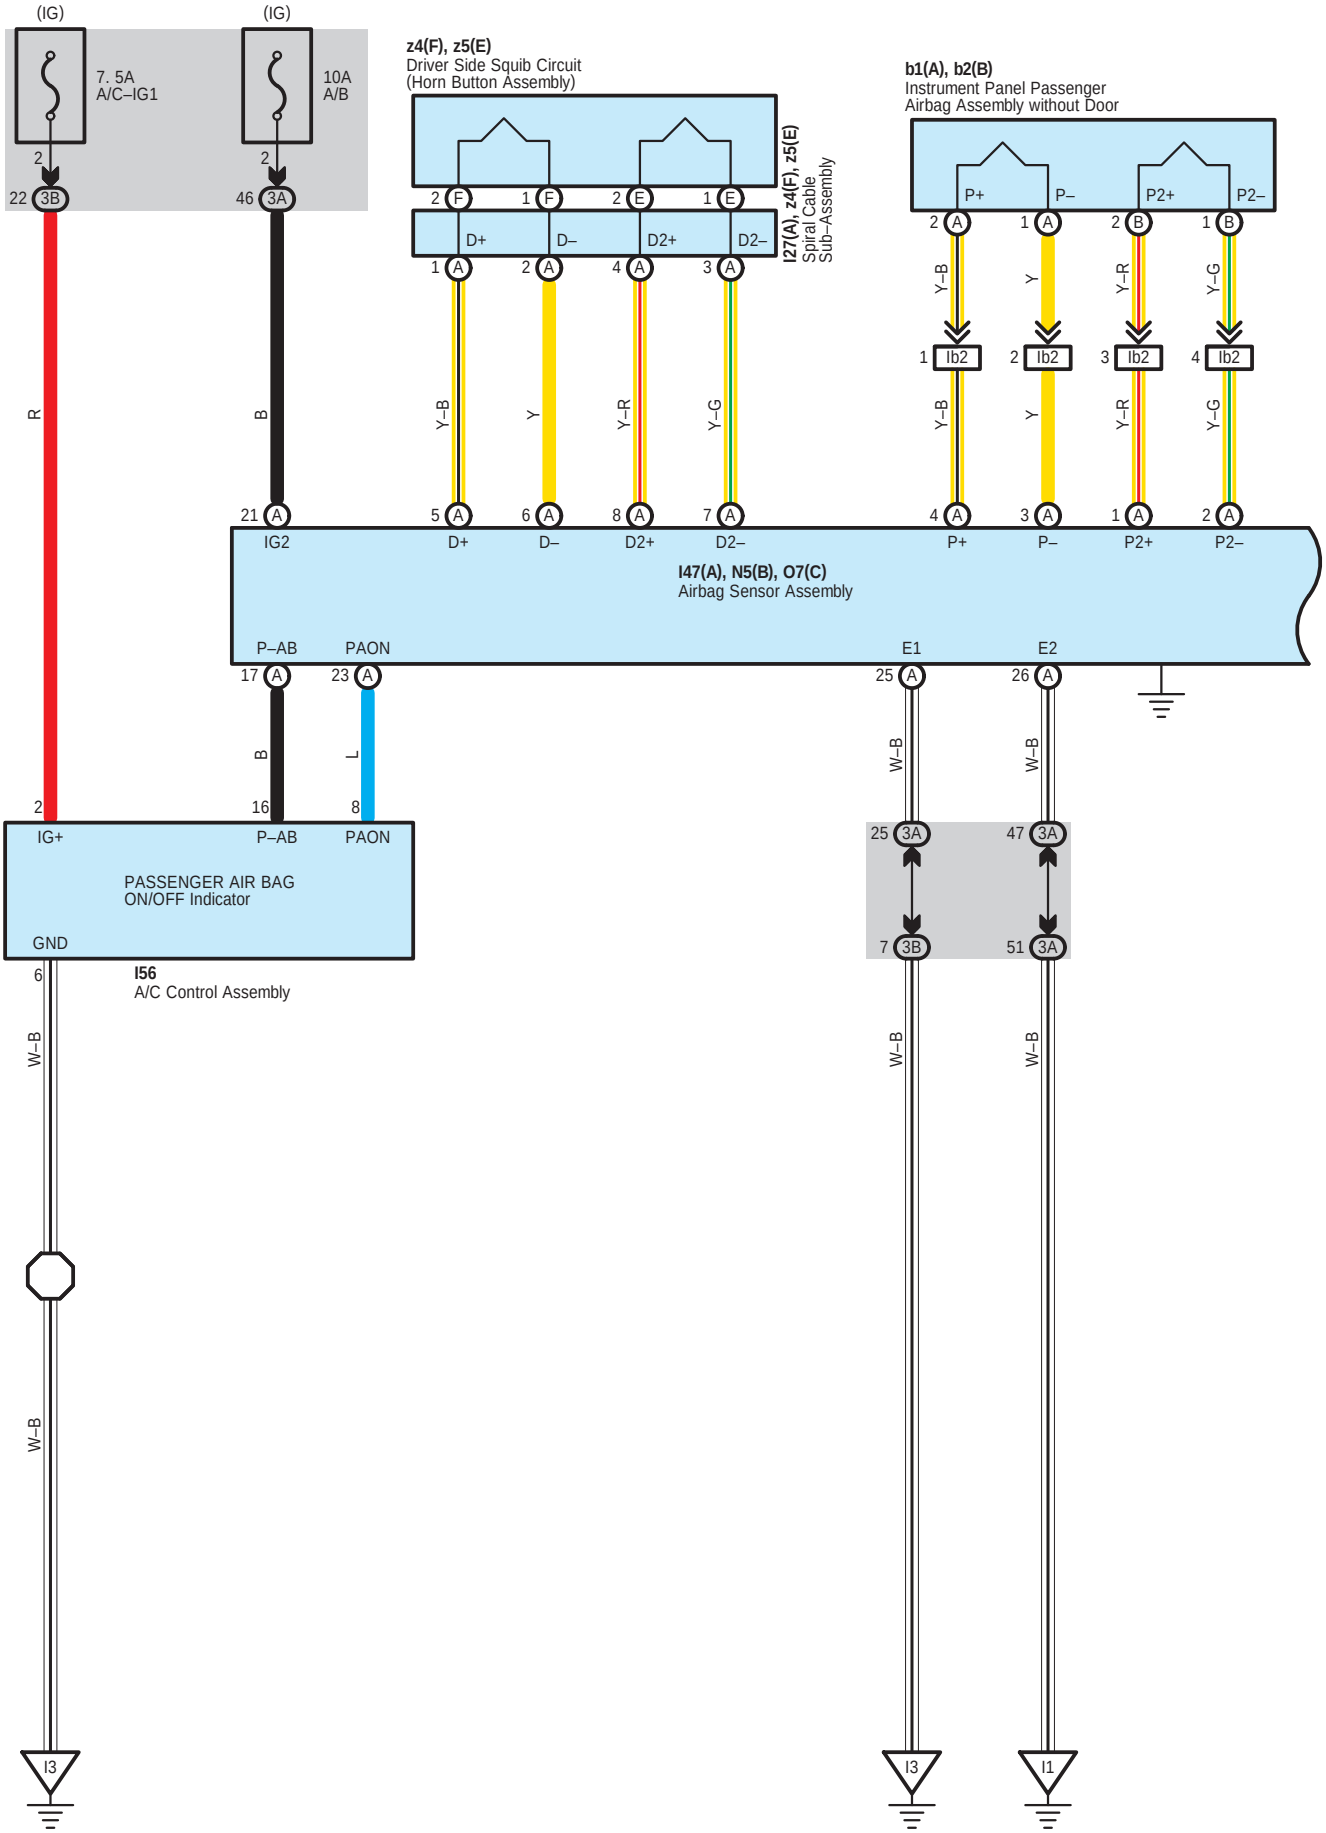
(IG)
7. 5A
A/C–IG1
(IG)
10A
A/B
z4(F), z5(E)
Driver Side Squib Circuit
(Horn Button Assembly)
I27(A), z4(F), z5(E)
Spiral Cable
Sub–Assembly
b1(A), b2(B)
Instrument Panel Passenger
Airbag Assembly without Door
P+
P–
P2+
P2–
D+
D–
D2+
D2–
Ib2
IG2
I47(A), N5(B), O7(C)
Airbag Sensor Assembly
P–AB
PAON
E1
E2
IG+
PASSENGER AIR BAG
ON/OFF Indicator
GND
I56
A/C Control Assembly
I3
I1

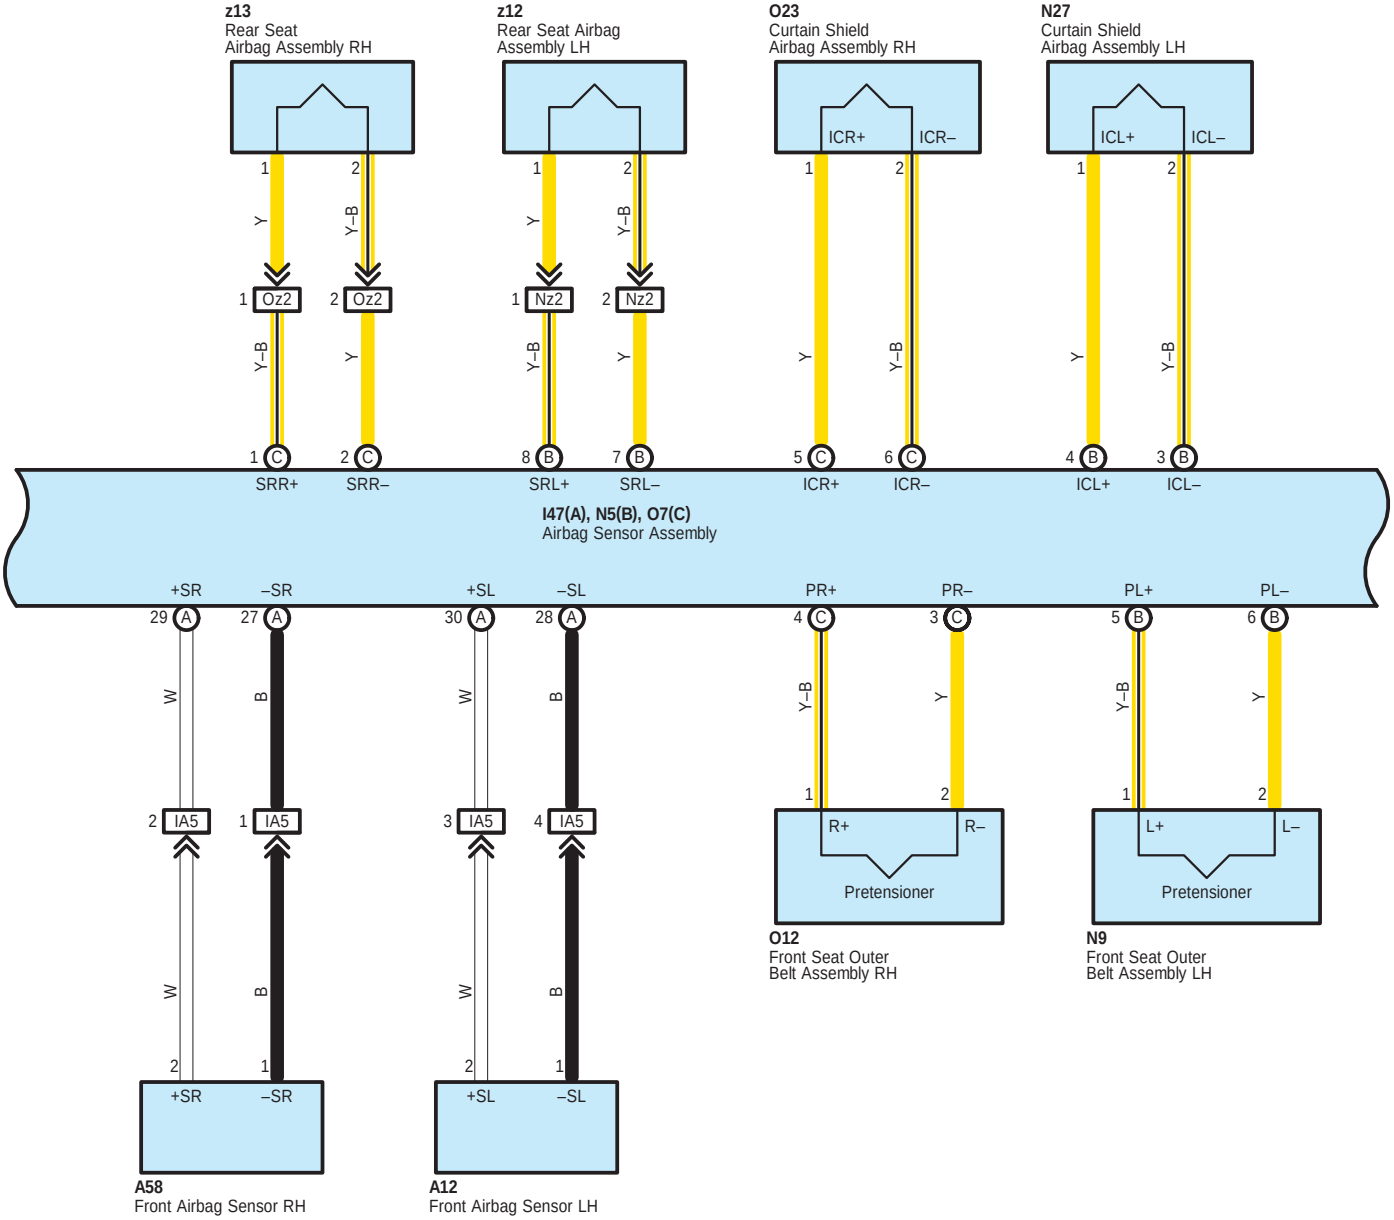
z13
Rear Seat
Airbag Assembly RH
z12
Rear Seat Airbag
Assembly LH
O23
Curtain Shield
Airbag Assembly RH
N27
Curtain Shield
Airbag Assembly LH
ICR+
ICR–
ICL+
ICL–
Oz2
Nz2
SRR+
SRR–
SRL+
SRL–
ICR+
ICR–
ICL+
ICL–
I47(A), N5(B), O7(C)
Airbag Sensor Assembly
+SR
–SR
+SL
–SL
PR+
PR–
PL+
PL–
IA5
R+
R–
L+
L–
Pretensioner
O12
Front Seat Outer
Belt Assembly RH
N9
Front Seat Outer
Belt Assembly LH
A58
Front Airbag Sensor RH
A12
Front Airbag Sensor LH

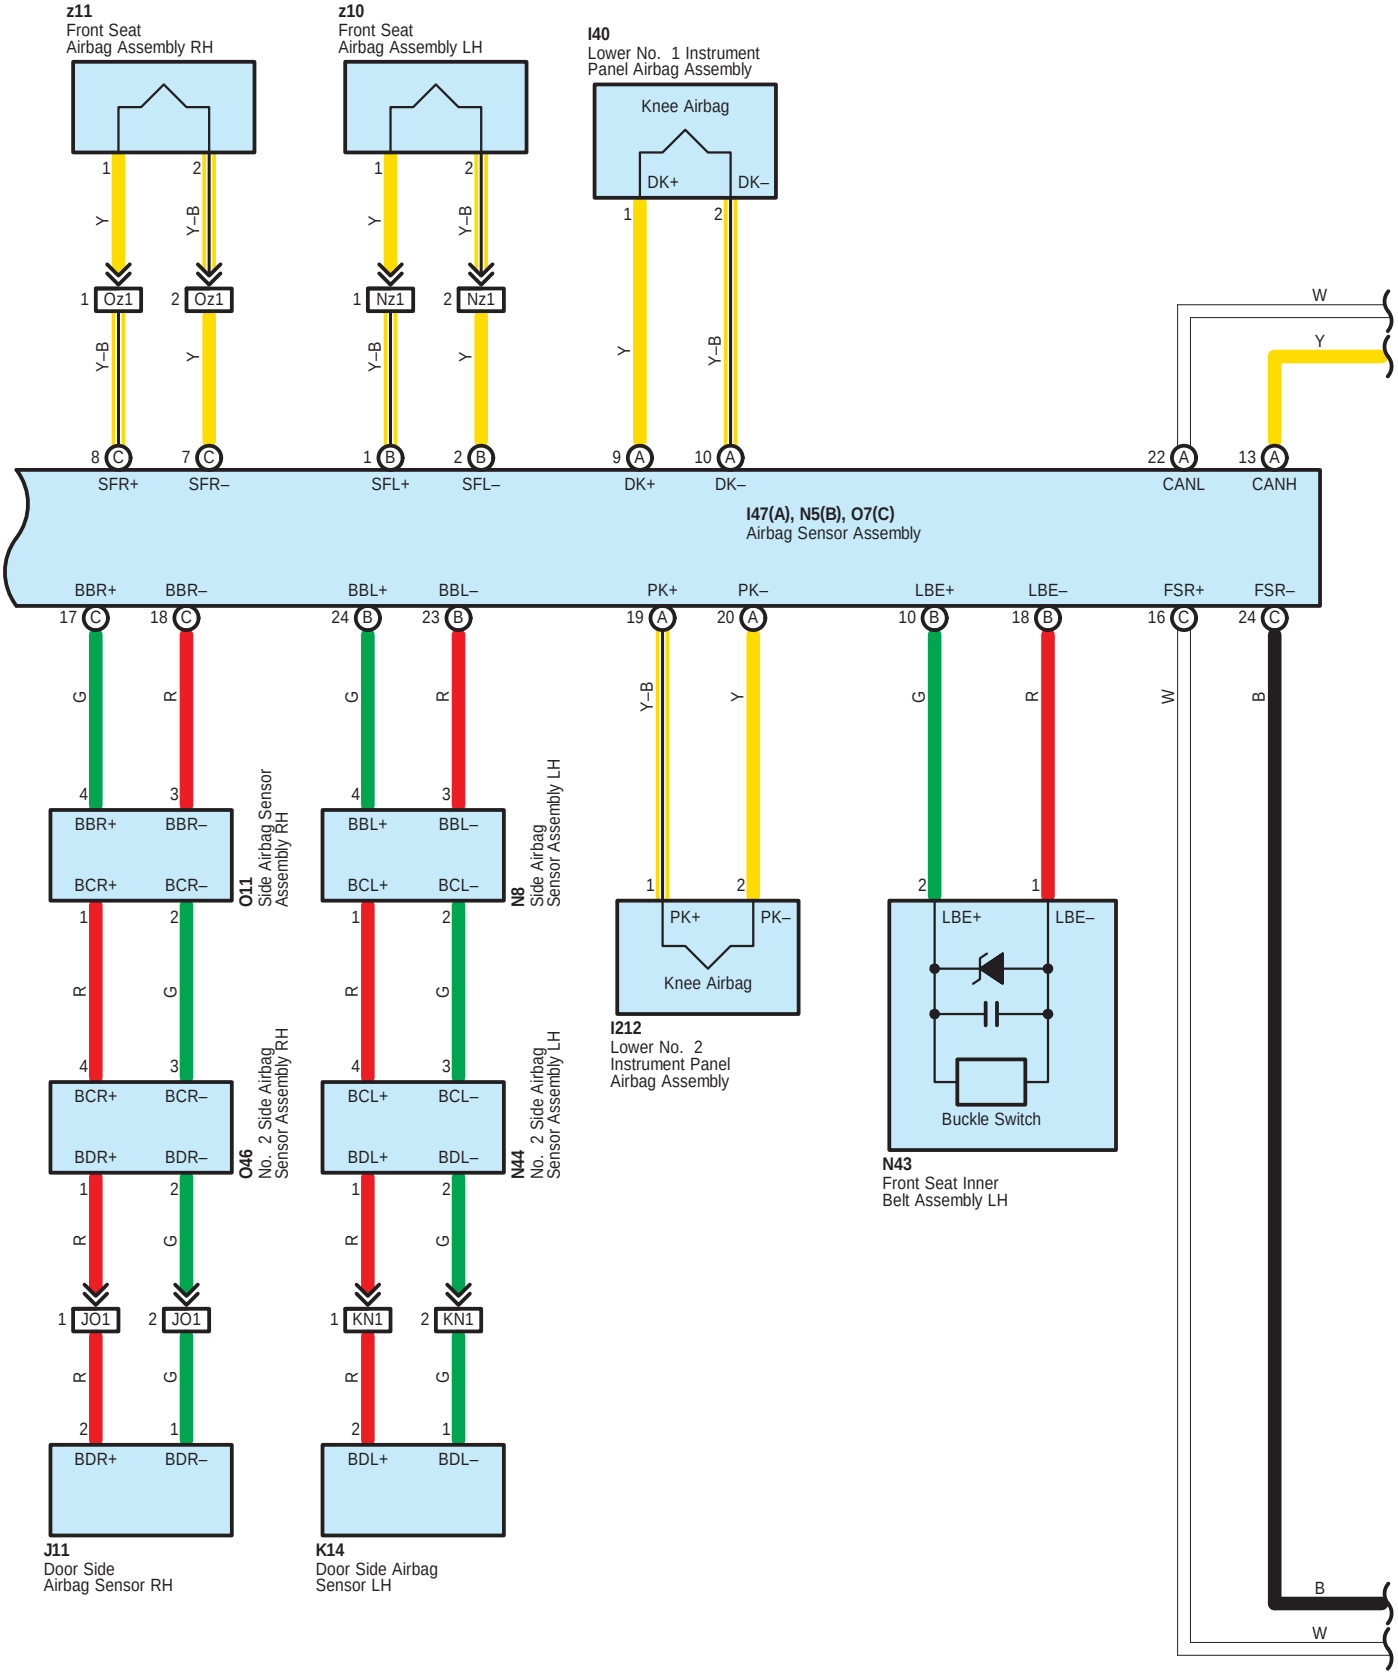
z11
Front Seat
Airbag Assembly RH
z10
Front Seat
Airbag Assembly LH
I40
Lower No. 1 Instrument
Panel Airbag Assembly
Knee Airbag
DK+
DK–
Oz1
Nz1
SFR+
SFR–
SFL+
SFL–
DK+
DK–
CANL
CANH
I47(A), N5(B), O7(C)
Airbag Sensor Assembly
BBR+
BBR–
BCR+
BCR–
BDR+
BDR–
BBL+
BBL–
BCL+
BCL–
BDL+
BDL–
PK+
PK–
LBE+
LBE–
FSR+
FSR–
O11
Side Airbag Sensor
Assembly RH
N8
Side Airbag
Sensor Assembly LH
O46
No. 2 Side Airbag
Sensor Assembly RH
N44
No. 2 Side Airbag
Sensor Assembly LH
JO1
KN1
I212
Lower No. 2
Instrument Panel
Airbag Assembly
Knee Airbag
Buckle Switch
N43
Front Seat Inner
Belt Assembly LH
J11
Door Side
Airbag Sensor RH
K14
Door Side Airbag
Sensor LH

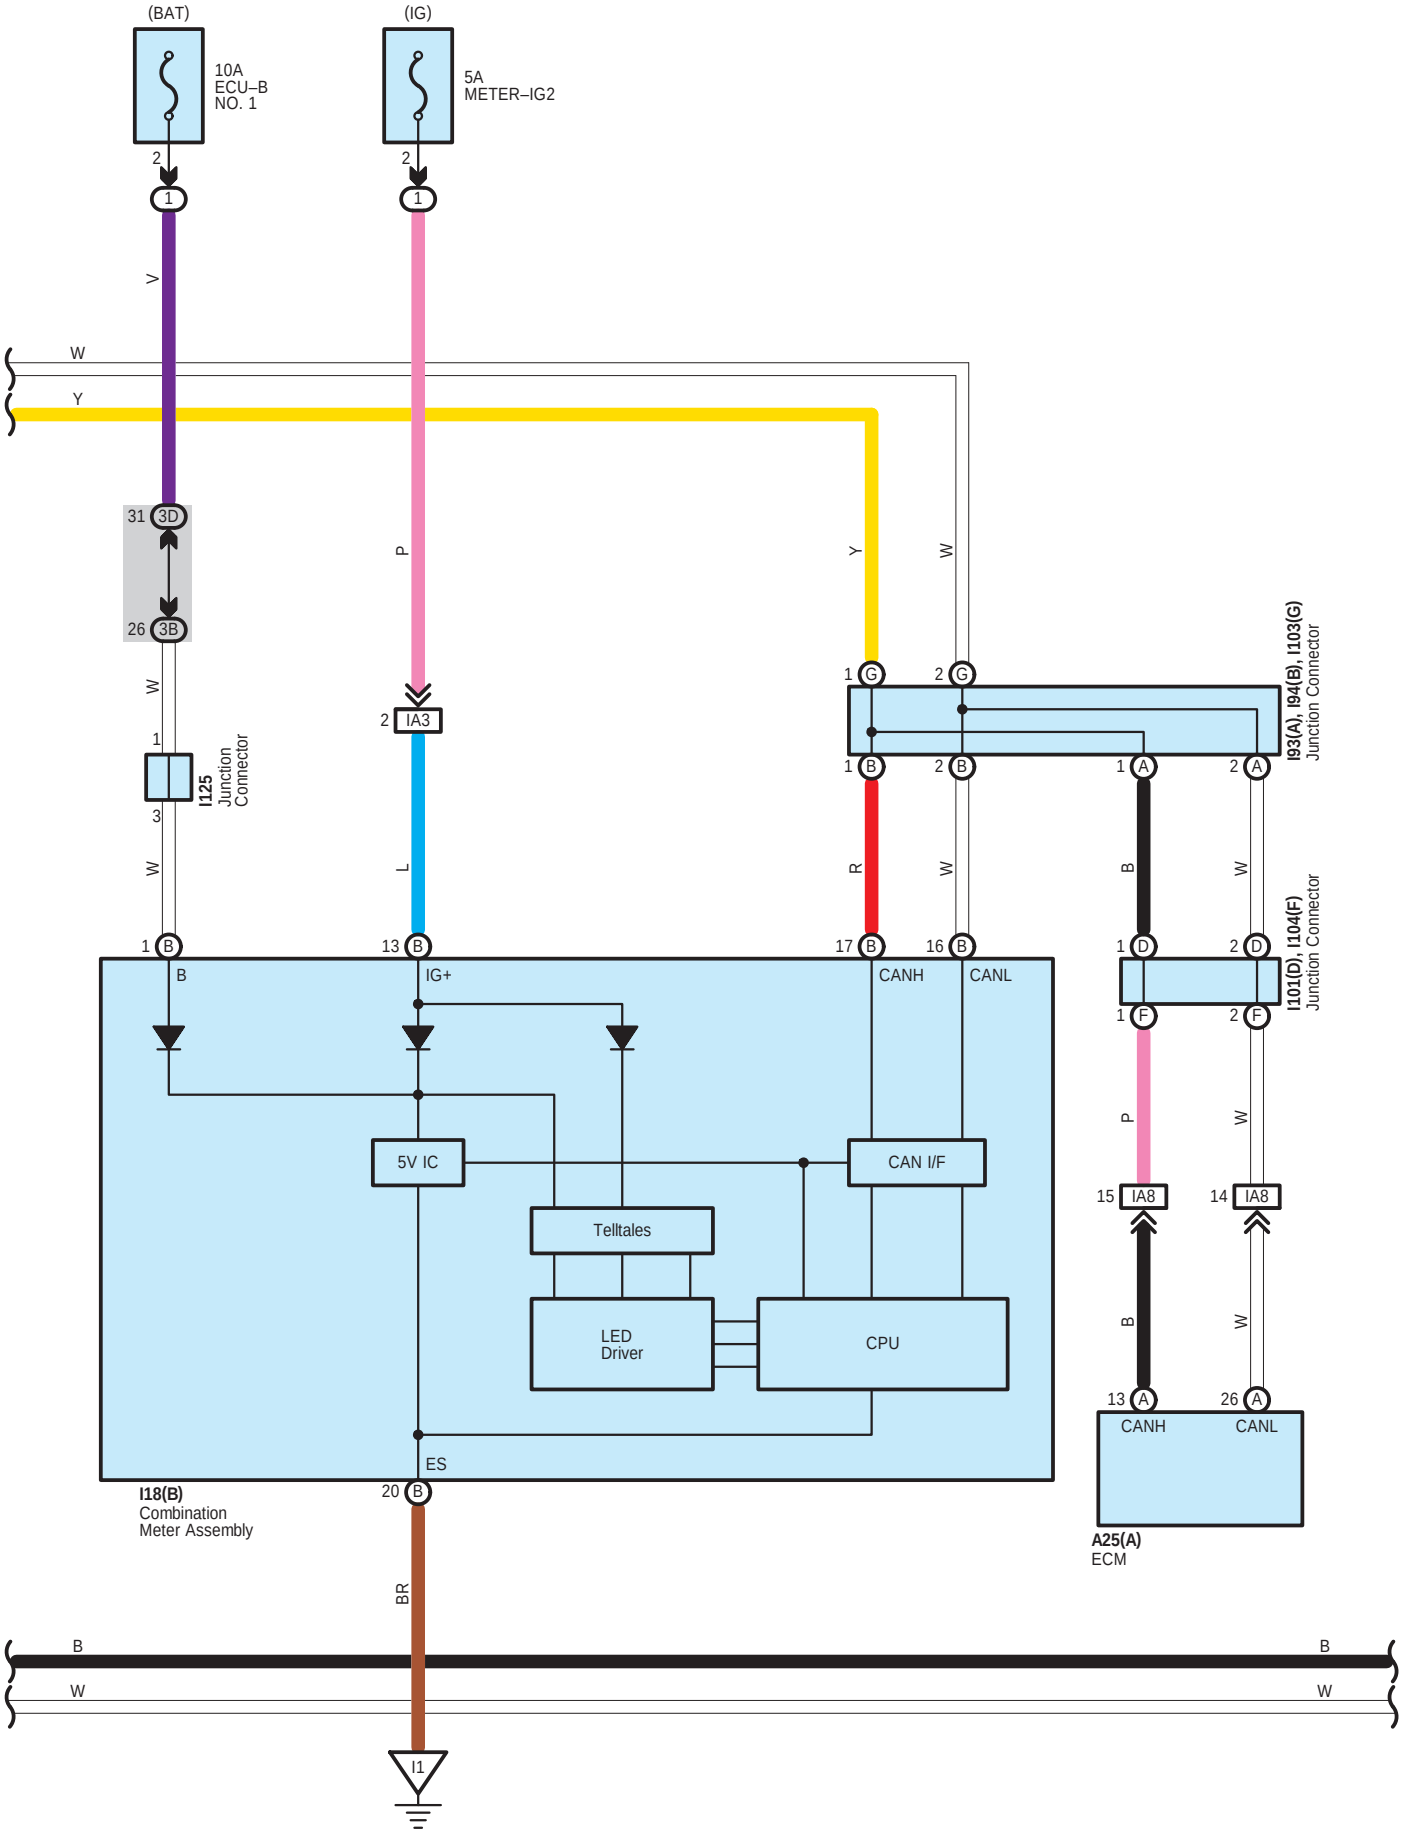
(BAT)
10A
ECU–B
NO. 1
(IG)
5A
METER–IG2
V
W
Y
31 3D
26 3B
P
Y
W
IA3
I125
Junction
Connector
I93(A), I94(B), I103(G)
Junction Connector
L
R
B
IG+
CANH
CANL
5V IC
CAN I/F
Telltales
LED
Driver
CPU
ES
I18(B)
Combination
Meter Assembly
I101(D), I104(F)
Junction Connector
IA8
A25(A)
ECM
BR
I1

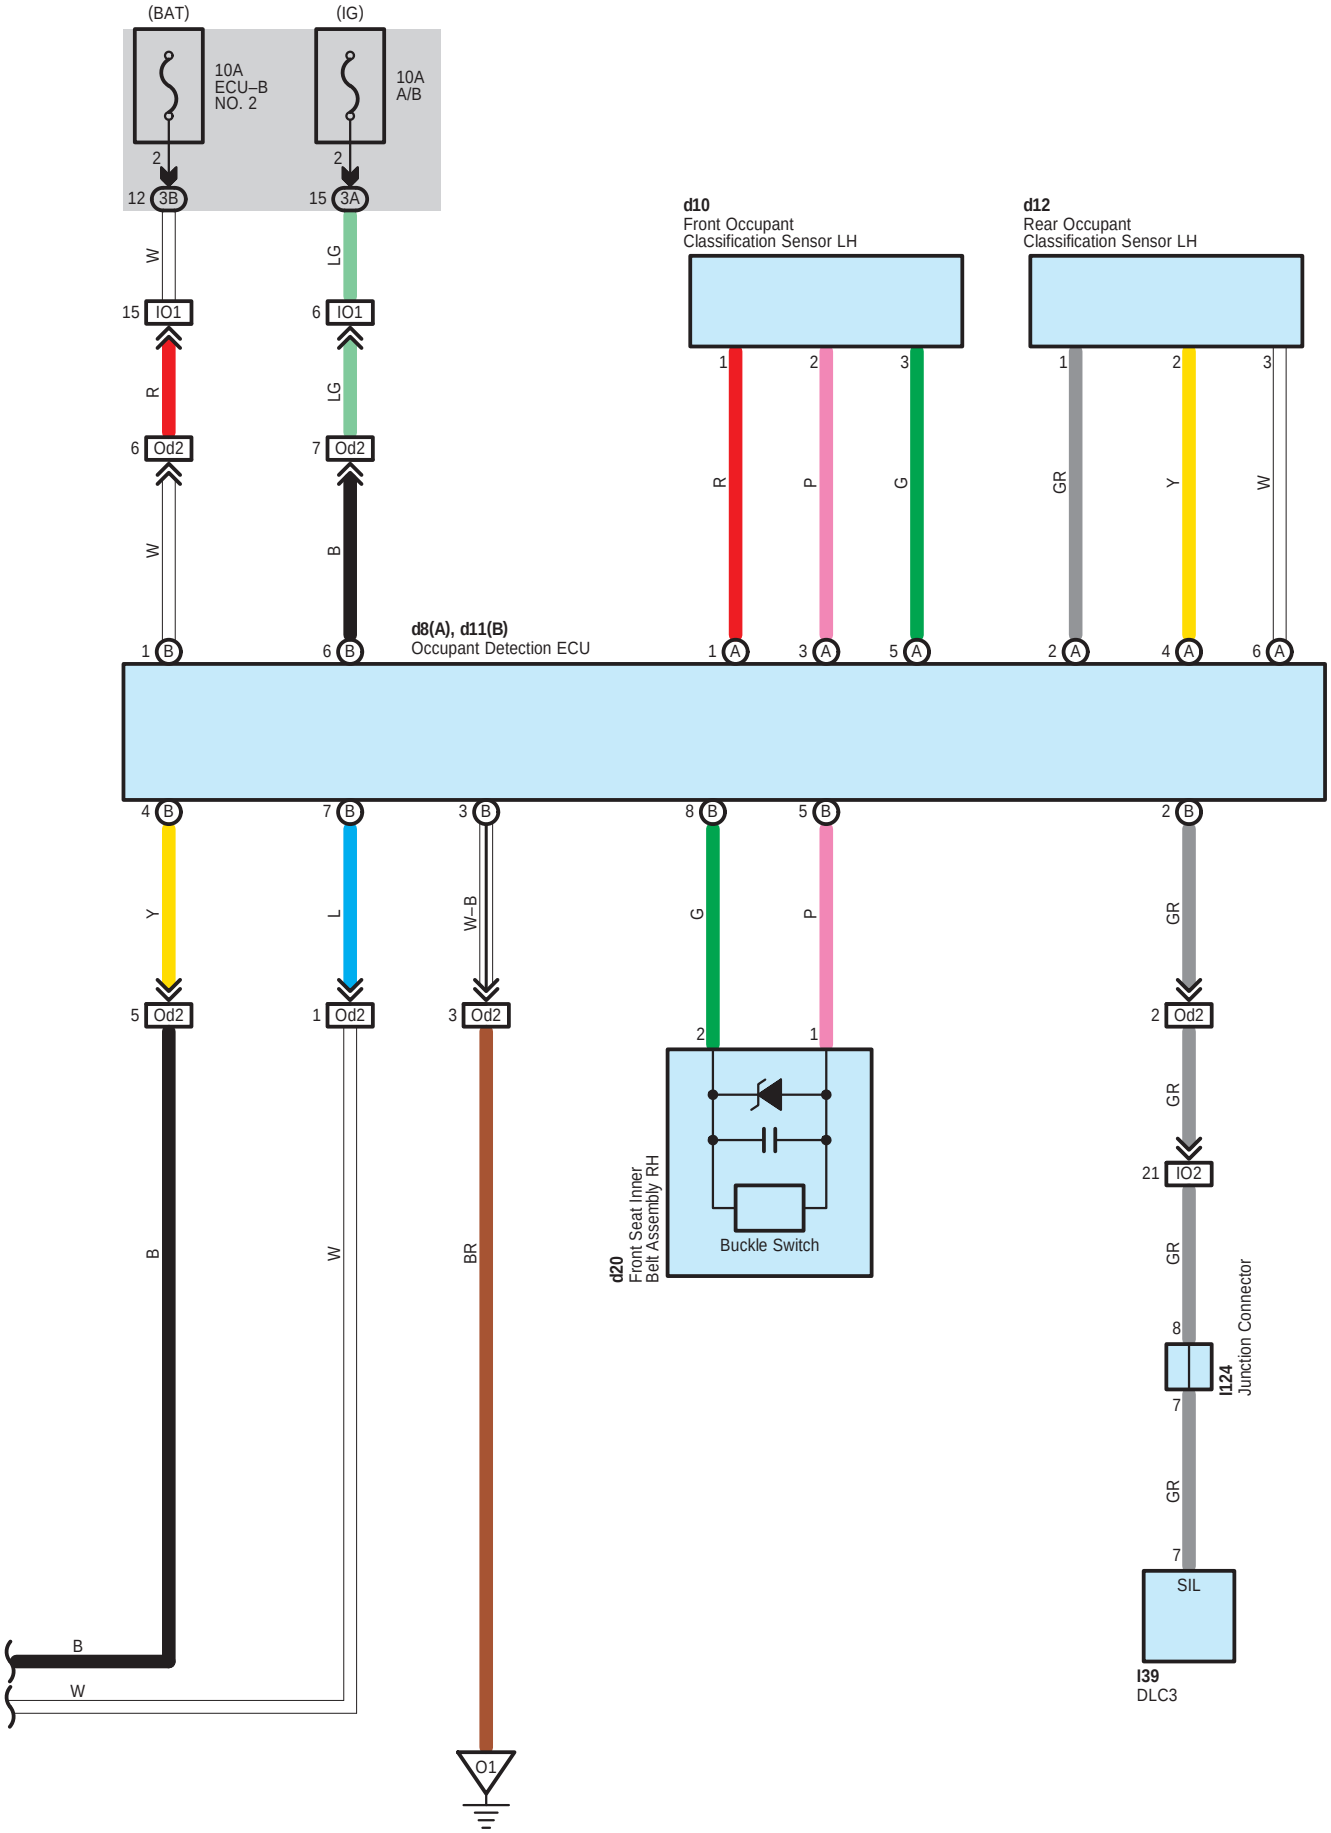
(BAT)
(IG)
10A
ECU–B
NO. 2
10A
A/B
2
12 3B
15 3A
W
LG
15 IO1
6 IO1
R
LG
6 Od2
7 Od2
W
B
1 B
6 B
d8(A), d11(B)
Occupant Detection ECU
d10
Front Occupant
Classification Sensor LH
d12
Rear Occupant
Classification Sensor LH
1 2 3
R P G
1 3 5 A
1 2 3
GR Y W
2 4 6 A
4 B
7 B
3 B
8 B
5 B
2 B
Y
L
W–B
G
P
GR
5 Od2
1 Od2
3 Od2
2 Od2
2
1
GR
21 IO2
B
W
BR
d20
Front Seat Inner
Belt Assembly RH
Buckle Switch
GR
8
I124
Junction Connector
7
GR
7
SIL
I39
DLC3
B
W
O1

A 12
Yellow

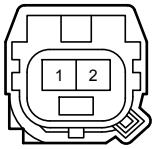

A 25
Black

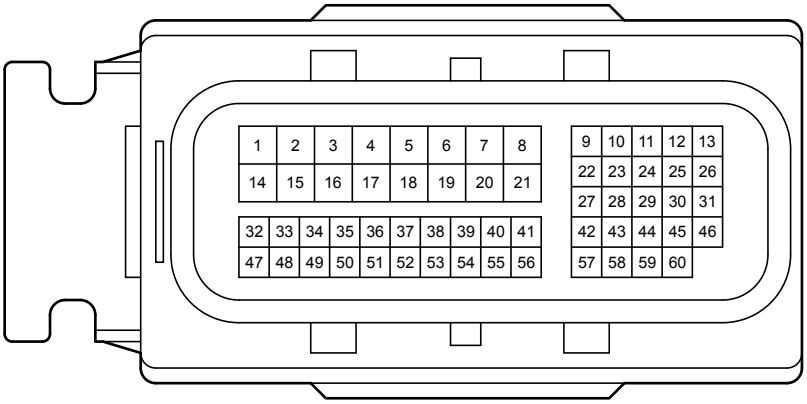

A 58
Yellow

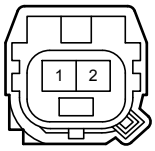

I 18
Black

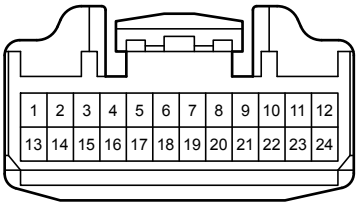

I 27
Yellow

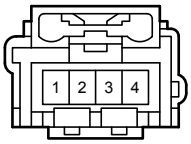

I 39
White

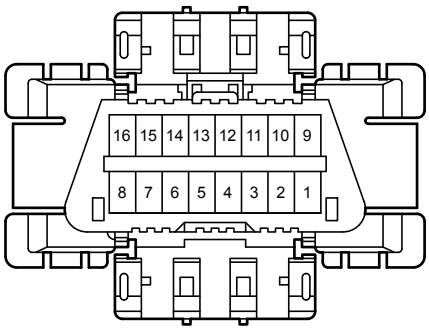

I 40
Black



I 47
Yellow

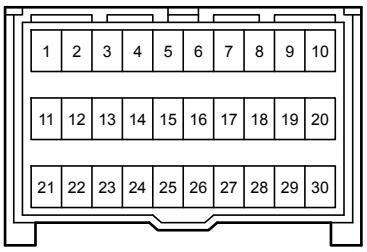

I 56
Black

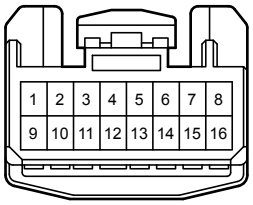

I 93
White



I 94
White



I101
White



I103
White



I104
White



I124
White

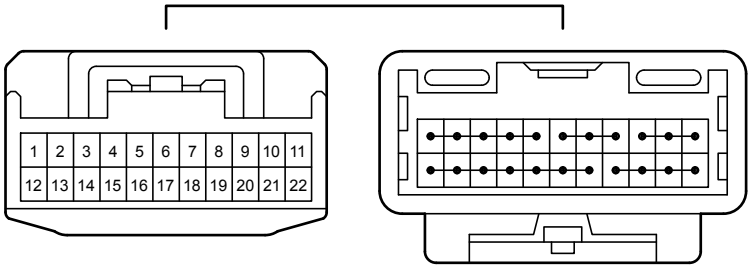

I125
Gray

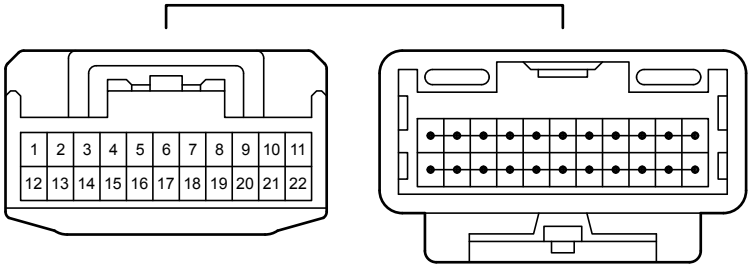

I212
Black



J 11
Yellow

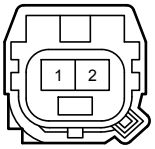

K 14
Yellow

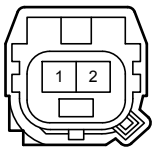

N 5
Yellow

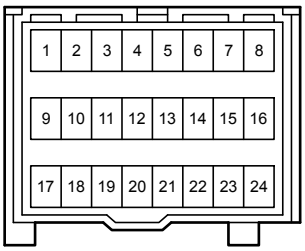

N 8
Yellow

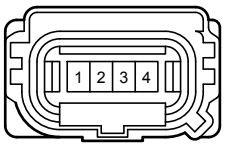

N 9
Black



N 27
Black

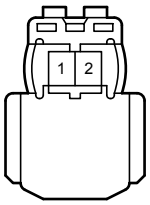

N 43
White

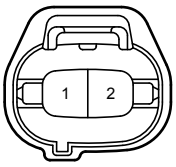

N 44
Yellow

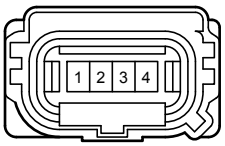

O 7
Yellow

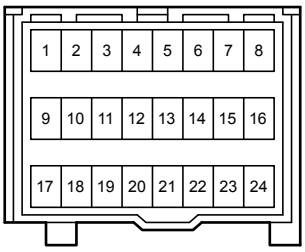

O 11
Yellow

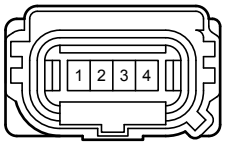

O 12
Black



O 23
Black

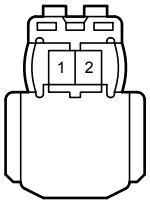

O 46
Yellow

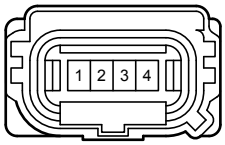

b 1
Orange



b 2
Black



d 8
Black

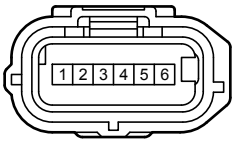

d 10
Black

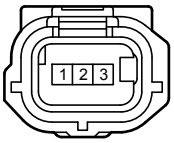

d 11
Black

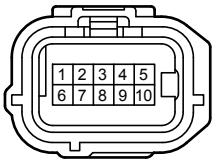

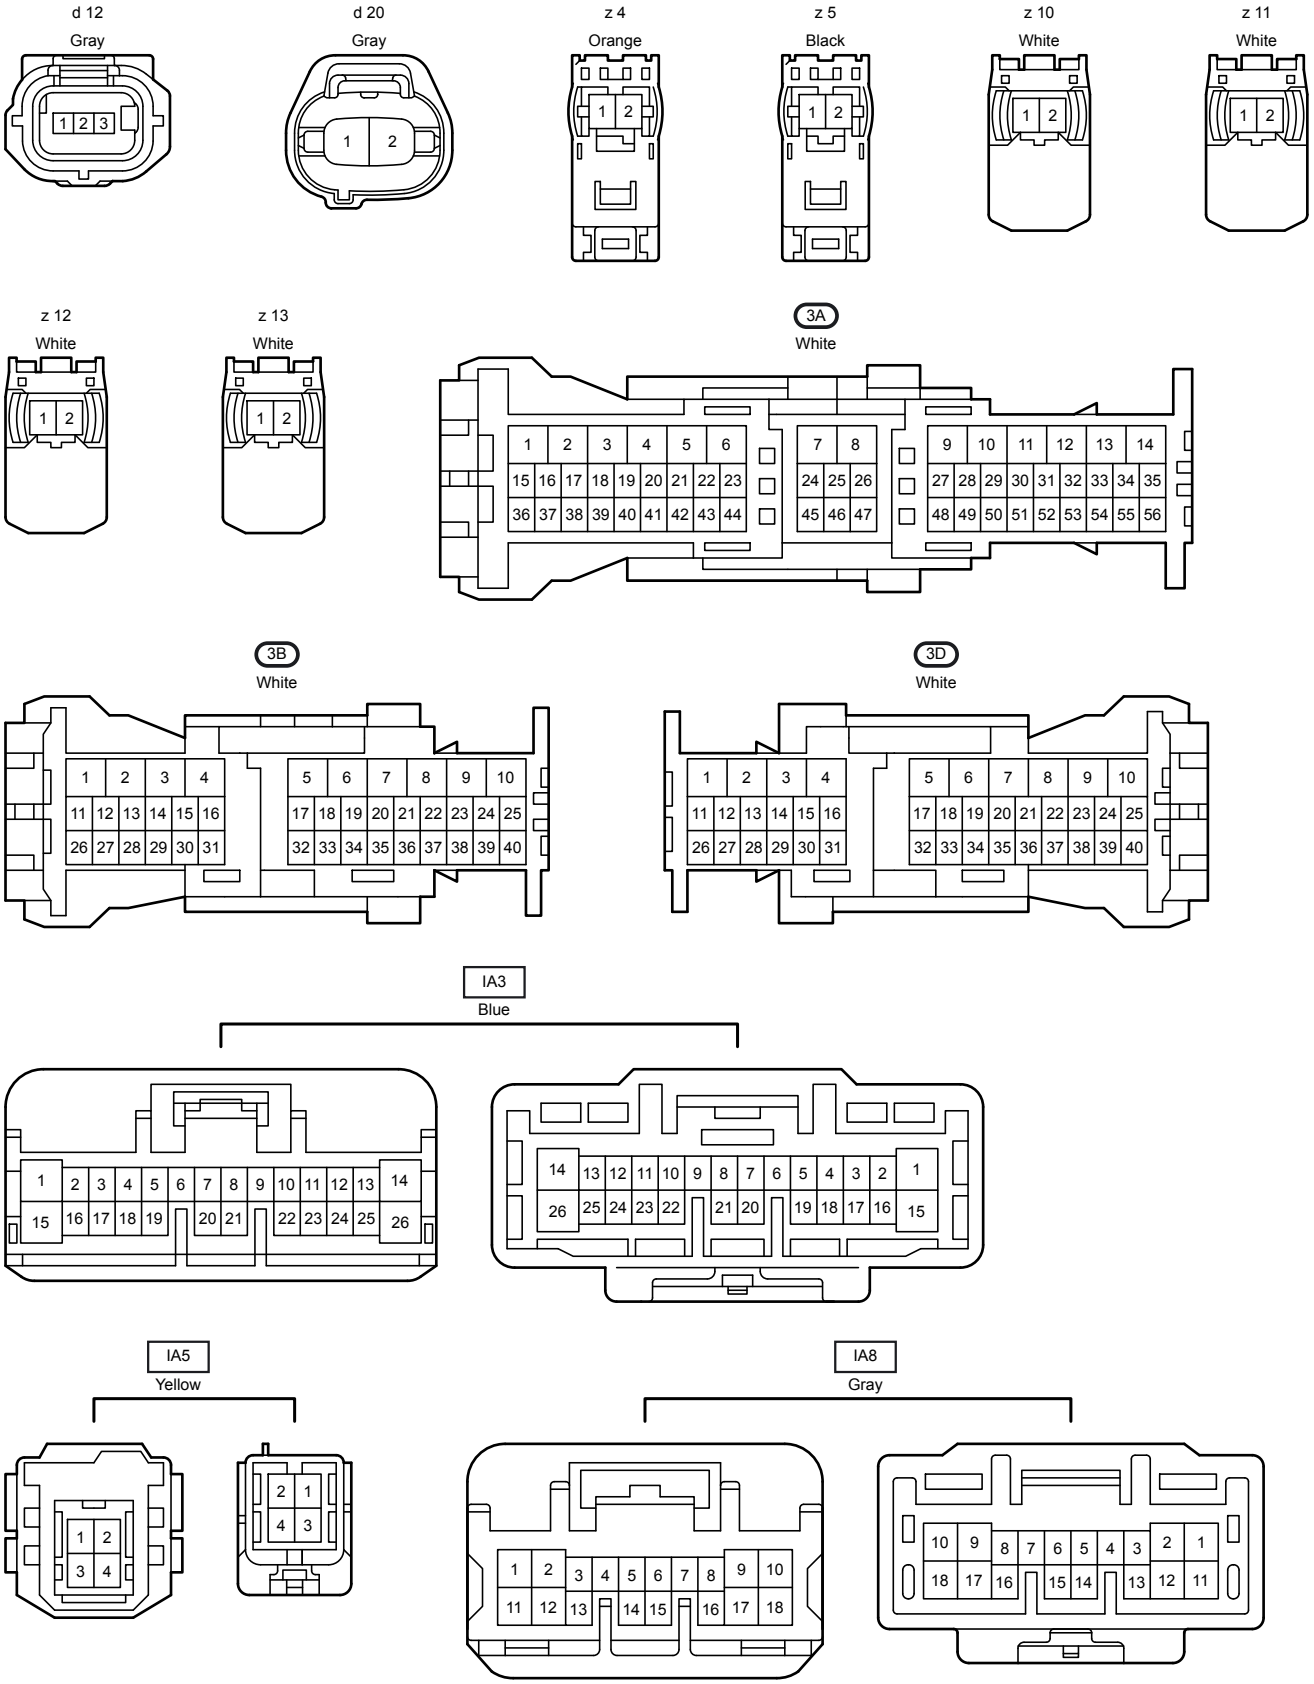
d 12
Gray
d 20
Gray
z 4
Orange
z 5
Black
z 10
White
z 11
White
z 12
White
z 13
White
3A
White
3B
White
3D
White
IA3
Blue
IA5
Yellow
IA8
Gray

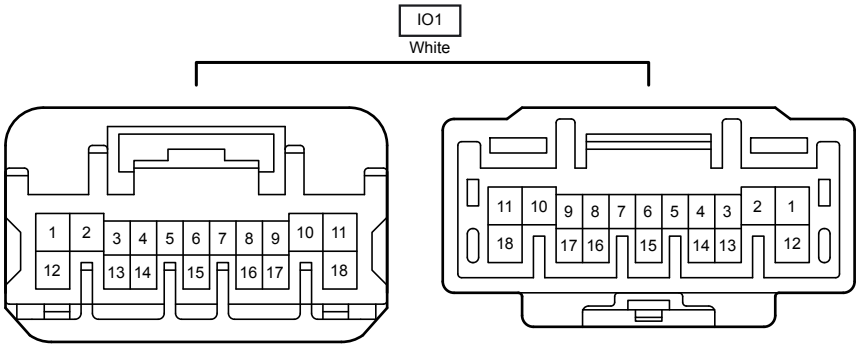
IO1
White
1 2 3 4 5 6 7 8 9 10 11
12 13 14 15 16 17 18
11 10 9 8 7 6 5 4 3 2 1
18 17 16 15 14 13 12

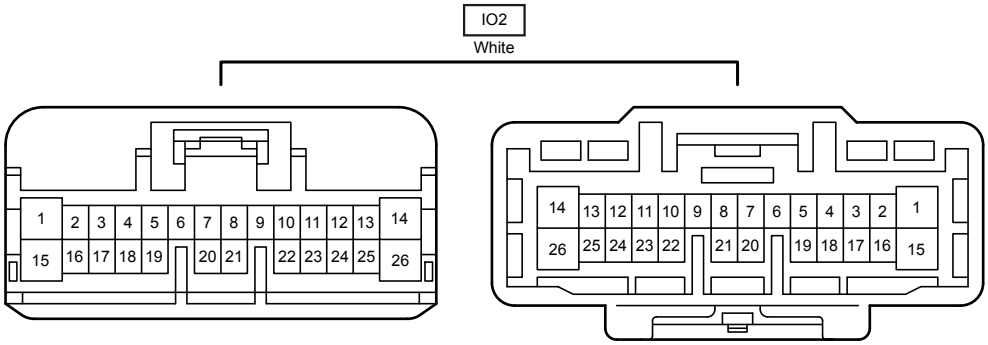
IO2
White
1 2 3 4 5 6 7 8 9 10 11 12 13 14
15 16 17 18 19 20 21 22 23 24 25 26
14 13 12 11 10 9 8 7 6 5 4 3 2 1
26 25 24 23 22 21 20 19 18 17 16 15

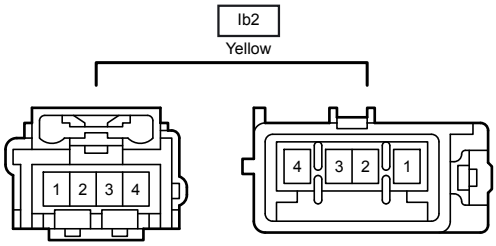
Ib2
Yellow
1 2 3 4
4 3 2 1

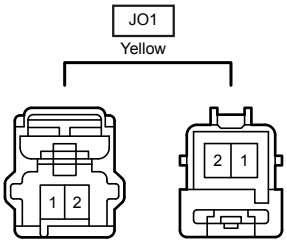
JO1
Yellow
1 2
2 1

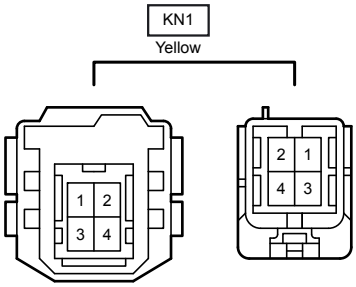
KN1
Yellow
1 2
3 4
2 1
4 3

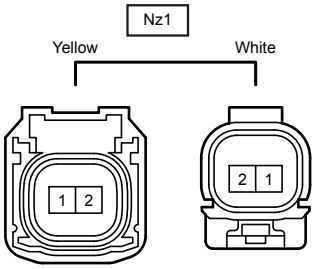
Nz1
Yellow
White
1 2
2 1

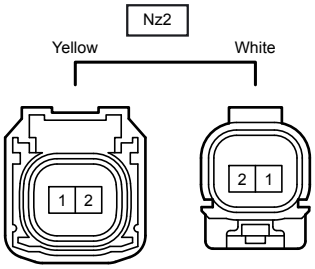
Nz2
Yellow
White
1 2
2 1

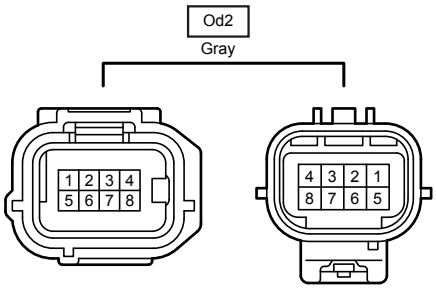
Od2
Gray
1 2 3 4
5 6 7 8
4 3 2 1
8 7 6 5

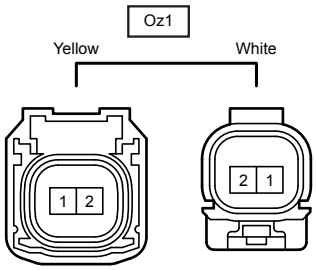
Oz1
Yellow
White
1 2
2 1

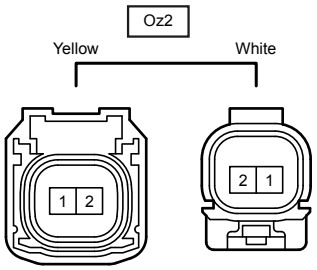
Oz2
Yellow
White
1 2
2 1