F RELAY LOCATIONS

① : Engine Room R/B Assembly	Front Fender Apron LH (See Page 20)
⬭ : Engine Room J/B Assembly	

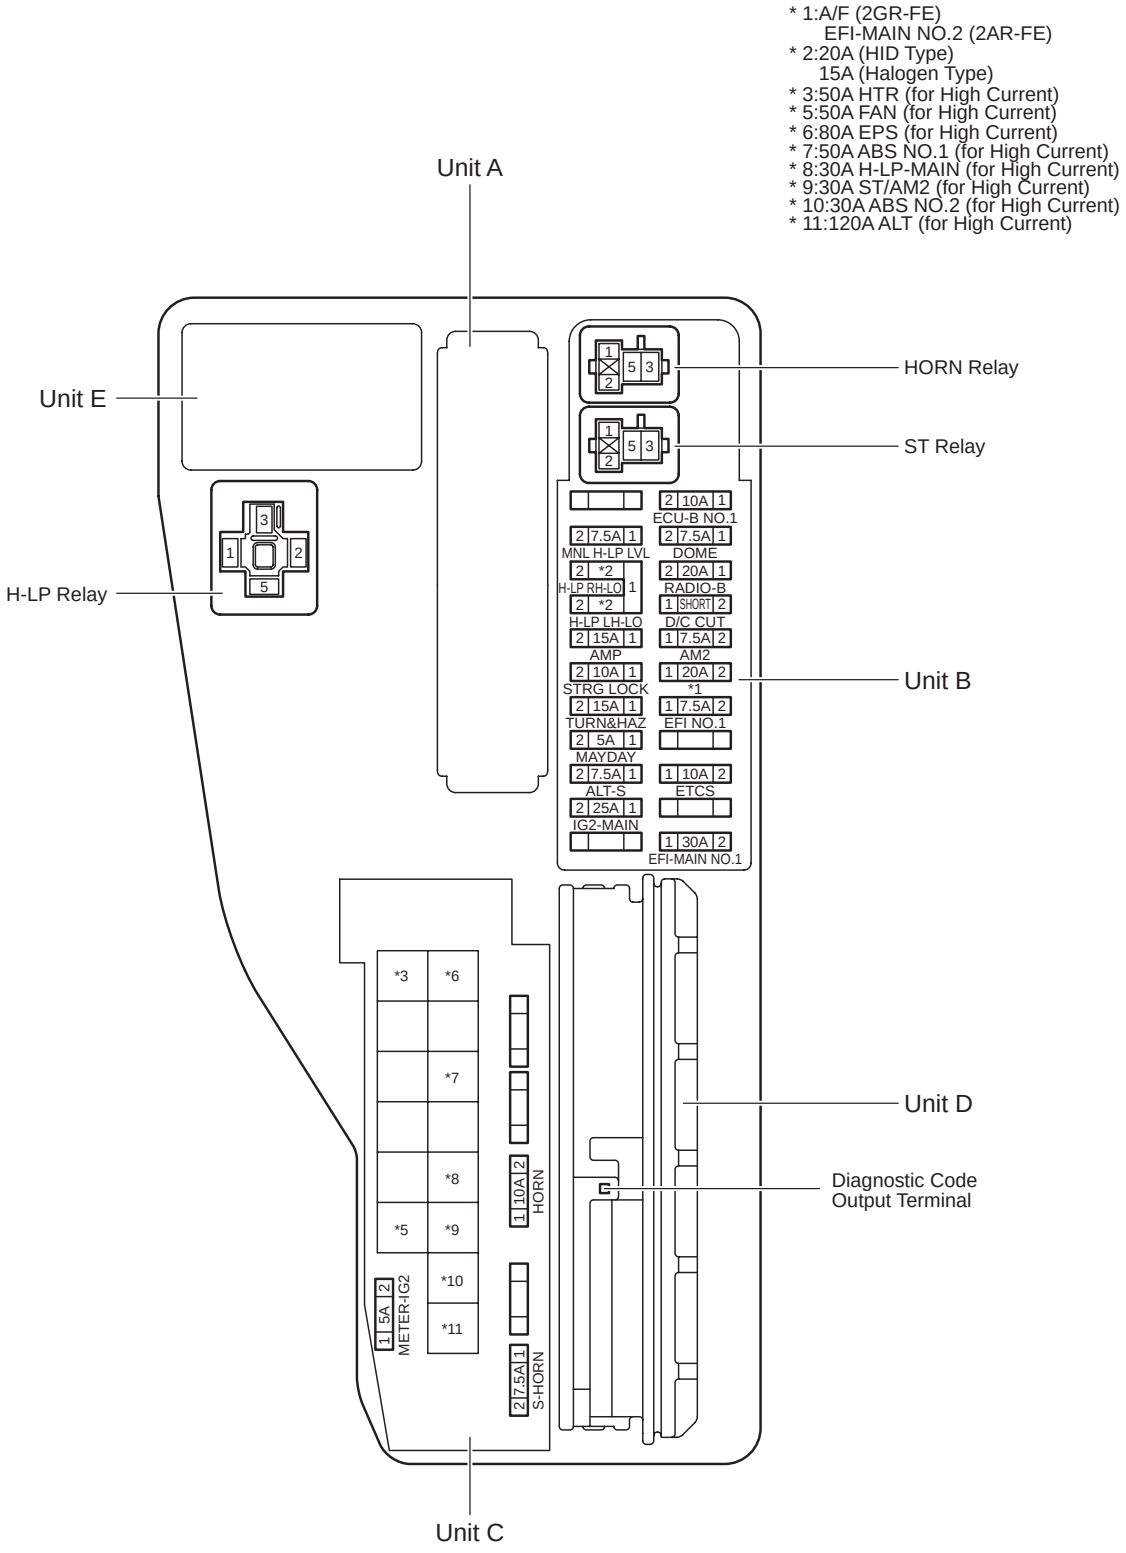

Unit A

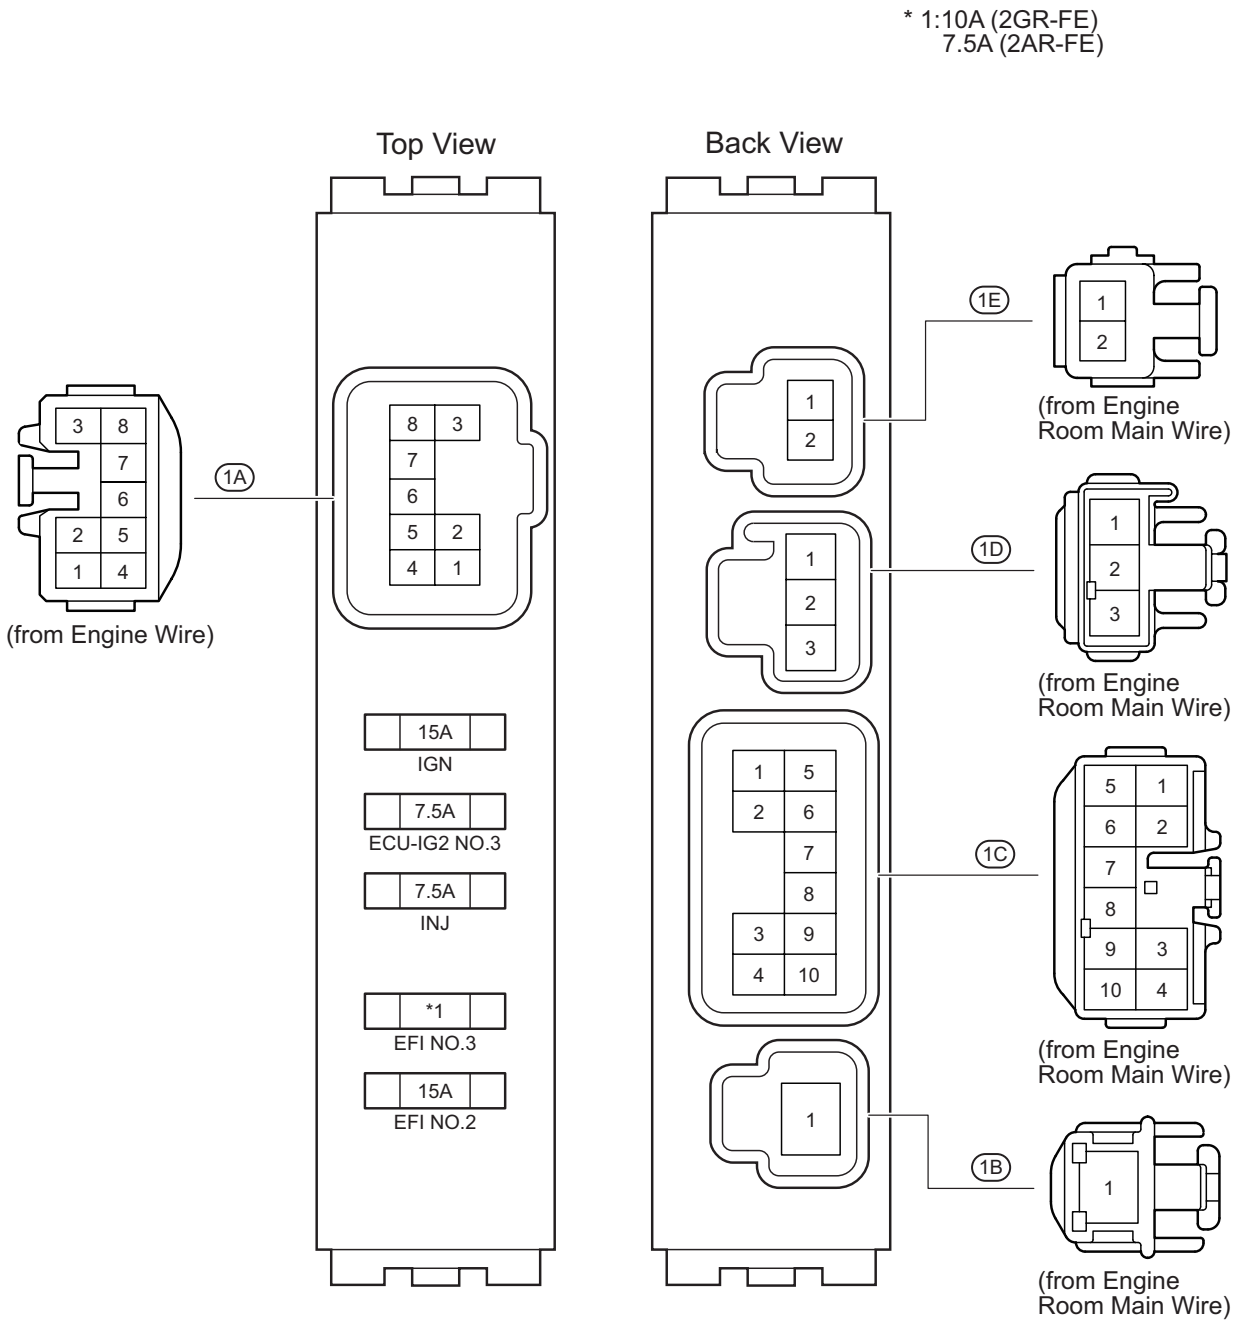
* 1:10A (2GR-FE)
7.5A (2AR-FE)
Top View
Back View
1A
(from Engine Wire)
15A
IGN
7.5A
ECU-IG2 NO.3
7.5A
INJ
*1
EFI NO.3
15A
EFI NO.2
1E
1D
1C
1B
(from Engine Room Main Wire)
(from Engine Room Main Wire)
(from Engine Room Main Wire)
(from Engine Room Main Wire)

F RELAY LOCATIONS

1 : Engine Room R/B Assembly	Front Fender Apron LH (See Page 20)
: Engine Room J/B Assembly	

Unit C

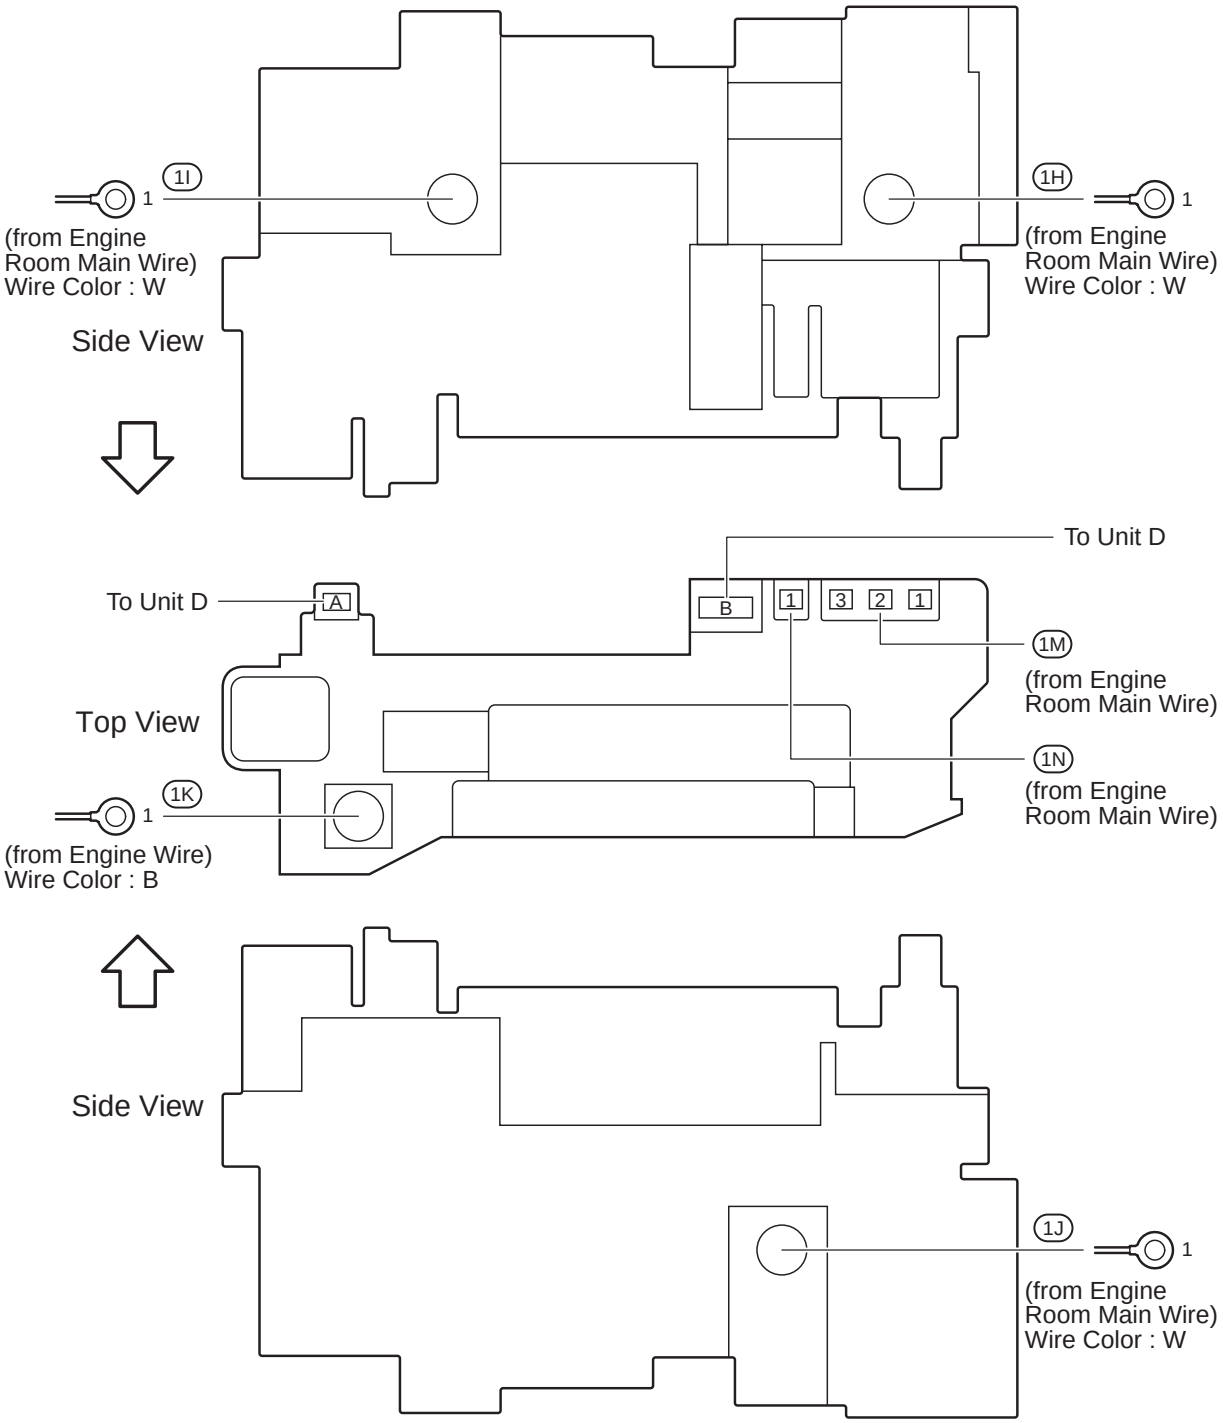

Unit D

Back View

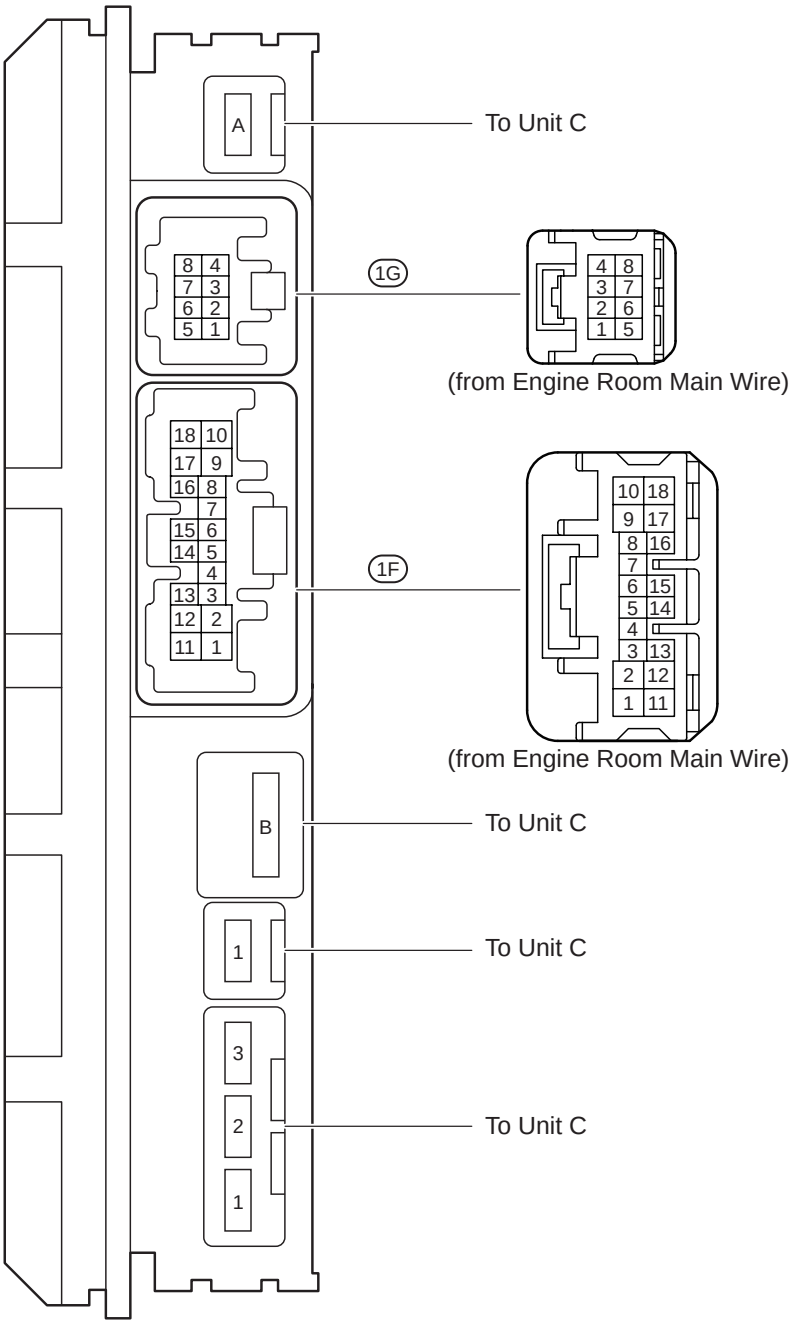

F RELAY LOCATIONS

① : Engine Room R/B Assembly	Front Fender Apron LH (See Page 20)
⬭ : Engine Room J/B Assembly	

Unit E

(2GR-FE)

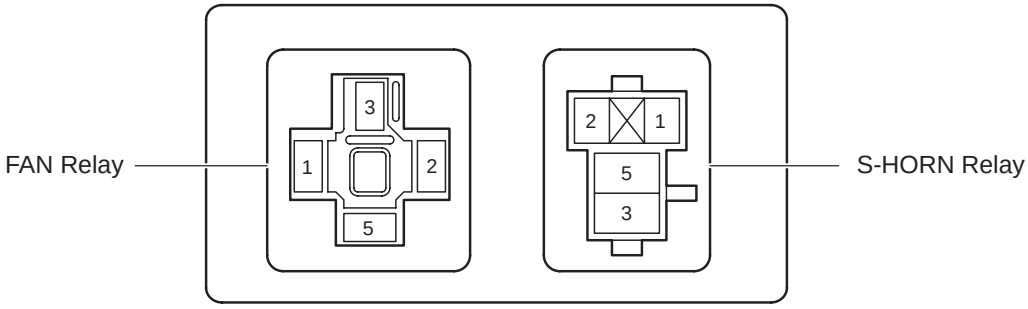
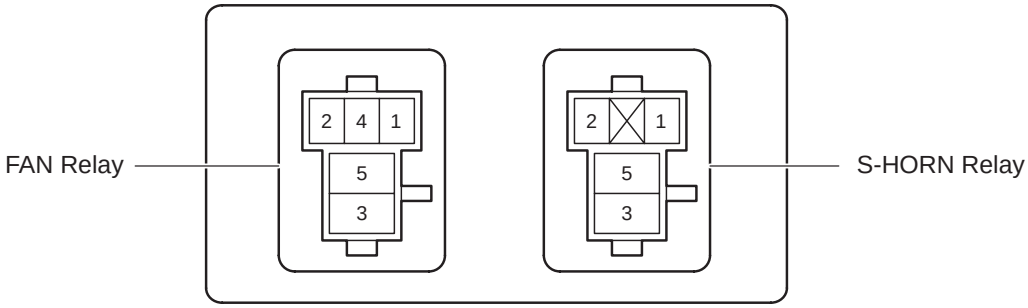
(2AR-FE)