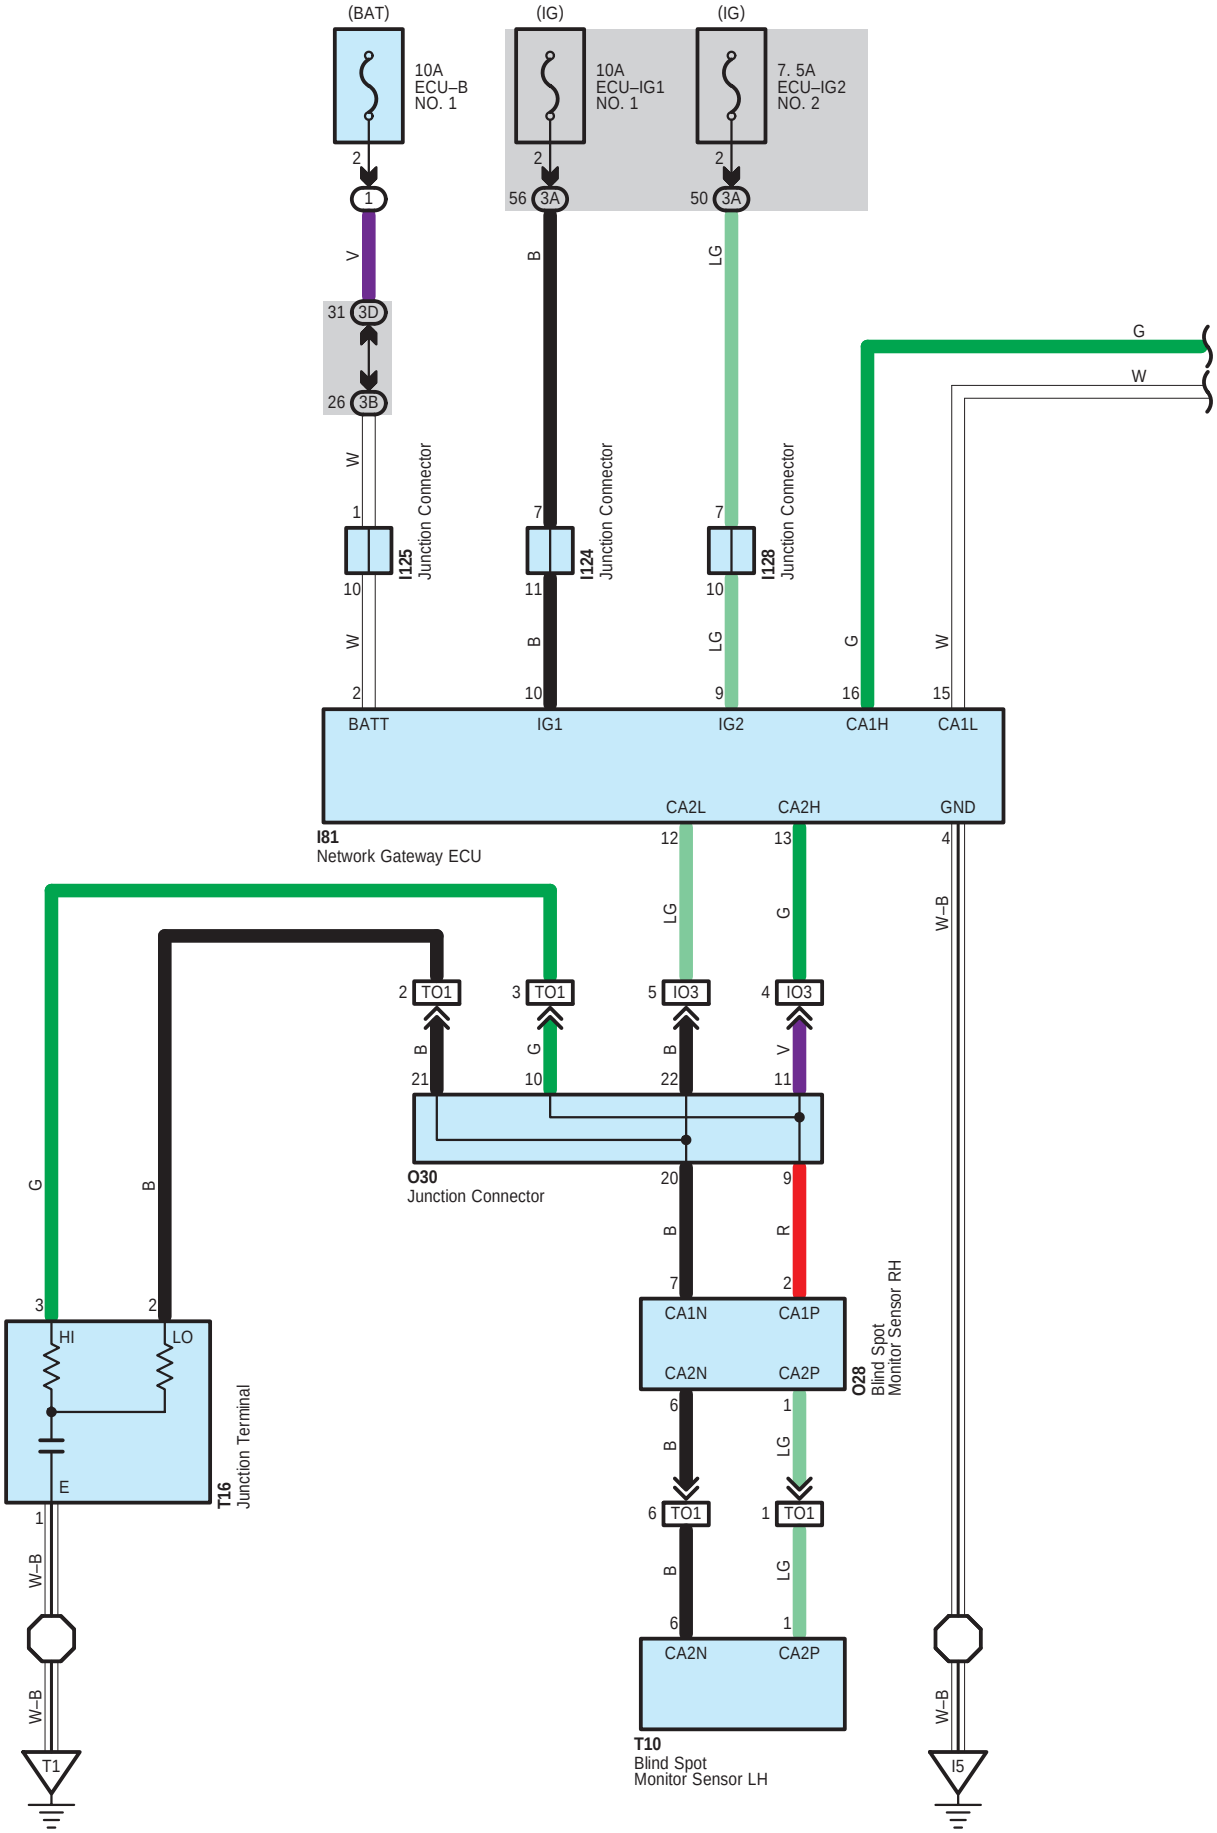
(BAT)
(IG)
(IG)
10A
ECU–B
NO. 1
10A
ECU–IG1
NO. 1
7. 5A
ECU–IG2
NO. 2
I125
Junction Connector
I124
Junction Connector
I128
Junction Connector
BATT
IG1
IG2
CA1H
CA1L
CA2L
CA2H
GND
I81
Network Gateway ECU
TO1
IO3
O30
Junction Connector
HI
LO
E
T16
Junction Terminal
CA1N
CA1P
CA2N
CA2P
O28
Blind Spot
Monitor Sensor RH
T10
Blind Spot
Monitor Sensor LH
T1
I5

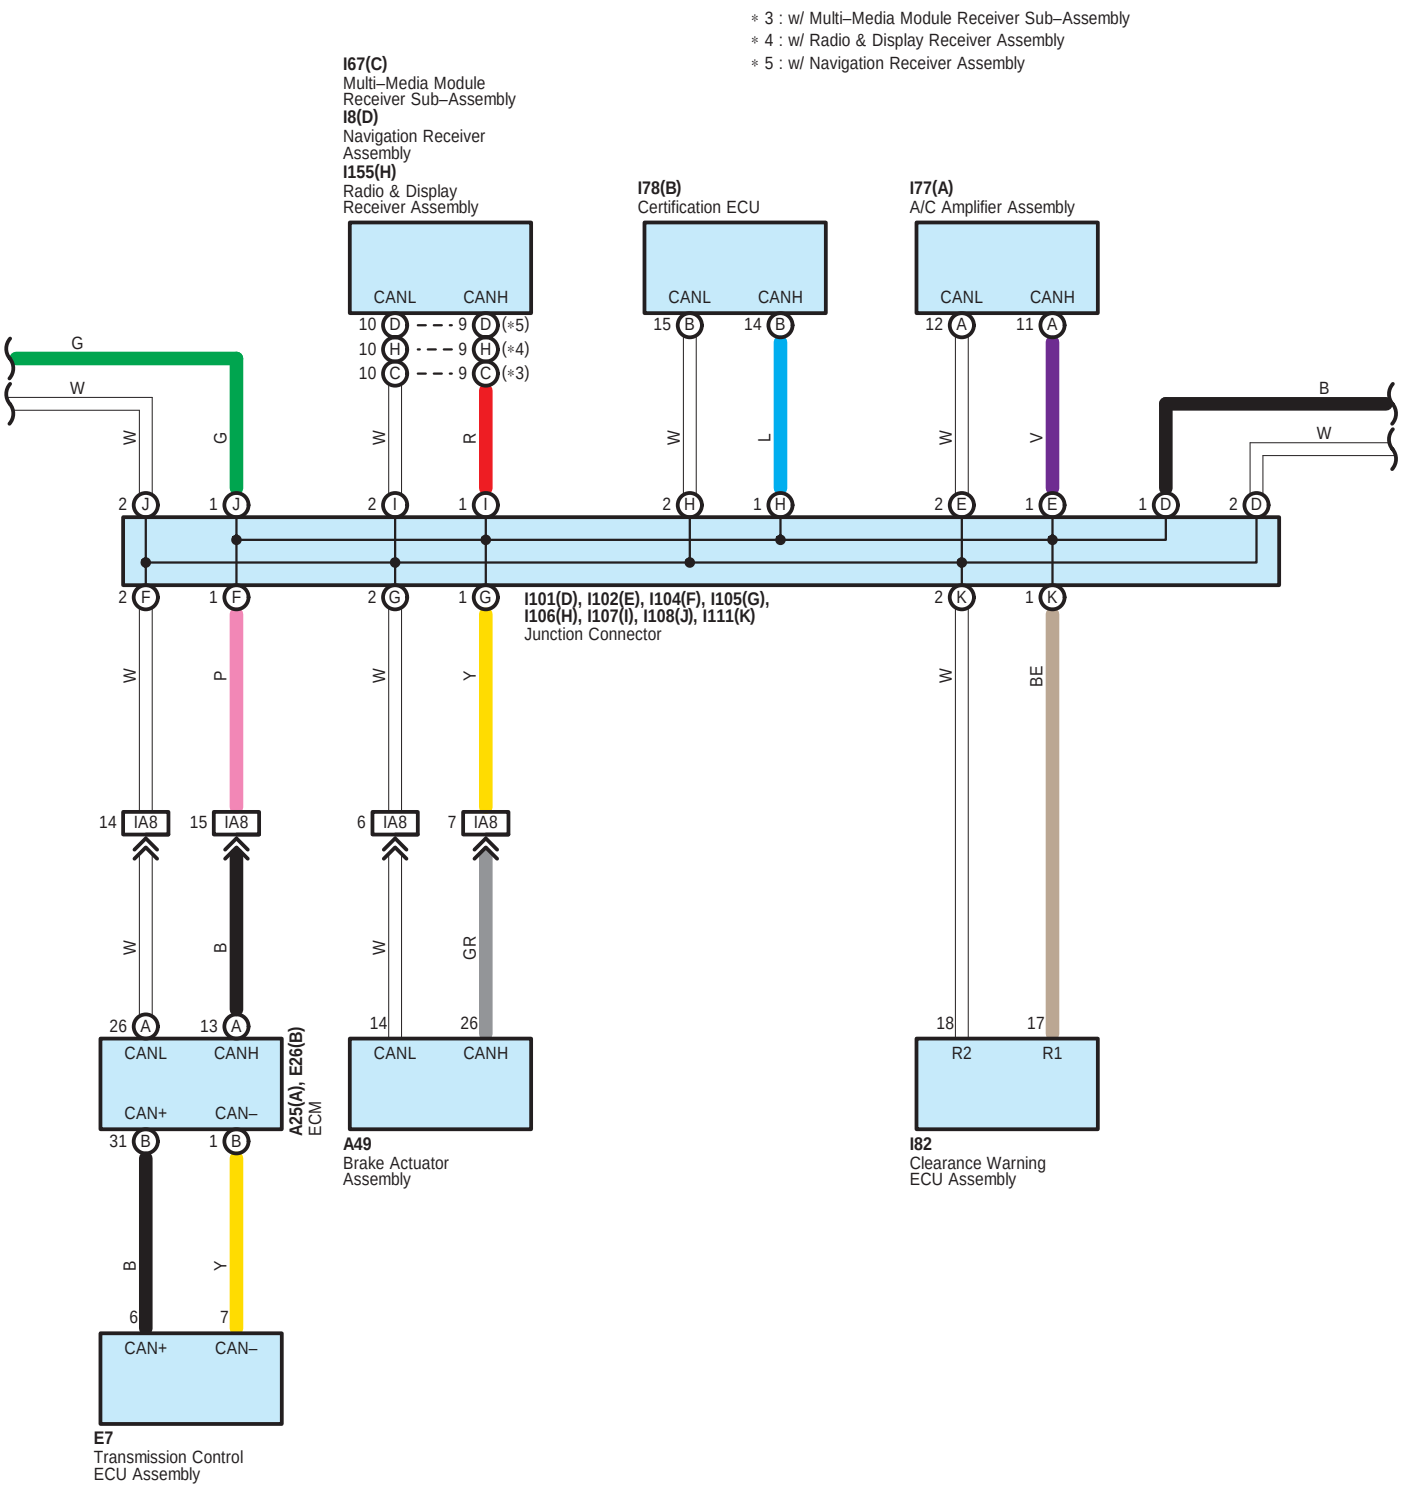
∗ 3 : w/ Multi–Media Module Receiver Sub–Assembly
∗ 4 : w/ Radio & Display Receiver Assembly
∗ 5 : w/ Navigation Receiver Assembly
I67(C)
Multi–Media Module Receiver Sub–Assembly
I8(D)
Navigation Receiver Assembly
I155(H)
Radio & Display Receiver Assembly
I78(B)
Certification ECU
I77(A)
A/C Amplifier Assembly
CANL
CANH
I101(D), I102(E), I104(F), I105(G), I106(H), I107(I), I108(J), I111(K)
Junction Connector
IA8
A25(A), E26(B)
ECM
CAN+
CAN–
A49
Brake Actuator Assembly
R2
R1
I82
Clearance Warning ECU Assembly
E7
Transmission Control ECU Assembly

∗1 : 2AR–FE
∗2 : 2GR–FE

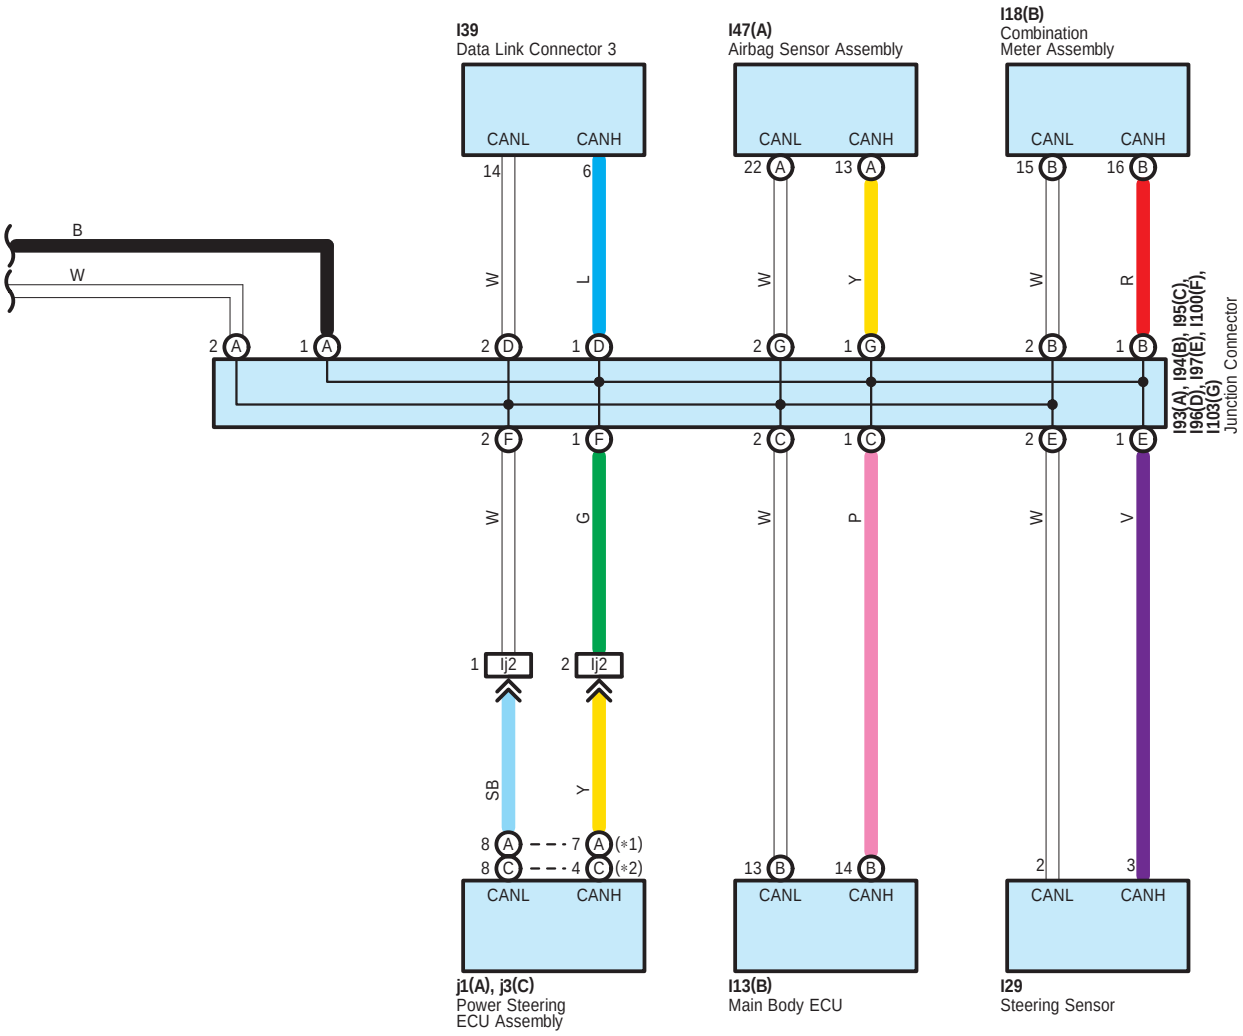

A 25
Black

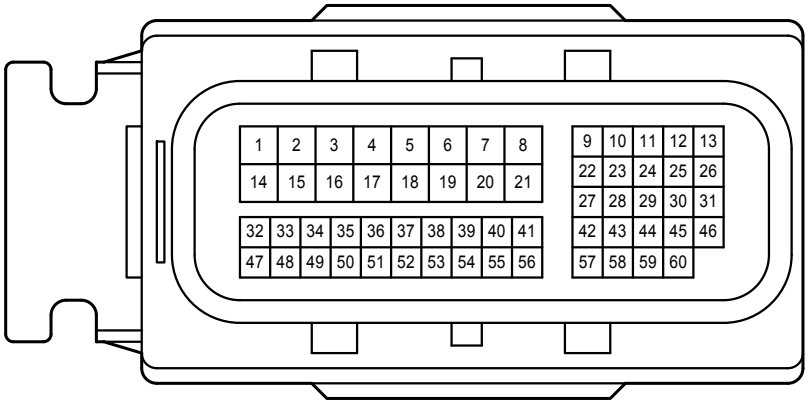

A 49
Black

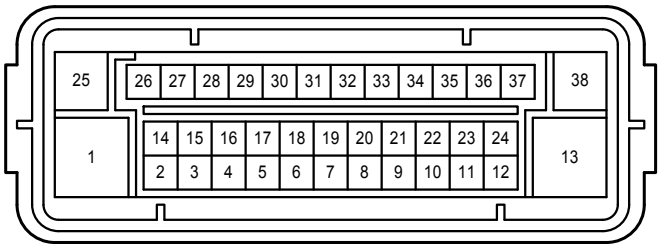

E 7
Gray

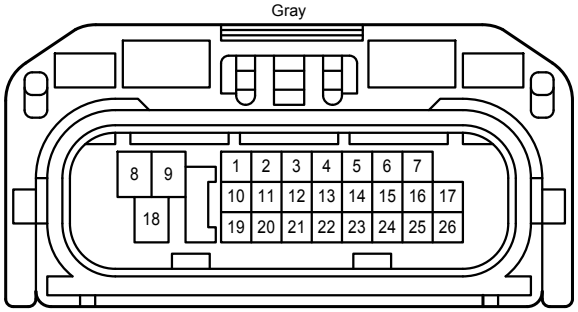

E 26
Black

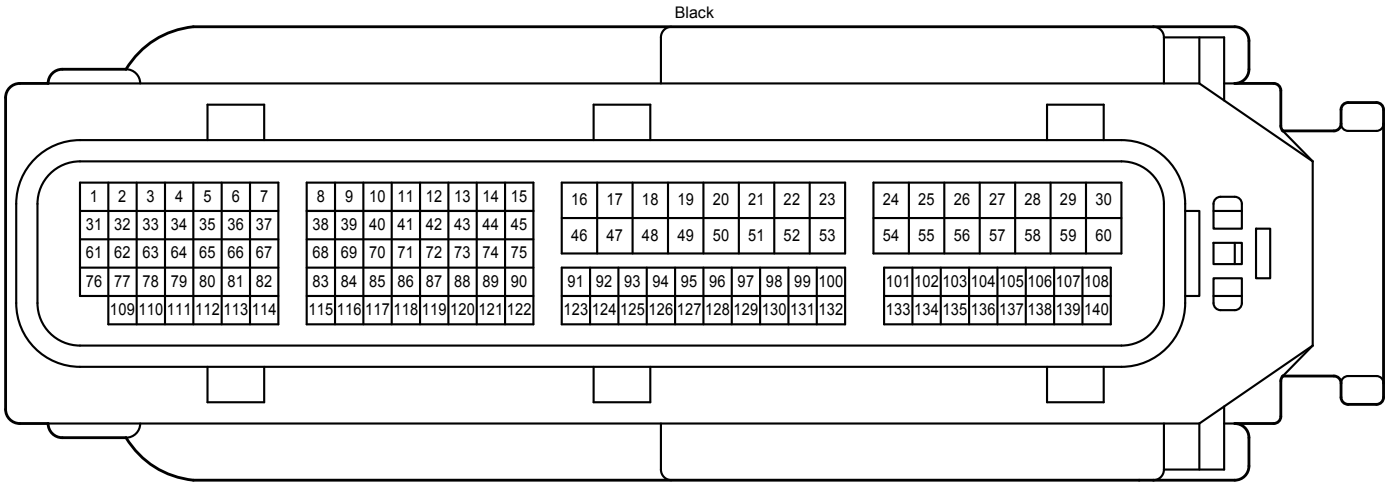

I 8
White

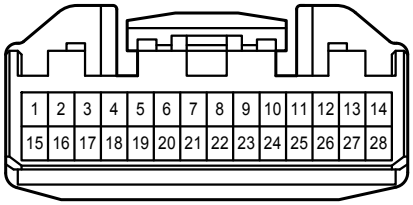

I 13
White

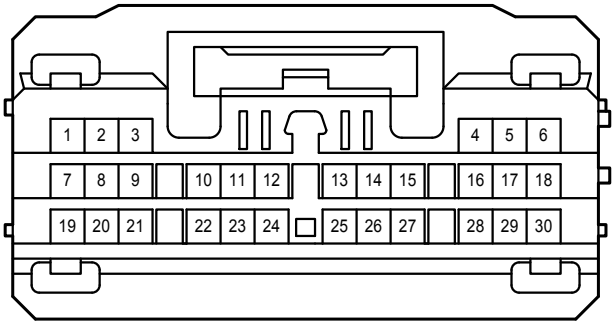

I 18
Black

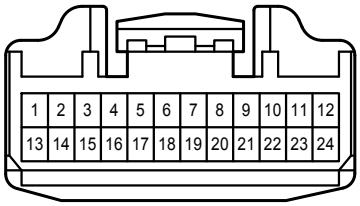

I 29
Blue

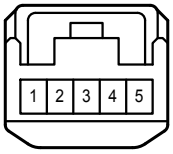

I 39
White

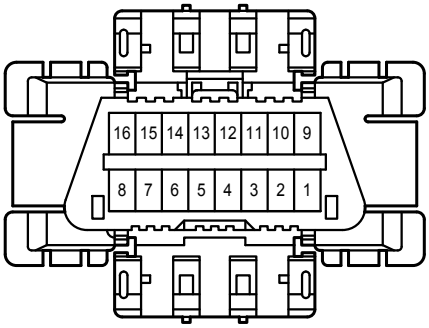

I 47
Yellow

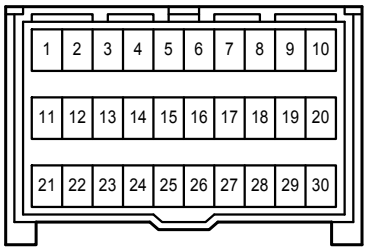

I 67
White

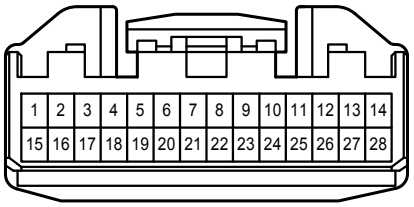

I 77
White

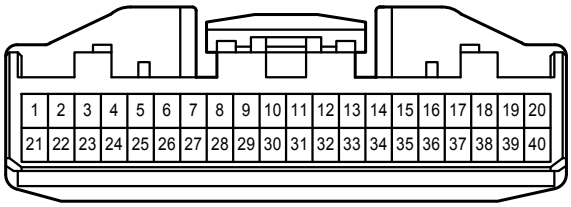

I 78
White

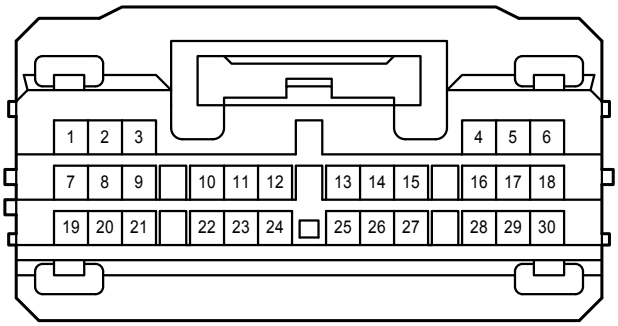

I 81
White

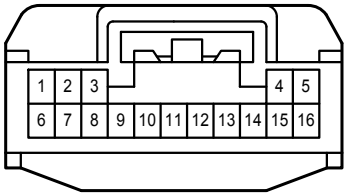

I 82
Black

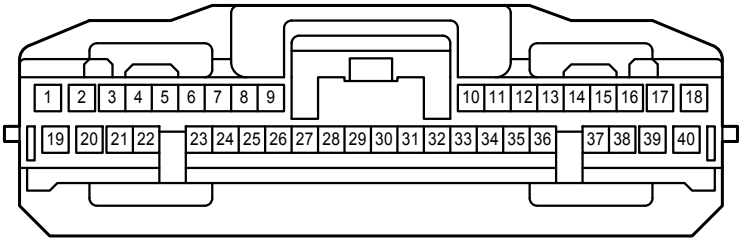

I 93
White



I 94
White



I 95
White



I 96
White



I 97
White



I100
White



I101
White



I102
White



I103
White



I104
White



I105
White



I106
White



I107
White



I108
White



I111
White



I124
White

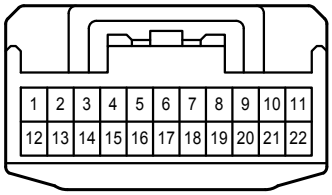

I125
Gray

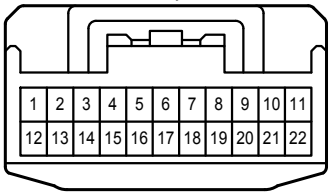

I128
White

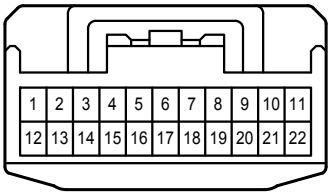

I155
White

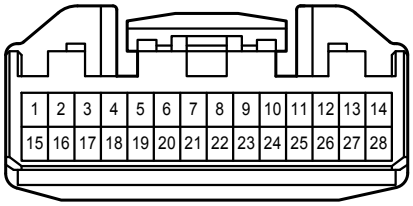

O 28
Black

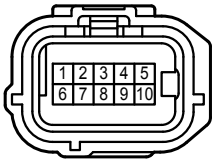

O 30
Black

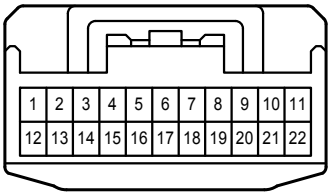

T 10
Black

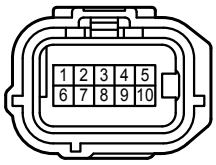

T 16
White

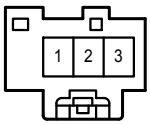

j 1
Black

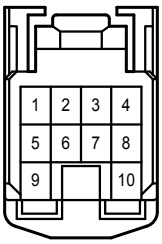

j 3
White

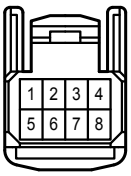

3A
White

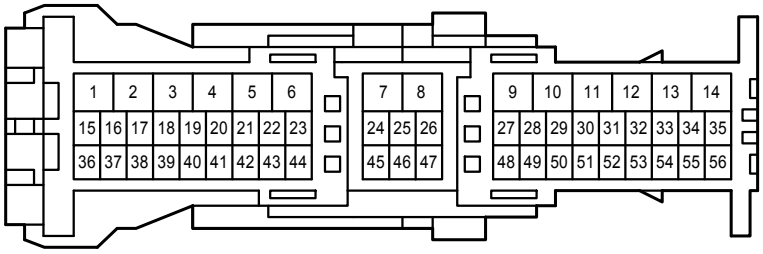

3B
White

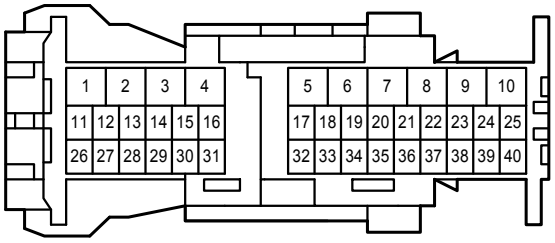

3D
White

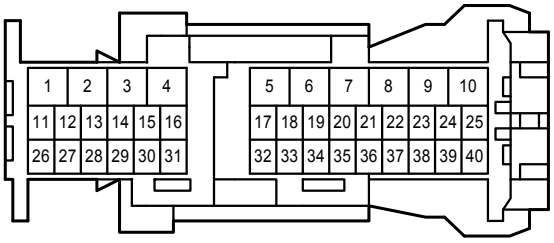

IA8
Gray

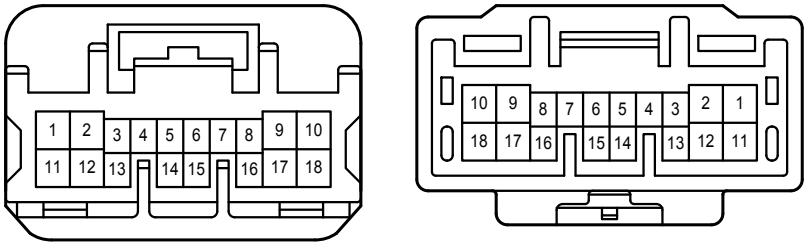

IO3
Gray

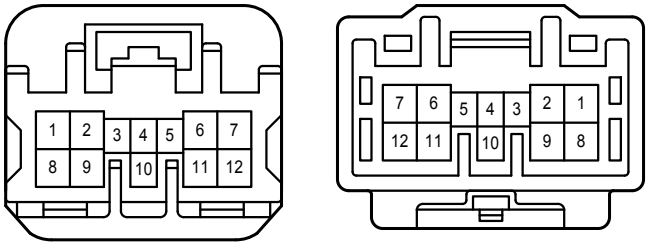

Ij2
White

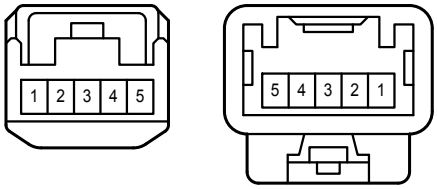
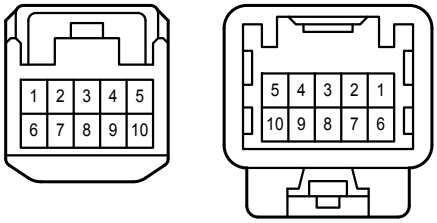
TO1
White