4 CAMRY Hybrid Vehicle

(Cont. next page)

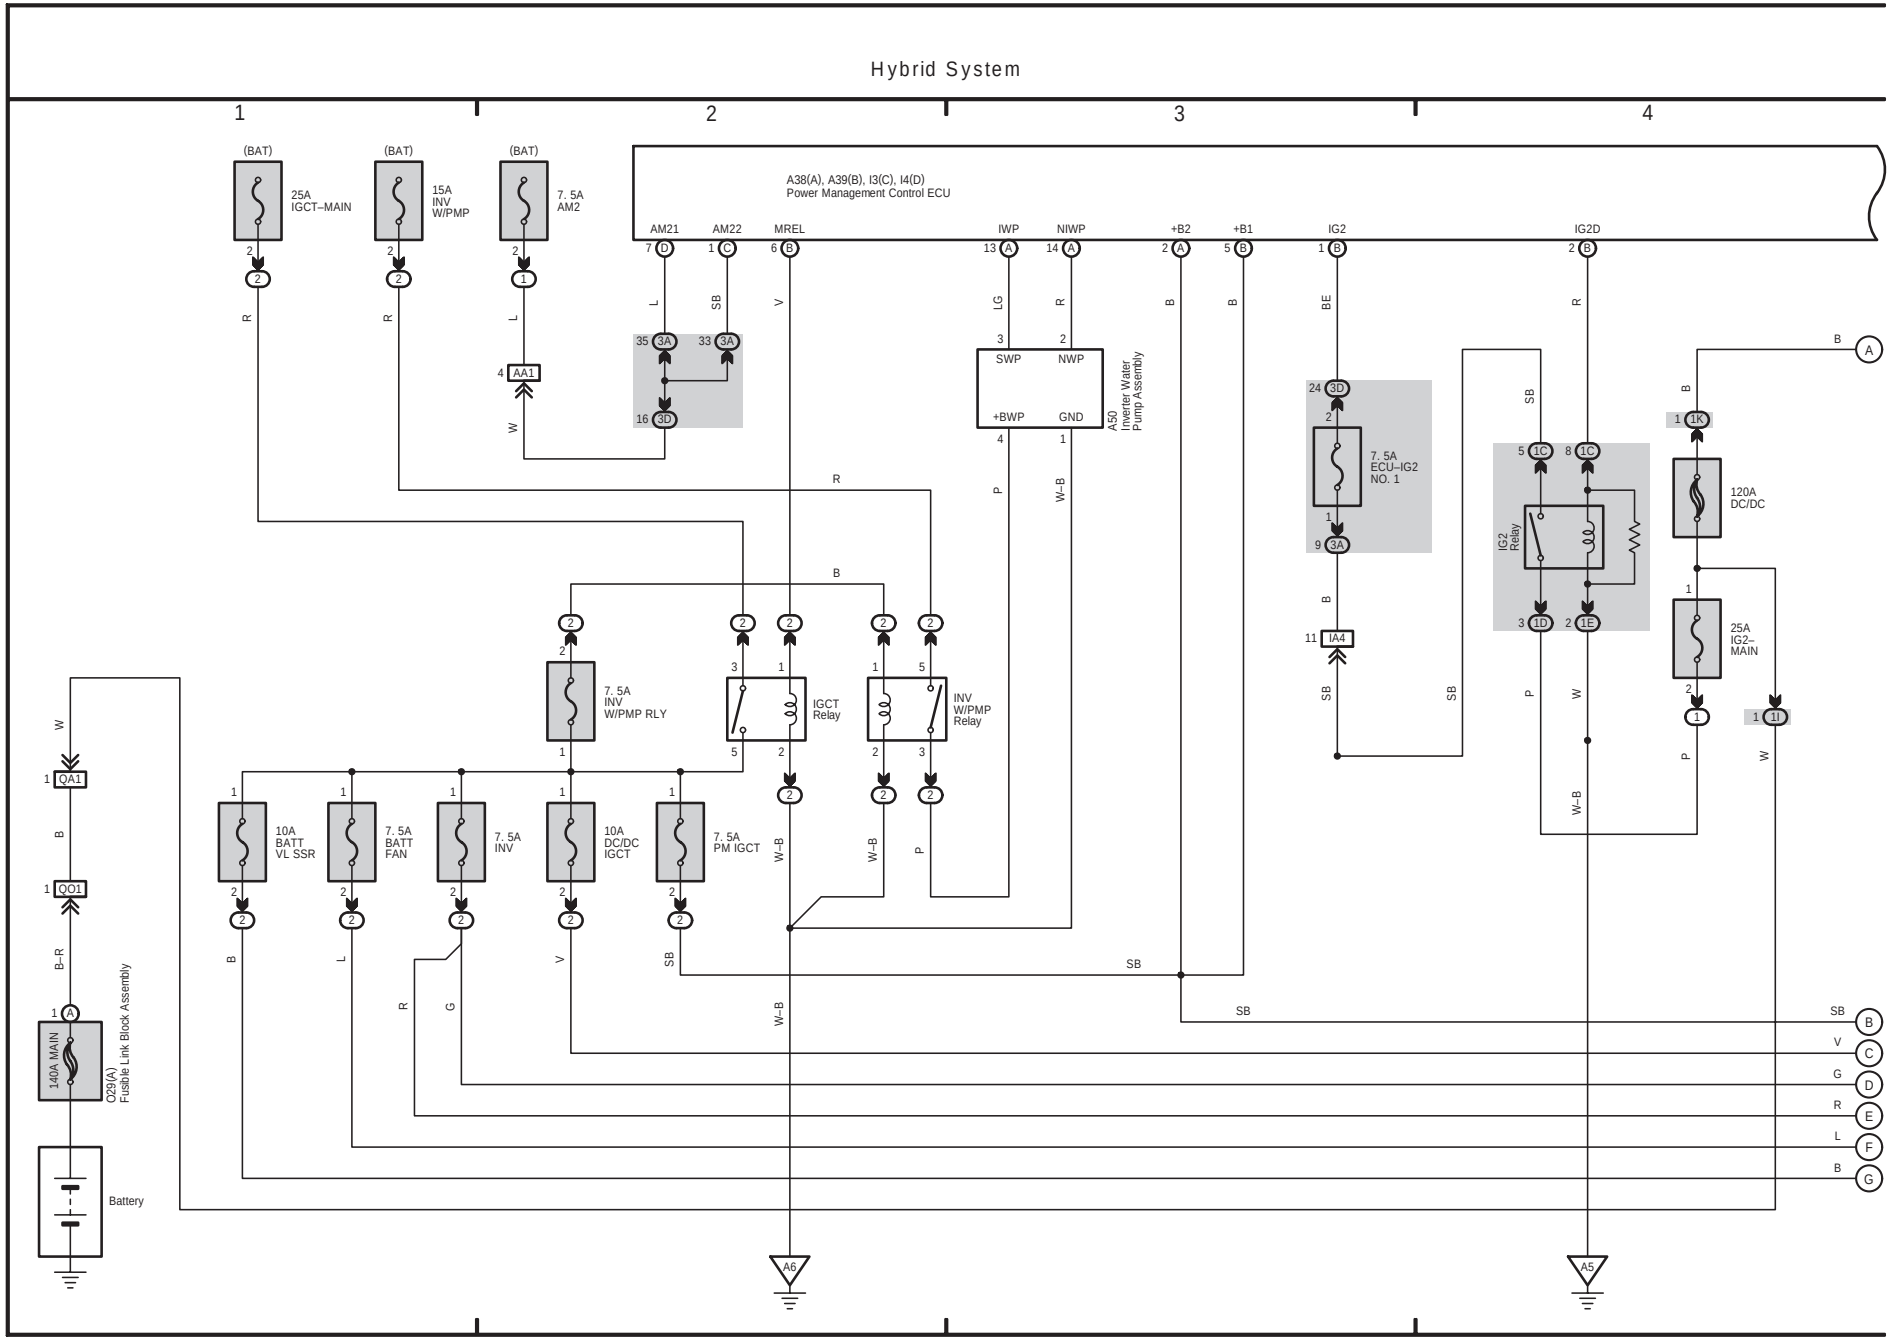

(Cont. next page)

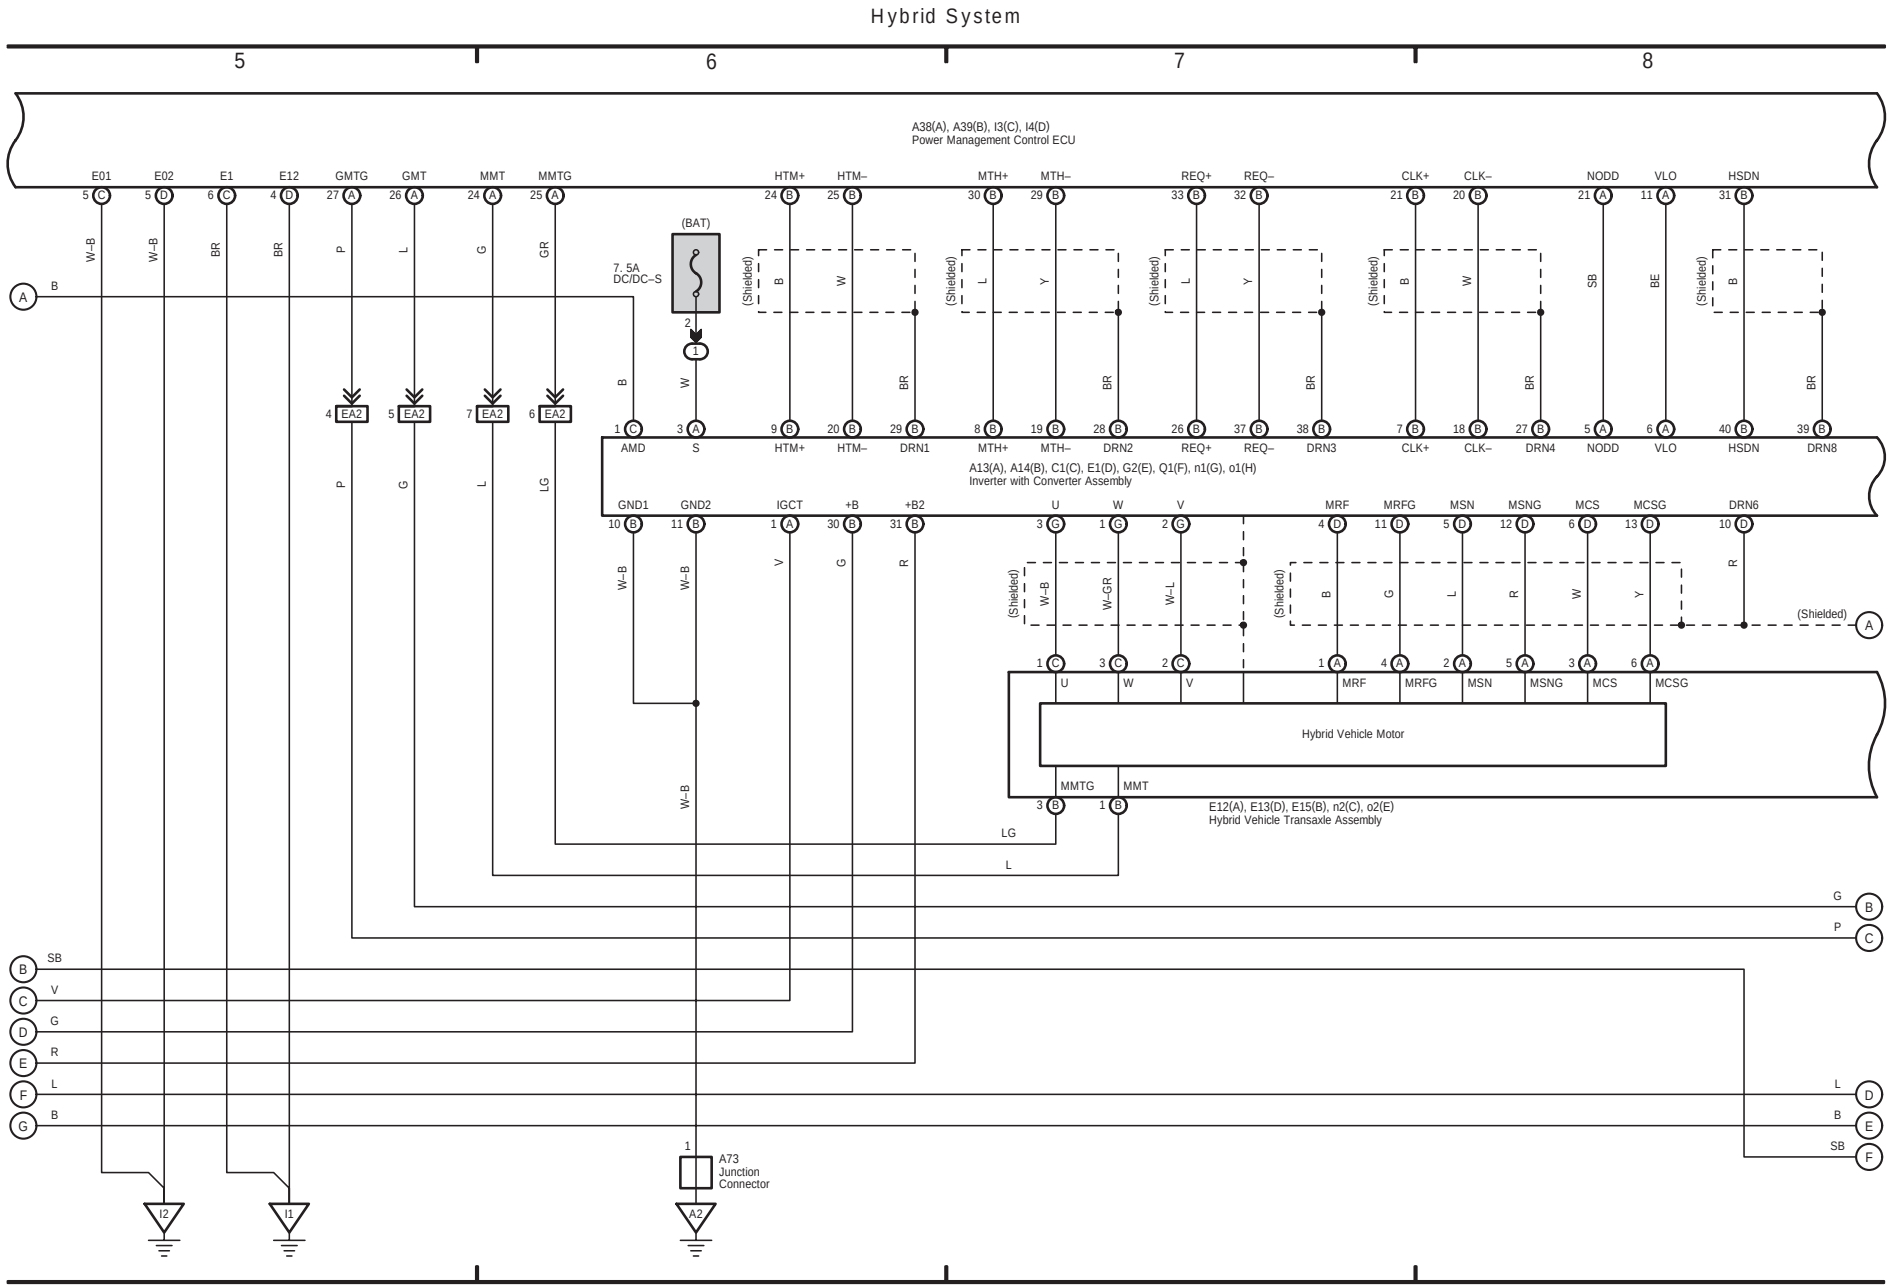

4 CAMRY Hybrid Vehicle (Cont' d)

(Cont. next page)

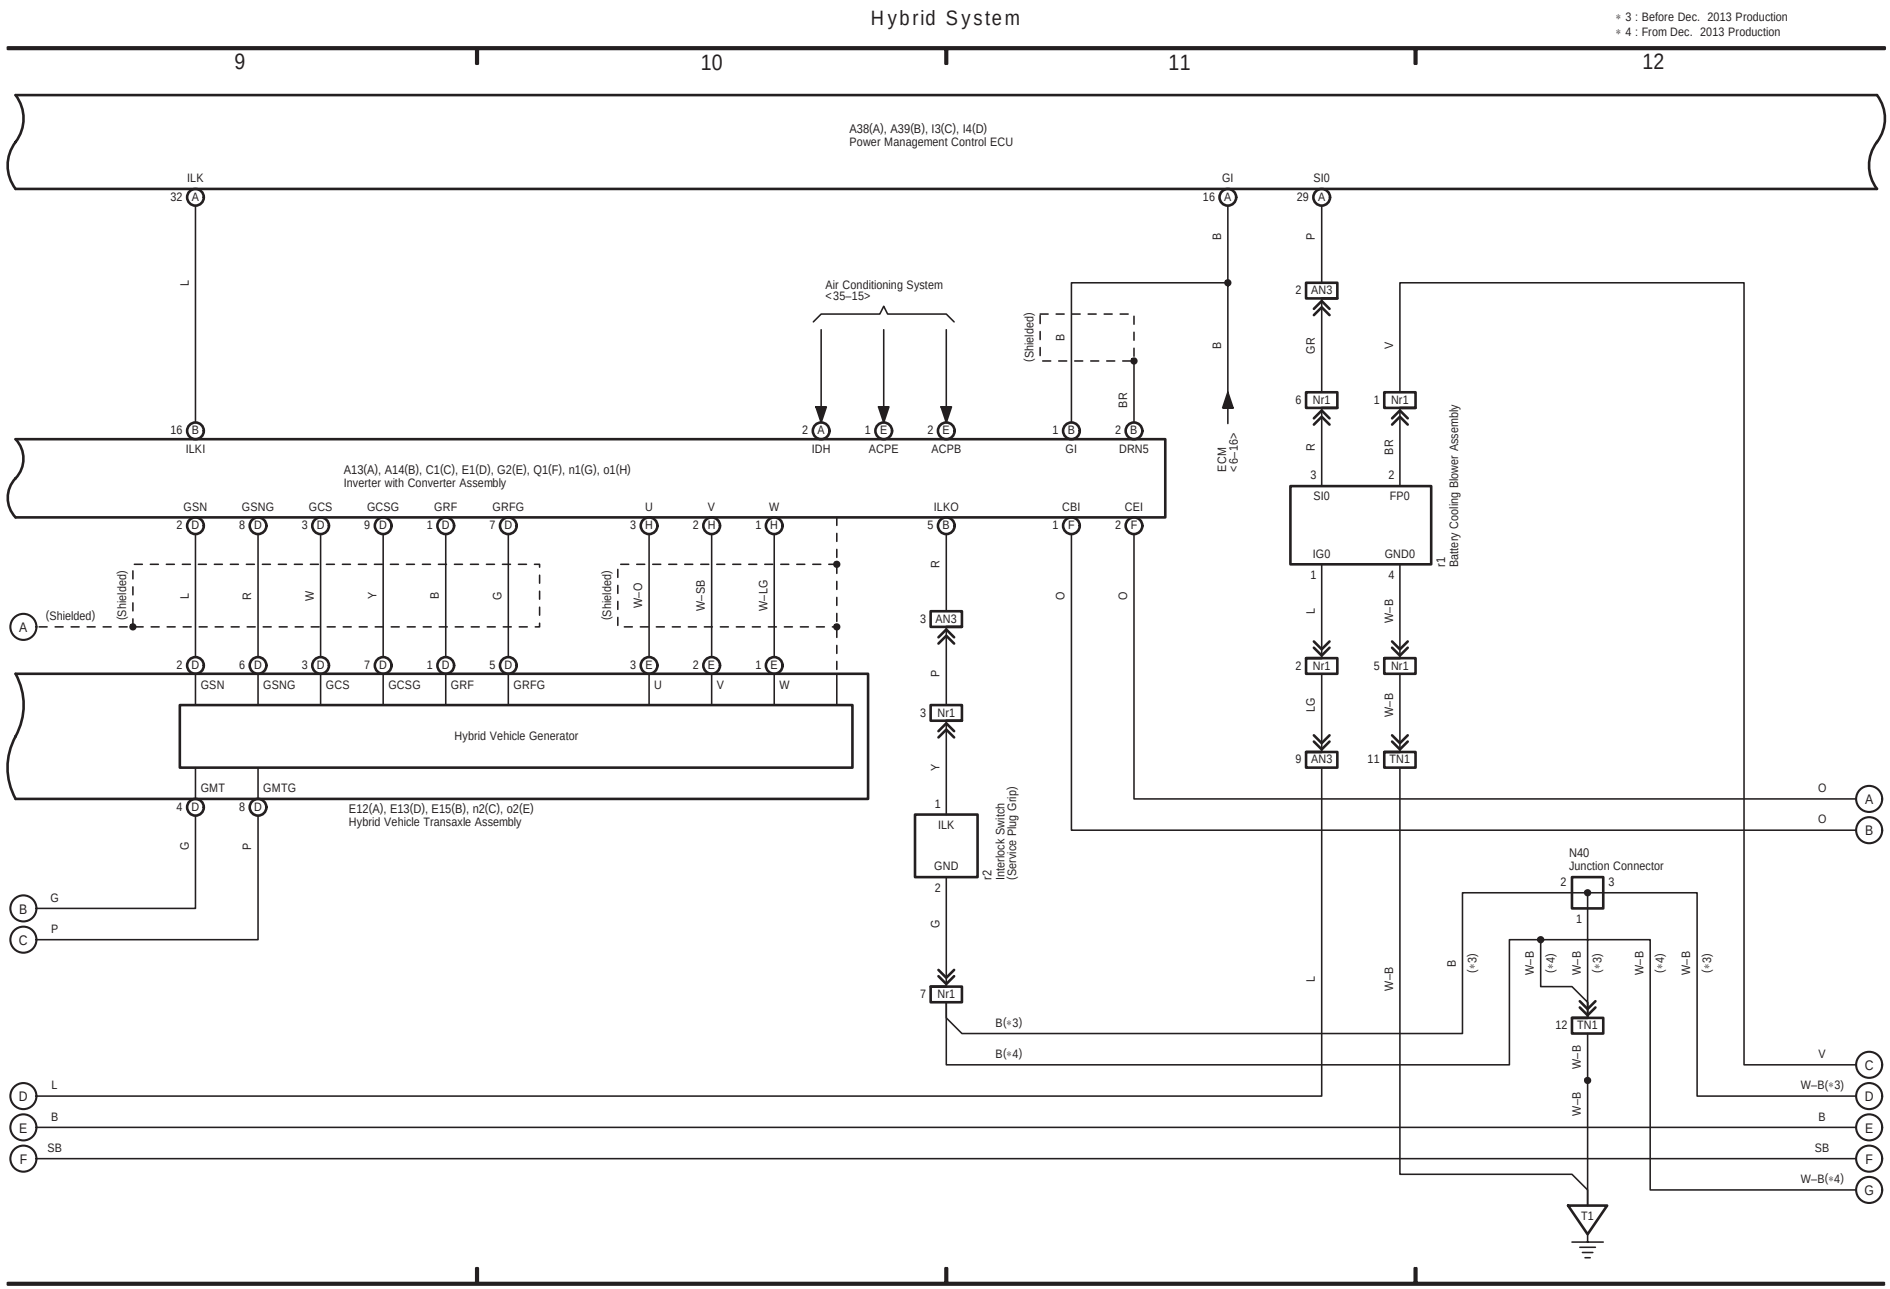

(Cont. next page)

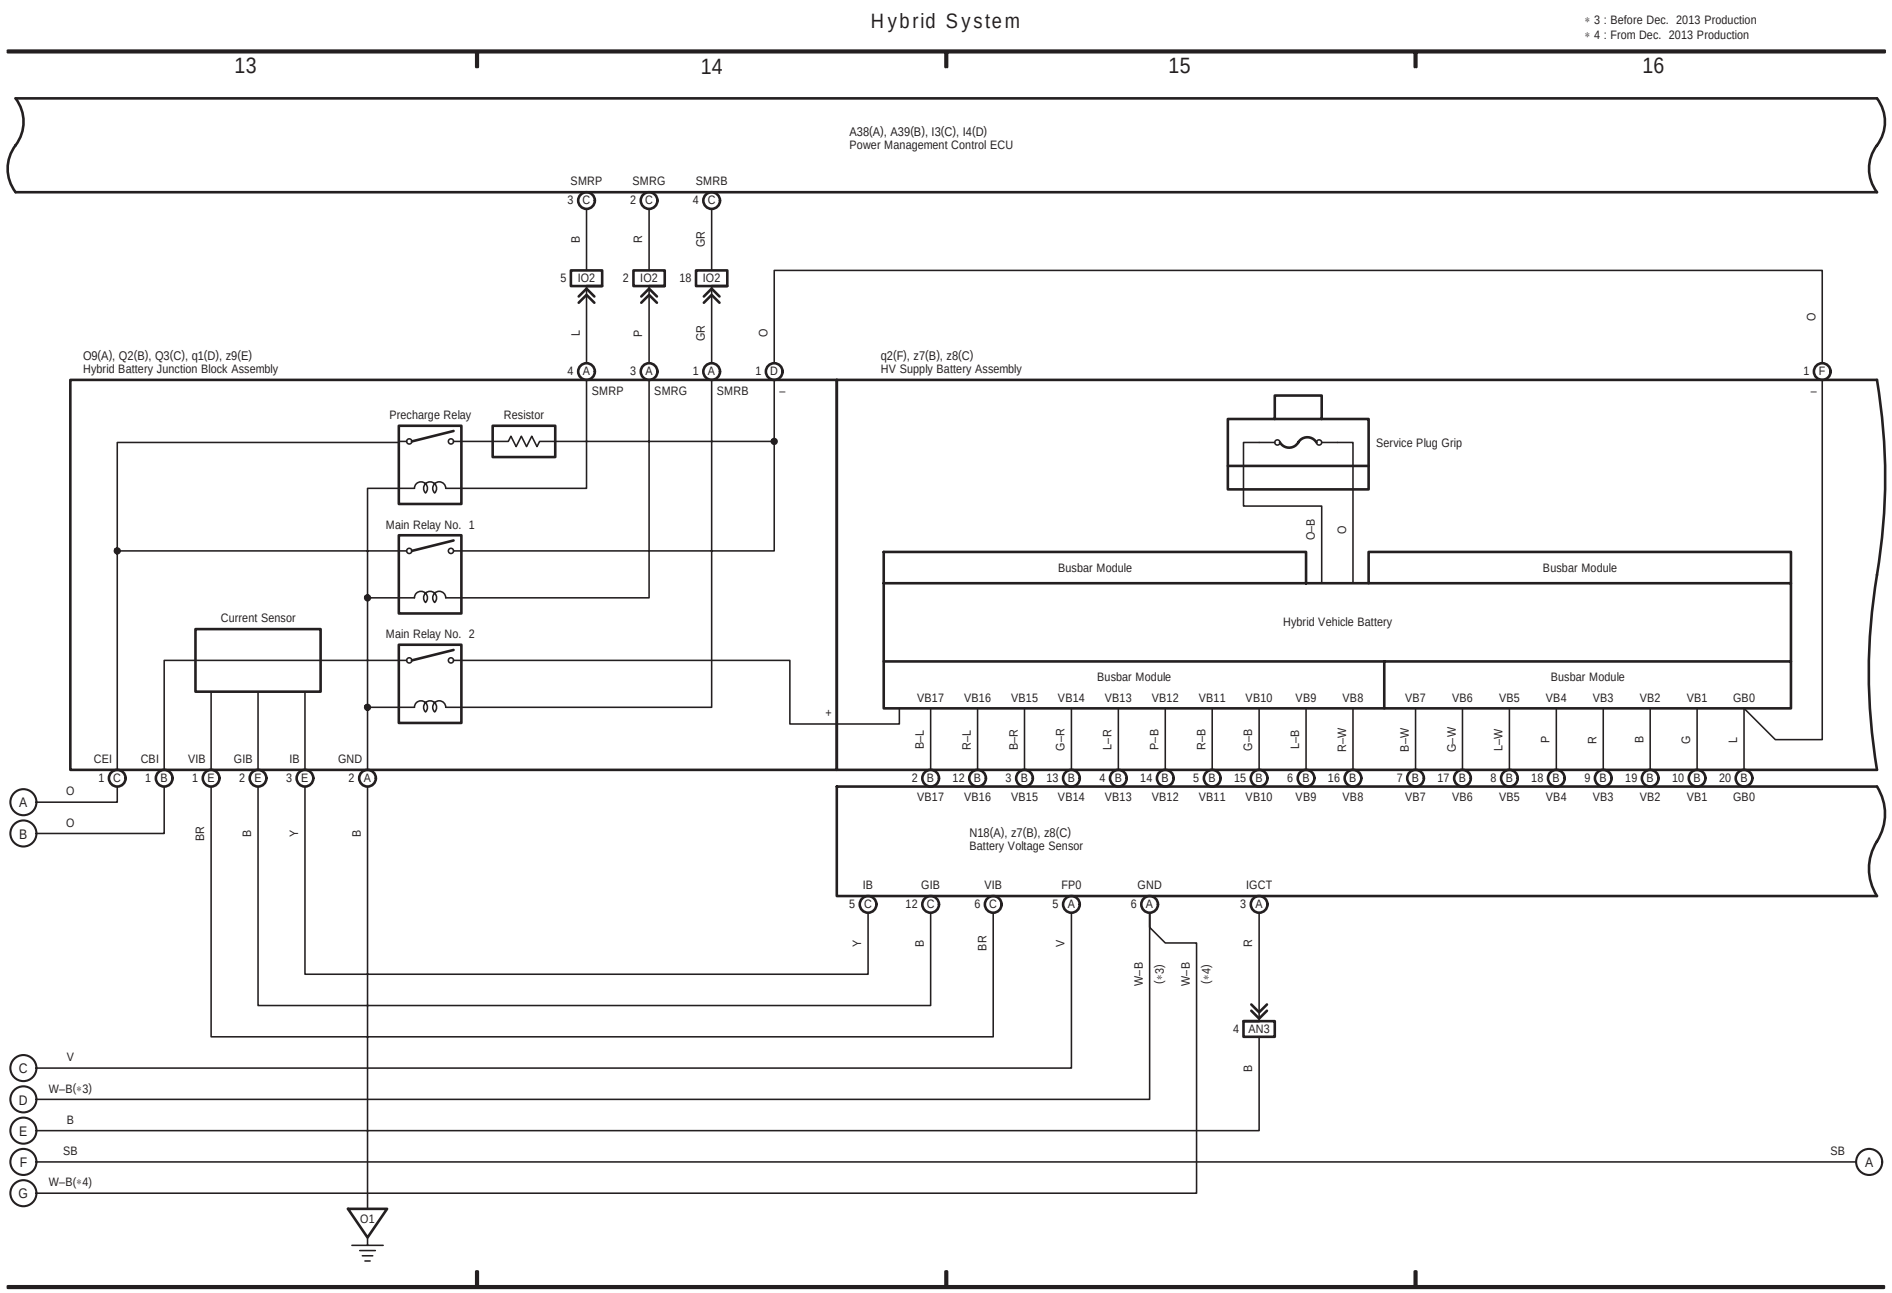

4 CAMRY Hybrid Vehicle (Cont' d)

(Cont. next page)

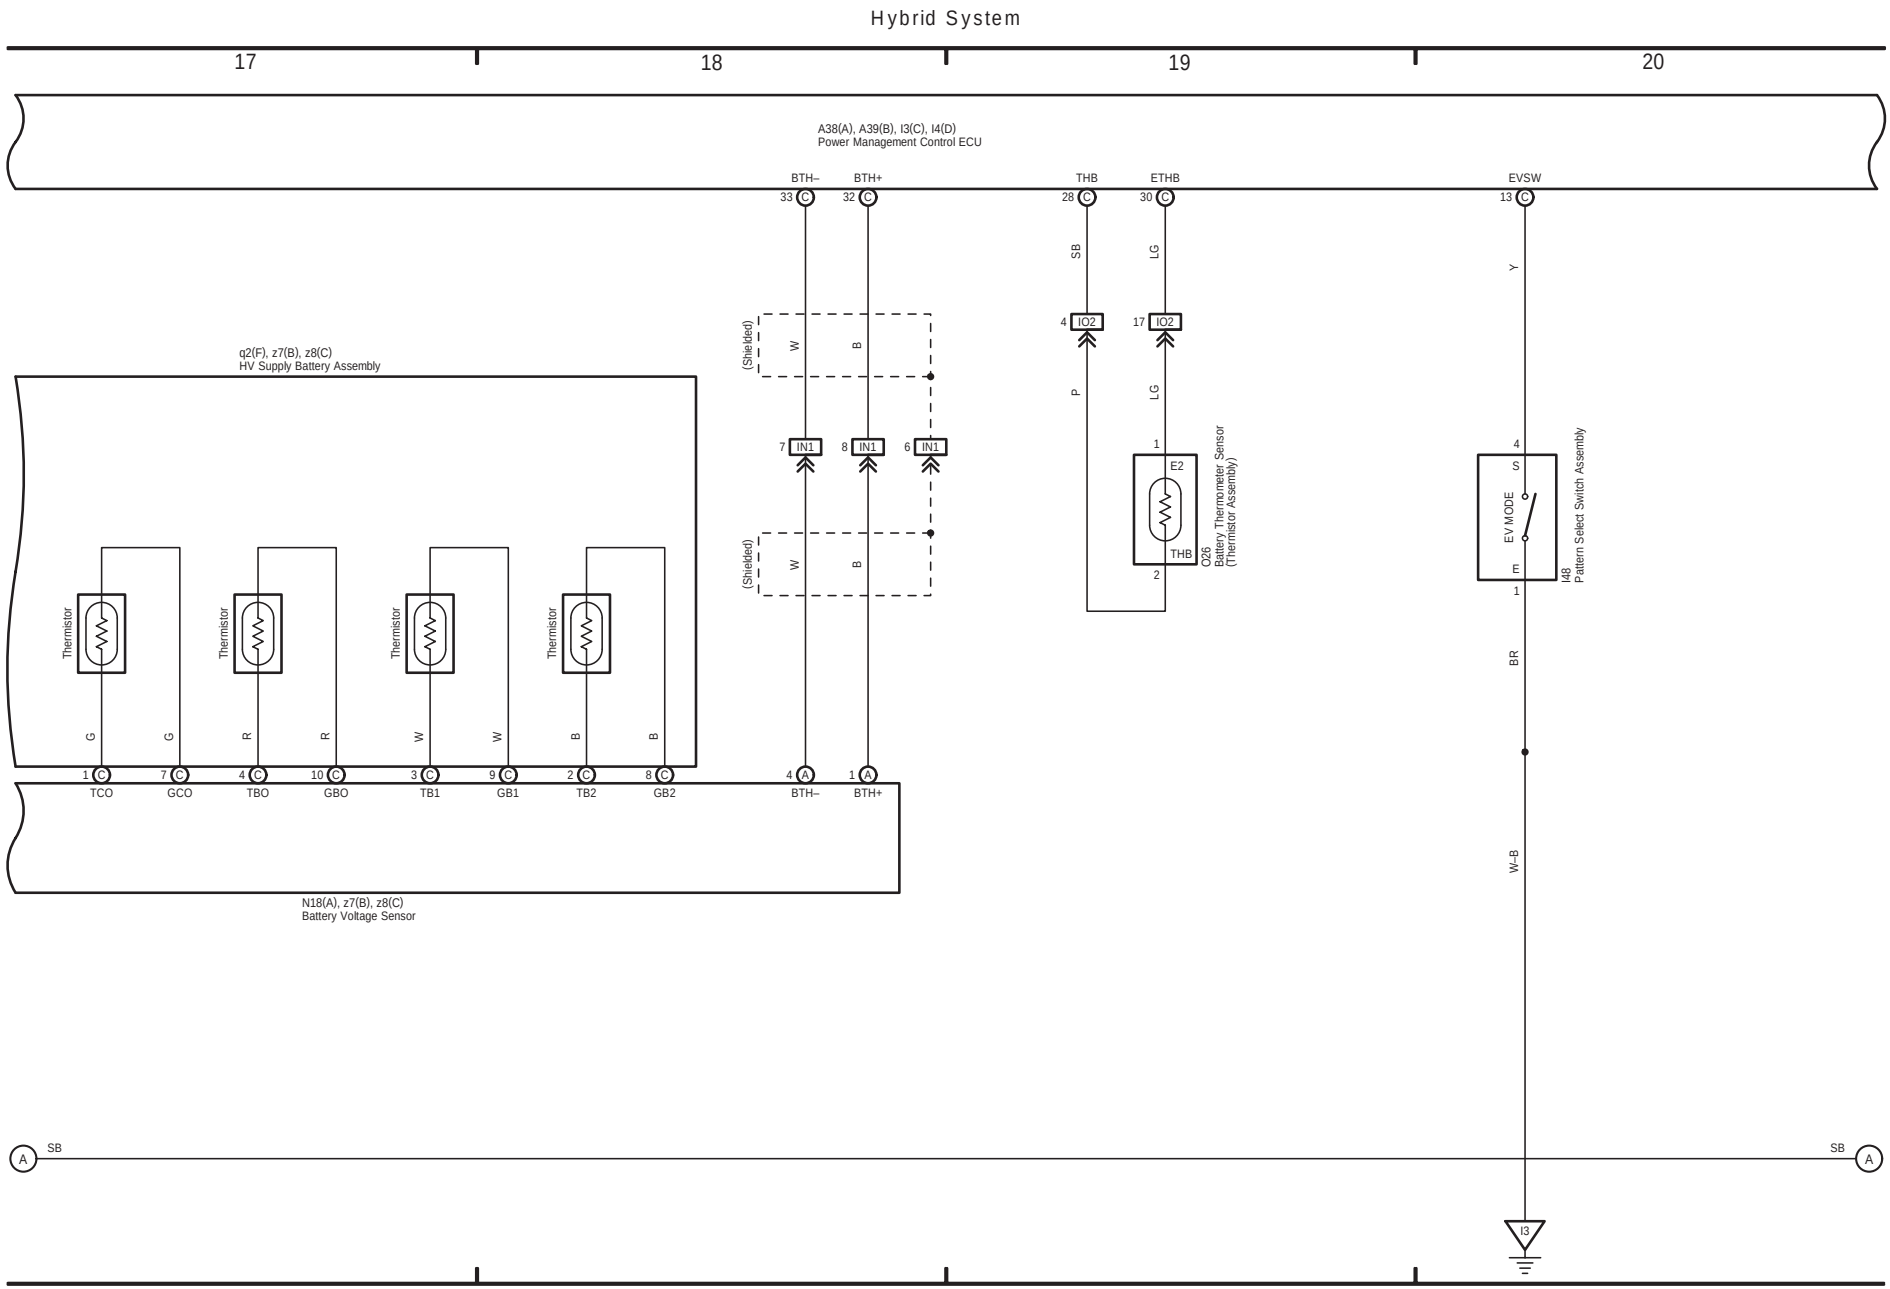

(Cont. next page)

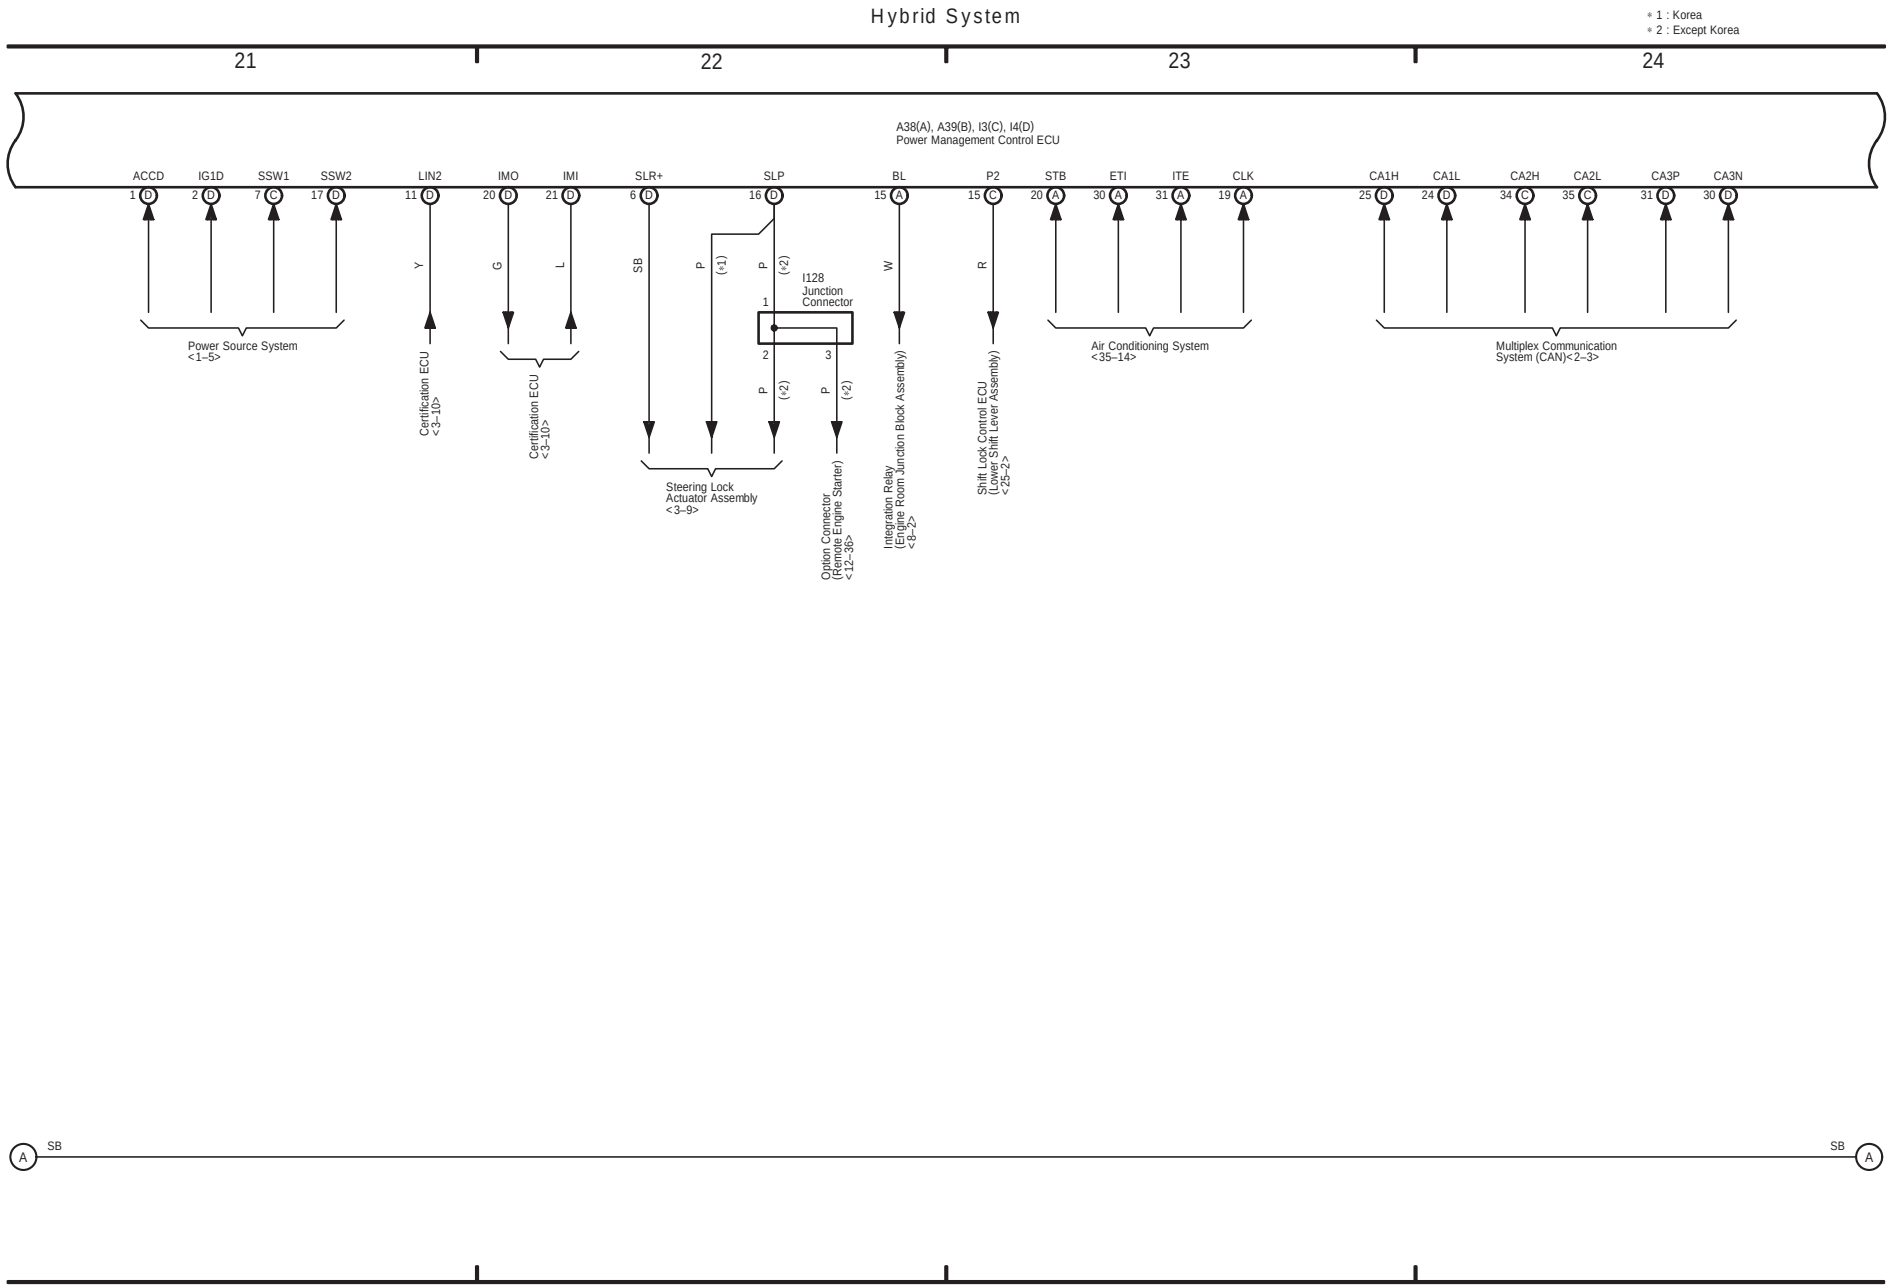

4 CAMRY Hybrid Vehicle (Cont' d)

(Cont. next page)

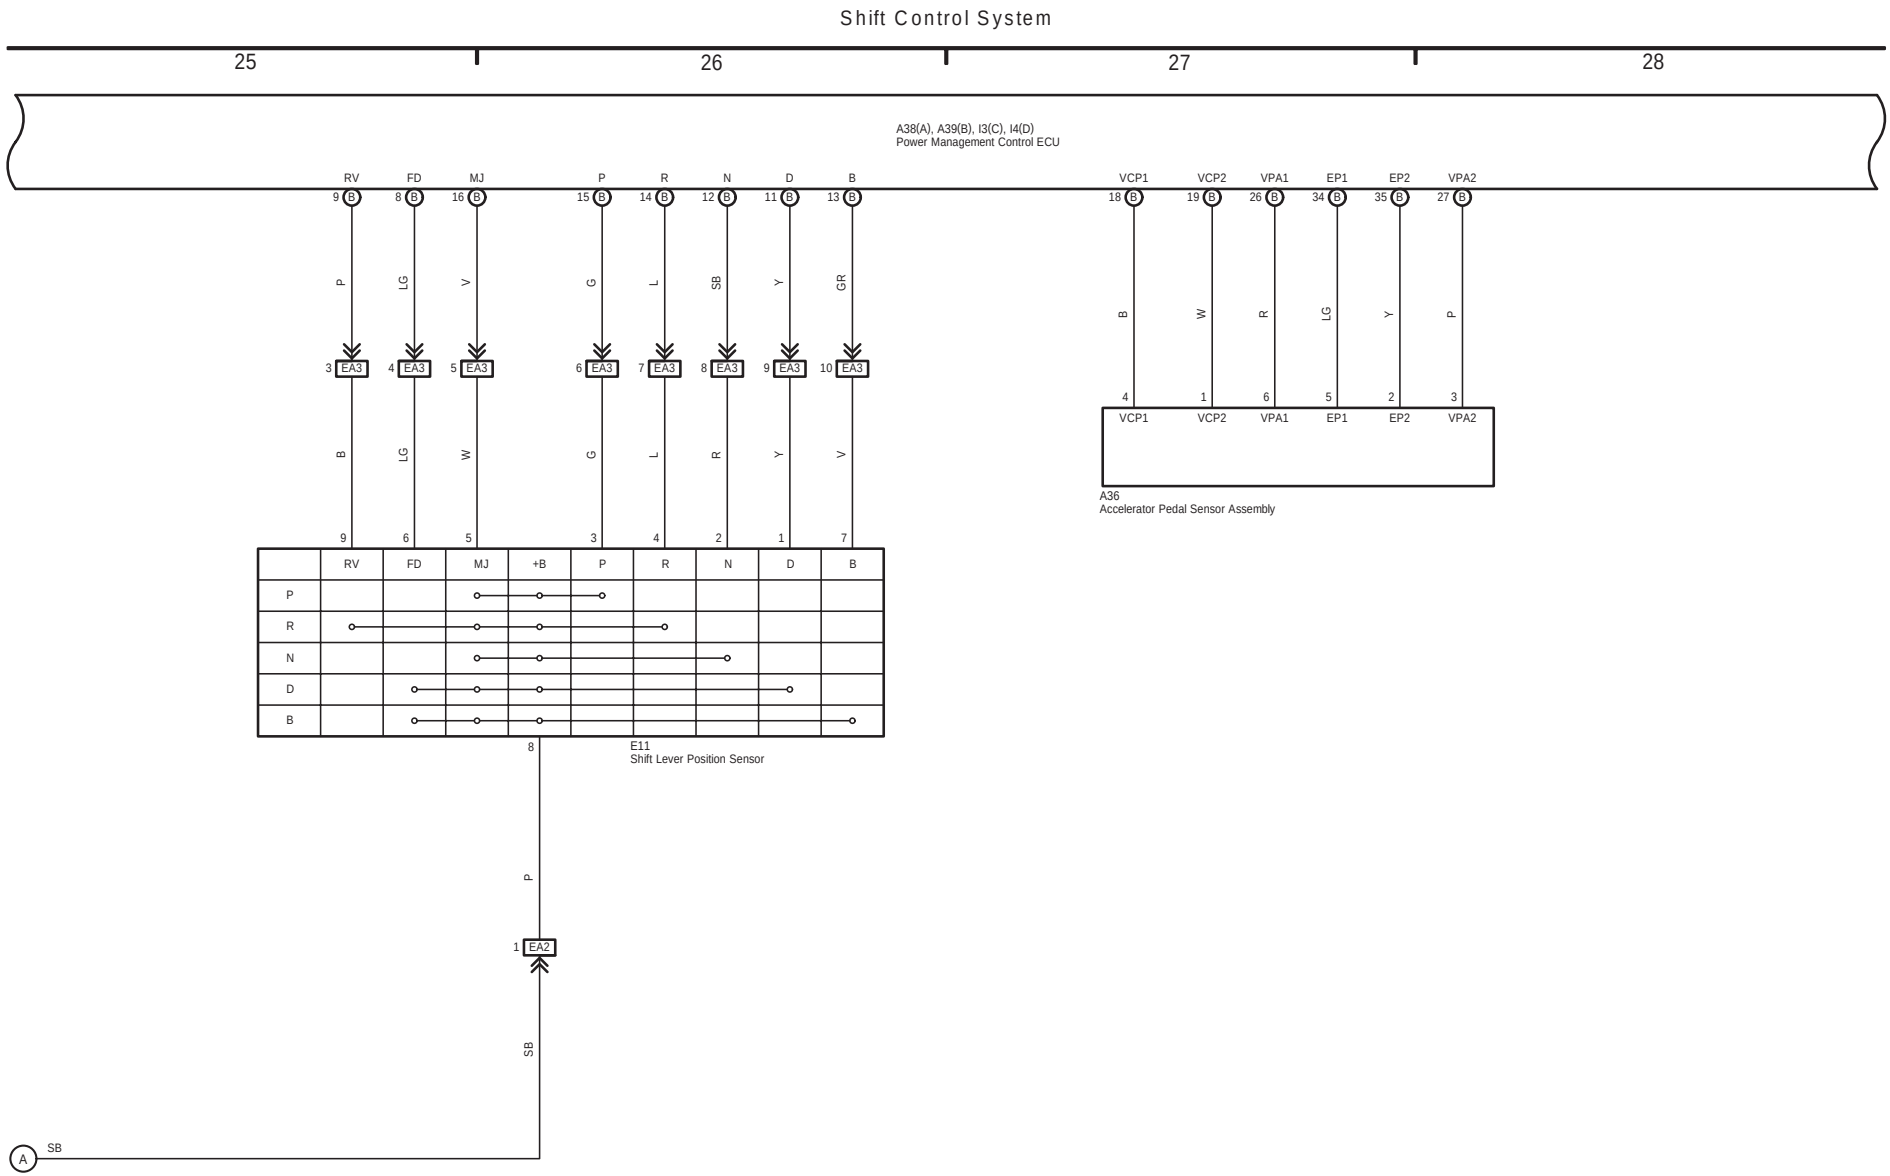

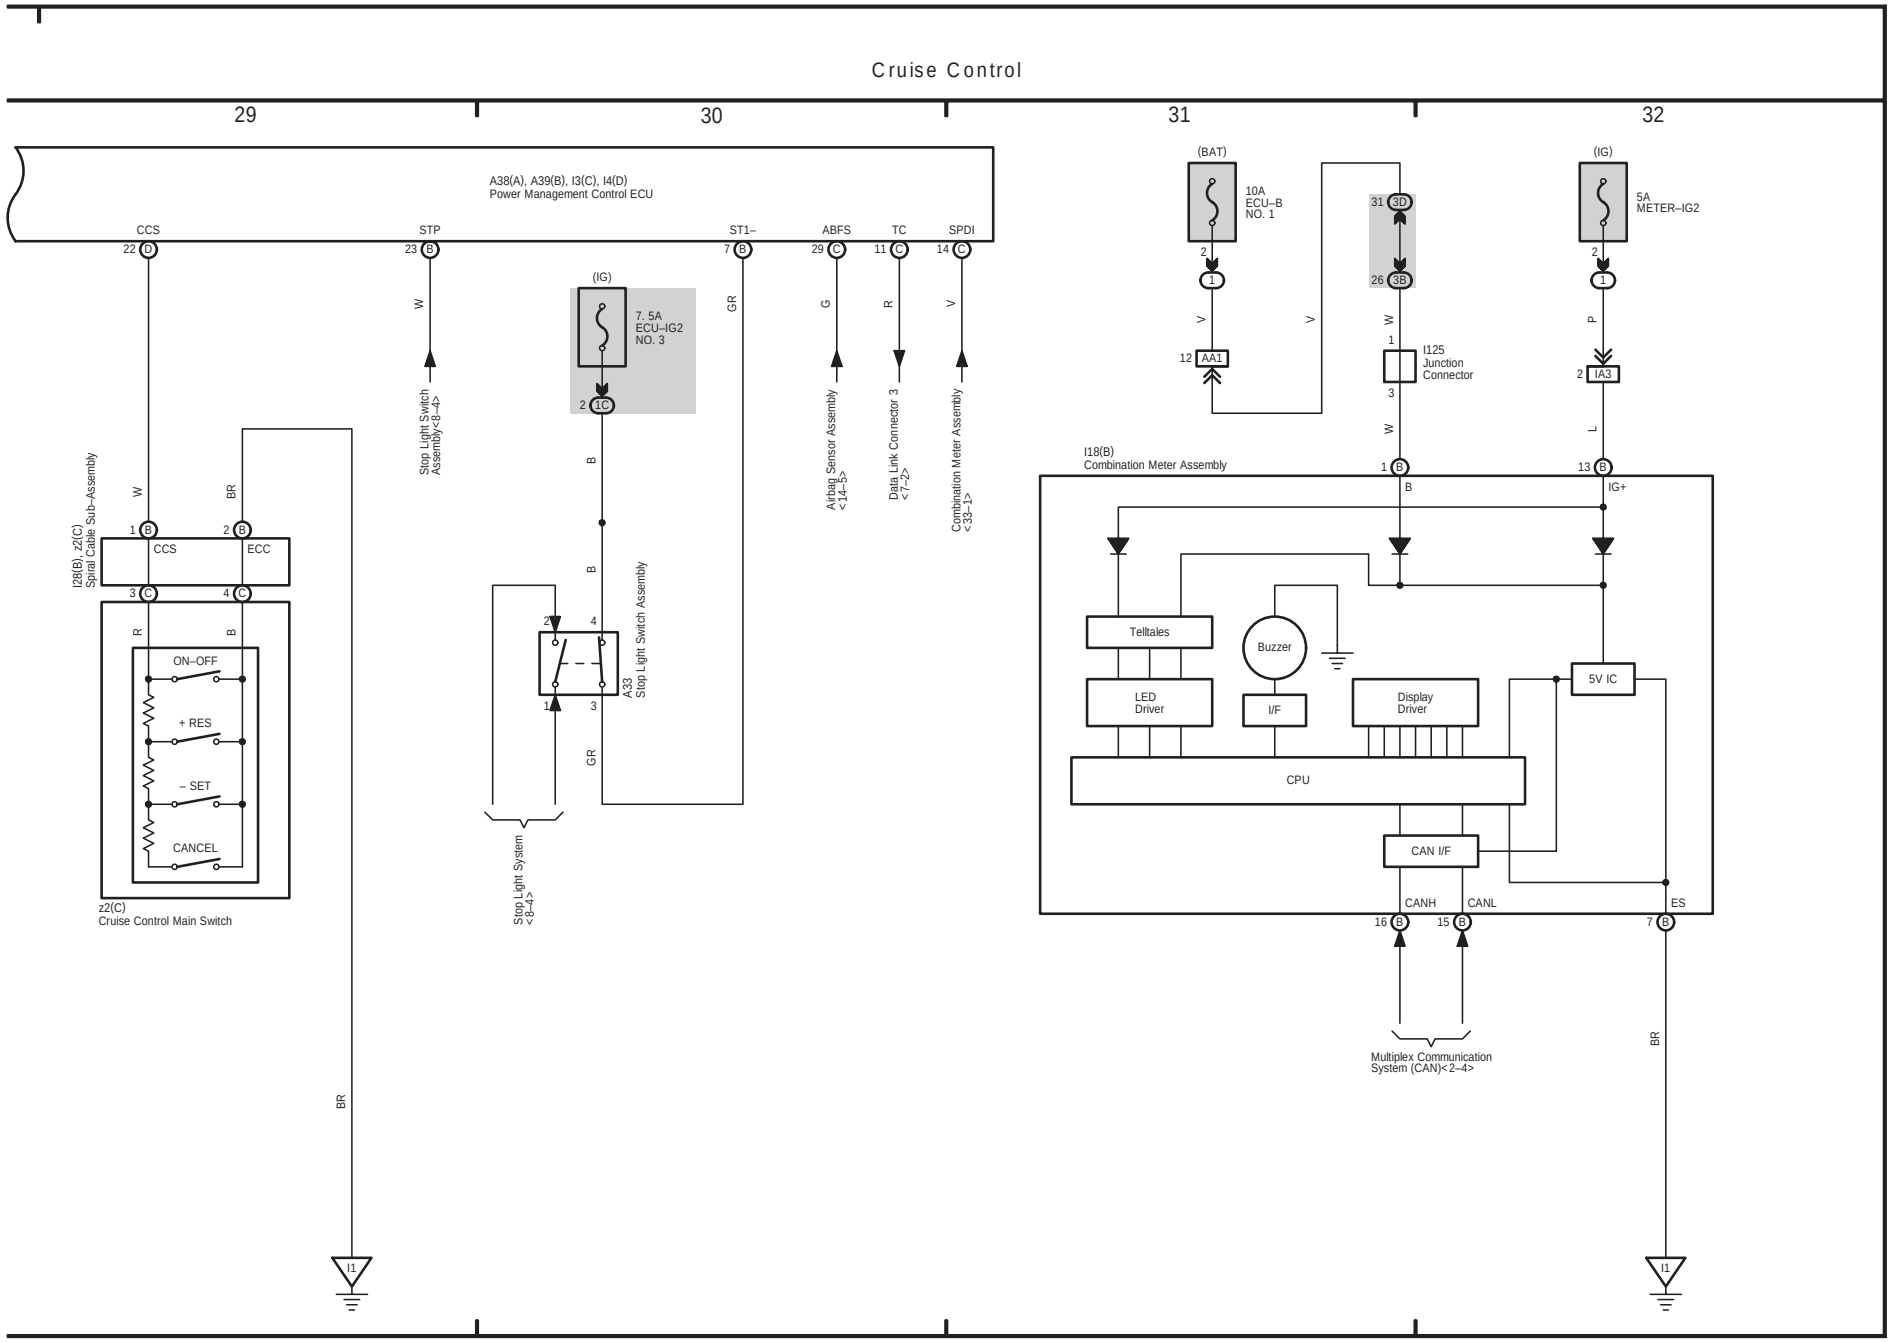
Cruise Control
29
30
31
32
A38(A), A39(B), I3(C), I4(D)
Power Management Control ECU
CCS
STP
ST1–
ABFS
TC
SPDI
(IG)
7. 5A
ECU–IG2
NO. 3
Stop Light Switch Assembly<8–4>
Airbag Sensor Assembly <14–5>
Data Link Connector 3 <7–2>
Combination Meter Assembly <33–1>
I28(B), z2(C)
Spiral Cable Sub–Assembly
CCS
ECC
ON–OFF
+ RES
– SET
CANCEL
z2(C)
Cruise Control Main Switch
A33
Stop Light Switch Assembly
Stop Light System <8–4>
(BAT)
10A
ECU–B
NO. 1
AA1
I125
Junction Connector
5A
METER–IG2
IA3
I18(B)
Combination Meter Assembly
IG+
Telltales
Buzzer
LED Driver
I/F
Display Driver
5V IC
CPU
CAN I/F
CANH
CANL
ES
Multiplex Communication System (CAN)<2–4>
I1