* 1:w/ Power Seat
* 2:w/o Power Seat

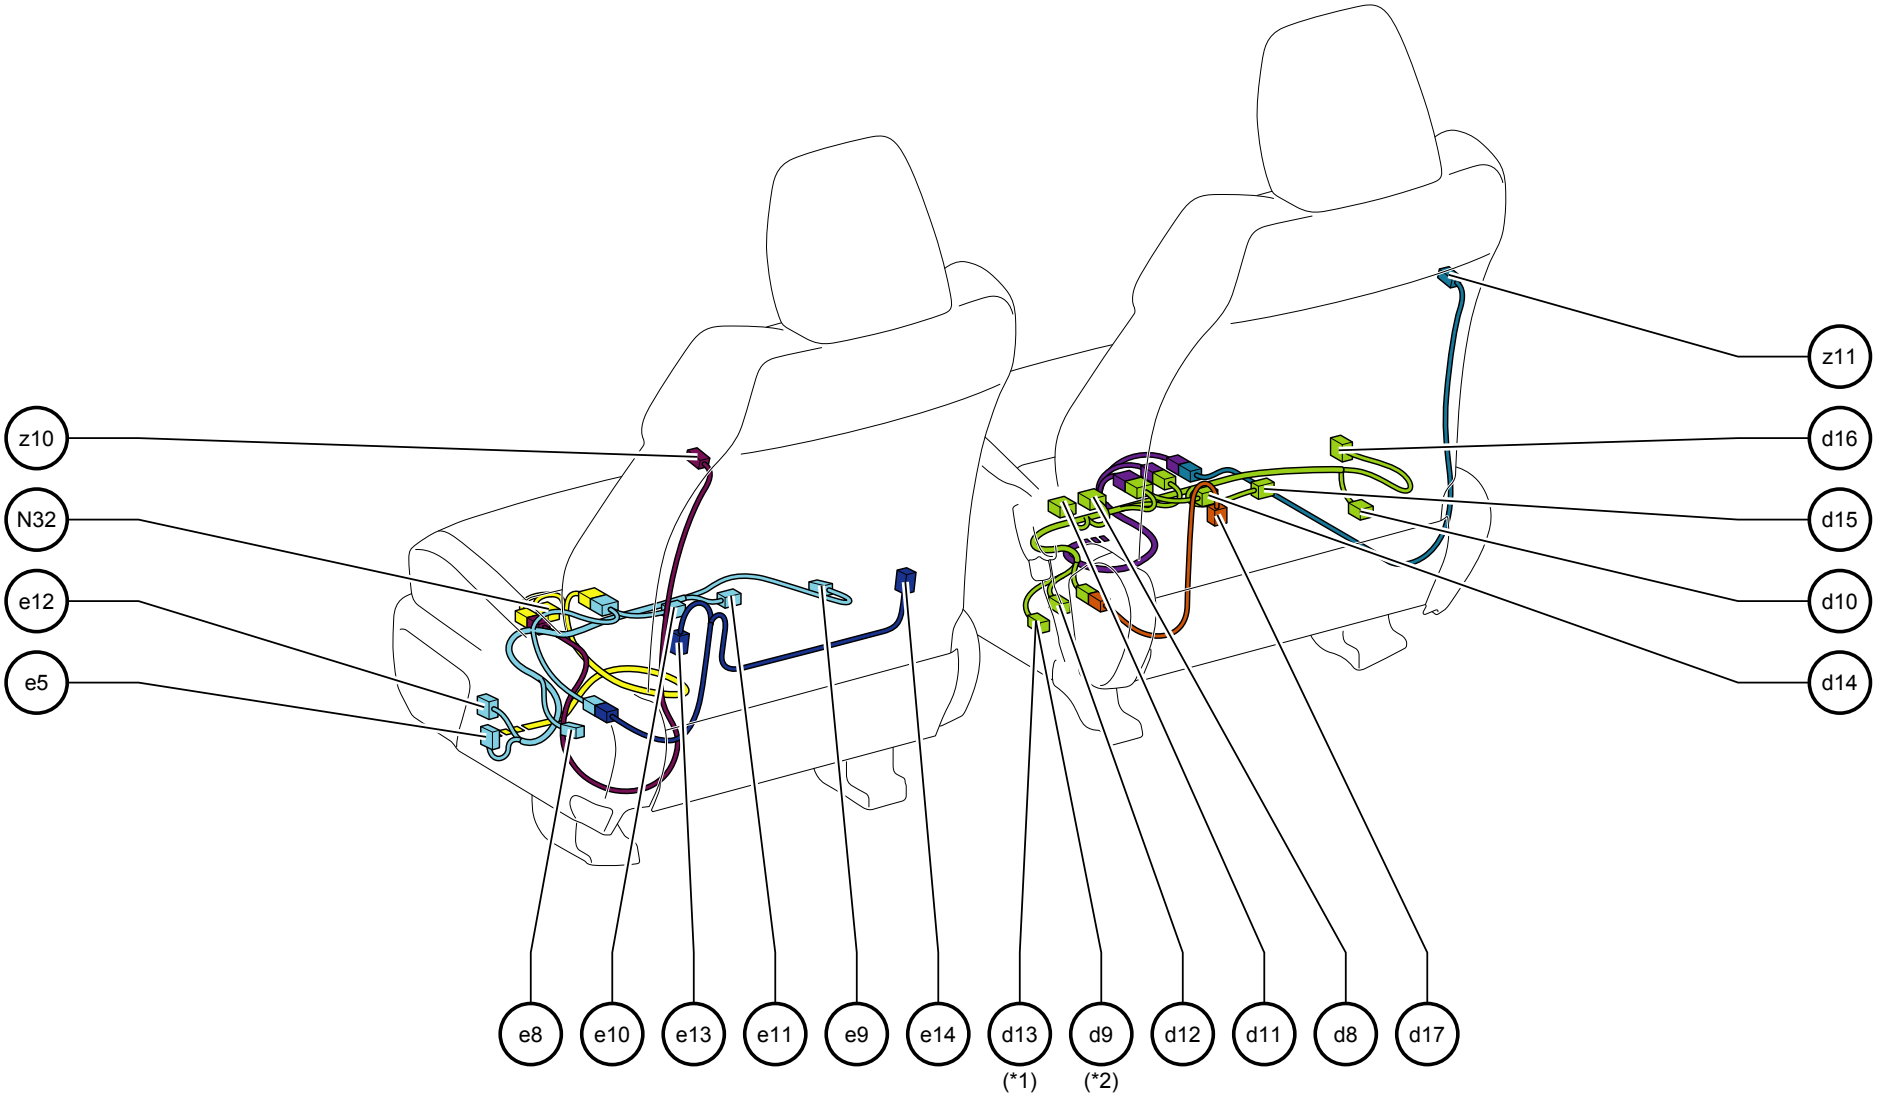

N 32 Front Seat Inner Belt Assembly LH

d 8 Occupant Detection ECU
d 9 Front Seat Inner Belt Assembly RH
d 10 Front Out Weight Detector Sensor Sub-Assembly
d 11 Occupant Detection ECU
d 12 Front In Weight Detector Sensor Sub-Assembly
d 13 Front Seat Inner Belt Assembly RH
d 14 Front Seat Cushion Heater Assembly RH
d 15 Front Power Seat Slide Position Motor RH (Front Seat Frame Assembly with Adjuster RH)
d 16 Front Power Seat Switch RH
d 17 Front Power Seat Reclining Position Motor RH (Front Seat Back Frame Sub-Assembly RH)

e 5 Front Power Seat Lumbar Switch LH
e 8 Front Power Seat Lift Position Motor LH (Front Seat Frame Assembly with Adjuster LH)
e 9 Front Power Seat Tilt Position Motor LH (Front Seat Frame Assembly with Adjuster LH)
e 10 Front Seat Cushion Heater Assembly LH
e 11 Front Power Seat Slide Position Motor LH (Front Seat Frame Assembly with Adjuster LH)
e 12 Front Power Seat Switch LH
e 13 Front Power Seat Reclining Position Motor LH (Front Seat Back Frame Sub-Assembly LH)
e 14 Front Power Seat Lumbar Support Motor LH (Lumbar Support Adjuster Assembly LH)

z 10 Front Seat Airbag Assembly LH
z 11 Front Seat Airbag Assembly RH

N 32
White

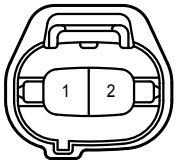

d 8
Black

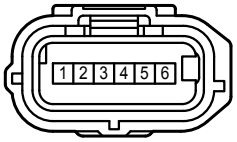

d 9
White



d 10
Black

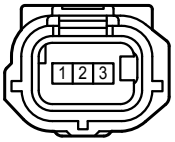

d 11
Black

d 12
Gray

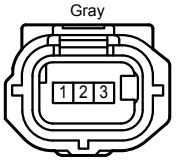

d 13
Gray

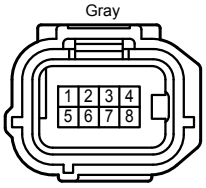

d 14
White

d 15
Black

d 16
Black



d 17
Gray

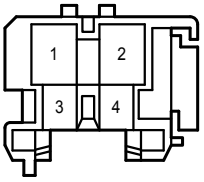

e 5
White



e 8
Gray

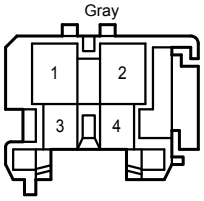

e 9
Black



e 10
White

e 11
Black

e 12
Black



e 13
Gray

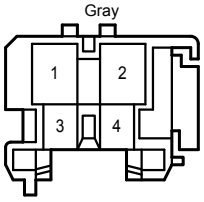

e 14
Black



z 10
White



z 11
White