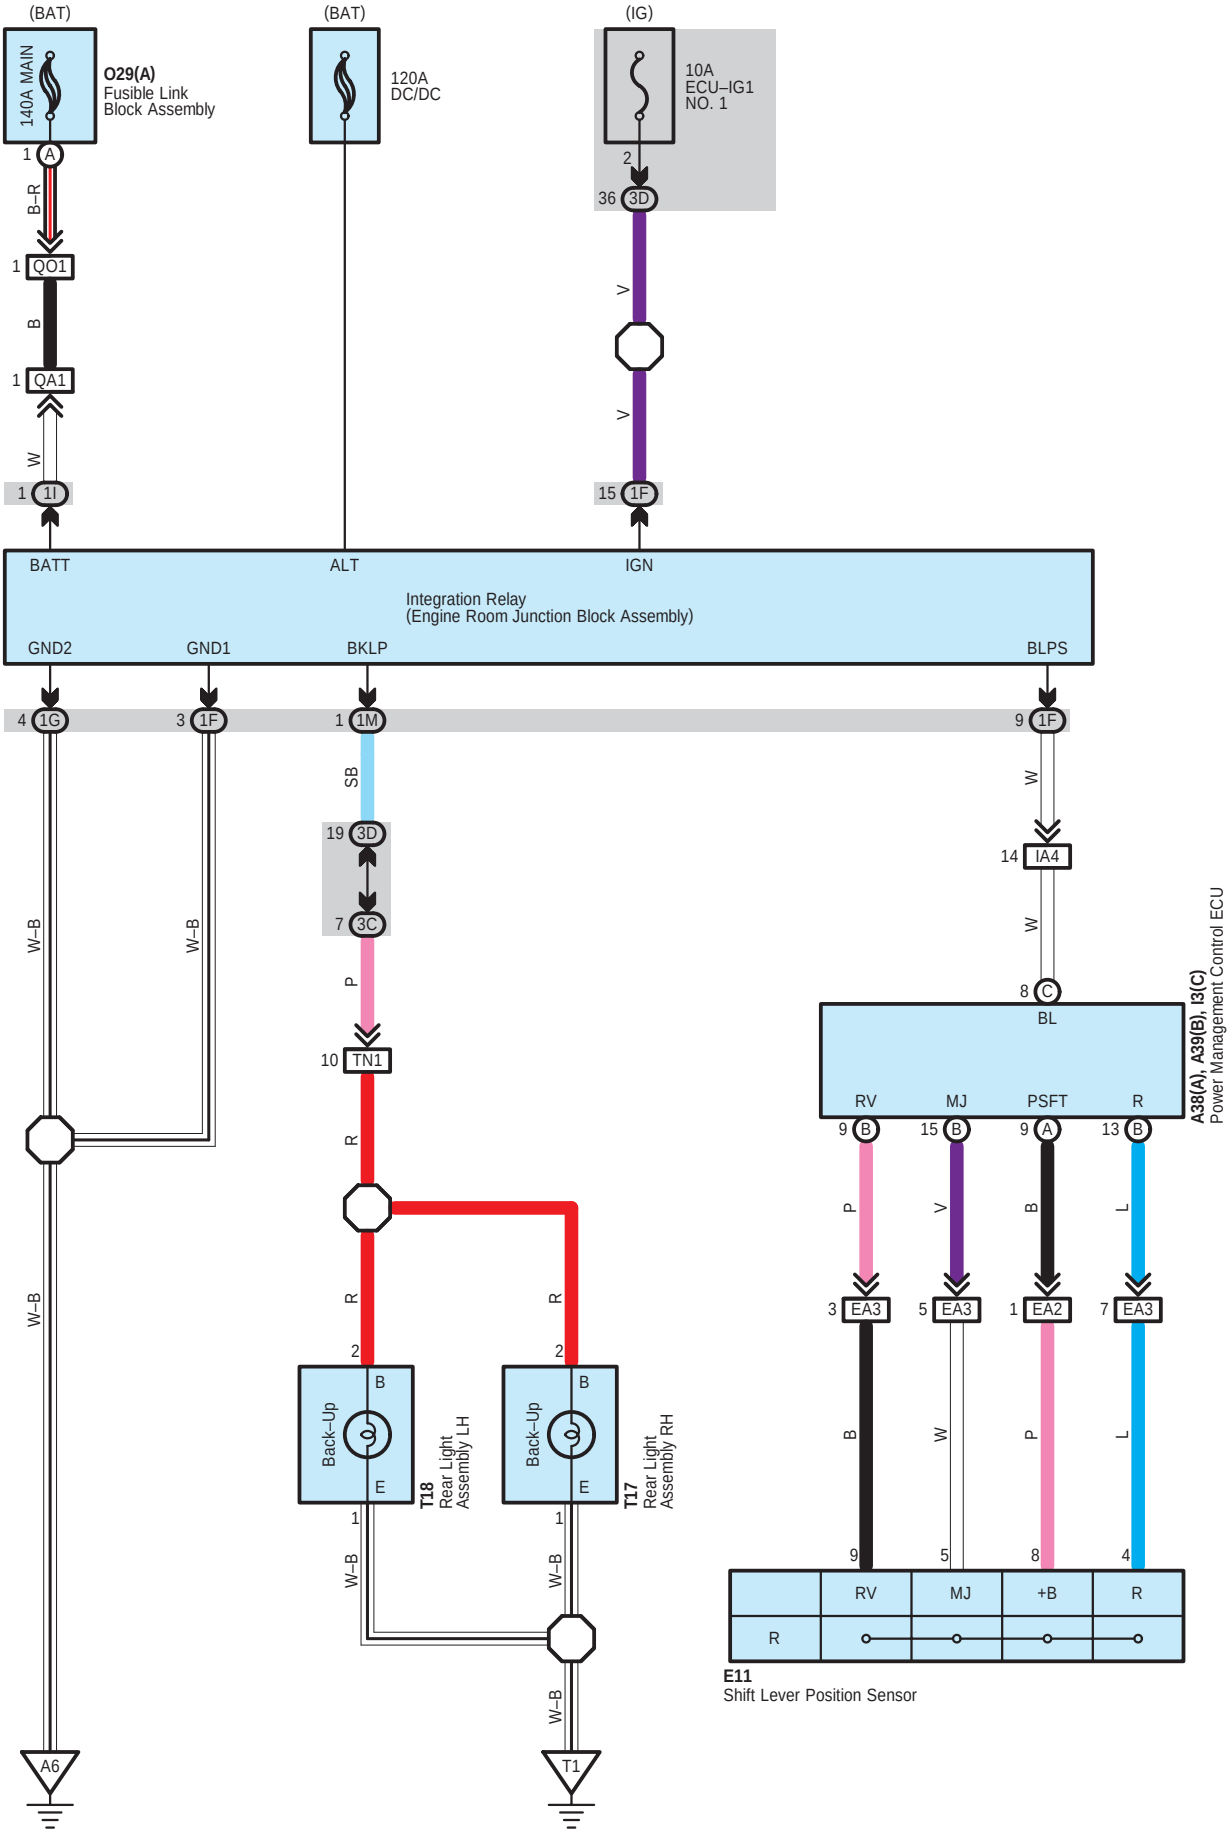
(BAT)
140A MAIN
O29(A)
Fusible Link
Block Assembly
(BAT)
120A
DC/DC
(IG)
10A
ECU–IG1
NO. 1
B–R
B
W
V
V
BATT
ALT
IGN
Integration Relay
(Engine Room Junction Block Assembly)
GND2
GND1
BKLP
BLPS
SB
P
R
R
R
W–B
W–B
W–B
W
W
W–B
W–B
W–B
Back–Up
Back–Up
T18
Rear Light
Assembly LH
T17
Rear Light
Assembly RH
A6
T1
BL
RV
MJ
PSFT
R
A38(A), A39(B), I3(C)
Power Management Control ECU
B
V
B
L
B
W
P
L
RV
MJ
+B
R
R
E11
Shift Lever Position Sensor

A 38
Gray

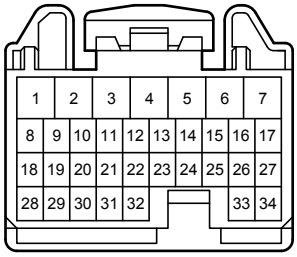

A 39
Gray

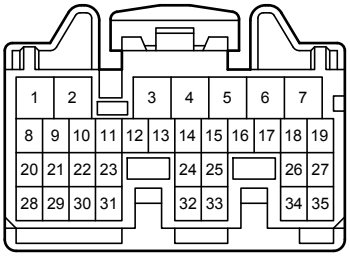

E 11
Gray

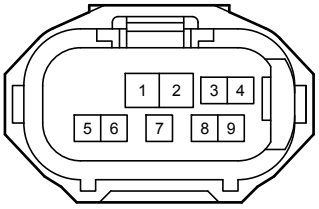

I 3
Gray

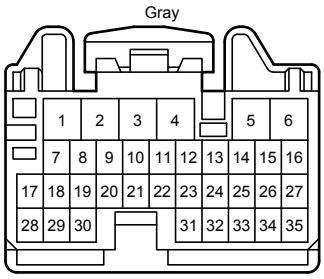

O 29



T 17
White

T 18
White

1F
White

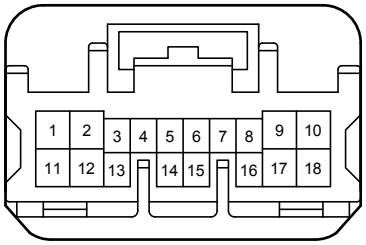

1G
White

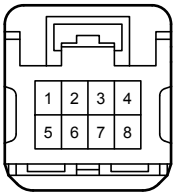

1I
White



1M



3C
White

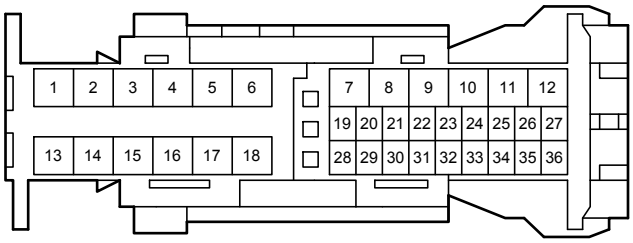

3D
White

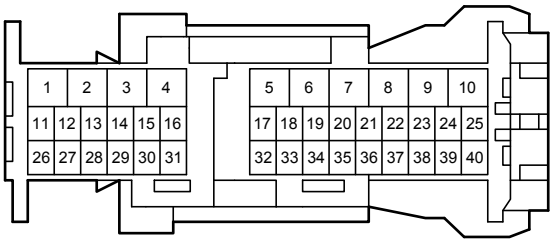

EA2
White

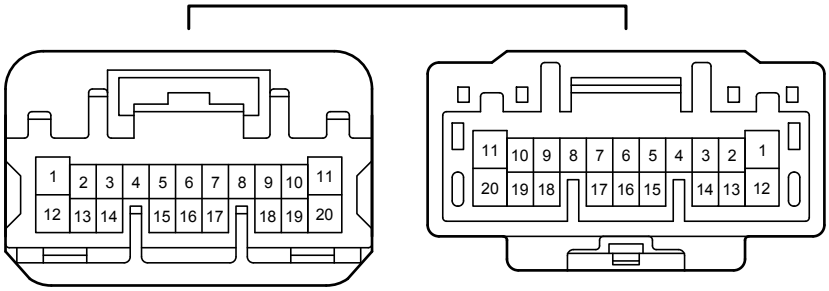

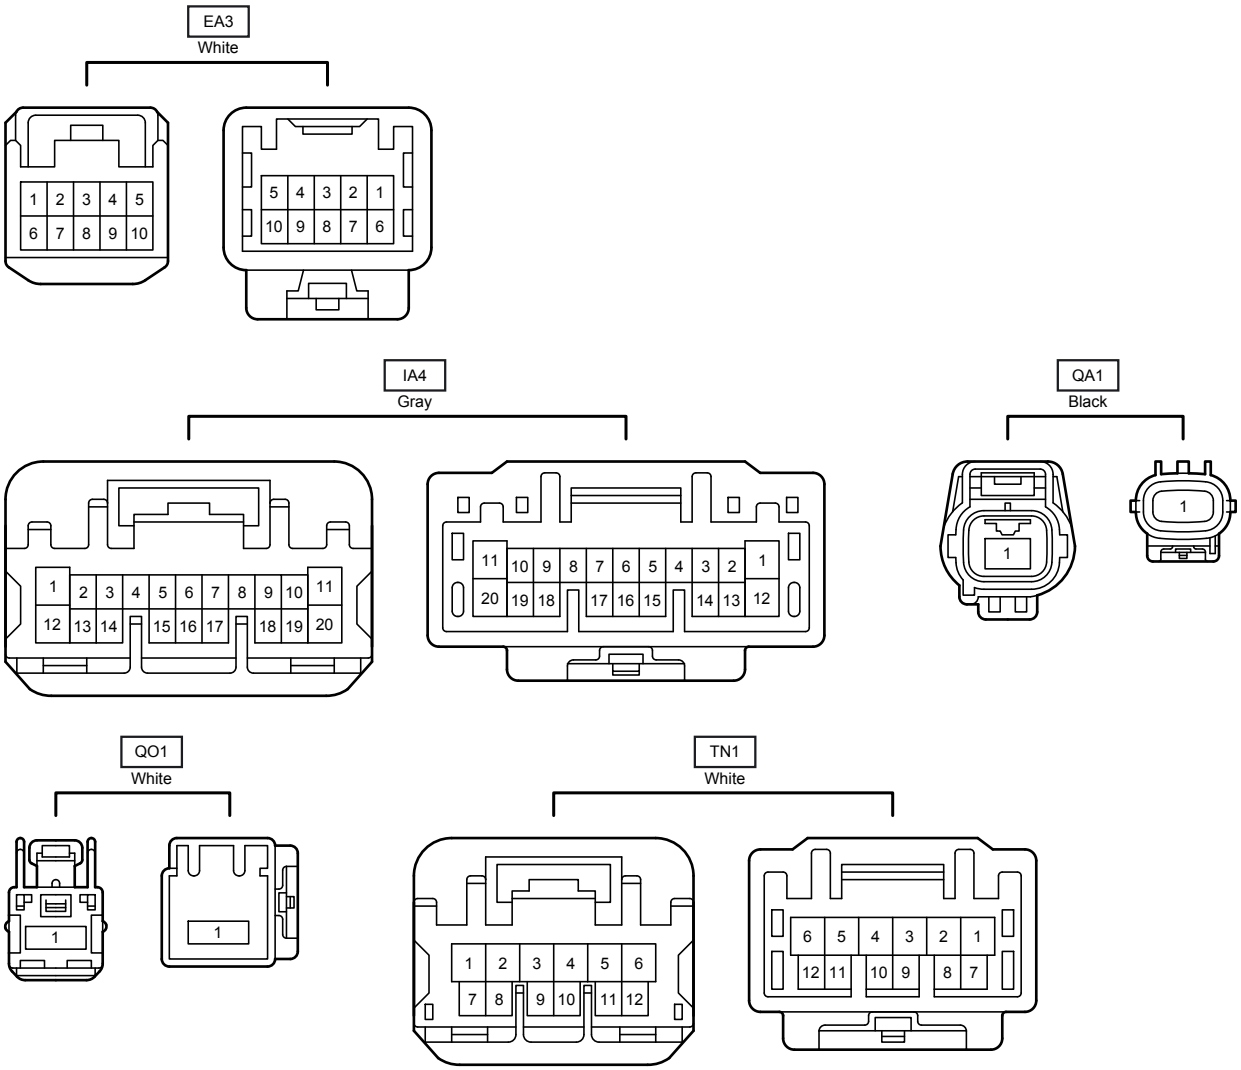
EA3
White
1 2 3 4 5
6 7 8 9 10
5 4 3 2 1
10 9 8 7 6
IA4
Gray
1 2 3 4 5 6 7 8 9 10 11
12 13 14 15 16 17 18 19 20
11 10 9 8 7 6 5 4 3 2 1
20 19 18 17 16 15 14 13 12
QA1
Black
1
1
QO1
White
1
1
TN1
White
1 2 3 4 5 6
7 8 9 10 11 12
6 5 4 3 2 1
12 11 10 9 8 7