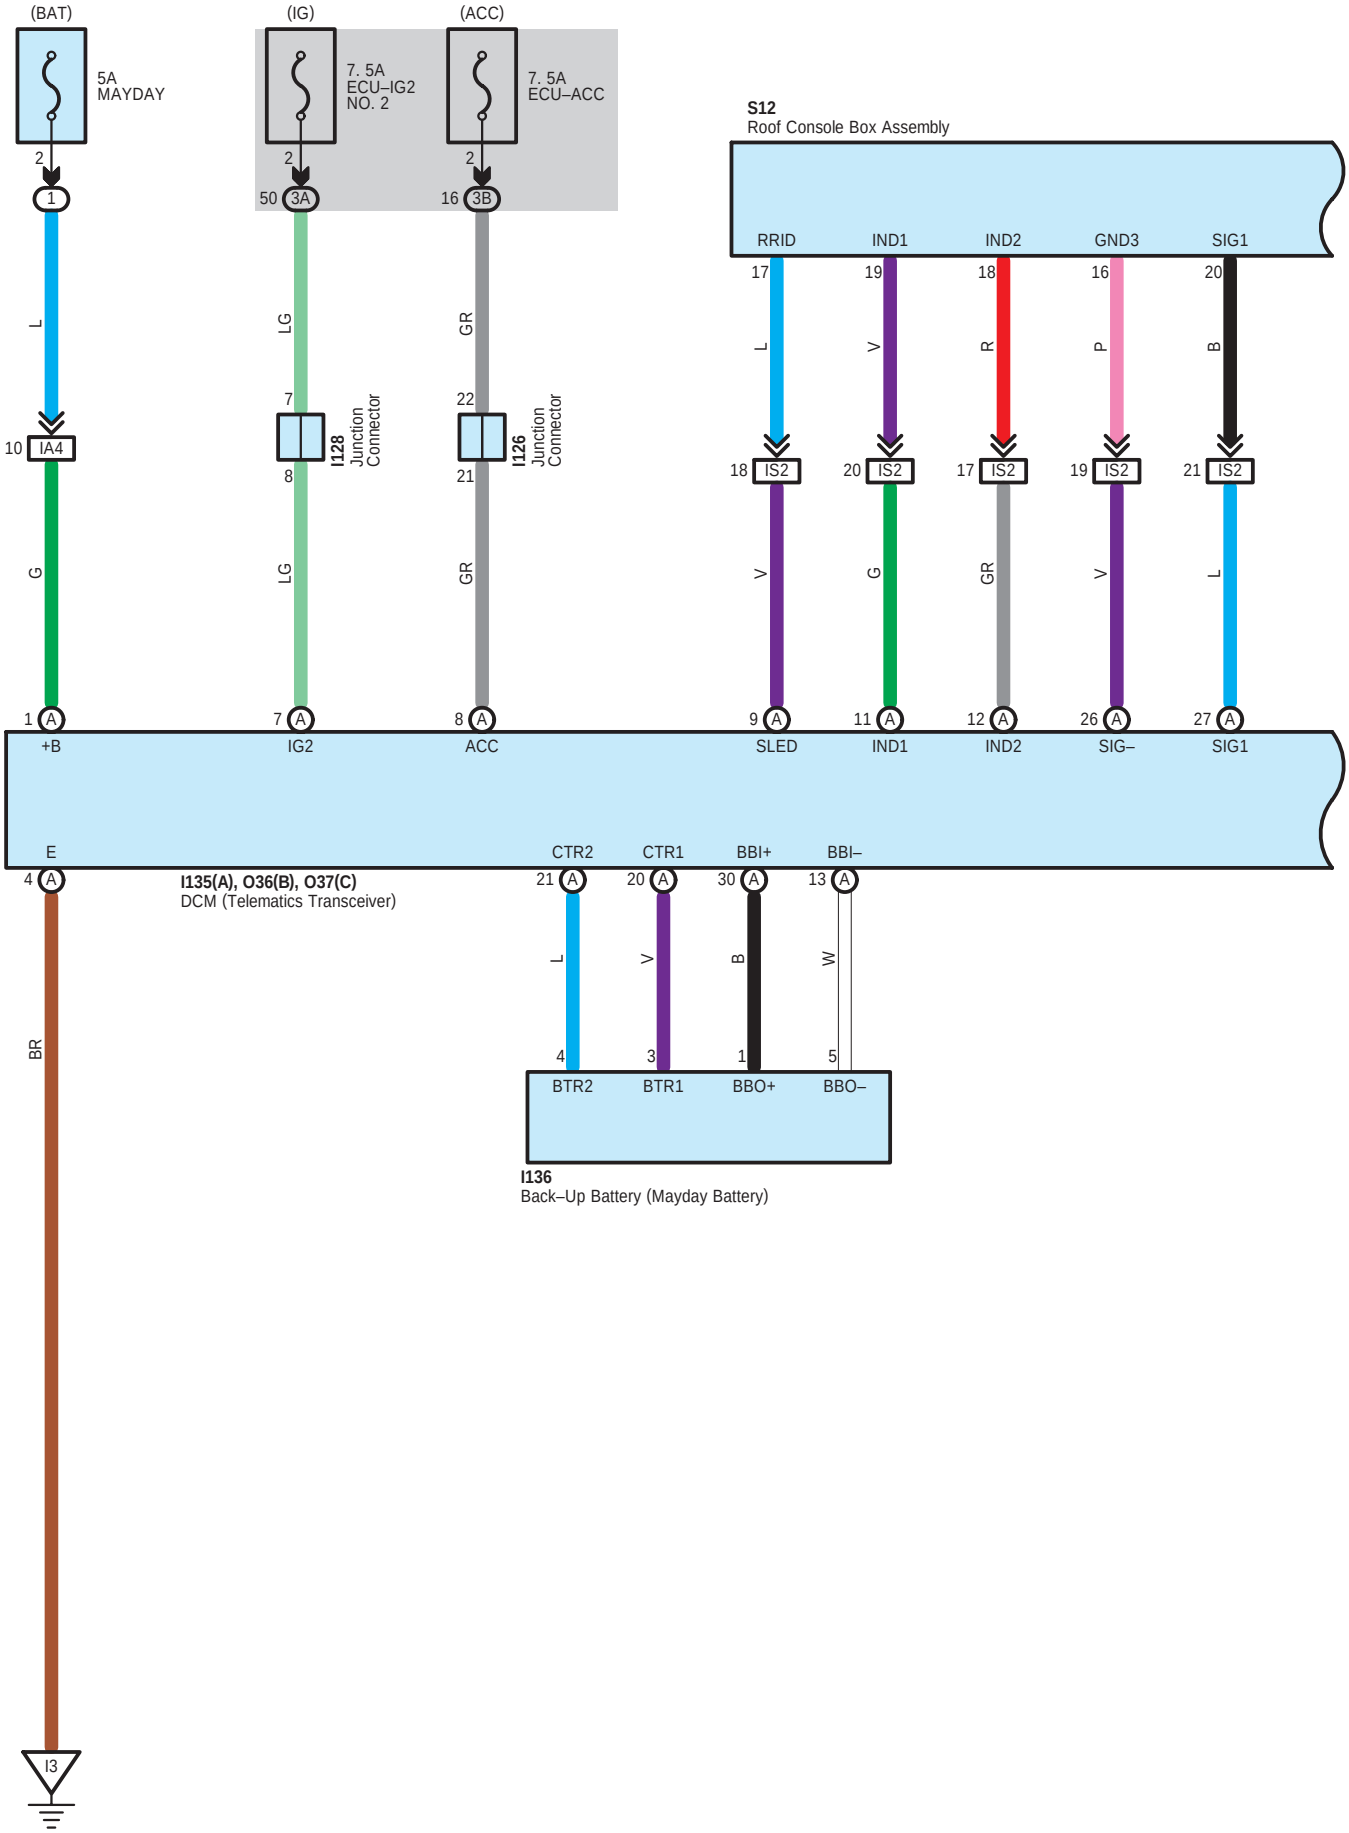
(BAT)
5A
MAYDAY
(IG)
7. 5A
ECU–IG2
NO. 2
(ACC)
7. 5A
ECU–ACC
S12
Roof Console Box Assembly
RRID
IND1
IND2
GND3
SIG1
IA4
IS2
I128
Junction
Connector
I126
Junction
Connector
+B
IG2
ACC
SLED
IND1
IND2
SIG–
SIG1
E
CTR2
CTR1
BBI+
BBI–
I135(A), O36(B), O37(C)
DCM (Telematics Transceiver)
BTR2
BTR1
BBO+
BBO–
I136
Back–Up Battery (Mayday Battery)
I3

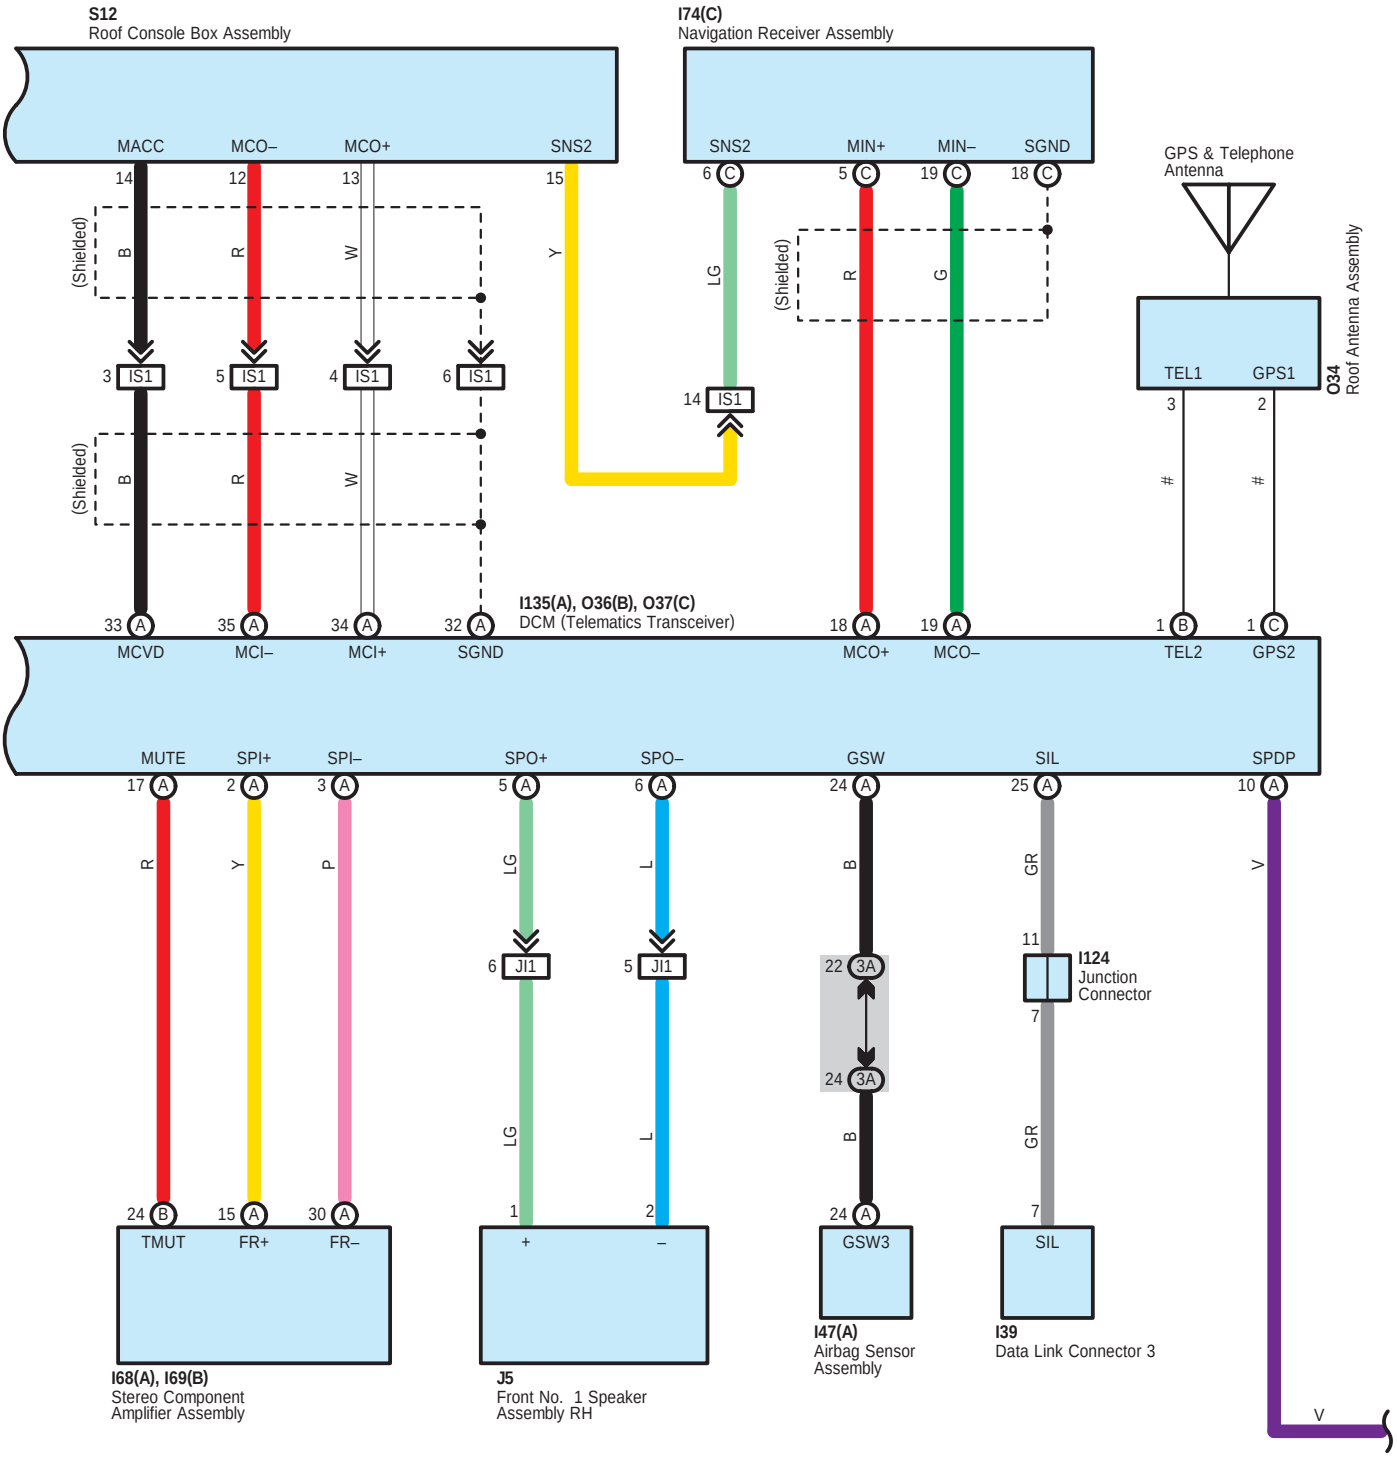

: There is no wire color information.

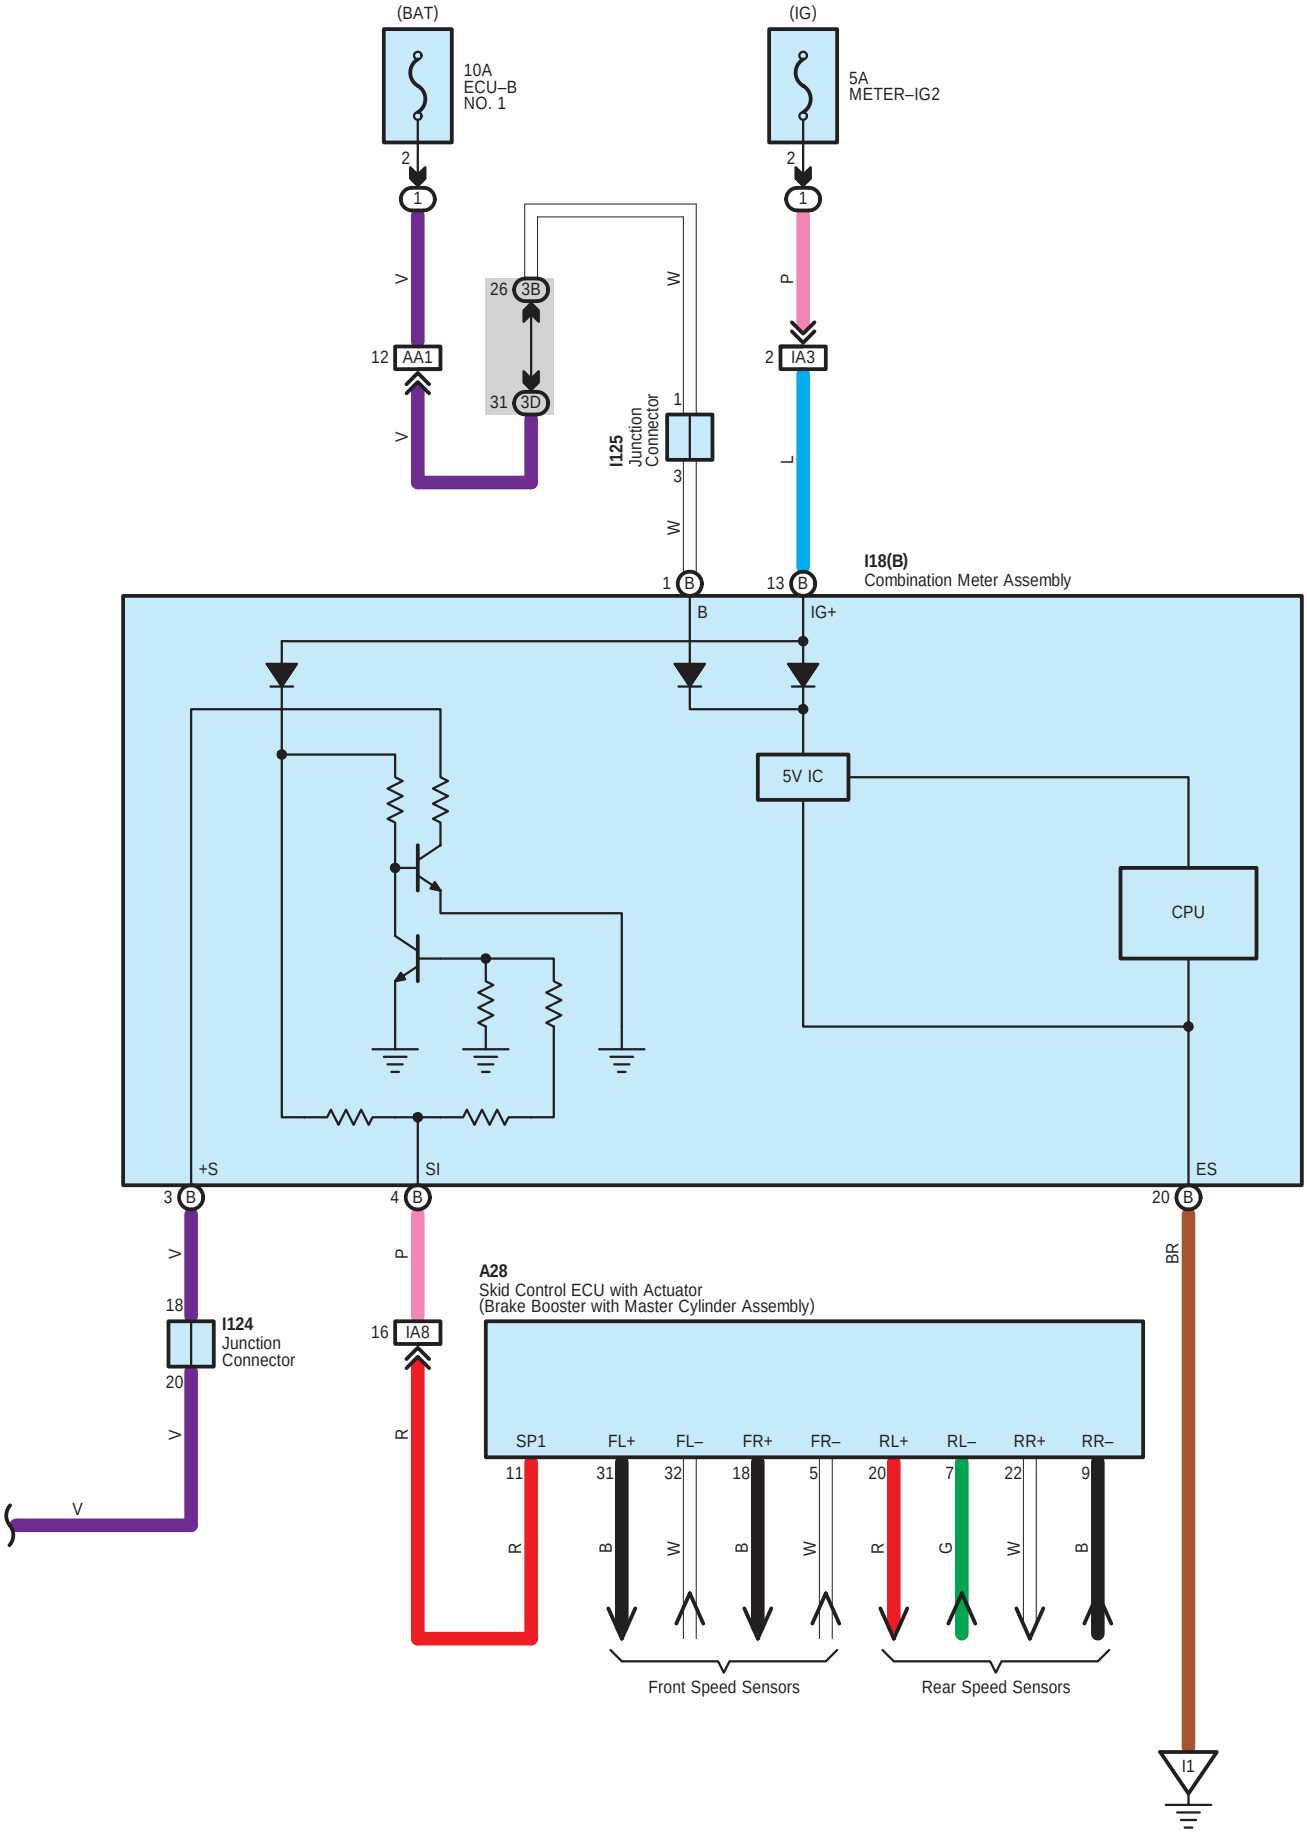
(BAT)
10A
ECU–B
NO. 1
(IG)
5A
METER–IG2
AA1
IA3
I125
Junction
Connector
I18(B)
Combination Meter Assembly
B
IG+
5V IC
CPU
+S
SI
ES
I124
Junction
Connector
IA8
A28
Skid Control ECU with Actuator
(Brake Booster with Master Cylinder Assembly)
SP1
FL+
FL–
FR+
FR–
RL+
RL–
RR+
RR–
Front Speed Sensors
Rear Speed Sensors
I1

A 28
Black

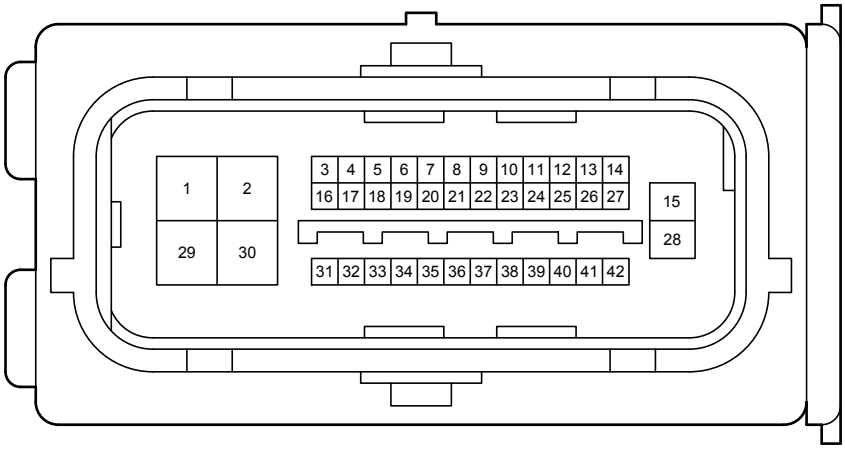

I 18
Black

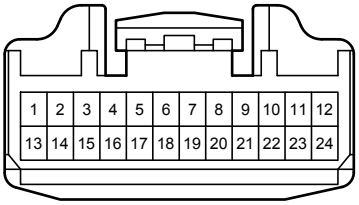

I 39
White

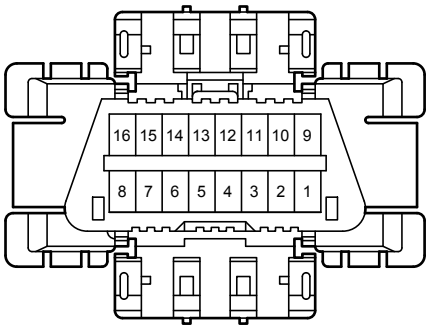

I 47
Yellow

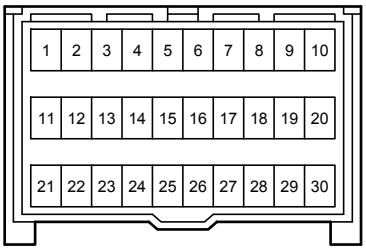

I 68
White

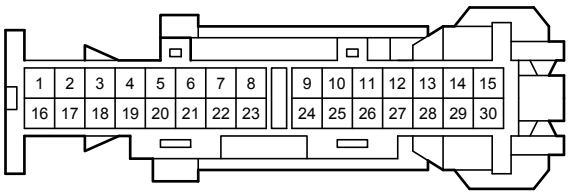

I 69
White

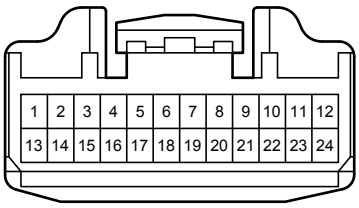

I 74
White

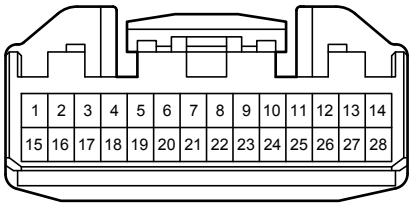

I124
White

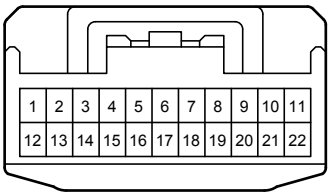

I125
Gray

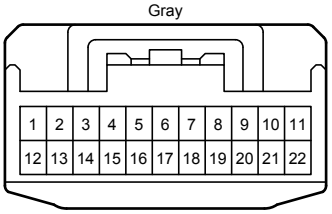

I126
White

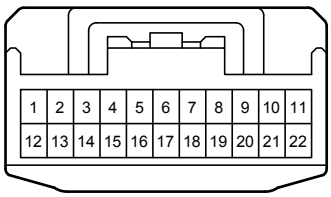

I128
White

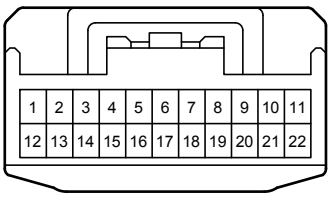

I135
White

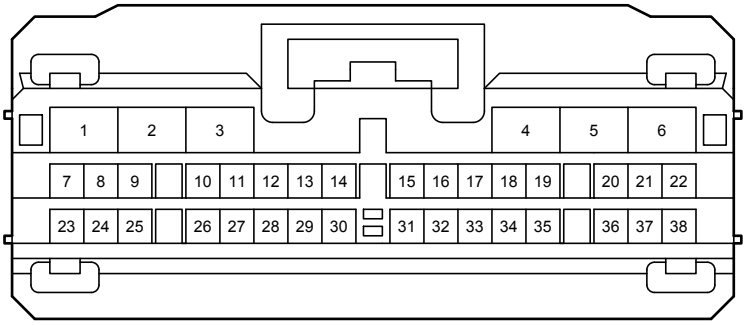

I136
White

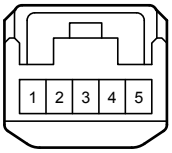

J 5
Black

O 34
Blue

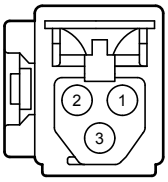

O 36
Blue



O 37
Gray

S 12
Black

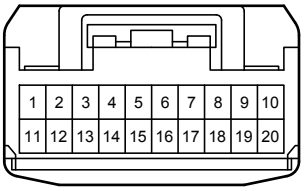

3A
White

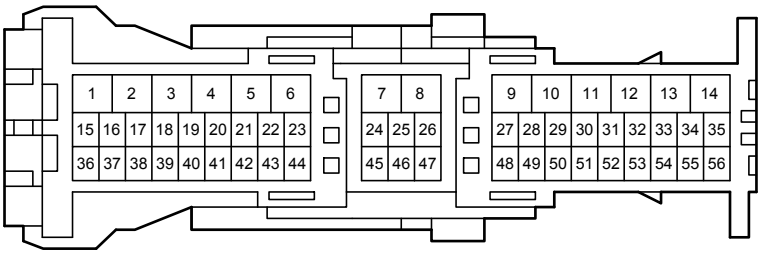

3B
White

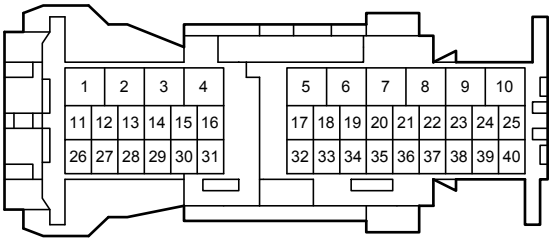

3D
White

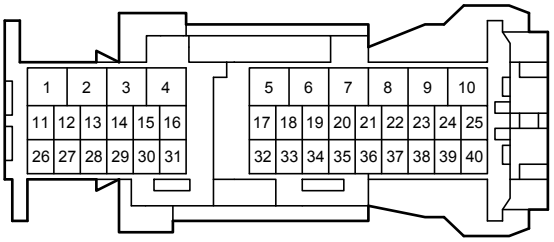

AA1
Blue

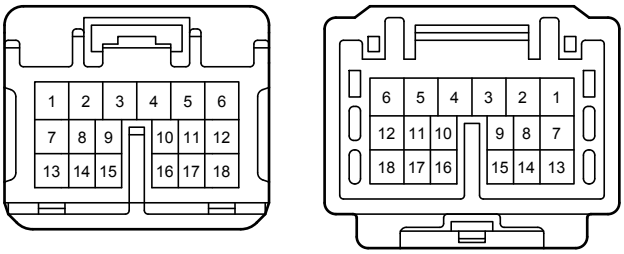

IA3
Blue

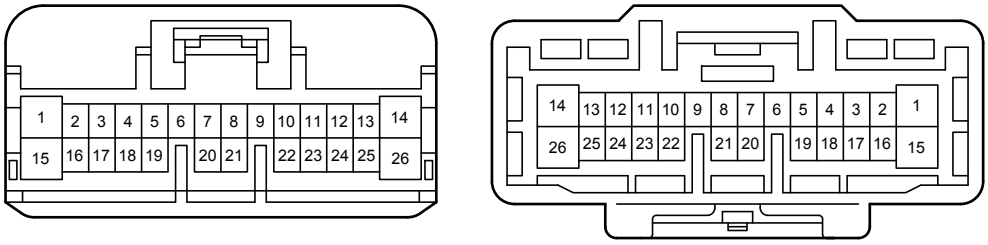

IA4
Gray

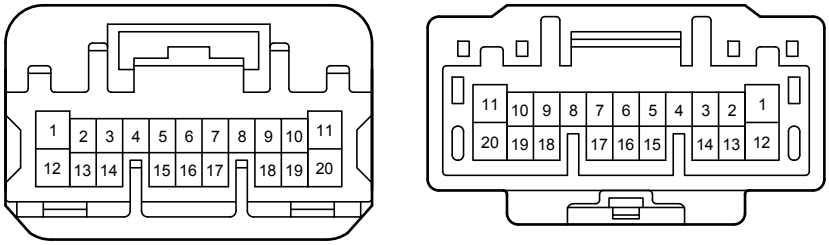

IA8
Gray

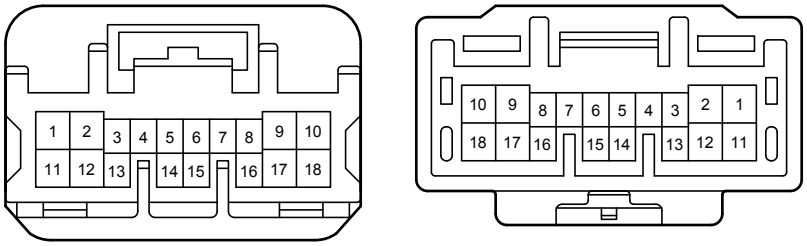

IS1
White

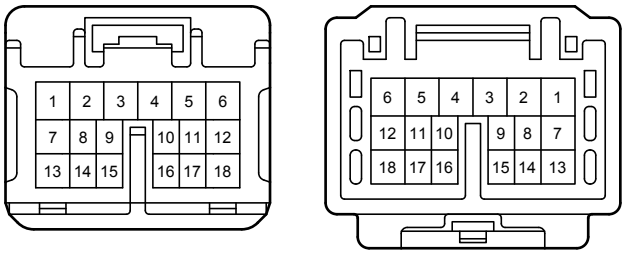

IS2
White

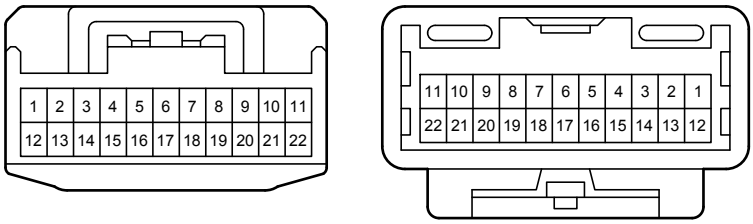

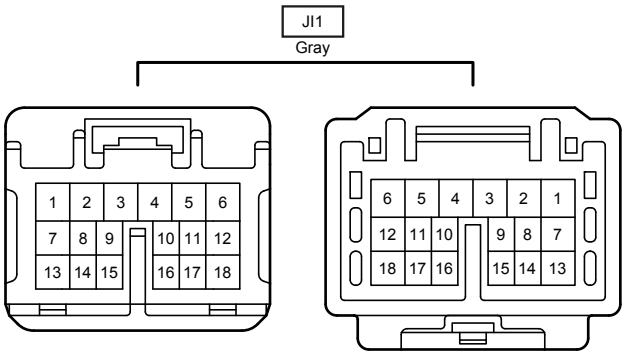
JI1
Gray
1 2 3 4 5 6
7 8 9 10 11 12
13 14 15 16 17 18
6 5 4 3 2 1
12 11 10 9 8 7
18 17 16 15 14 13