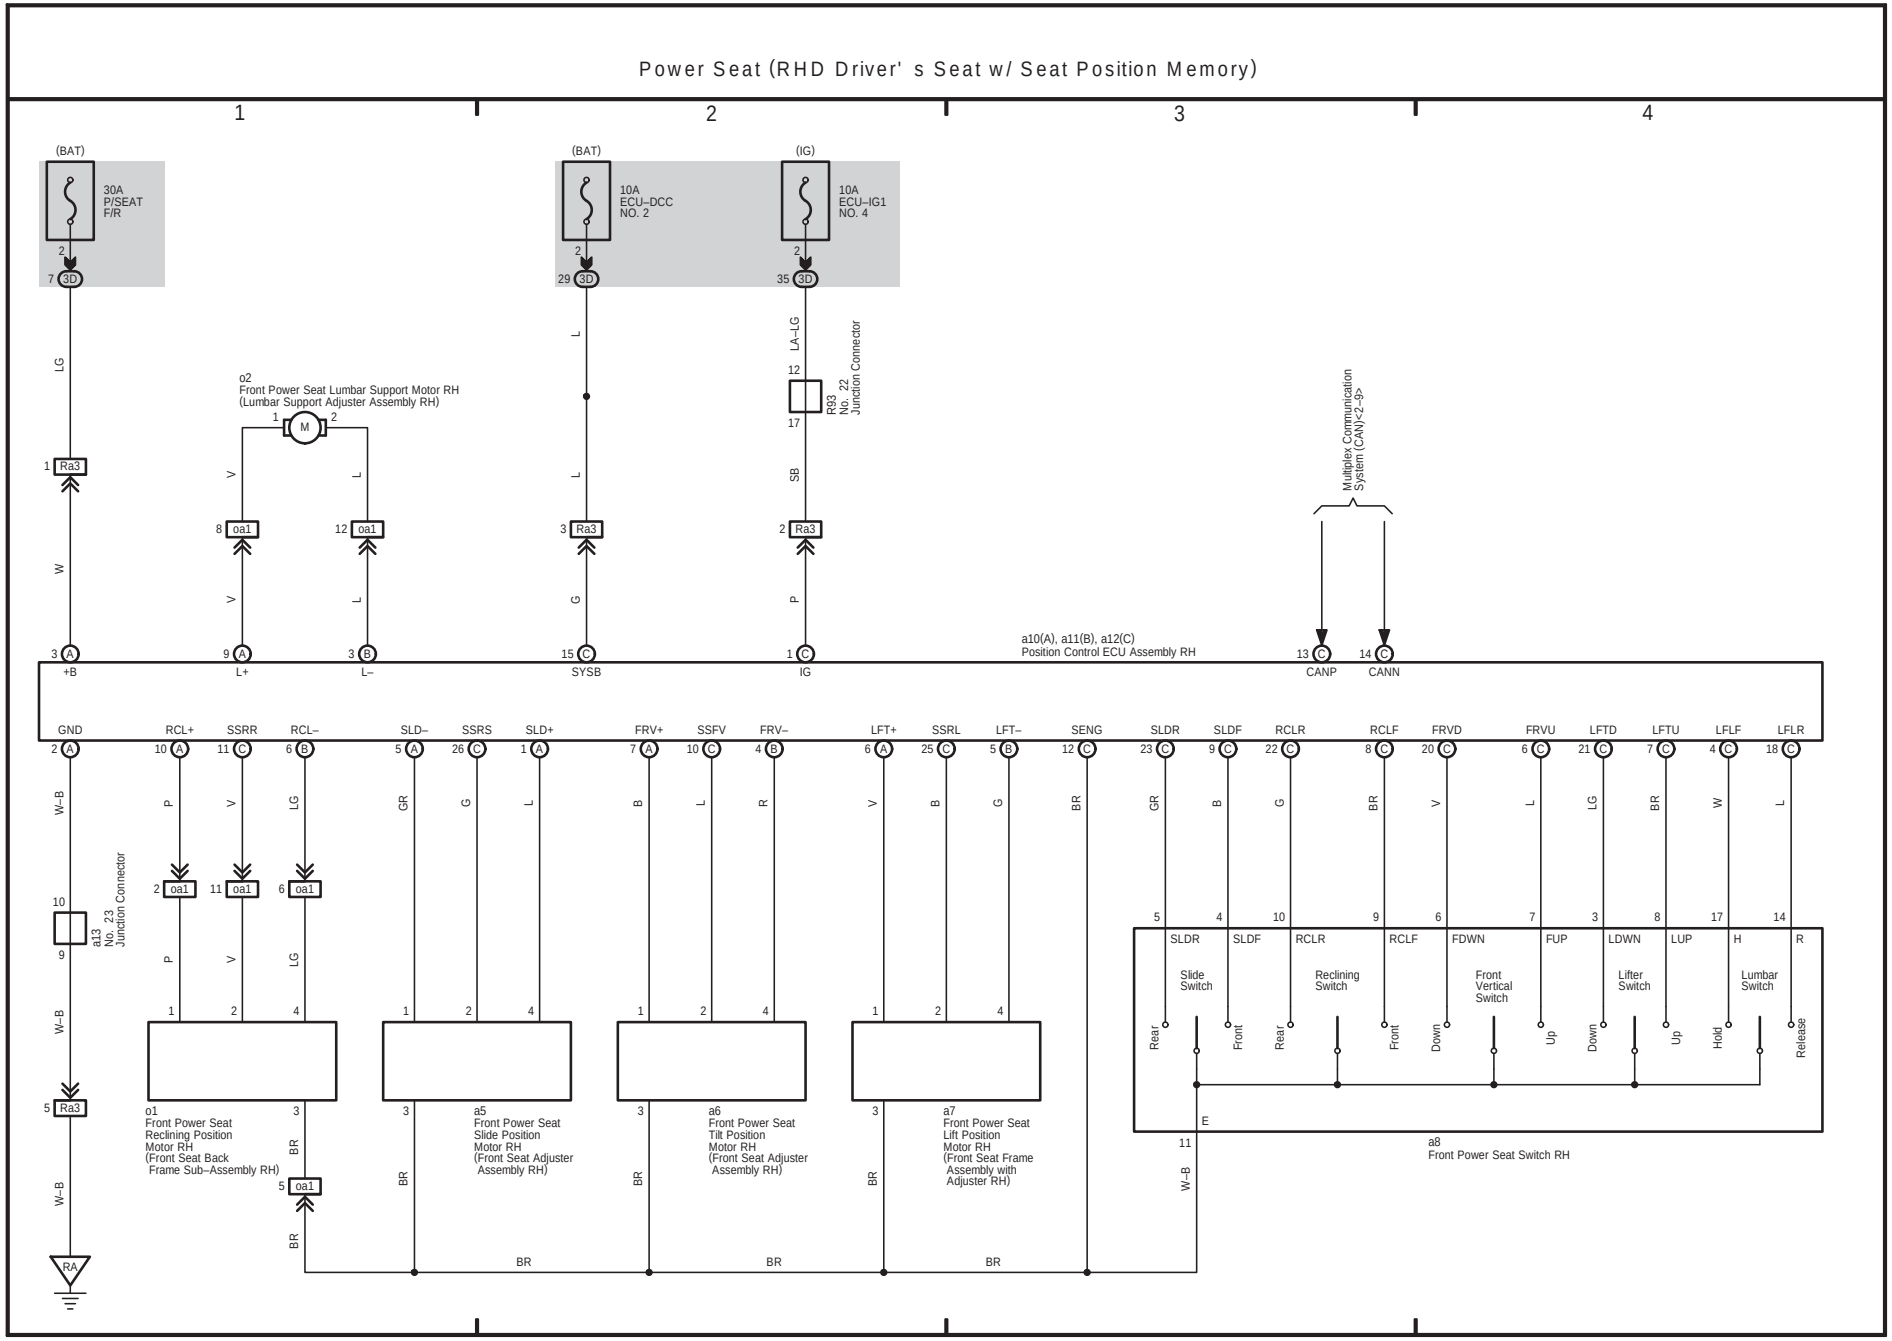
Power Seat (RHD Driver' s Seat w/ Seat Position Memory)
1
2
3
4
(BAT)
30A
P/SEAT
F/R
(BAT)
10A
ECU–DCC
NO. 2
(IG)
10A
ECU–IG1
NO. 4
LA–LG
R93
No. 22
Junction Connector
o2
Front Power Seat Lumbar Support Motor RH
(Lumbar Support Adjuster Assembly RH)
Multiplex Communication
System (CAN)<2–9>
a10(A), a11(B), a12(C)
Position Control ECU Assembly RH
+B
L+
L–
SYSB
IG
CANP
CANN
GND
RCL+
SSRR
RCL–
SLD–
SSRS
SLD+
FRV+
SSFV
FRV–
LFT+
SSRL
LFT–
SENG
SLDR
SLDF
RCLR
RCLF
FRVD
FRVU
LFTD
LFTU
LFLF
LFLR
a13
No. 23
Junction Connector
o1
Front Power Seat
Reclining Position
Motor RH
(Front Seat Back
Frame Sub–Assembly RH)
a5
Front Power Seat
Slide Position
Motor RH
(Front Seat Adjuster
Assembly RH)
a6
Front Power Seat
Tilt Position
Motor RH
(Front Seat Adjuster
Assembly RH)
a7
Front Power Seat
Lift Position
Motor RH
(Front Seat Frame
Assembly with
Adjuster RH)
SLDR
Slide
Switch
SLDF
RCLR
Reclining
Switch
RCLF
FDWN
Front
Vertical
Switch
FUP
LDWN
Lifter
Switch
LUP
H
Lumbar
Switch
R
Rear
Front
Rear
Front
Down
Up
Down
Up
Hold
Release
a8
Front Power Seat Switch RH
RA