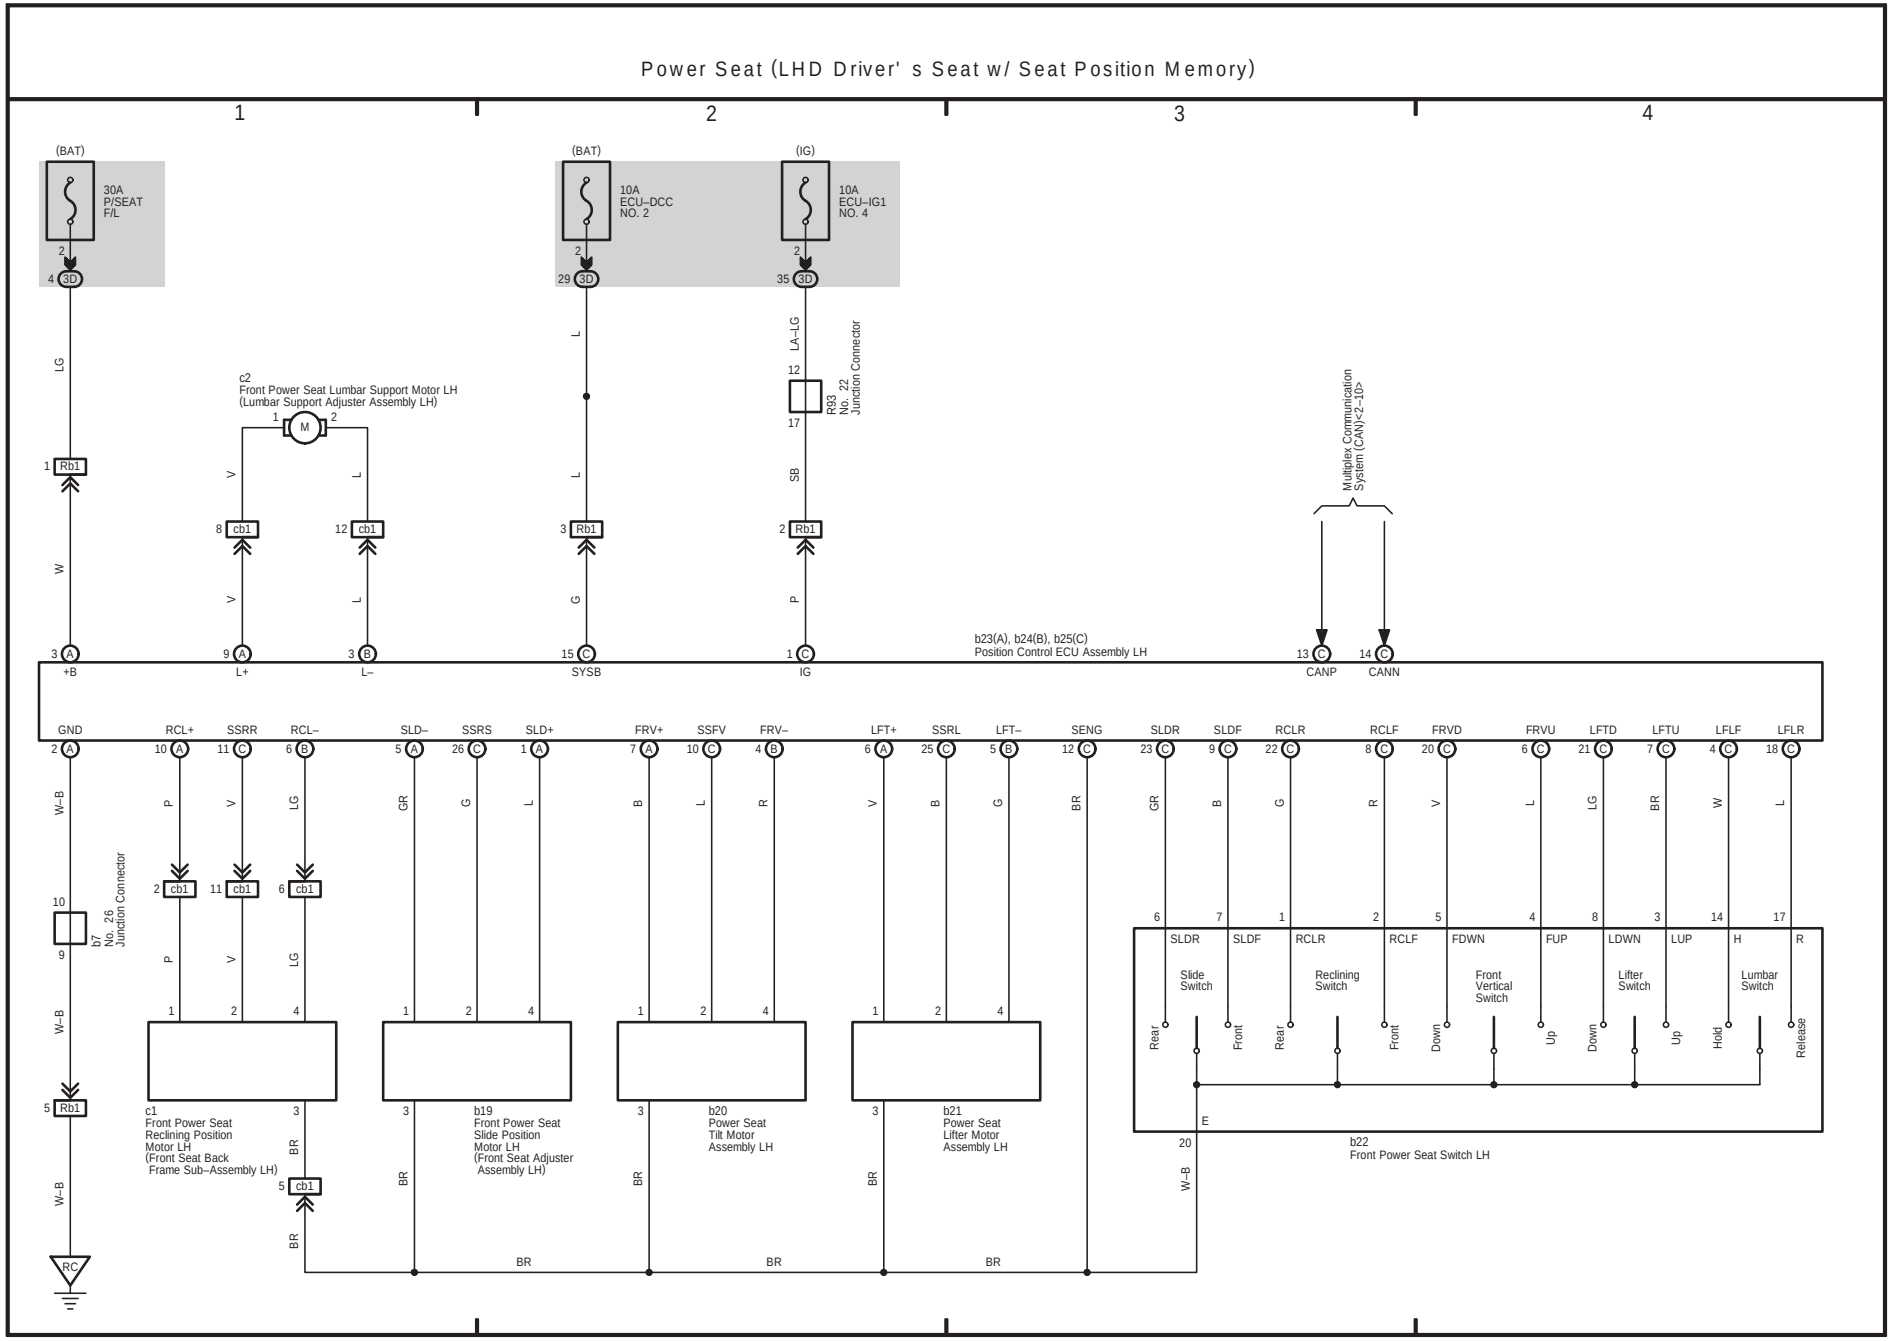
Power Seat (LHD Driver' s Seat w/ Seat Position Memory)
1
2
3
4
(BAT)
30A
P/SEAT
F/L
(BAT)
10A
ECU–DCC
NO. 2
(IG)
10A
ECU–IG1
NO. 4
c2
Front Power Seat Lumbar Support Motor LH
(Lumbar Support Adjuster Assembly LH)
R93
No. 22
Junction Connector
Multiplex Communication
System (CAN)<2–10>
b23(A), b24(B), b25(C)
Position Control ECU Assembly LH
+B
L+
L–
SYSB
IG
CANP
CANN
GND
RCL+
SSRR
RCL–
SLD–
SSRS
SLD+
FRV+
SSFV
FRV–
LFT+
SSRL
LFT–
SENG
SLDR
SLDF
RCLR
RCLF
FRVD
FRVU
LFTD
LFTU
LFLF
LFLR
b7
No. 26
Junction Connector
c1
Front Power Seat
Reclining Position
Motor LH
(Front Seat Back
Frame Sub–Assembly LH)
b19
Front Power Seat
Slide Position
Motor LH
(Front Seat Adjuster
Assembly LH)
b20
Power Seat
Tilt Motor
Assembly LH
b21
Power Seat
Lifter Motor
Assembly LH
Slide
Switch
Reclining
Switch
Front
Vertical
Switch
Lifter
Switch
Lumbar
Switch
Rear
Front
Rear
Front
Down
Up
Down
Up
Hold
Release
b22
Front Power Seat Switch LH
RC