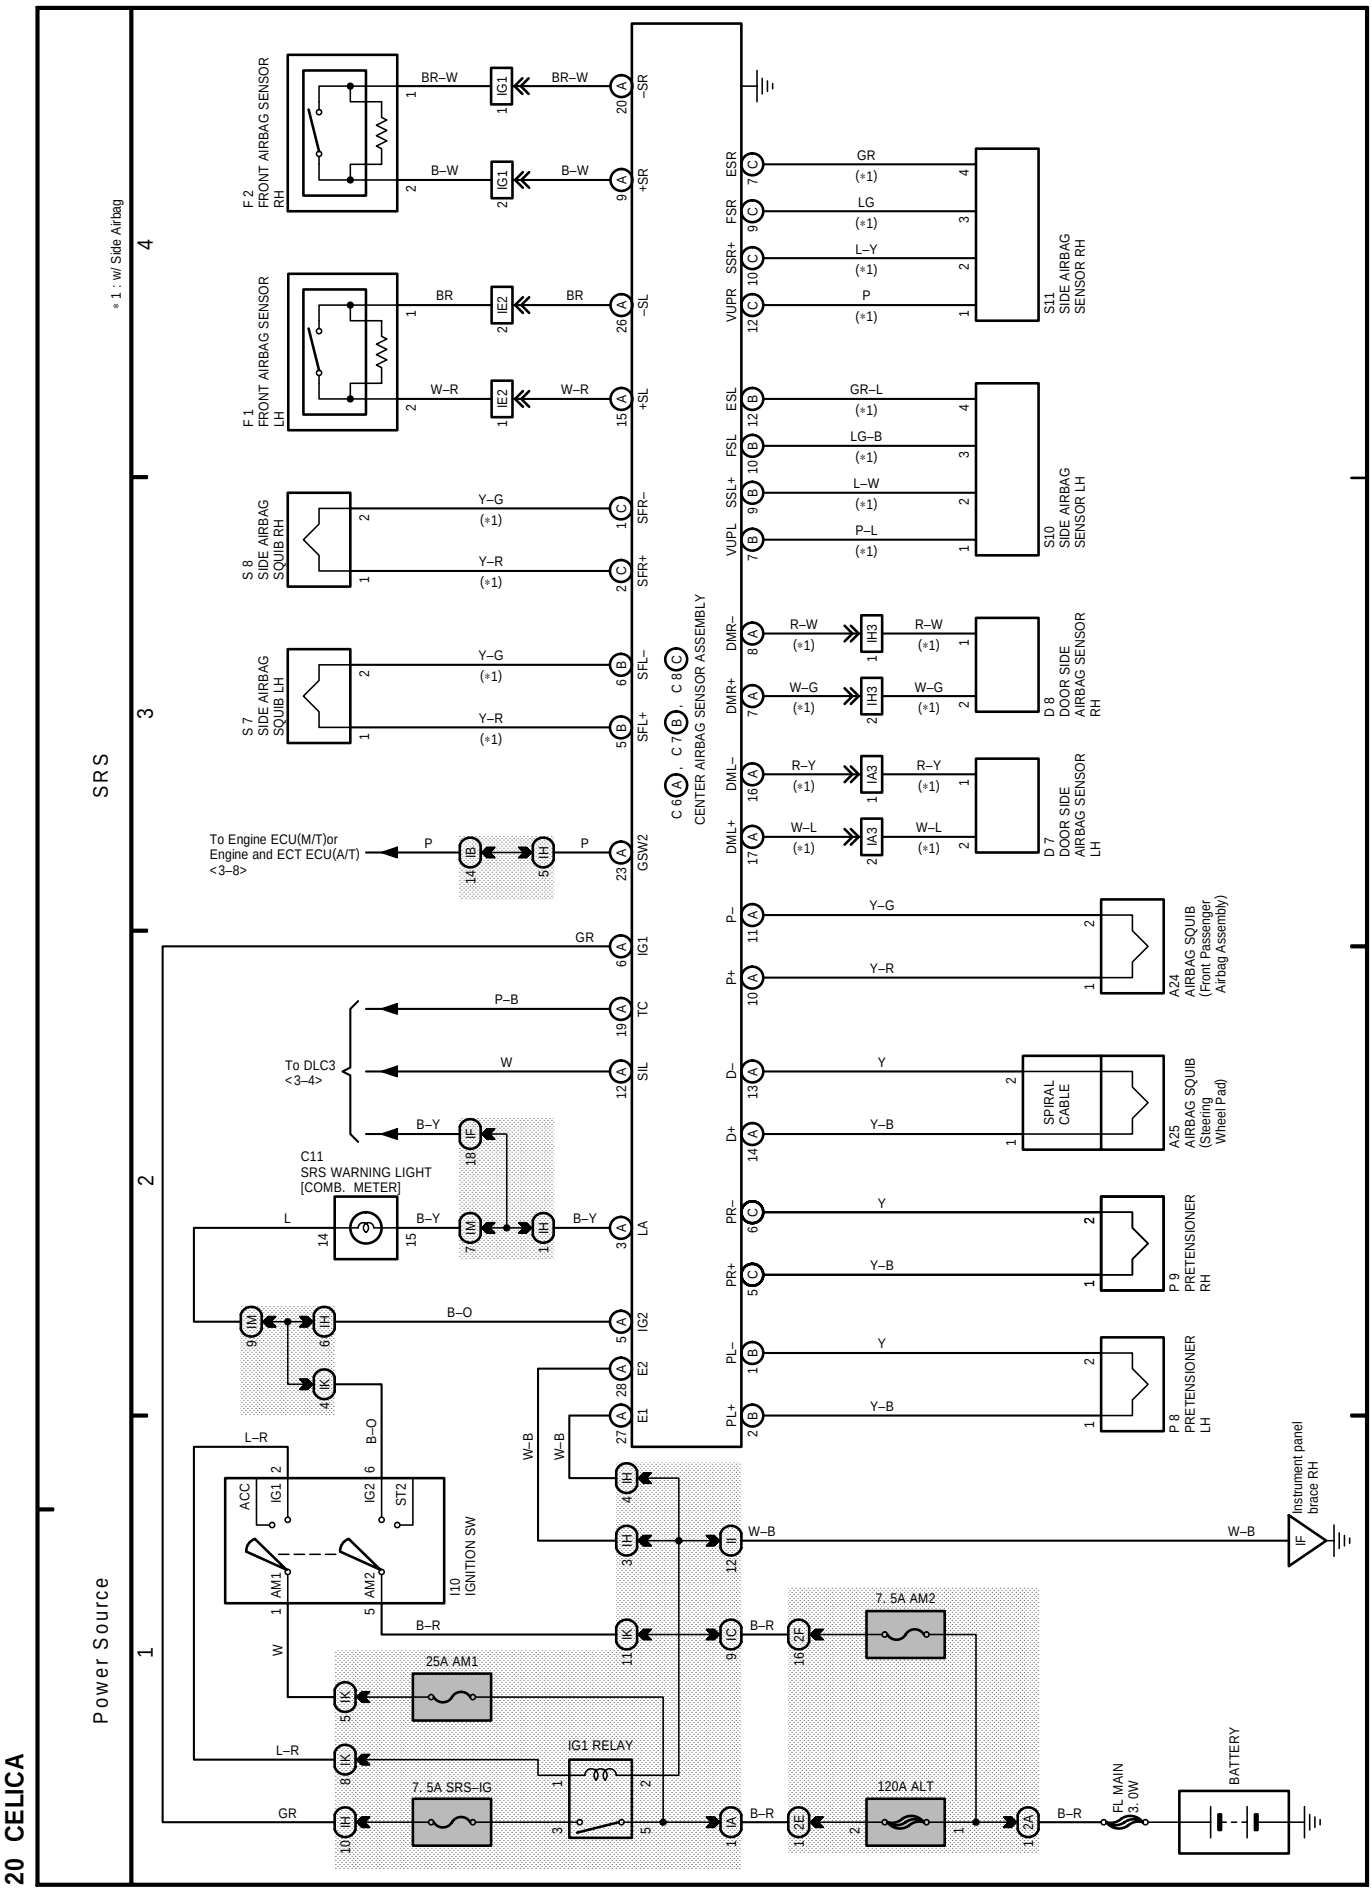
20 CELICA
Power Source
SRS
* 1 : w/ Side Airbag
F 2 FRONT AIRBAG SENSOR RH
F 1 FRONT AIRBAG SENSOR LH
S 8 SIDE AIRBAG SQUIB RH
S 7 SIDE AIRBAG SQUIB LH
C 6 A, C 7 B, C 8 C
CENTER AIRBAG SENSOR ASSEMBLY
S11 SIDE AIRBAG SENSOR RH
S10 SIDE AIRBAG SENSOR LH
D 8 DOOR SIDE AIRBAG SENSOR RH
D 7 DOOR SIDE AIRBAG SENSOR LH
A24 AIRBAG SQUIB (Front Passenger Airbag Assembly)
A25 AIRBAG SQUIB (Steering Wheel Pad)
SPIRAL CABLE
P 9 PRETENSIONER RH
P 8 PRETENSIONER LH
To Engine ECU(M/T)or Engine and ECT ECU(A/T) <3–8>
To DLC3 <3–4>
C11 SRS WARNING LIGHT [COMB. METER]
I10 IGNITION SW
Instrument panel brace RH
25A AM1
7. 5A AM2
7. 5A SRS–IG
IG1 RELAY
120A ALT
FL MAIN 3. 0W
BATTERY