Illumination (RHD) and Taillight (RHD)

* 1 :w/ Side Marker
* 5 :Luggage Room Type
* 6 :Except Luggage Room Type

*12 :w/ Side Turn Signal Light
*13 :w/o Side Turn Signal Light
*20 :1BZ-FPE

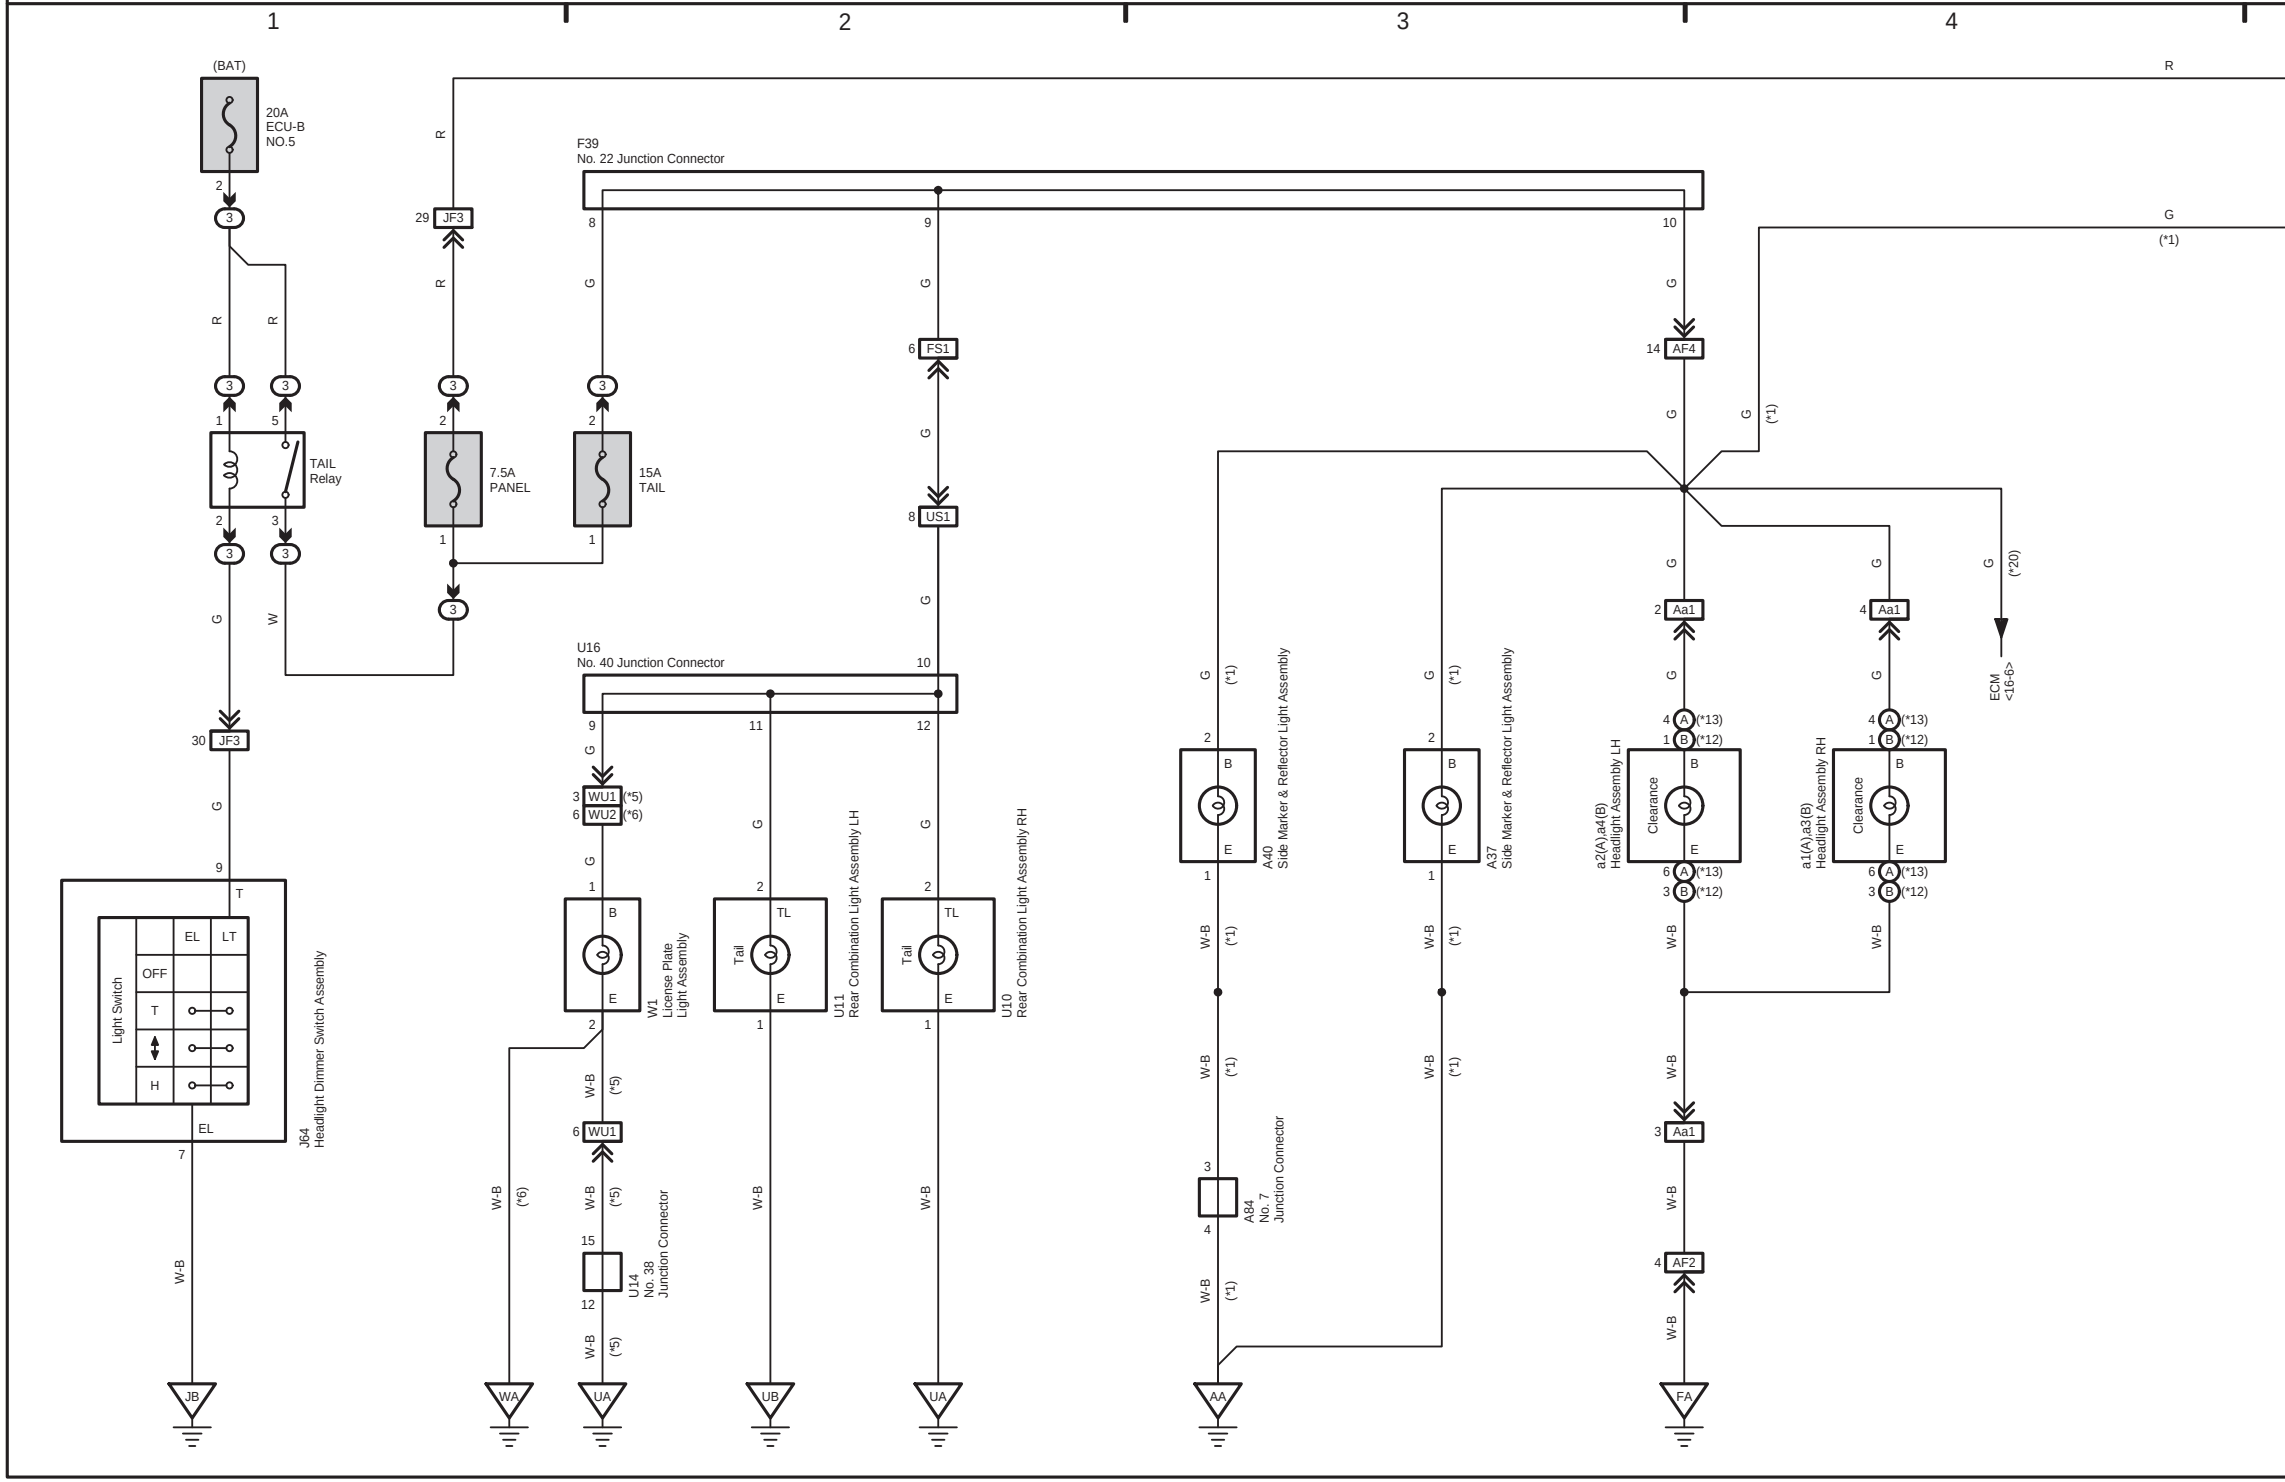
1
2
3
4
(BAT)
20A ECU-B NO.5
TAIL Relay
7.5A PANEL
15A TAIL
F39 No. 22 Junction Connector
U16 No. 40 Junction Connector
JF3
FS1
US1
AF4
Aa1
WU1 (*5)
WU2 (*6)
AF2
J64 Headlight Dimmer Switch Assembly
Light Switch
EL
LT
OFF
T
H
W1 License Plate Light Assembly
U11 Rear Combination Light Assembly LH
U10 Rear Combination Light Assembly RH
Tail
TL
B
E
A40 Side Marker & Reflector Light Assembly
A37 Side Marker & Reflector Light Assembly
a2(A),a4(B) Headlight Assembly LH
a1(A),a3(B) Headlight Assembly RH
Clearance
A84 No. 7 Junction Connector
U14 No. 38 Junction Connector
ECM <16-6>
(*1)
(*5)
(*6)
(*12)
(*13)
(*20)
R
G
W
W-B
JB
WA
UA
UB
AA
FA

Illumination (RHD) and Taillight (RHD)

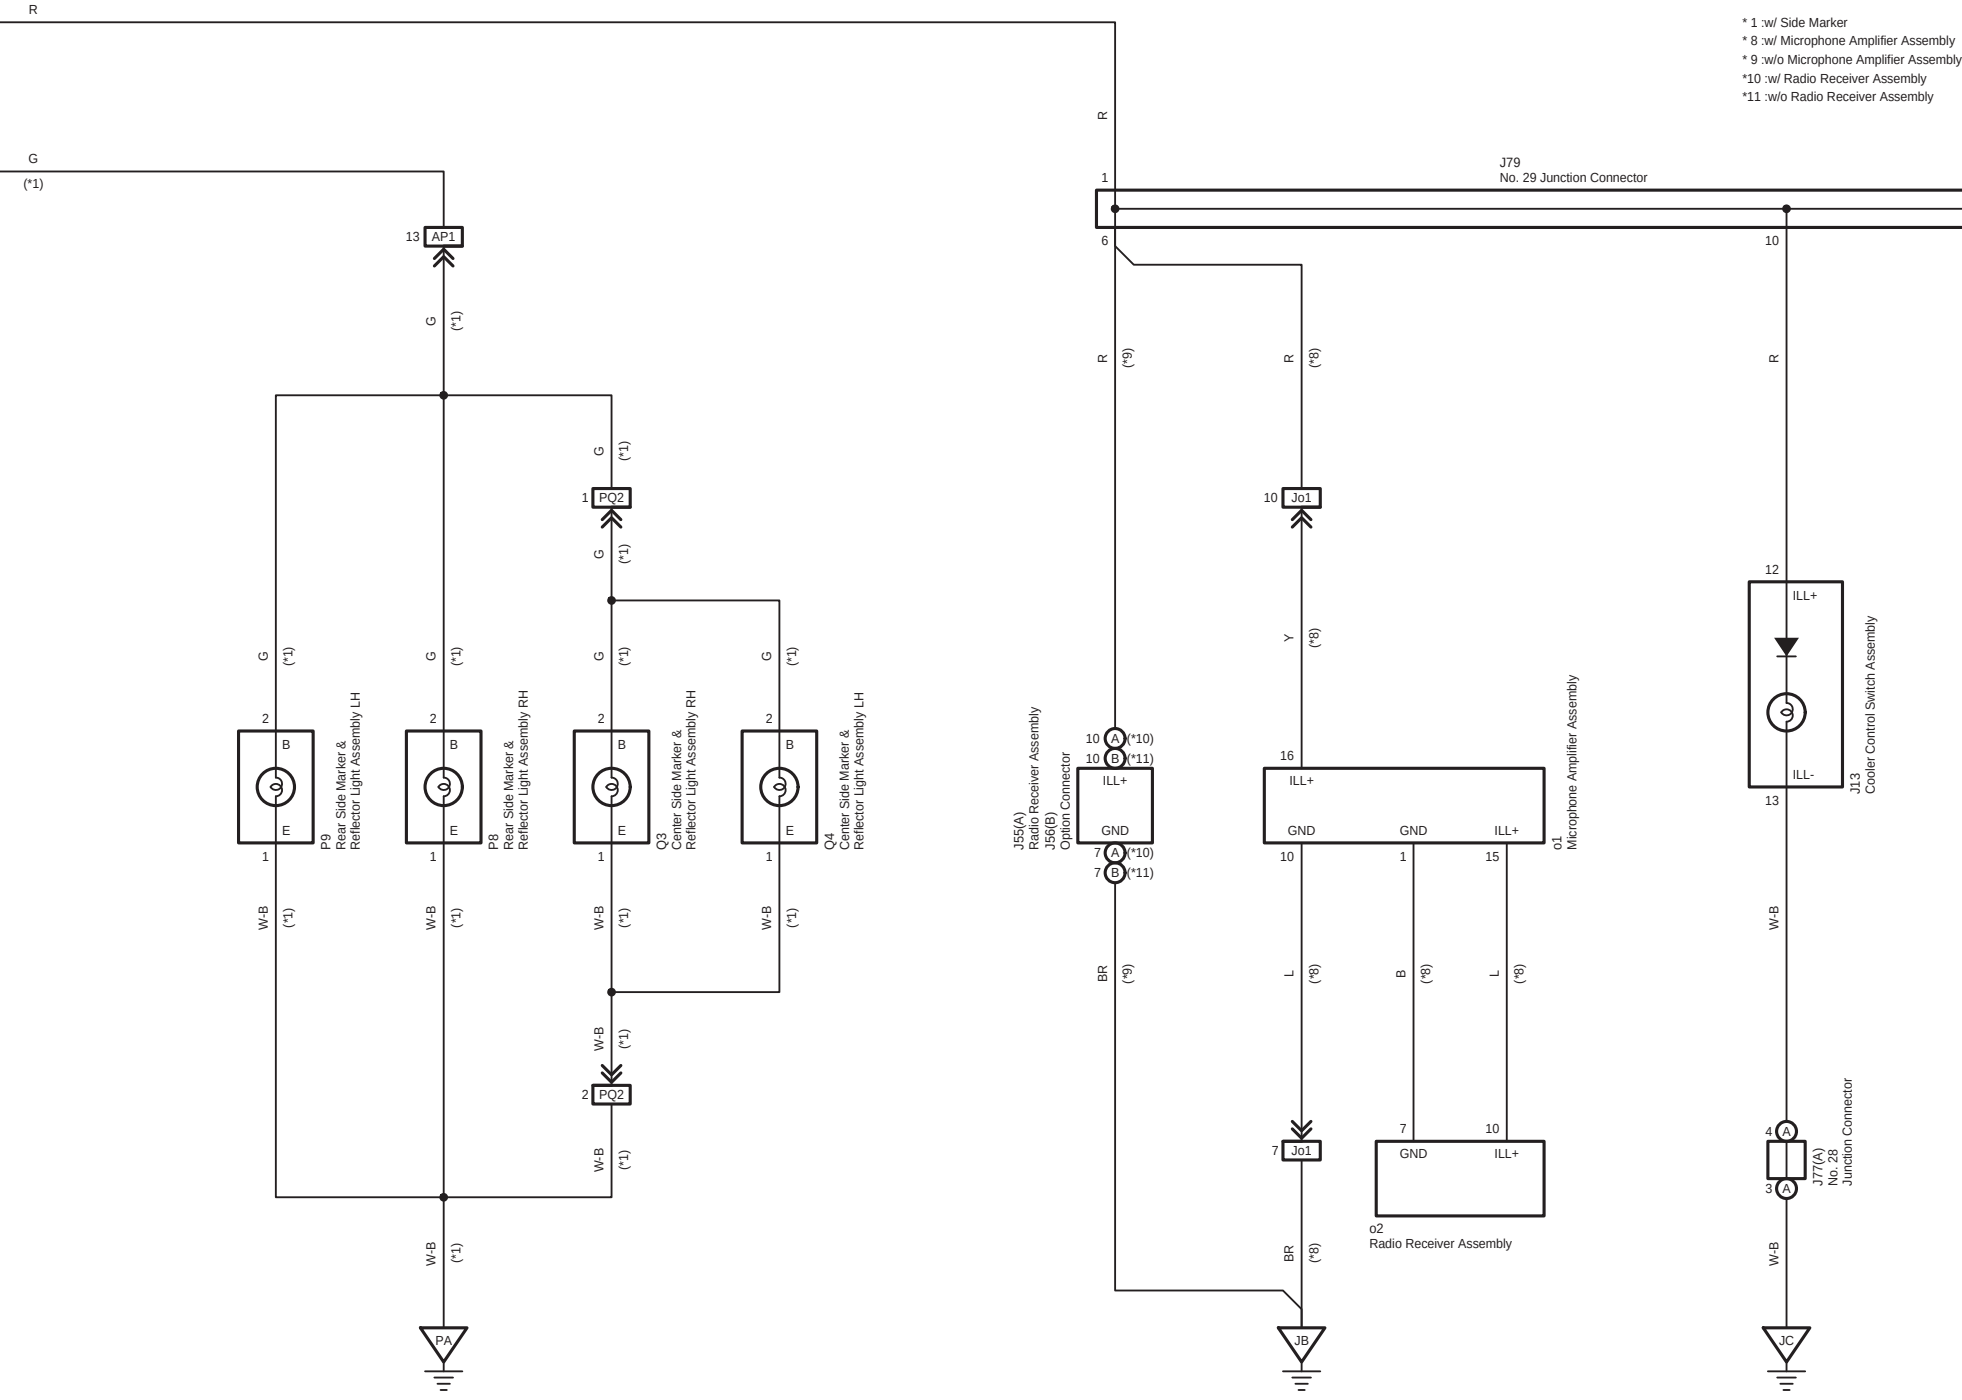

* 1 :w/ Side Marker
* 8 :w/ Microphone Amplifier Assembly
* 9 :w/o Microphone Amplifier Assembly
*10 :w/ Radio Receiver Assembly
*11 :w/o Radio Receiver Assembly

R
G
(*1)
13 AP1
G (*1)
1 PQ2
2 PQ2
W-B (*1)
2 B E 1
P9 Rear Side Marker & Reflector Light Assembly LH
P8 Rear Side Marker & Reflector Light Assembly RH
Q3 Center Side Marker & Reflector Light Assembly RH
Q4 Center Side Marker & Reflector Light Assembly LH
PA
J79 No. 29 Junction Connector
1
6
10
R (*9)
R (*8)
10 Jo1
7 Jo1
Y (*8)
10 A (*10)
10 B (*11)
ILL+
GND
7 A (*10)
7 B (*11)
J55(A) Radio Receiver Assembly
J56(B) Option Connector
BR (*9)
16
ILL+
GND
GND
ILL+
10
1
15
o1 Microphone Amplifier Assembly
L (*8)
B (*8)
L (*8)
7
10
GND
ILL+
o2 Radio Receiver Assembly
BR (*8)
JB
12
ILL+
ILL-
13
J13 Cooler Control Switch Assembly
W-B
4 A
3 A
J77(A) No. 28 Junction Connector
W-B
JC

Illumination (RHD) and Taillight (RHD)

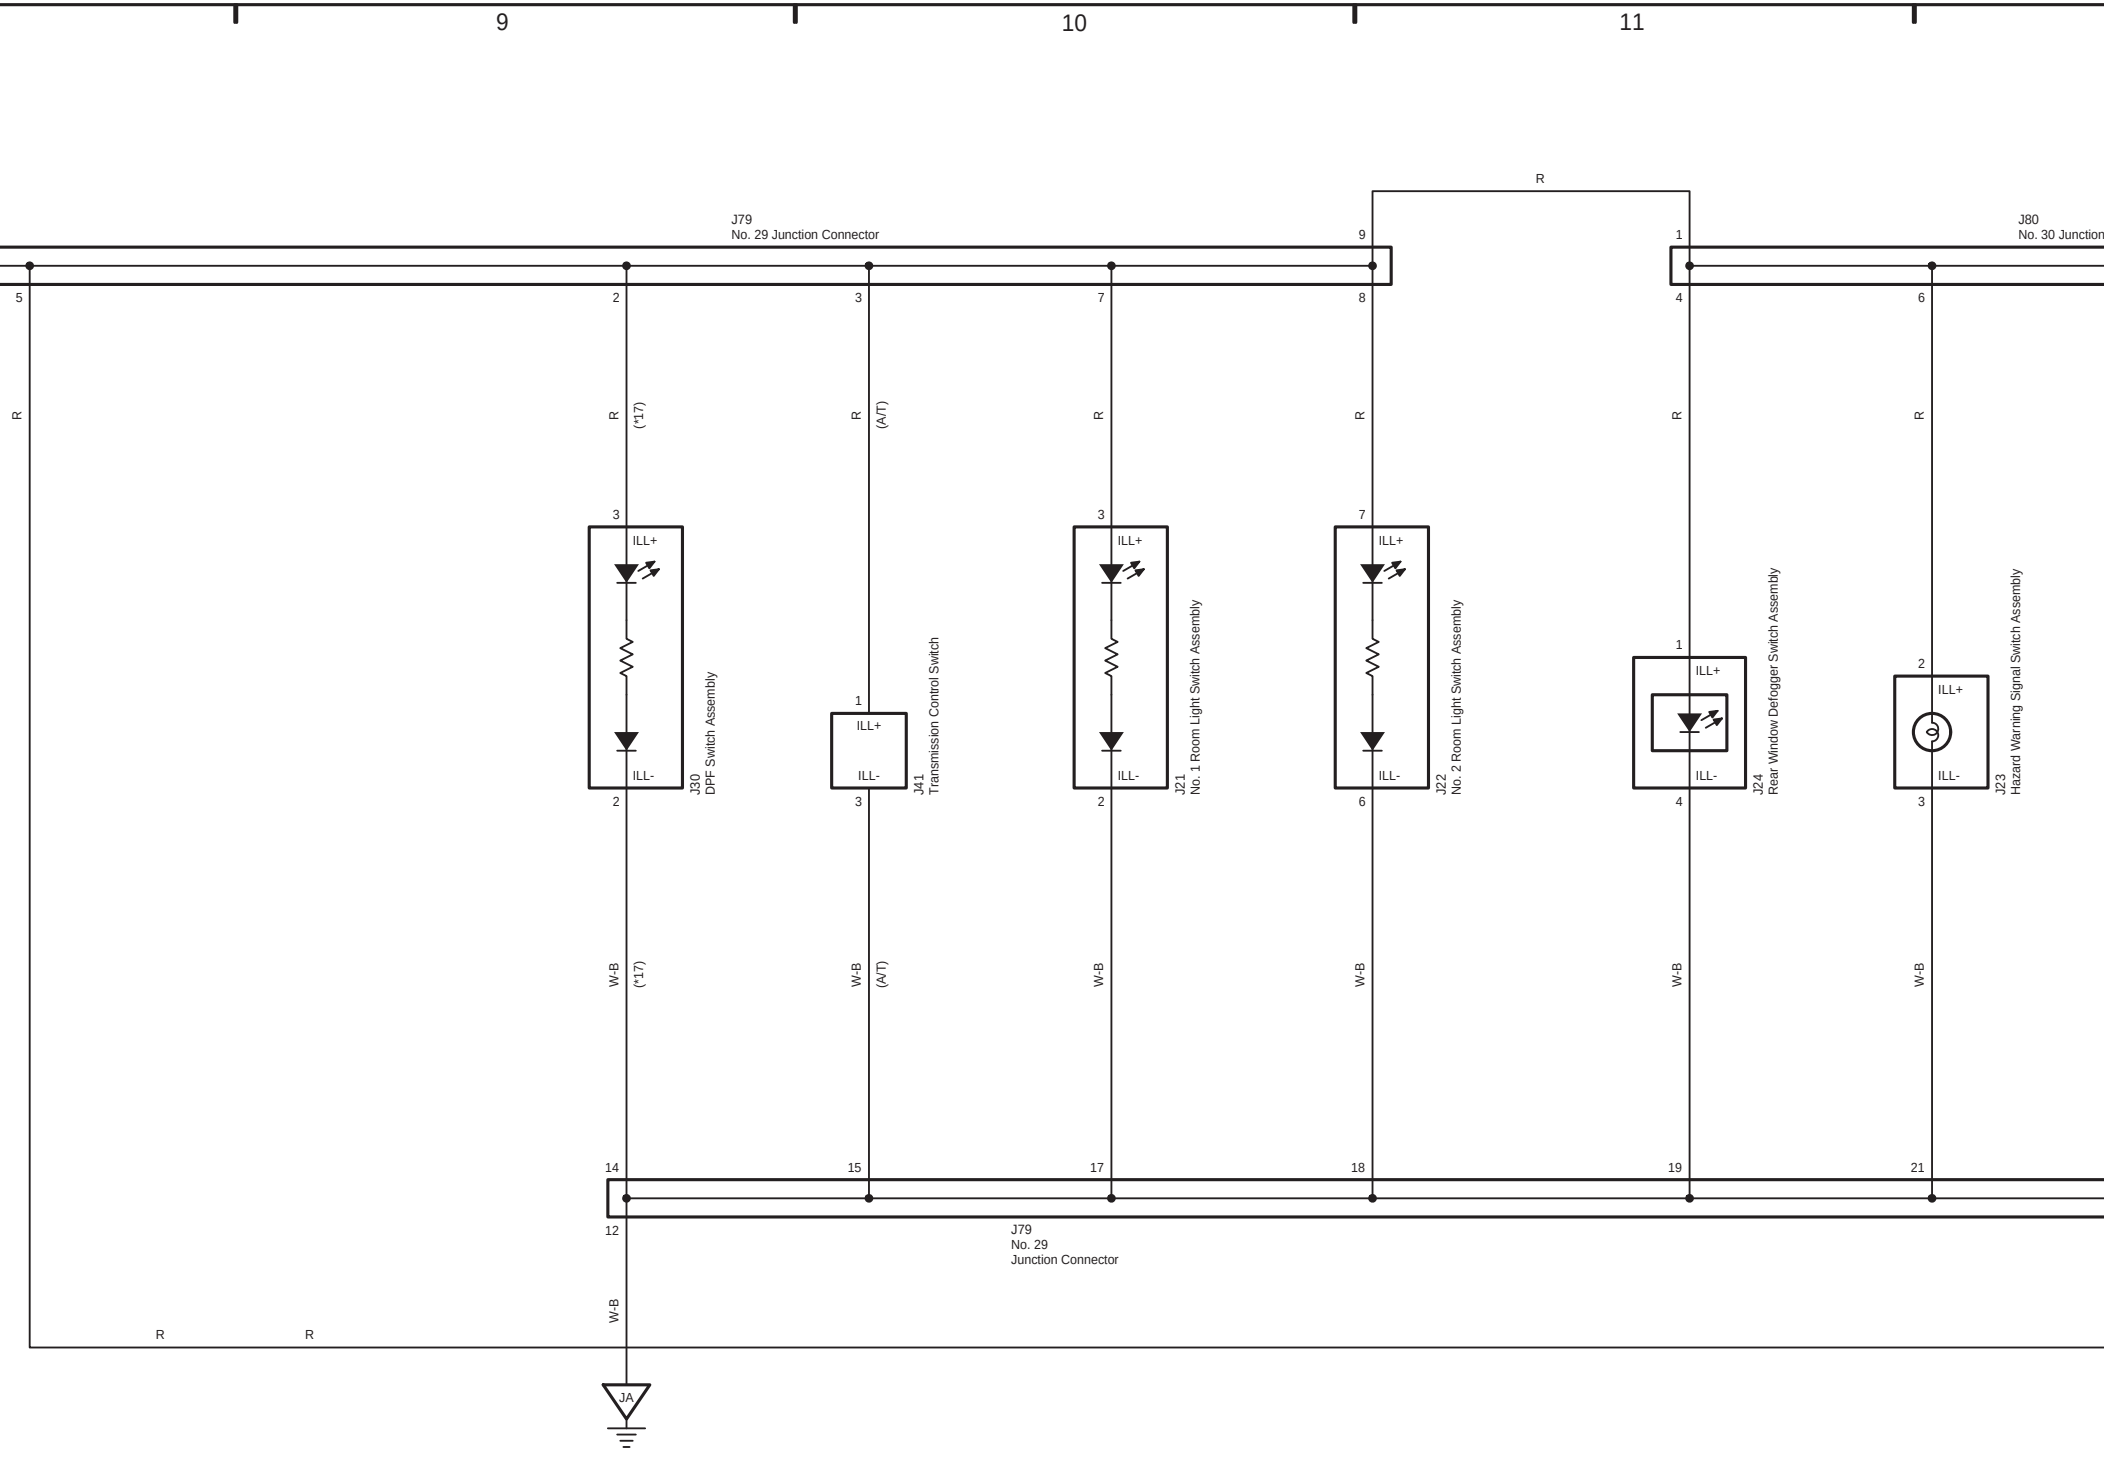
9
10
11
R
J79
No. 29 Junction Connector
9
1
J80
No. 30 Junction
5
2
3
7
8
4
6
R
R (*17)
R (A/T)
R
R
R
R
3
ILL+
ILL-
2
J30
DPF Switch Assembly
1
ILL+
ILL-
3
J41
Transmission Control Switch
3
ILL+
ILL-
2
J21
No. 1 Room Light Switch Assembly
7
ILL+
ILL-
6
J22
No. 2 Room Light Switch Assembly
1
ILL+
ILL-
4
J24
Rear Window Defogger Switch Assembly
2
ILL+
ILL-
3
J23
Hazard Warning Signal Switch Assembly
W-B (*17)
W-B (A/T)
W-B
W-B
W-B
W-B
14
15
17
18
19
21
12
J79
No. 29
Junction Connector
W-B
R
R
JA

*15 :w/ Remote Control Mirror
*17 :N04C-UH
*22 :w/ VSC

Illumination (RHD) and Taillight (RHD)

* 7 :w/ Headlight Beam Level Control
*14 :w/ Door Lock Control
*16 :w/ Rear Heater
*17 :N04C-UH

*18 :1HZ
*19 :14B
*20 :1BZ-FPE
*21 :w/o Multiplex Communication System (CAN)

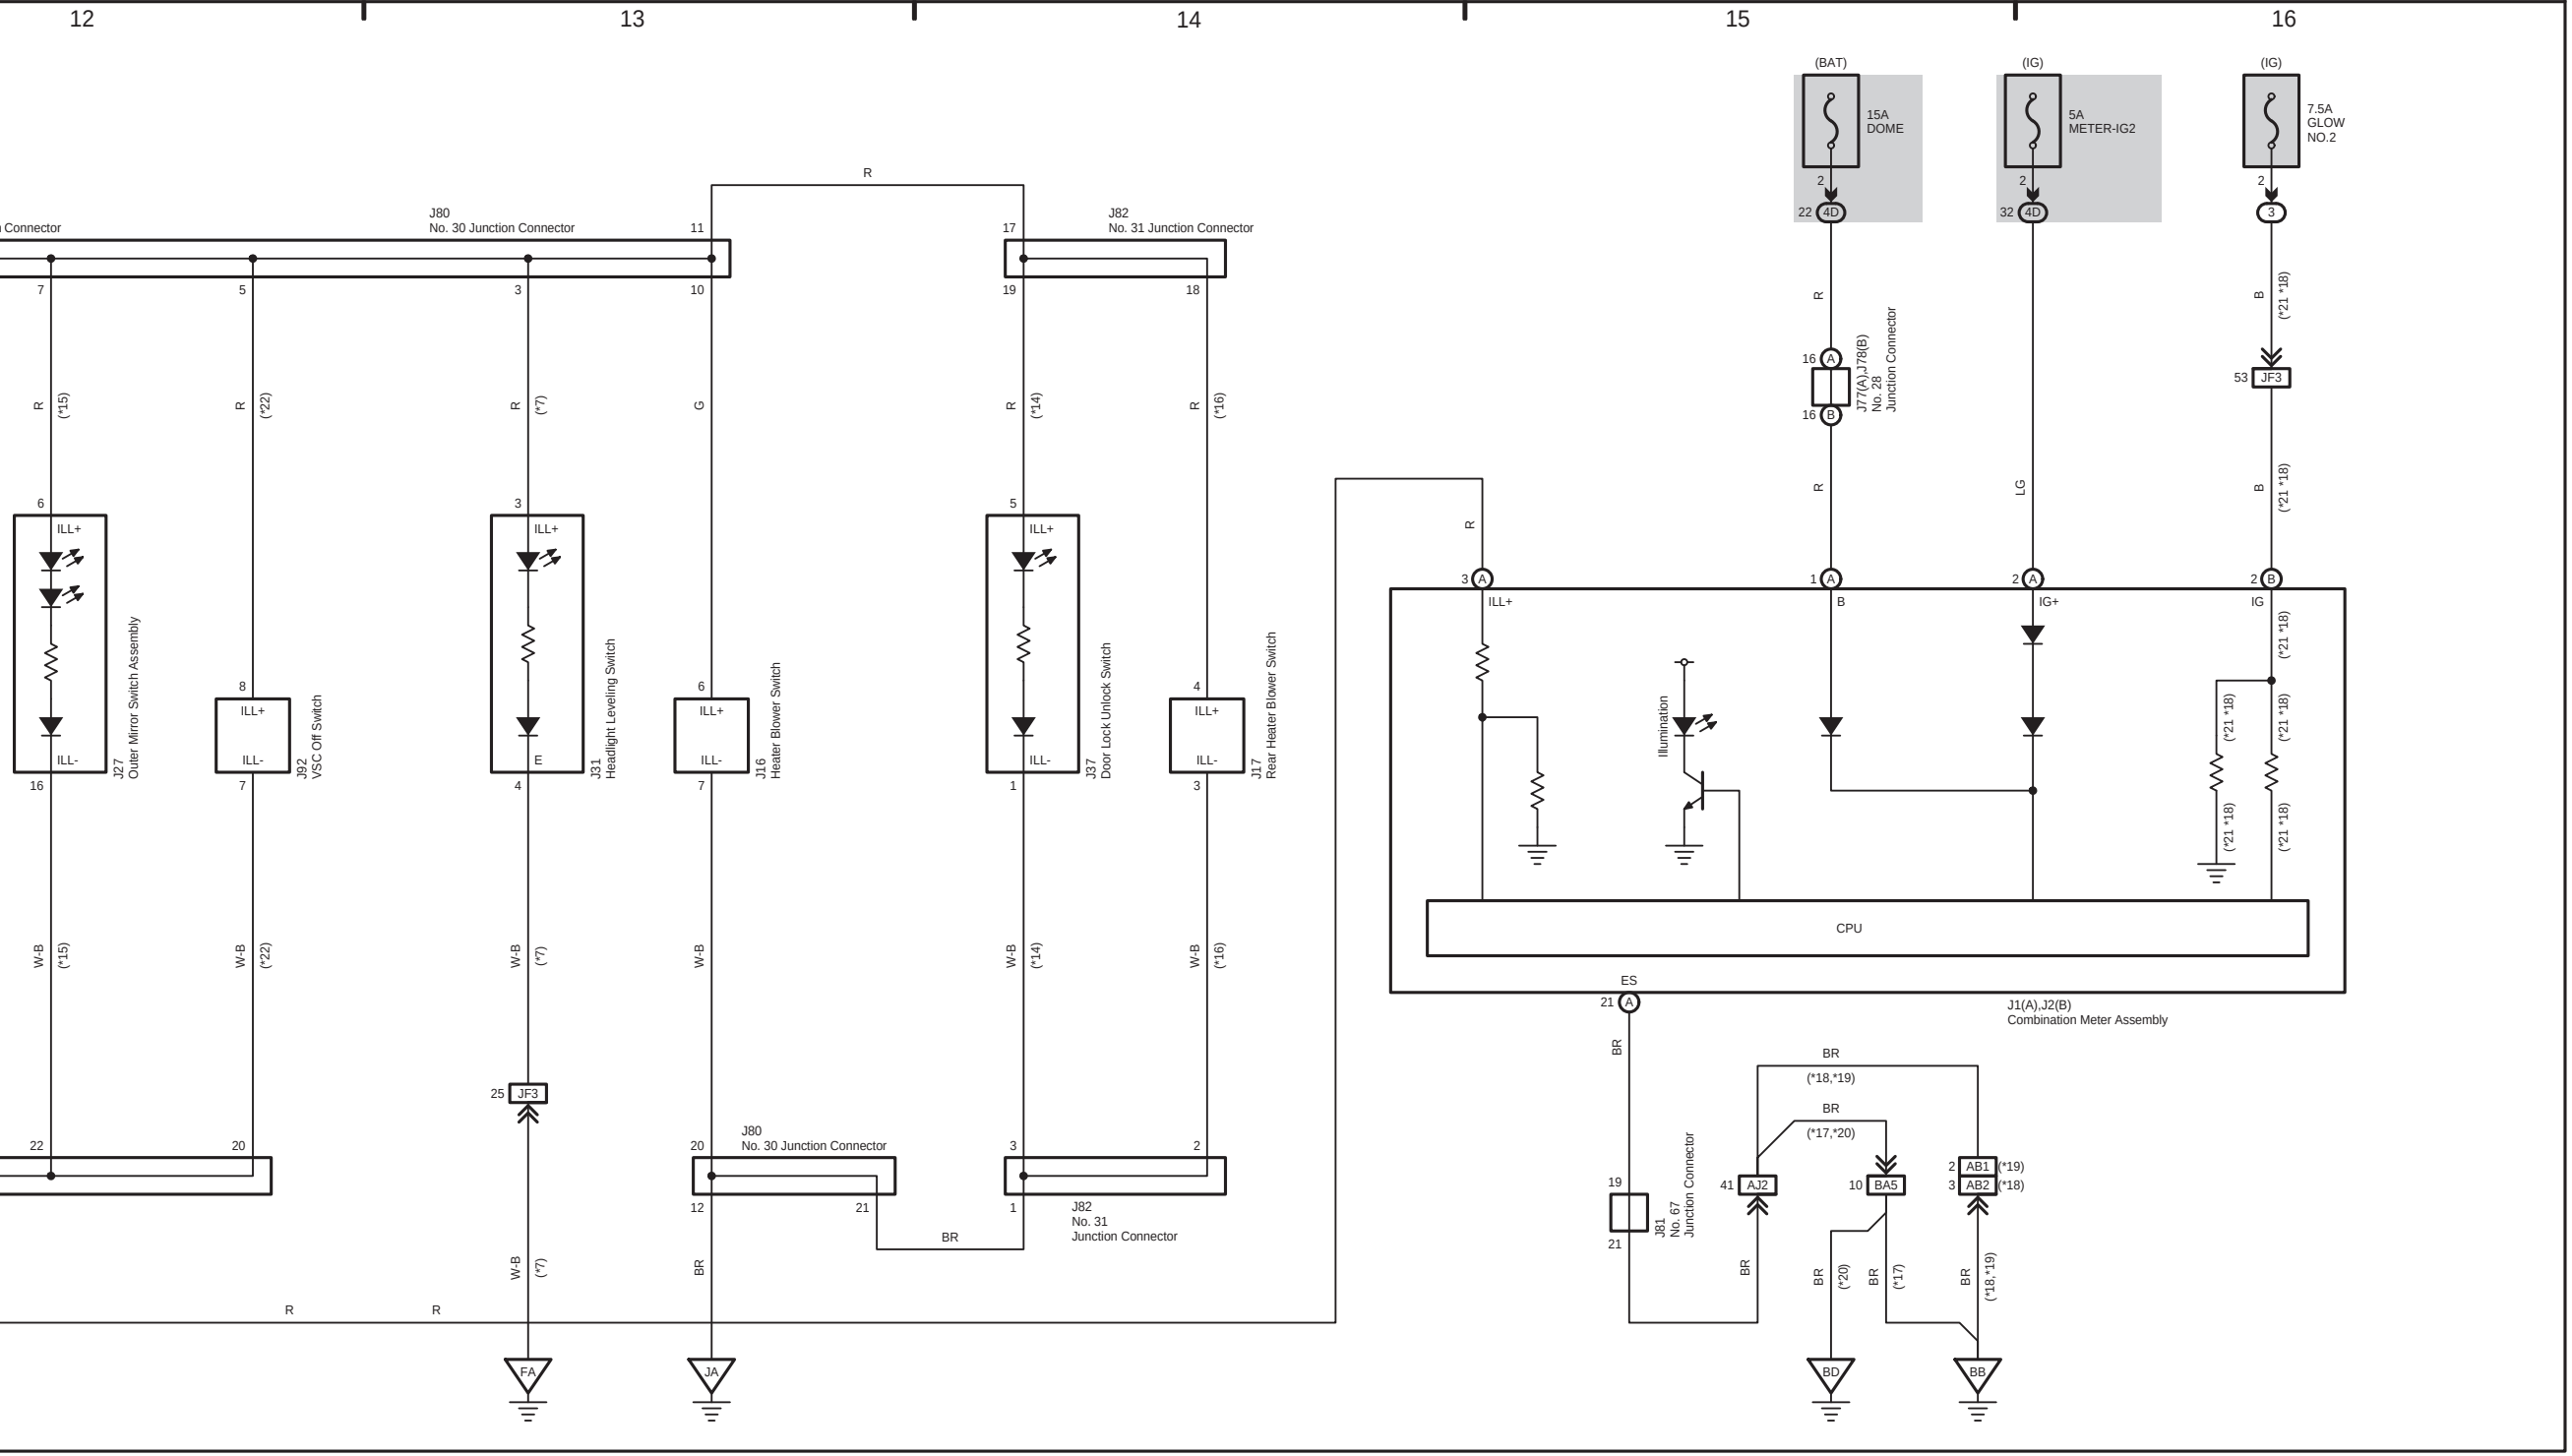
12
13
14
15
16
(BAT)
15A DOME
(IG)
5A METER-IG2
(IG)
7.5A GLOW NO.2
n Connector
J80 No. 30 Junction Connector
J82 No. 31 Junction Connector
R
11
17
7
5
3
10
19
18
R (*15)
R (*22)
R (*7)
G
R (*14)
R (*16)
22 4D
32 4D
3
16 A
16 B
J77(A),J78(B) No. 28 Junction Connector
53 JF3
B (*21 *18)
LG
ILL+
ILL-
E
J27 Outer Mirror Switch Assembly
J92 VSC Off Switch
J31 Headlight Leveling Switch
J16 Heater Blower Switch
J37 Door Lock Unlock Switch
J17 Rear Heater Blower Switch
3 A ILL+
1 A B
2 A IG+
2 B IG
Illumination
CPU
ES
21 A
J1(A),J2(B) Combination Meter Assembly
W-B (*15)
W-B (*22)
W-B (*7)
W-B
W-B (*14)
W-B (*16)
25 JF3
J80 No. 30 Junction Connector
J82 No. 31 Junction Connector
BR
(*18,*19)
(*17,*20)
19
21
J81 No. 67 Junction Connector
41 AJ2
10 BA5
2 AB1 (*19)
3 AB2 (*18)
BR (*20)
BR (*17)
BR (*18,*19)
FA
JA
BD
BB