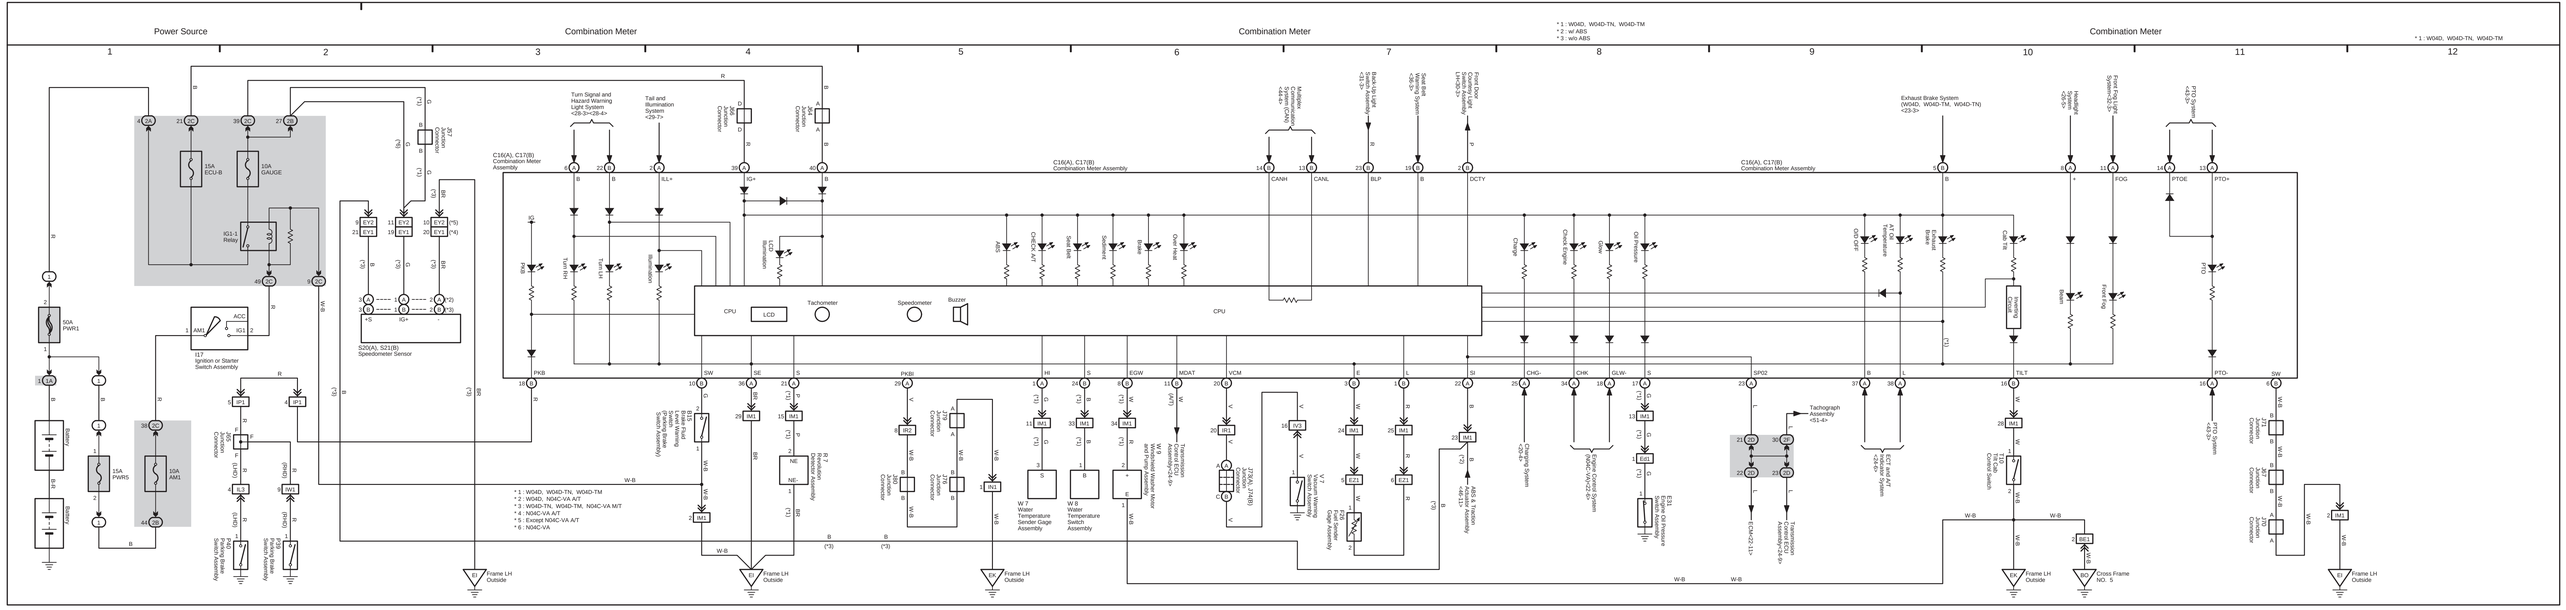
Power Source
Combination Meter
Combination Meter
Combination Meter
* 1 : W04D, W04D-TN, W04D-TM
* 2 : w/ ABS
* 3 : w/o ABS
* 1 : W04D, W04D-TN, W04D-TM
1
2
3
4
5
6
7
8
9
10
11
12
15A ECU-B
10A GAUGE
IG1-1 Relay
50A PWR1
15A PWR5
10A AM1
Battery
Battery
ACC
IG1
AM1
I17 Ignition or Starter Switch Assembly
S20(A), S21(B) Speedometer Sensor
Turn Signal and Hazard Warning Light System <28-3>,<28-4>
Tail and Illumination System <29-7>
C16(A), C17(B) Combination Meter Assembly
C16(A), C17(B) Combination Meter Assembly
C16(A), C17(B) Combination Meter Assembly
Multiplex Communication System (CAN) <44-6>
Back-up Light Switch Assembly <31-3>
Seat Belt Warning System <30-3>
Power Door Courtesy Light Switch Assembly LH<30-3>
Exhaust Brake System (W04D, W04D-TM, W04D-TN) <23-3>
Headlight Switch Assembly <26-5>
Front Fog Light System<31-3>
PTO System <43-3>
CPU
LCD
Tachometer
Speedometer
Buzzer
CPU
PKB
Turn LH
Turn RH
Illumination
LCD Illumination
ABS
Charging Line
Seat Belt
Seat
Brake
Oil Pressure
Charge
Charging Line
Glow
Oil Pressure
Cold Start
A/T Oil Temperature
Exhaust Brake
Cab Tilt
Parking Brake
Beam
Front Fog
PTO
CANH
CANL
BLP
DCTY
PKB
SW
SE
S
PKBI
IHI
S
EGW
MDAT
VCM
E
L
SI
CHG-
CHK
GLW-
S
SP02
B
L
TILT
FOG
PTOE
PTO+
PTO-
SW
Parking Brake Switch Assembly
Shift Switch Assembly
Shift Switch Assembly
Shift