MANUAL TRANSAXLE ASSEMBLY

MX06V-04

COMPONENTS

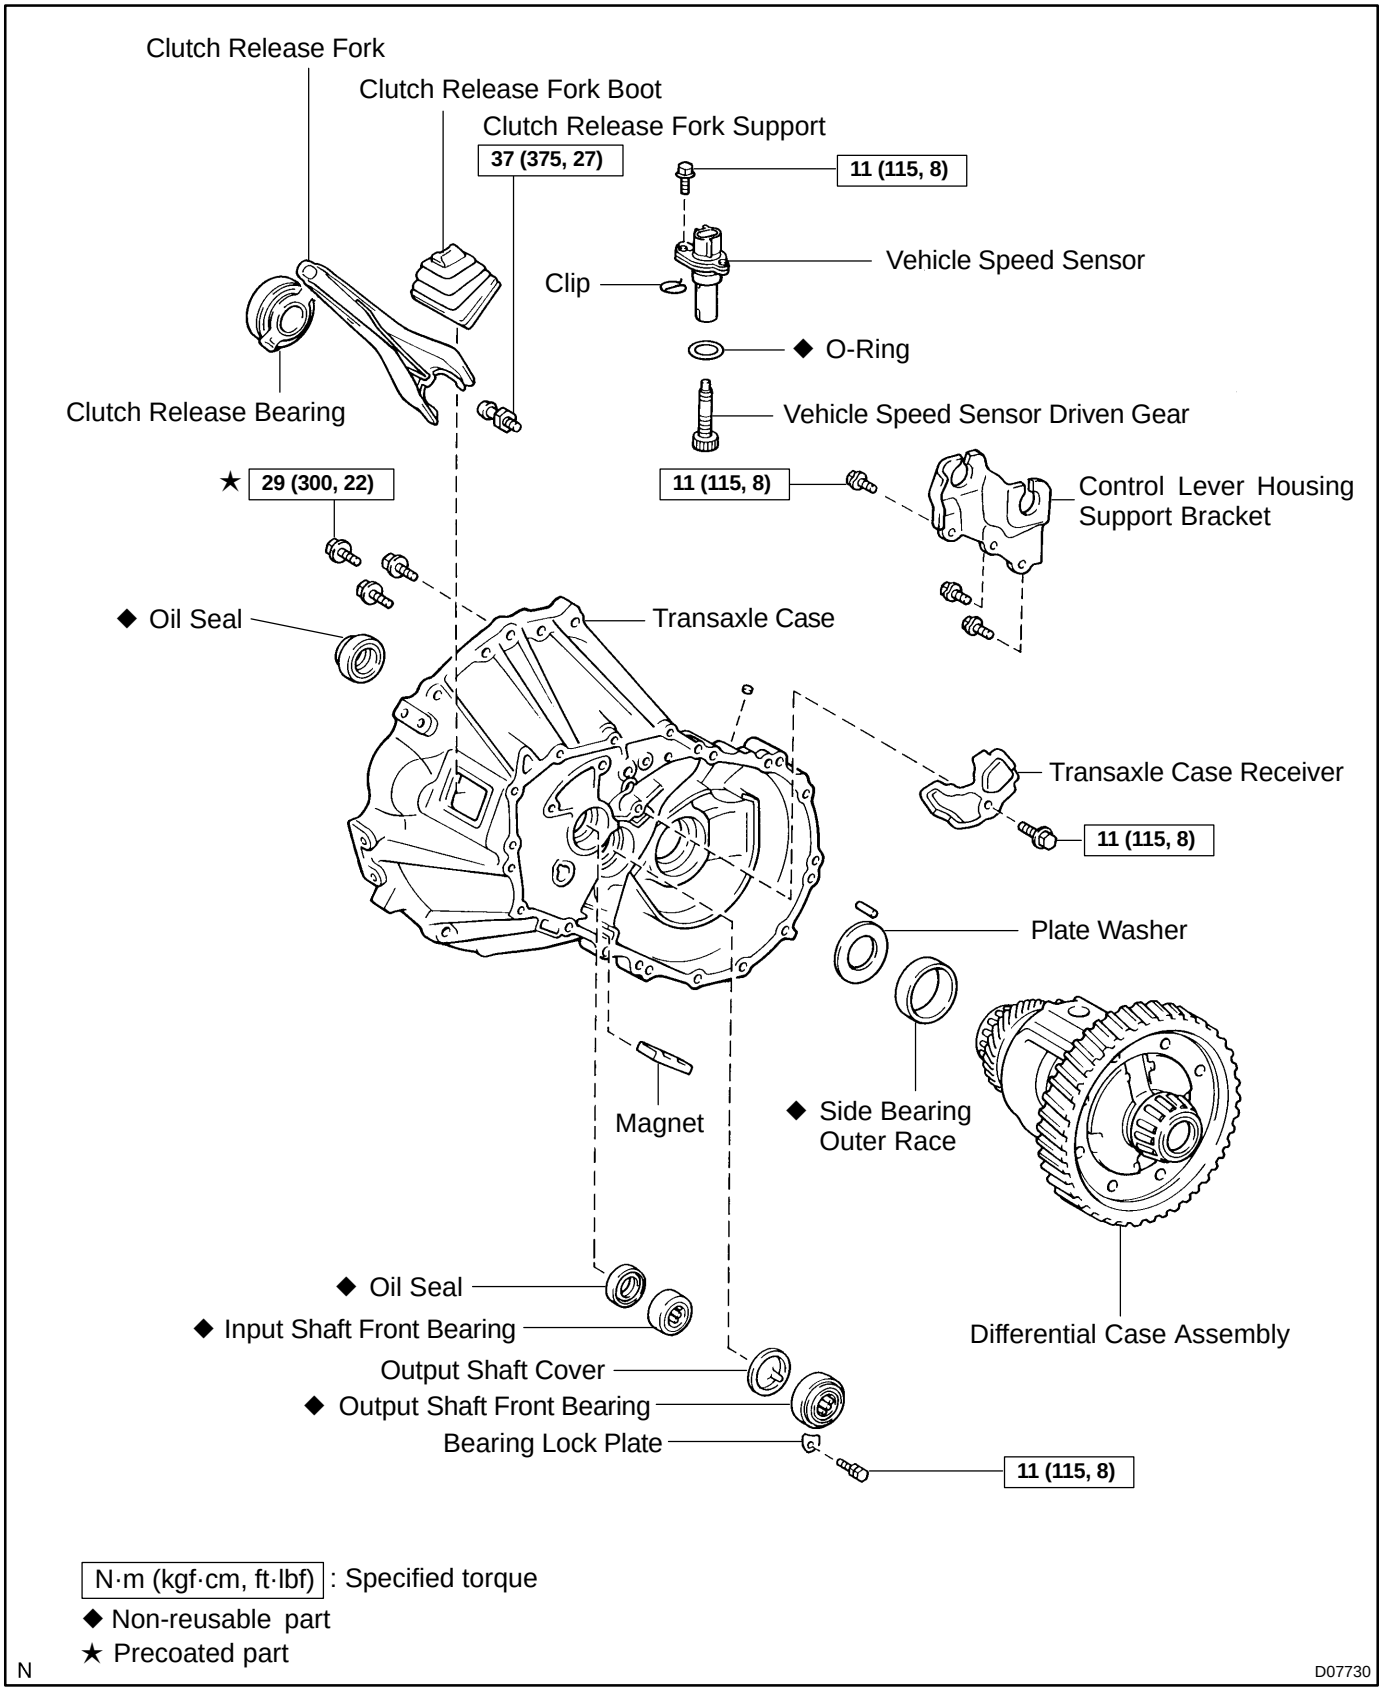

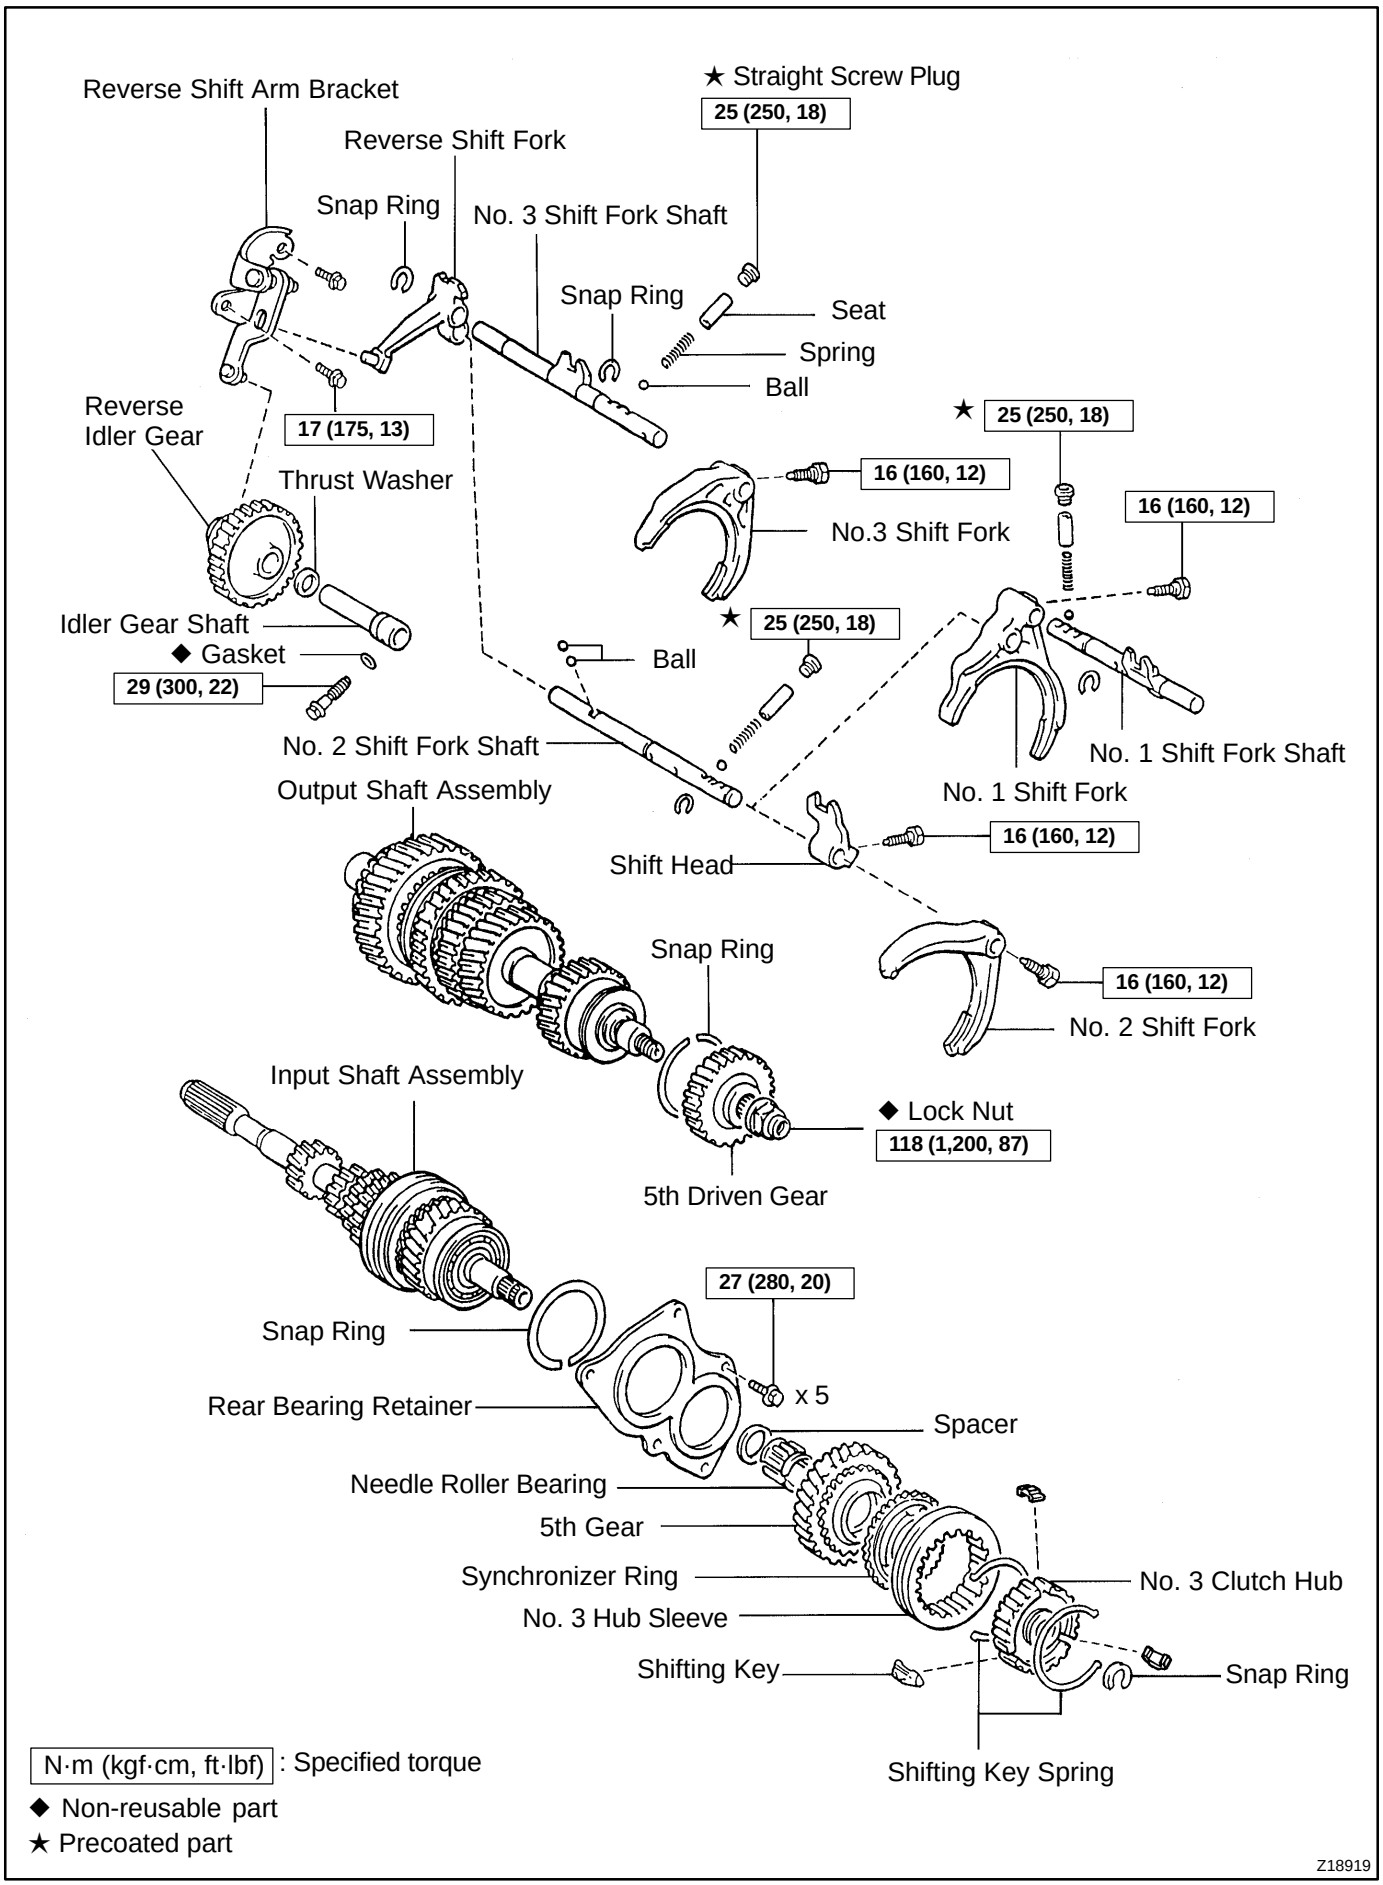
Reverse Shift Arm Bracket
★ Straight Screw Plug
25 (250, 18)
Reverse Shift Fork
Snap Ring
No. 3 Shift Fork Shaft
Snap Ring
Seat
Spring
Ball
Reverse Idler Gear
17 (175, 13)
★ 25 (250, 18)
Thrust Washer
16 (160, 12)
No.3 Shift Fork
16 (160, 12)
Idler Gear Shaft
◆ Gasket
29 (300, 22)
★ 25 (250, 18)
Ball
No. 2 Shift Fork Shaft
No. 1 Shift Fork Shaft
No. 1 Shift Fork
Output Shaft Assembly
16 (160, 12)
Shift Head
Snap Ring
16 (160, 12)
No. 2 Shift Fork
Input Shaft Assembly
◆ Lock Nut
118 (1,200, 87)
5th Driven Gear
27 (280, 20)
Snap Ring
x 5
Rear Bearing Retainer
Spacer
Needle Roller Bearing
5th Gear
Synchronizer Ring
No. 3 Clutch Hub
No. 3 Hub Sleeve
Shifting Key
Snap Ring
Shifting Key Spring
N·m (kgf·cm, ft·lbf) : Specified torque
◆ Non-reusable part
★ Precoated part
Z18919

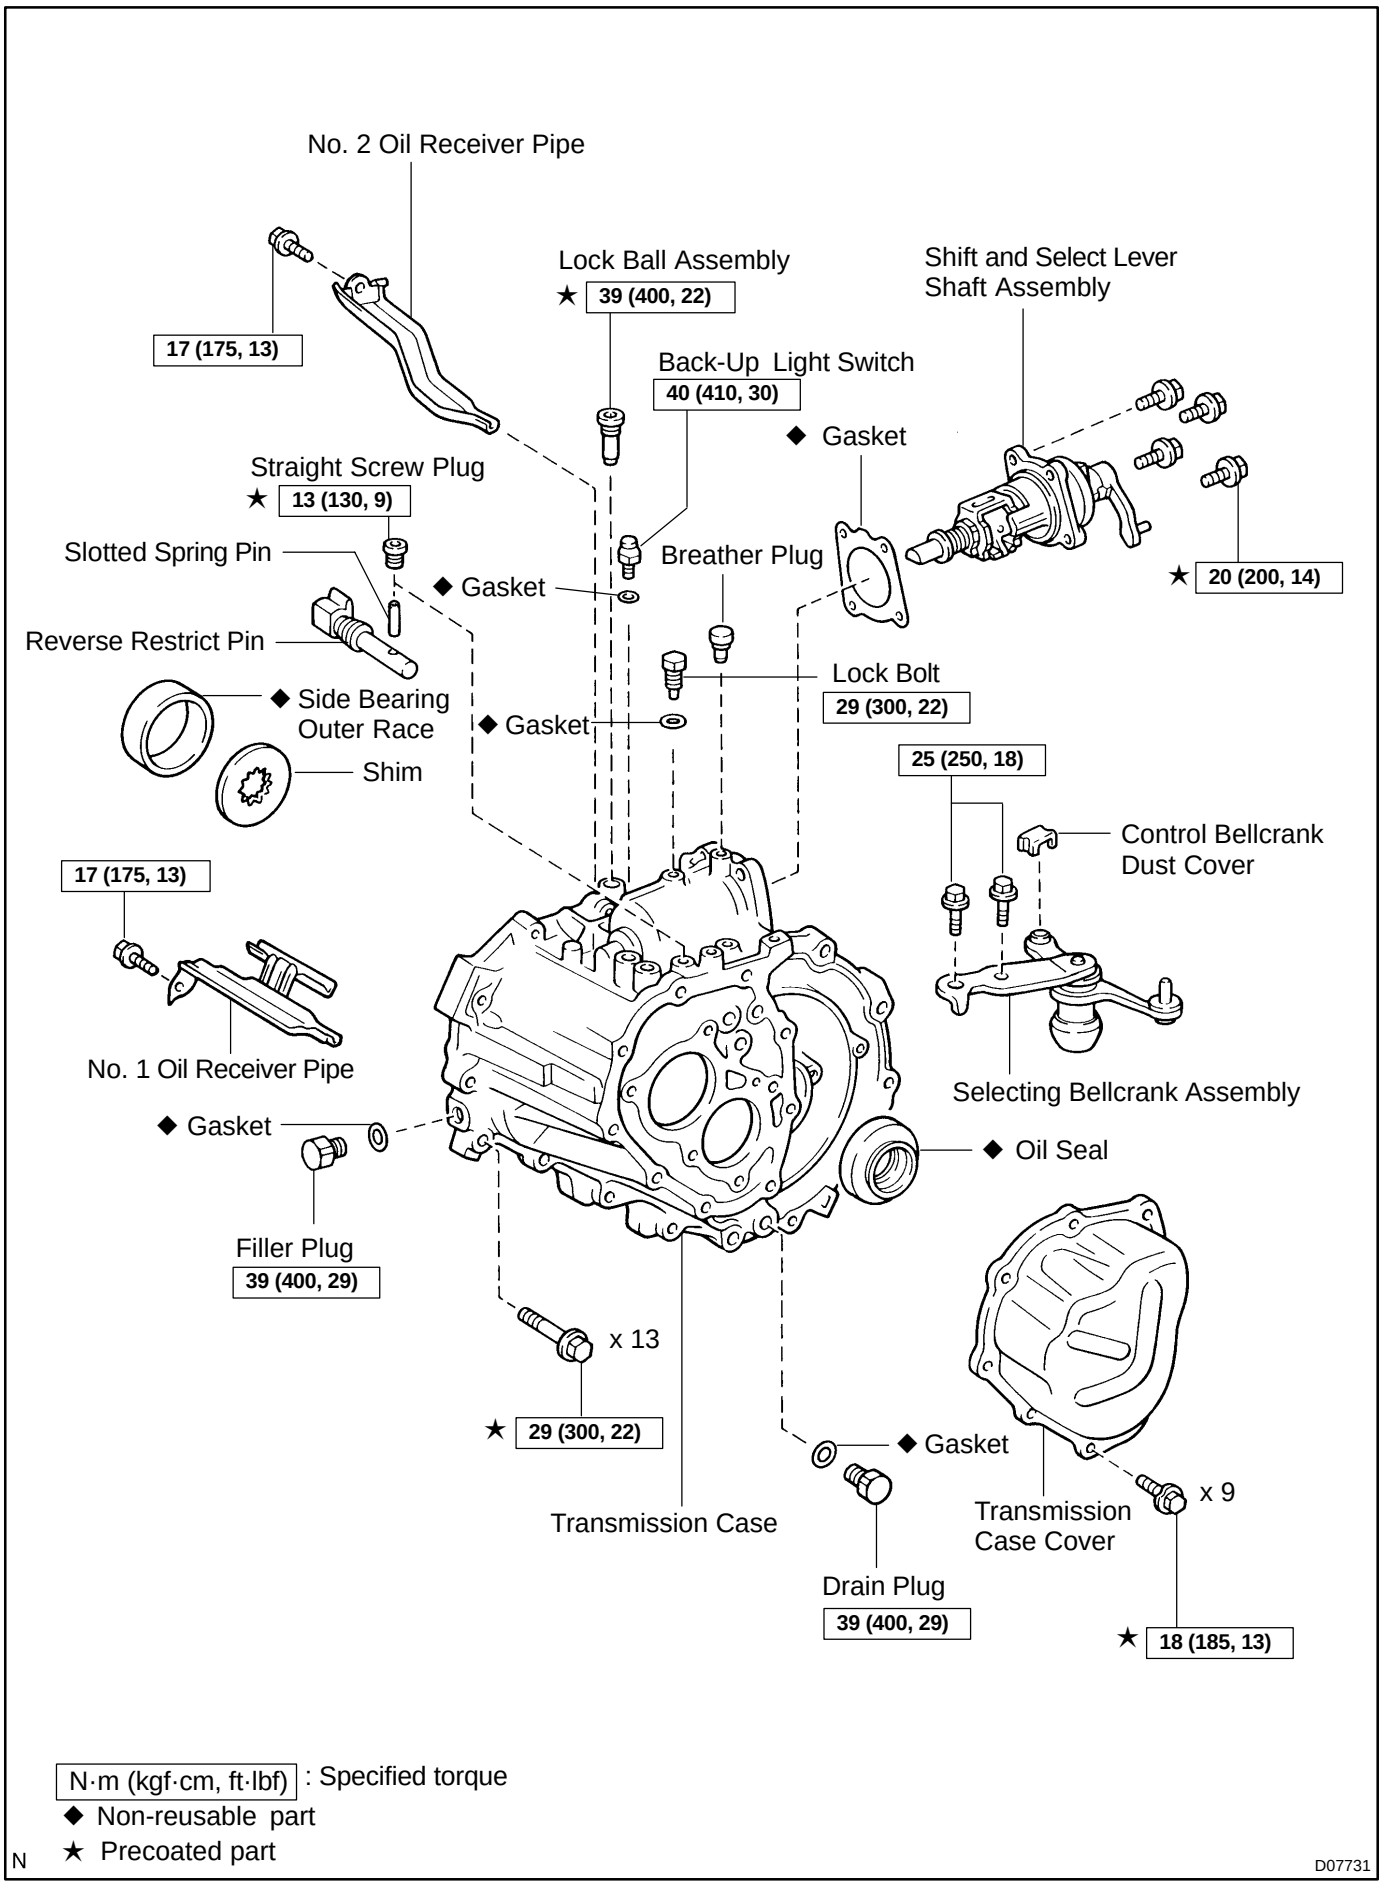
No. 2 Oil Receiver Pipe
17 (175, 13)
Lock Ball Assembly
★ 39 (400, 22)
Shift and Select Lever Shaft Assembly
Back-Up Light Switch
40 (410, 30)
◆ Gasket
Straight Screw Plug
★ 13 (130, 9)
Slotted Spring Pin
Breather Plug
★ 20 (200, 14)
◆ Gasket
Reverse Restrict Pin
Lock Bolt
29 (300, 22)
◆ Side Bearing Outer Race
◆ Gasket
Shim
25 (250, 18)
Control Bellcrank Dust Cover
17 (175, 13)
No. 1 Oil Receiver Pipe
Selecting Bellcrank Assembly
◆ Gasket
◆ Oil Seal
Filler Plug
39 (400, 29)
x 13
★ 29 (300, 22)
◆ Gasket
Transmission Case
Transmission Case Cover
x 9
Drain Plug
39 (400, 29)
★ 18 (185, 13)
N·m (kgf·cm, ft·lbf) : Specified torque
◆ Non-reusable part
★ Precoated part
N
D07731