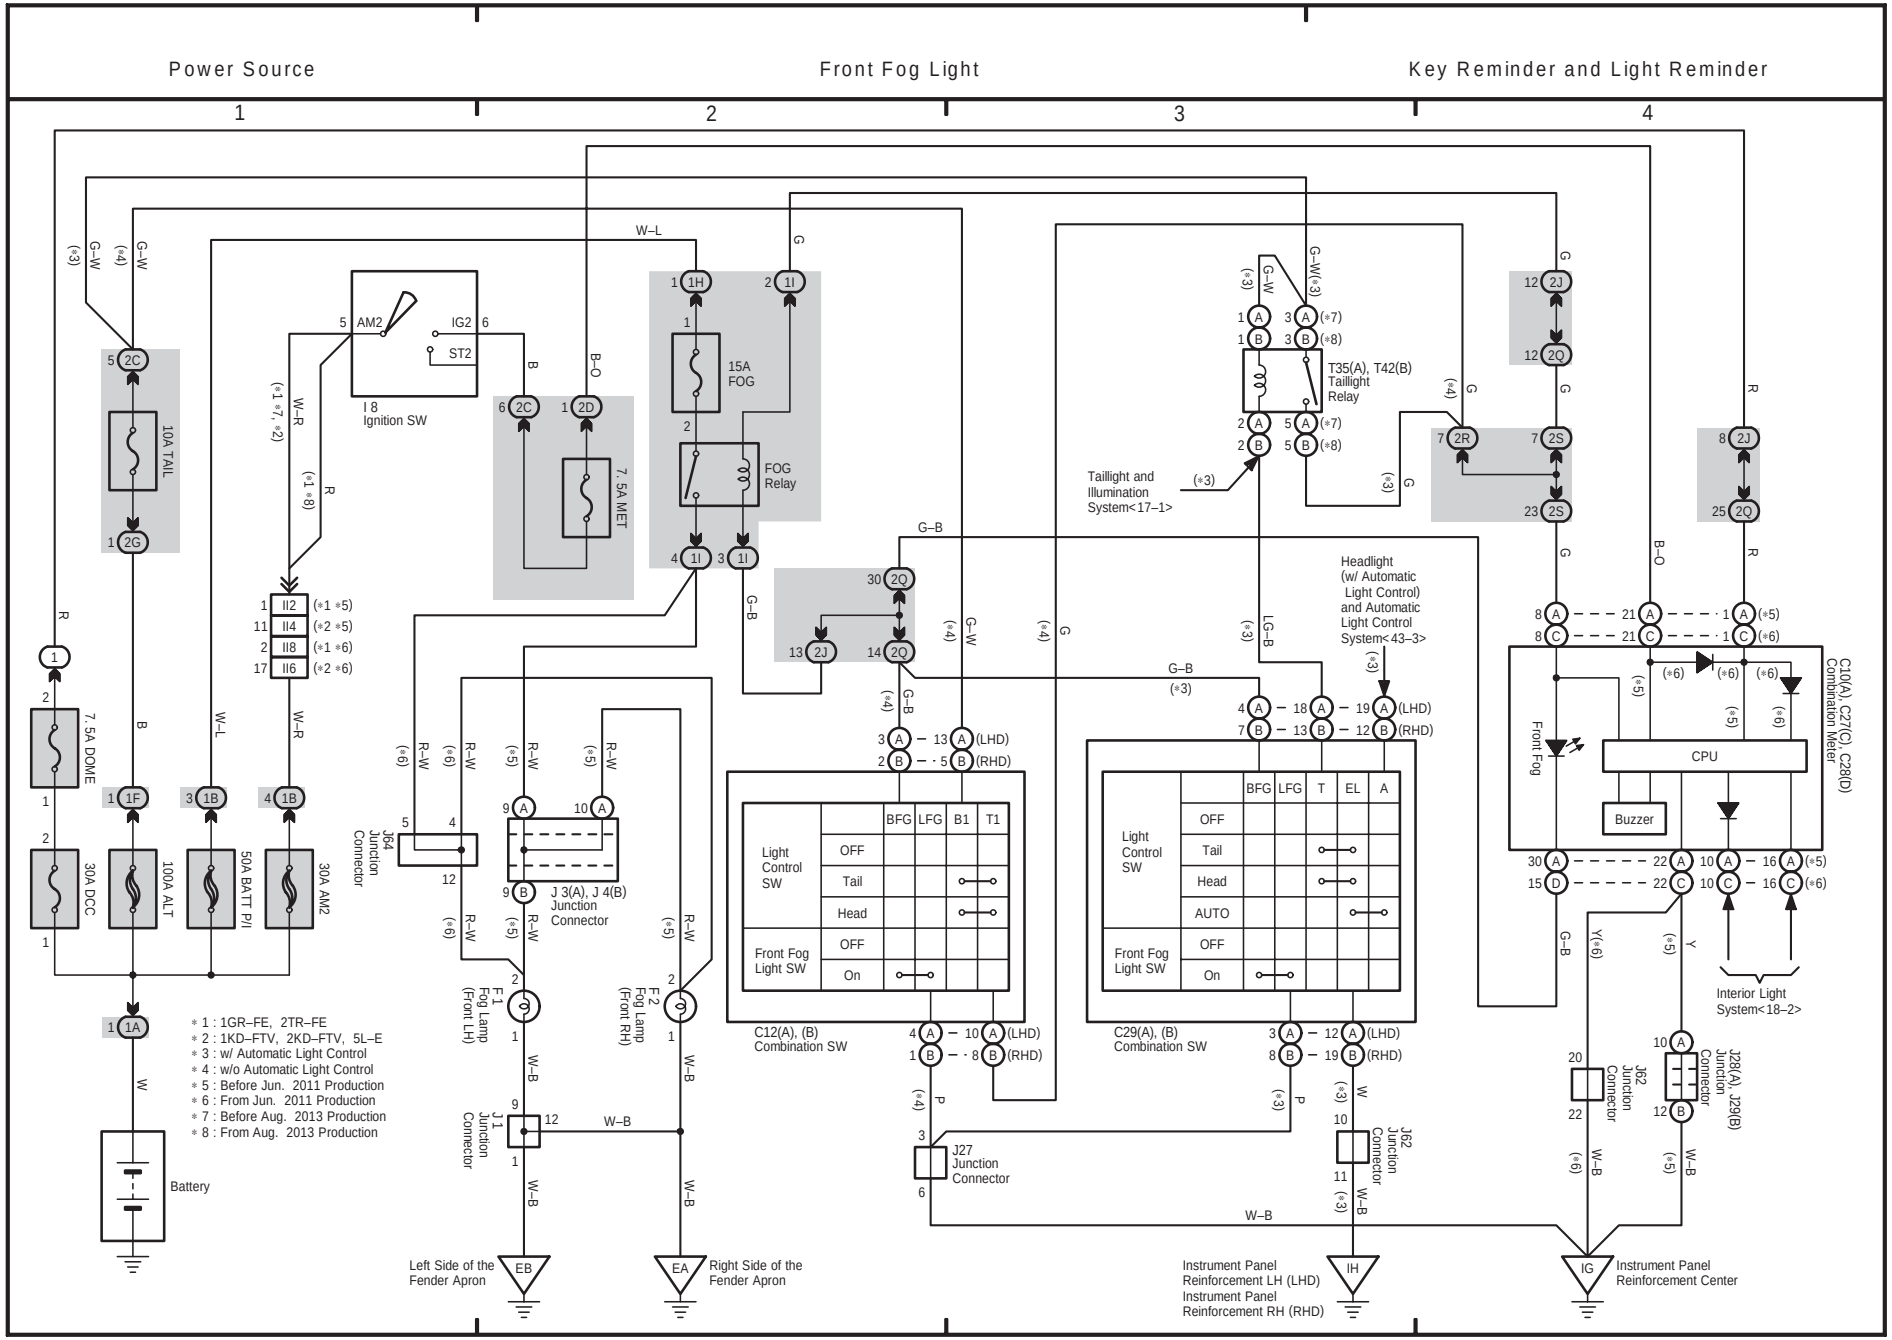
Power Source
Front Fog Light
Key Reminder and Light Reminder
1
2
3
4
10A TAIL
7.5A DOME
30A DCC
100A ALT
50A BATT P/I
30A AM2
I 8 Ignition SW
AM2
IG2
ST2
7.5A MET
15A FOG
FOG Relay
T35(A), T42(B) Taillight Relay
Taillight and Illumination System<17–1>
Headlight (w/ Automatic Light Control) and Automatic Light Control System<43–3>
C10(A), C27(C), C28(D) Combination Meter
CPU
Buzzer
Front Fog
Interior Light System<18–2>
J64 Junction Connector
J 3(A), J 4(B) Junction Connector
F1 Fog Lamp (Front LH)
F2 Fog Lamp (Front RH)
J1 Junction Connector
C12(A), (B) Combination SW
C29(A), (B) Combination SW
Light Control SW
Front Fog Light SW
OFF
Tail
Head
AUTO
On
BFG
LFG
B1
T1
T
EL
A
J27 Junction Connector
J62 Junction Connector
J128(A), J129(B) Junction Connector
Battery
Left Side of the Fender Apron
Right Side of the Fender Apron
Instrument Panel Reinforcement LH (LHD)
Instrument Panel Reinforcement RH (RHD)
Instrument Panel Reinforcement Center
EB
EA
IH
IG
∗1 : 1GR–FE, 2TR–FE
∗2 : 1KD–FTV, 2KD–FTV, 5L–E
∗3 : w/ Automatic Light Control
∗4 : w/o Automatic Light Control
∗5 : Before Jun. 2011 Production
∗6 : From Jun. 2011 Production
∗7 : Before Aug. 2013 Production
∗8 : From Aug. 2013 Production