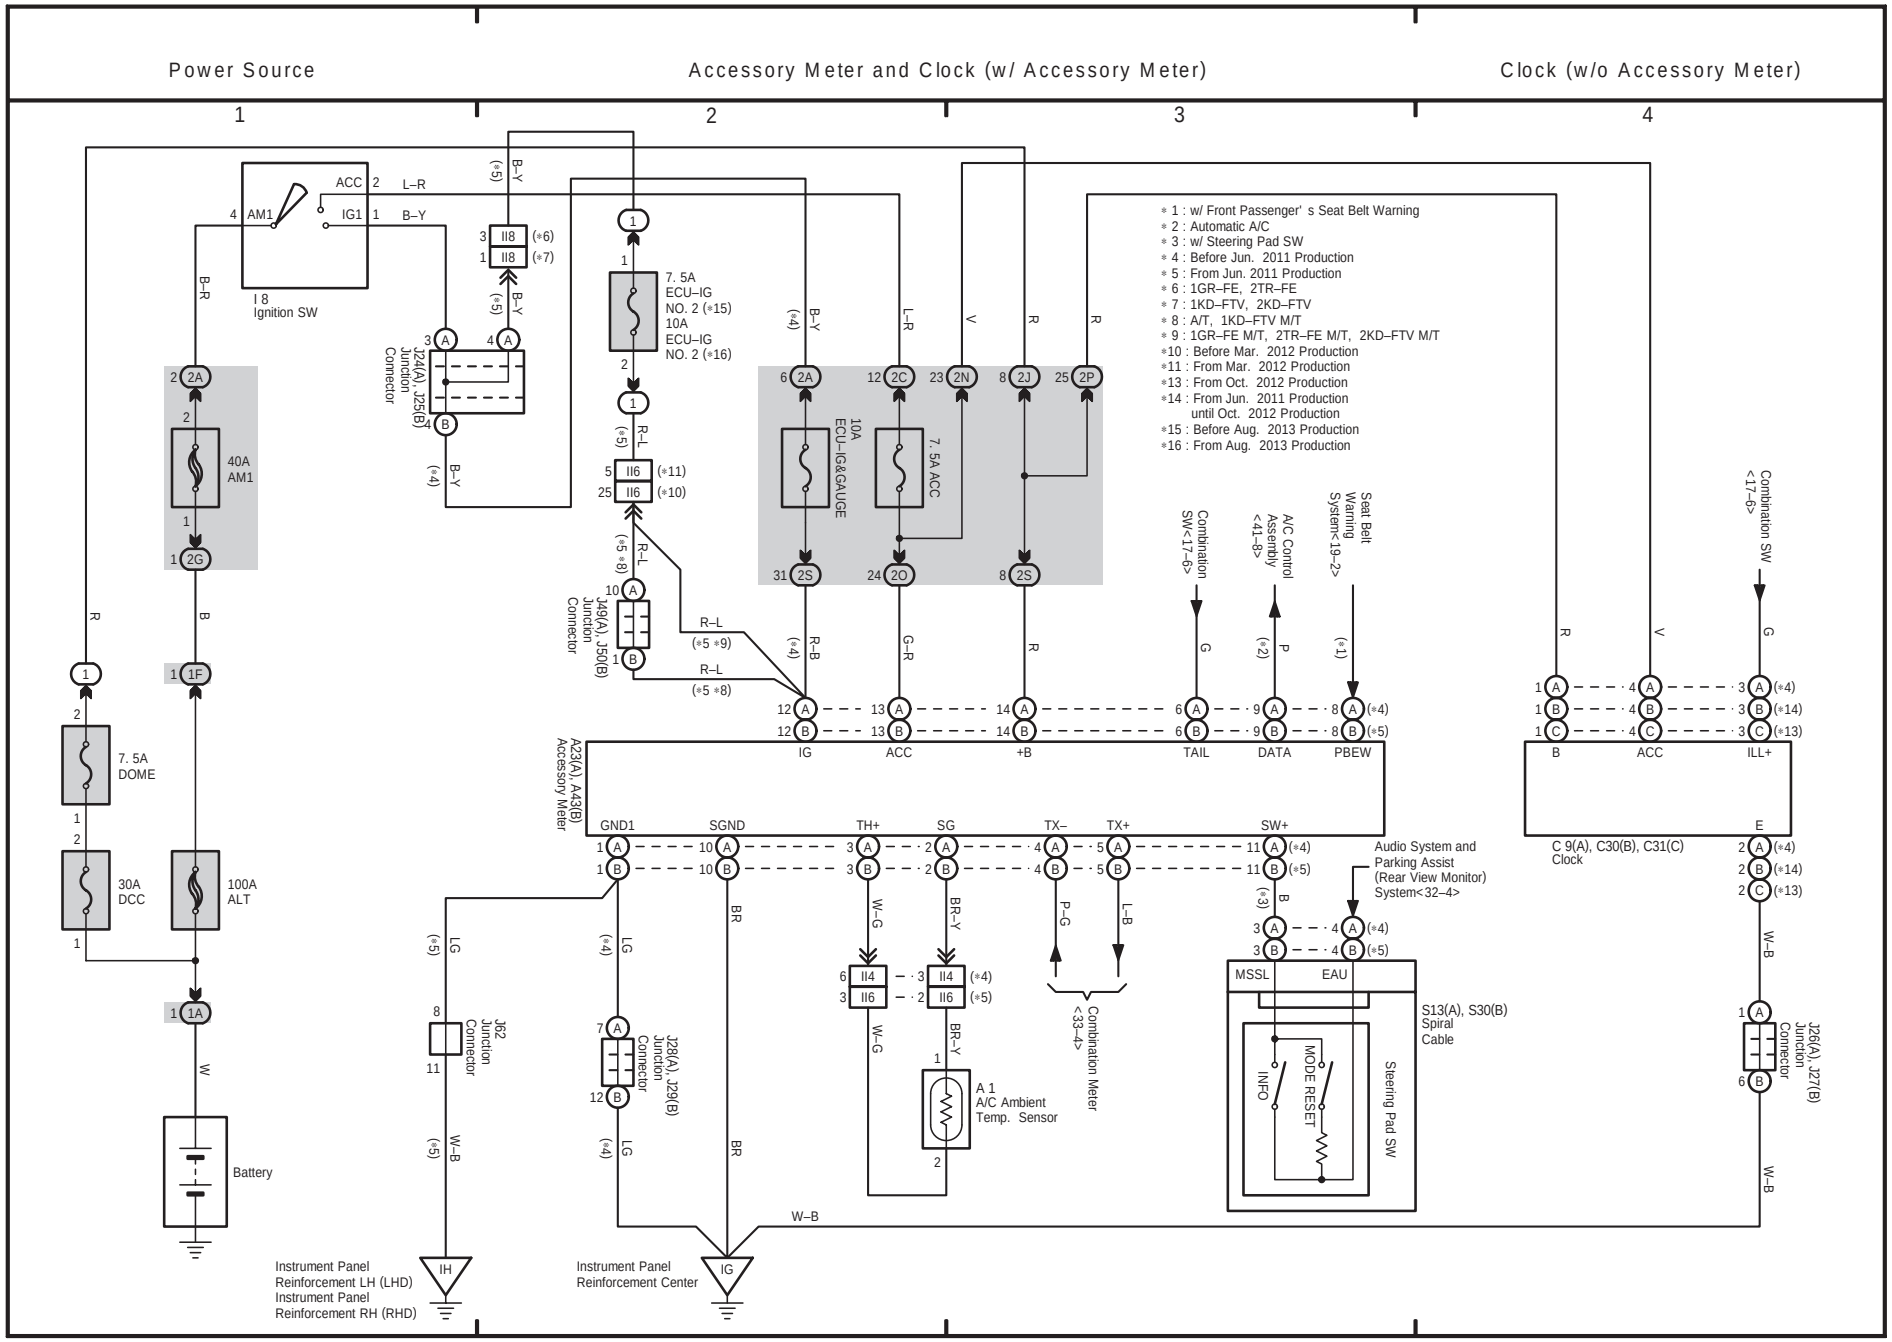
Power Source
Accessory Meter and Clock (w/ Accessory Meter)
Clock (w/o Accessory Meter)
1
2
3
4
∗1 : w/ Front Passenger' s Seat Belt Warning
∗2 : Automatic A/C
∗3 : w/ Steering Pad SW
∗4 : Before Jun. 2011 Production
∗5 : From Jun. 2011 Production
∗6 : 1GR–FE, 2TR–FE
∗7 : 1KD–FTV, 2KD–FTV
∗8 : A/T, 1KD–FTV M/T
∗9 : 1GR–FE M/T, 2TR–FE M/T, 2KD–FTV M/T
∗10 : Before Mar. 2012 Production
∗11 : From Mar. 2012 Production
∗13 : From Oct. 2012 Production
∗14 : From Jun. 2011 Production until Oct. 2012 Production
∗15 : Before Aug. 2013 Production
∗16 : From Aug. 2013 Production
I 8 Ignition SW
ACC
IG1
AM1
40A AM1
7. 5A DOME
30A DCC
100A ALT
Battery
7. 5A ECU–IG NO. 2 (∗15)
10A ECU–IG NO. 2 (∗16)
10A ECU–IG&GAUGE
7. 5A ACC
Combination SW <17–6>
A/C Control Assembly <41–8>
Seat Belt Warning System <19–2>
A23(A), A43(B) Accessory Meter
GND1
SGND
TH+
SG
TX–
TX+
SW+
IG
ACC
+B
TAIL
DATA
PBEW
B
ILL+
E
C 9(A), C30(B), C31(C) Clock
Audio System and Parking Assist (Rear View Monitor) System <32–4>
MSSL
EAU
S13(A), S30(B) Spiral Cable
INFO
MODE
RESET
Steering Pad SW
A 1 A/C Ambient Temp. Sensor
Combination Meter <33–4>
J26(A), J27(B) Junction Connector
J62 Junction Connector
J28(A), J29(B) Junction Connector
Instrument Panel Reinforcement LH (LHD) Instrument Panel Reinforcement RH (RHD)
Instrument Panel Reinforcement Center
IH
IG